

















Installation Instructions

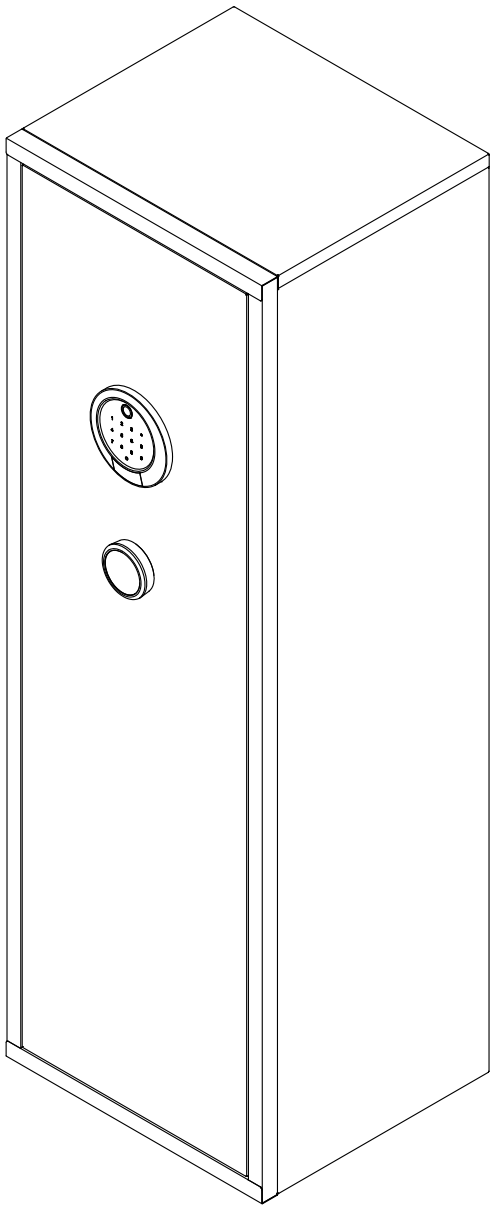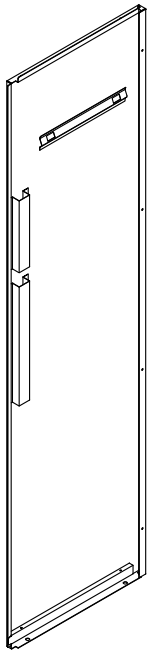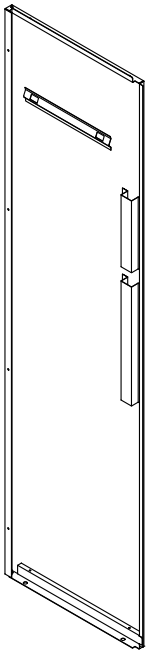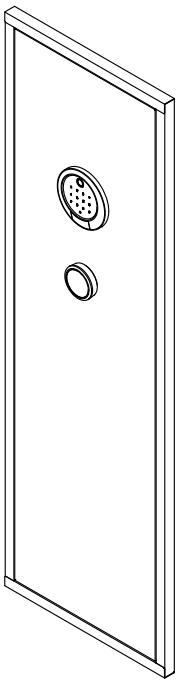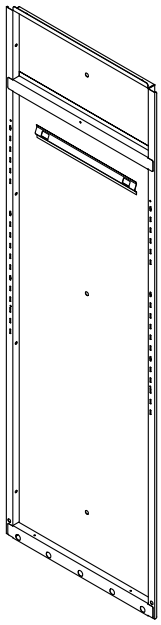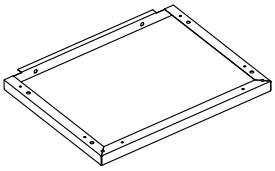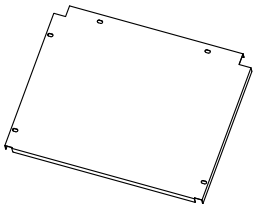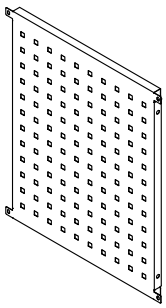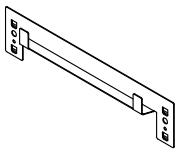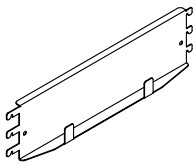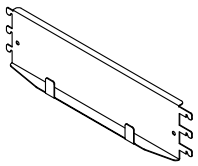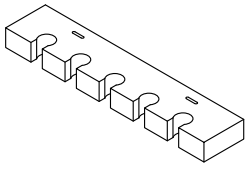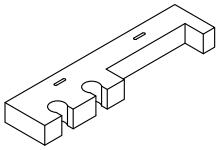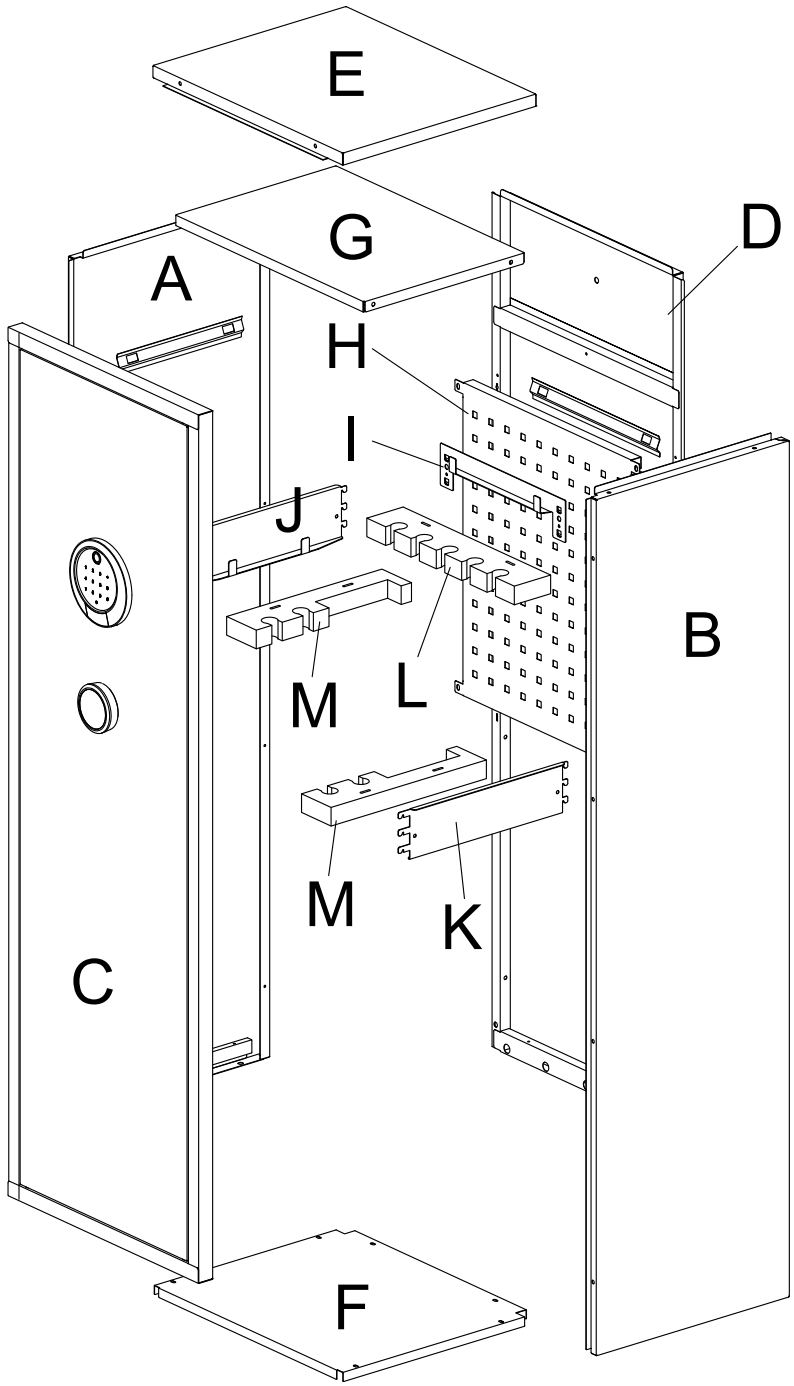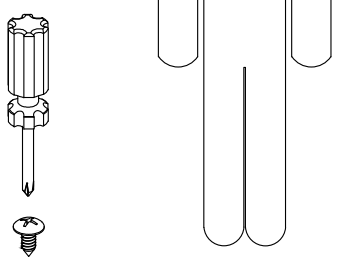


A×1  left panel	B×1  right panel	C×1  door	D×1  backboard
E×1  roof slab	F×1  base	G×1  laminate	H×1  pegboard
I×1  rear stock bracket	J×1  left gunstock bracket	K×1  right gunstock bracket	L×1  rear stock
M×2  left and right gunstocks	N×3  expansion bolt	O×35  screw	 screwdriver


E
G
A
D
H
I
J
B
M
L
M
K
C
F


×2

step1

Align the left panel (Component A) with the door panel (Component C), then secure them with four screws.

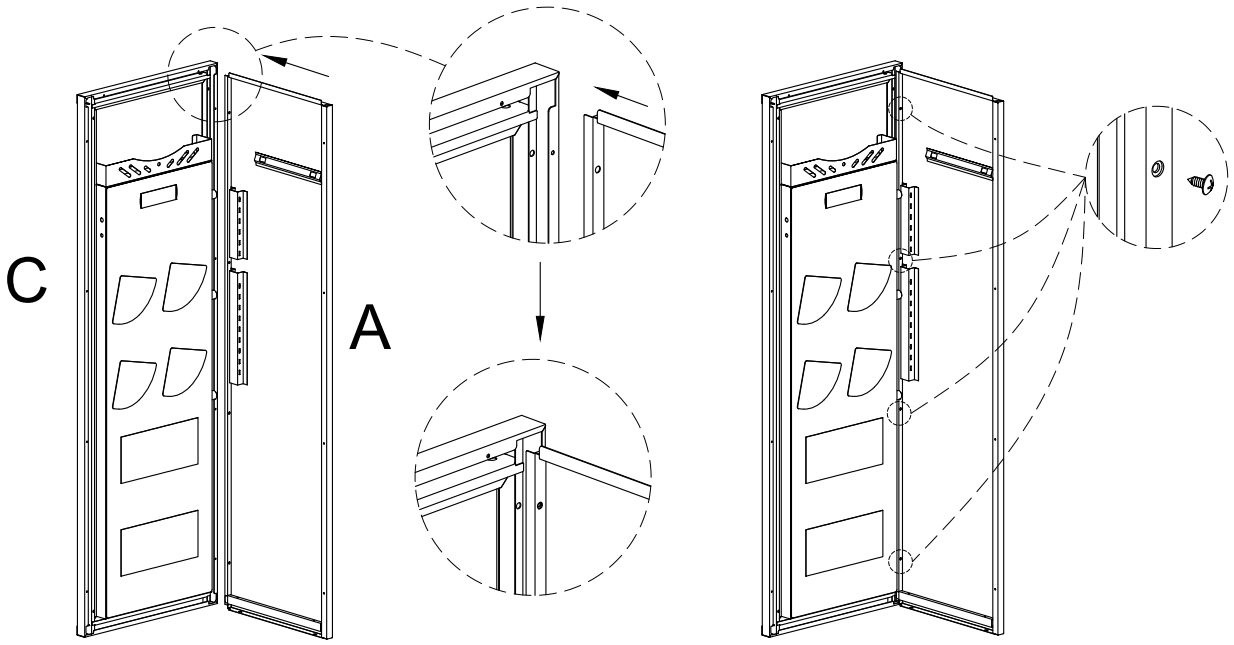




O×4

step2

Align the right panel (Component B) with the door panel (Component C), then secure them with four screws.

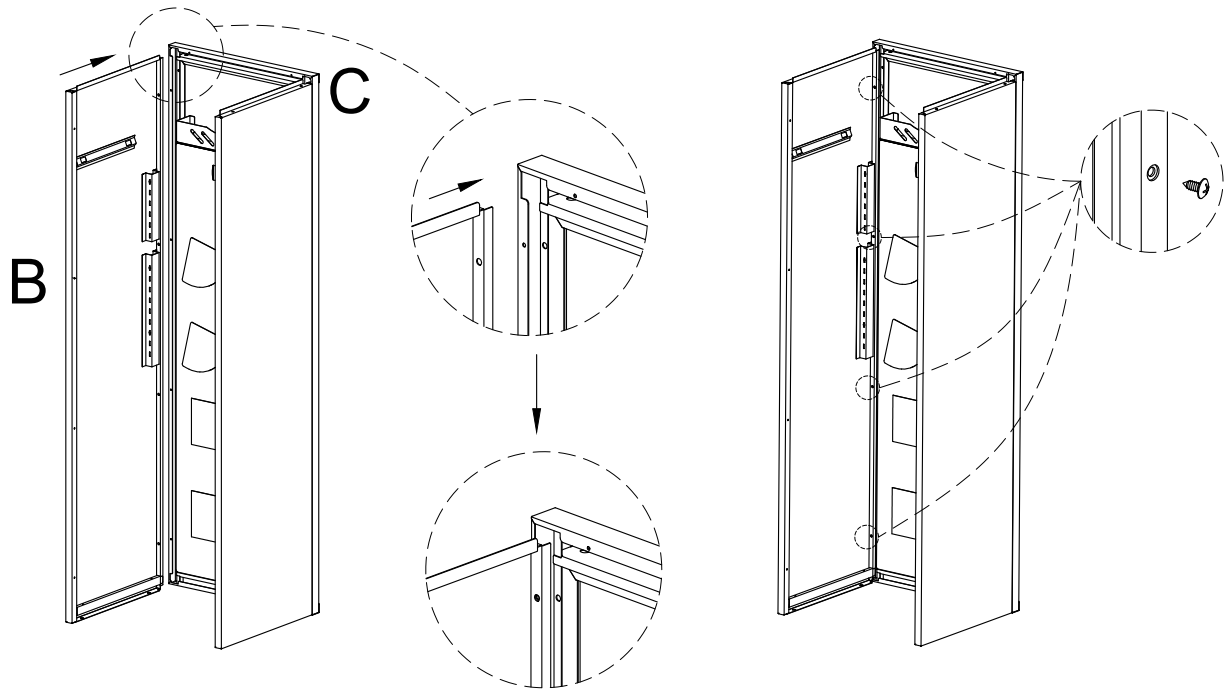





O×4

step3

Remove the emergency lock cover, use the emergency key to unlock the lock, then turn the handle to open the cabinet door.

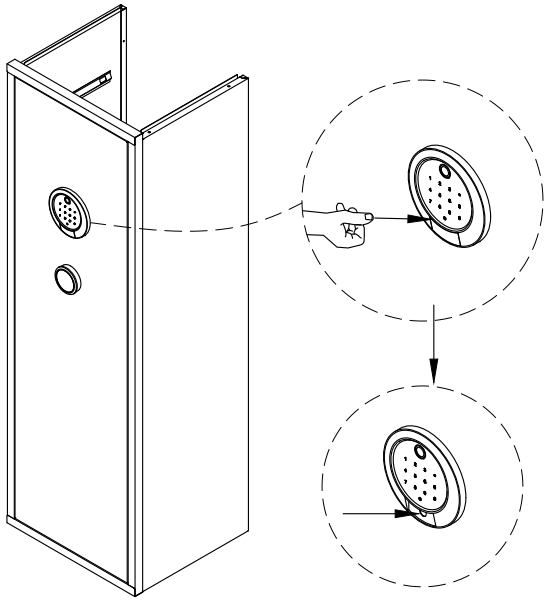


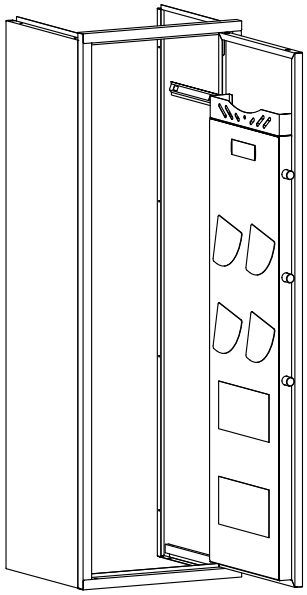


step4

Install the back panel (Component D), align both sides of the back panel with the side panels, and secure it with 8 screws.

D

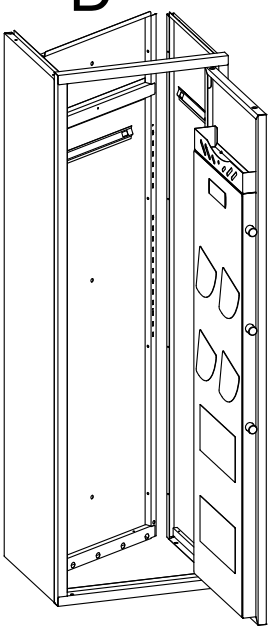

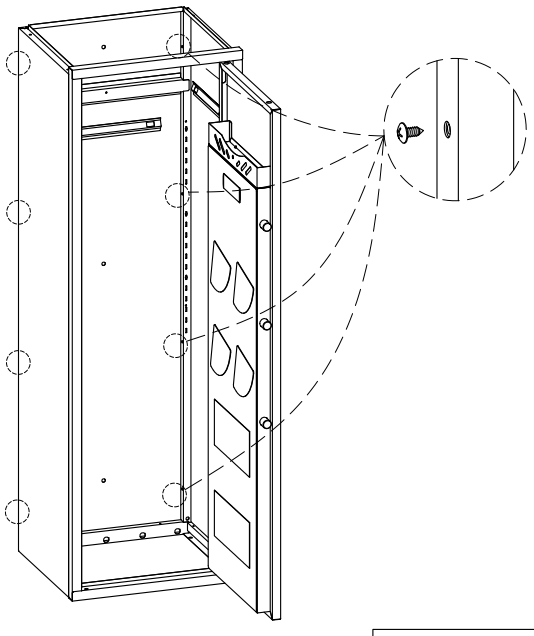




O×8

step5


Install the base plate (Component F) and secure it with six screws.

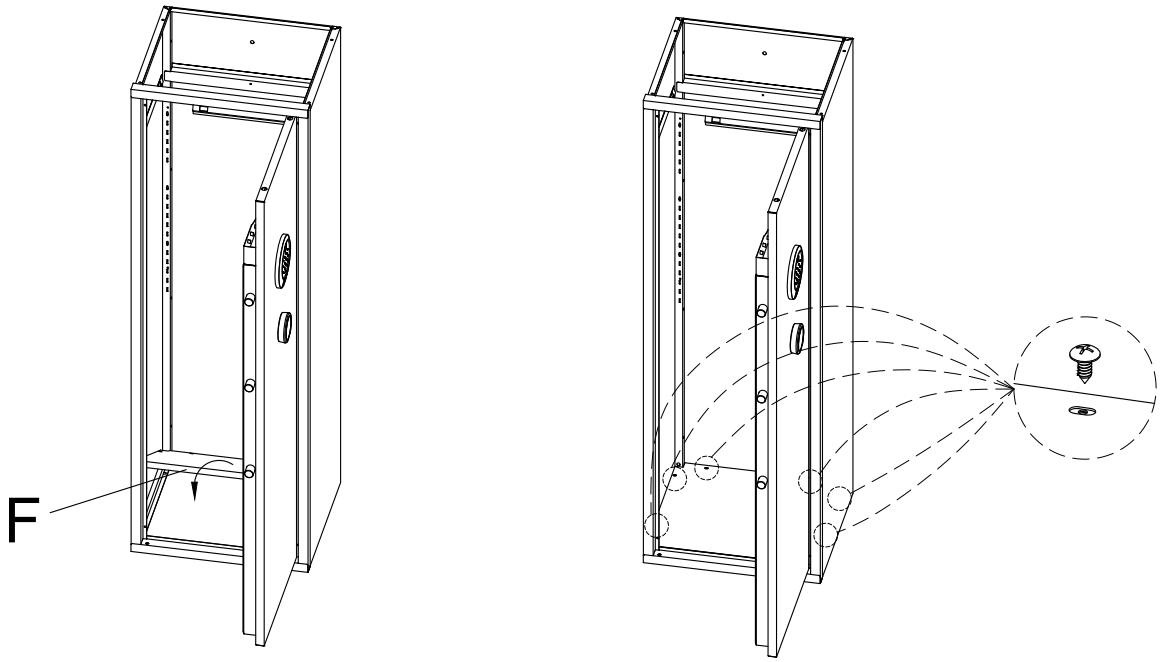

O×6

step6


Install the roof panel (Component E) and secue it with 8 screws.

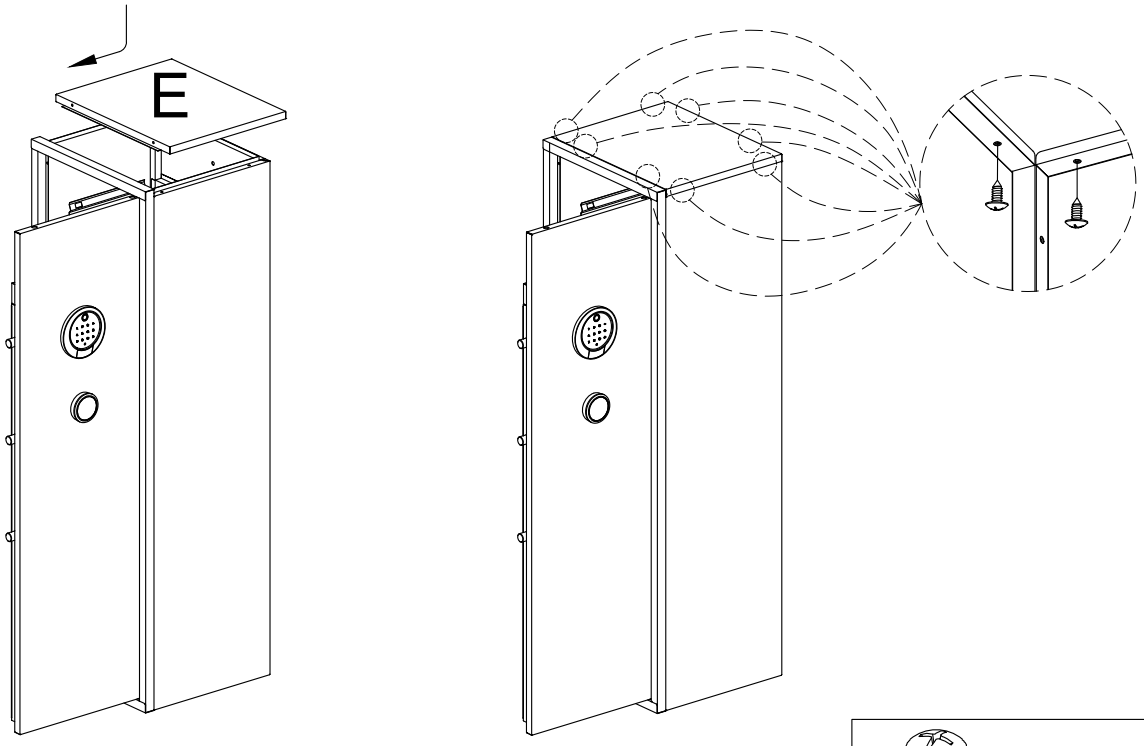



O×8

step7

To prevent injuries from a gun cabinet tipping over, always secure it to the wall.

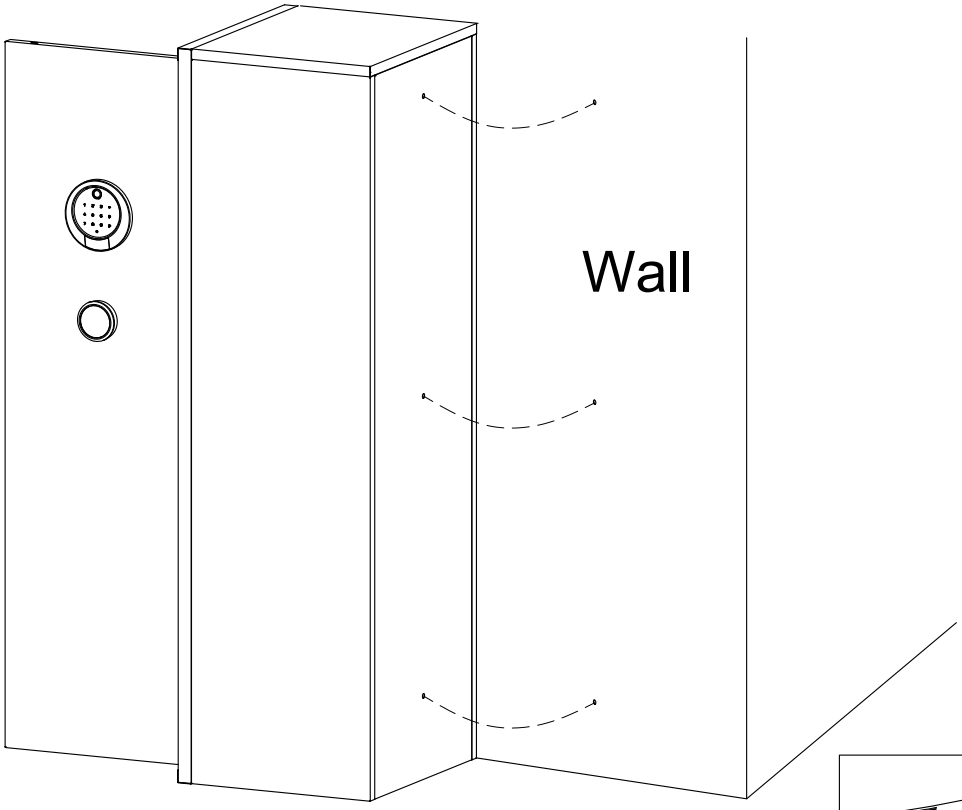

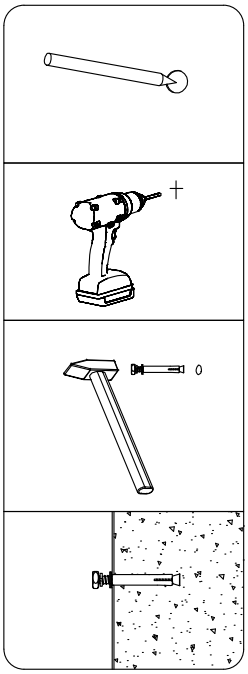





N×3

step8

To install the hole plate (Component H), first attach it to the back panel (Component D), then secure it with four screws.

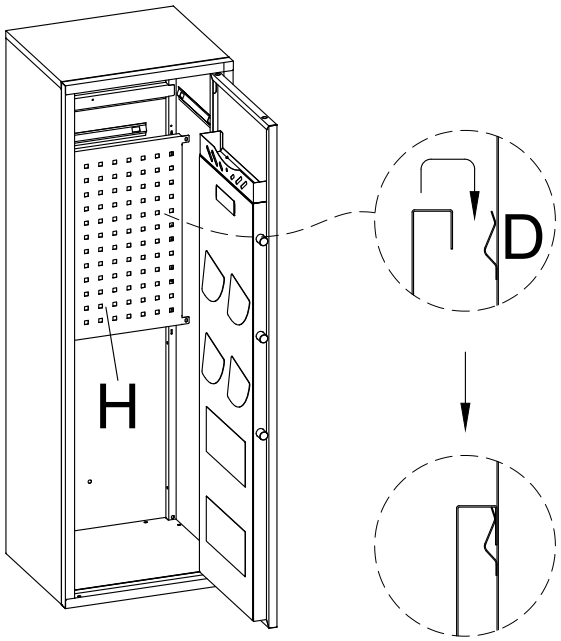

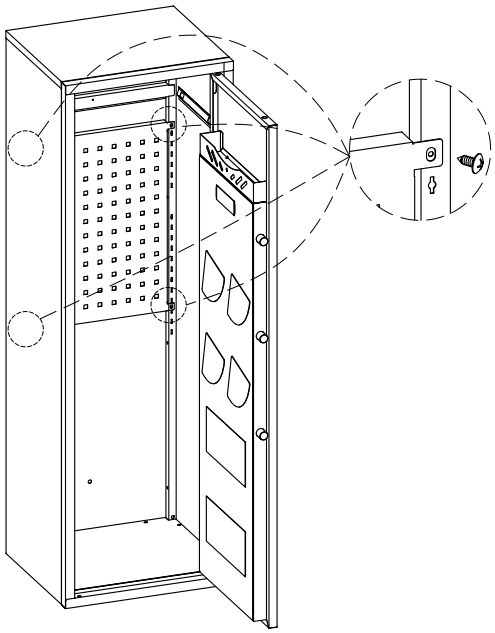





O×4

step9

Install the shelf (Component G) and secure it with one screw.

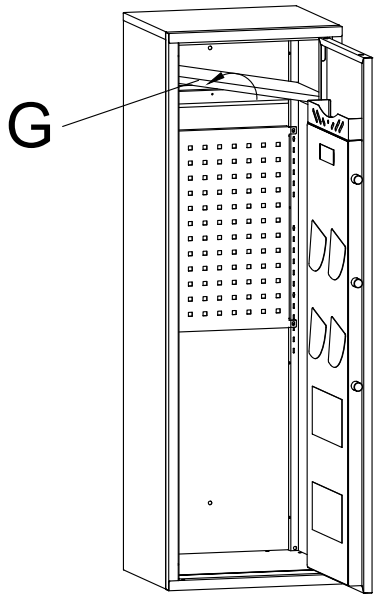

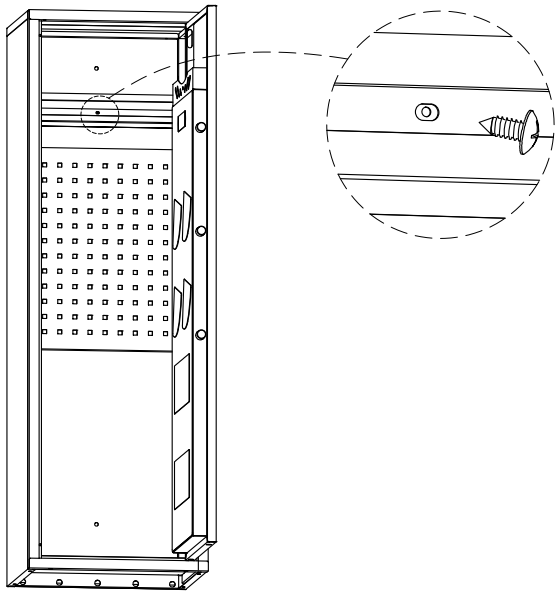





O×1

step10


After installation, adjust the stock (components I and L) to the appr
opriate height based on actual usage conditions.

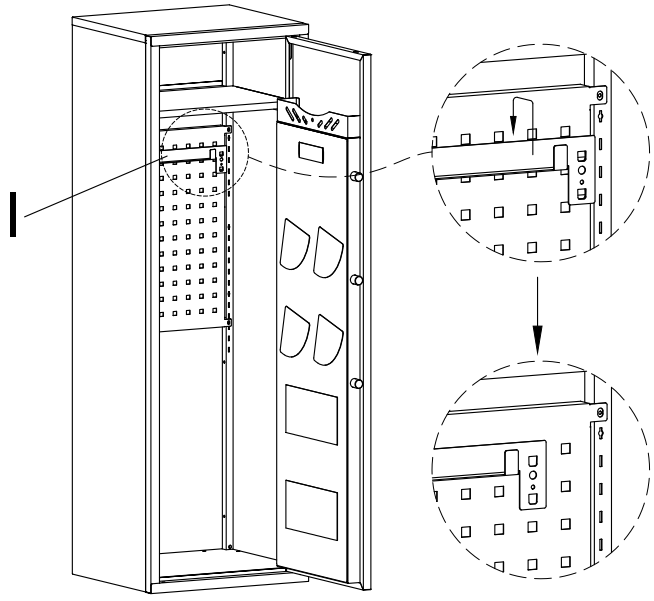

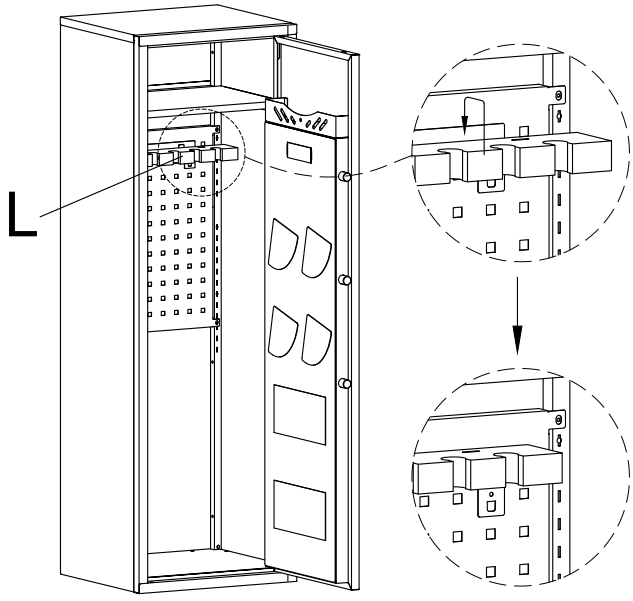


step11

Install the left stock (components J and M) and adjust it to the appro
priate height based on actual usage.

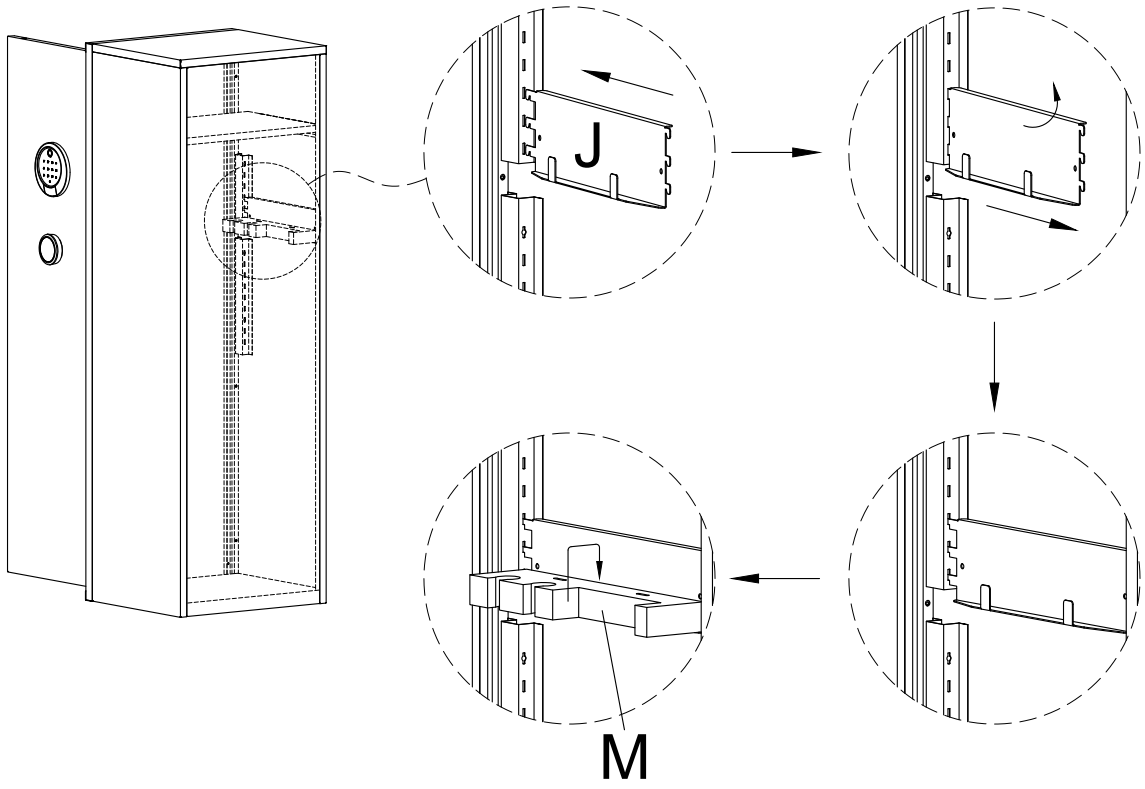


step12

Install the right stock (components K and M) and adjust it to the app
ropriate height based on actual usage.

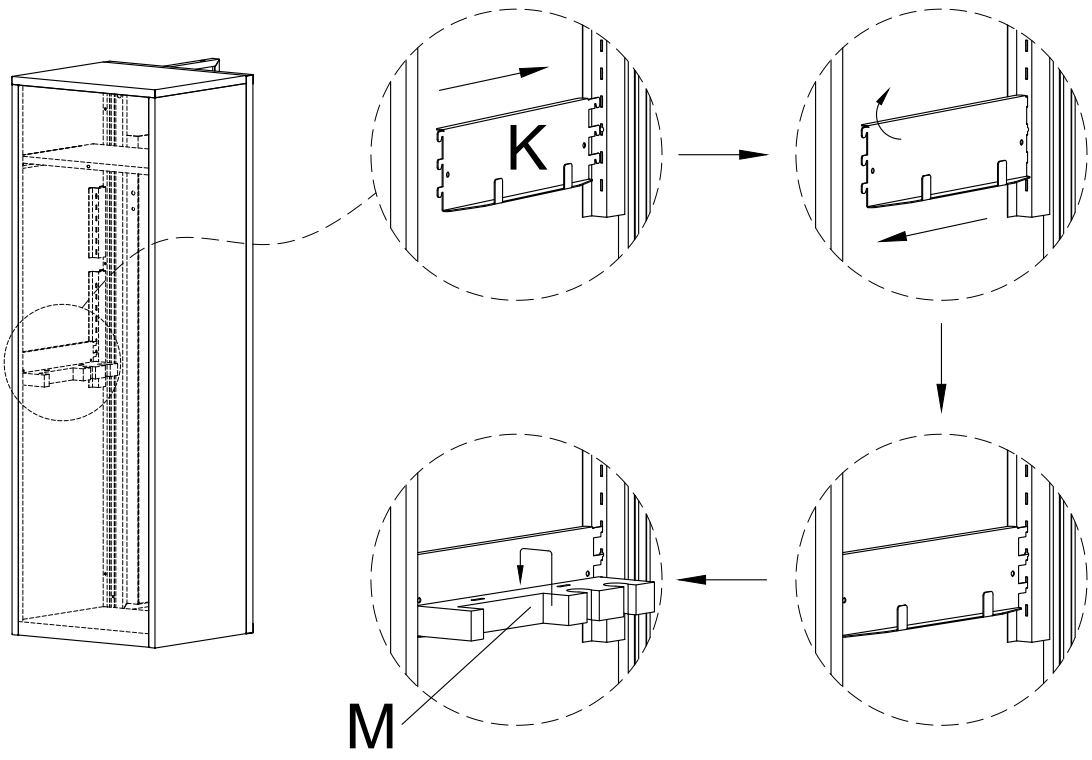

step13

Open the battery compartment cover, insert four AA batteries, and set the password according to the lock instructions in the appendix.

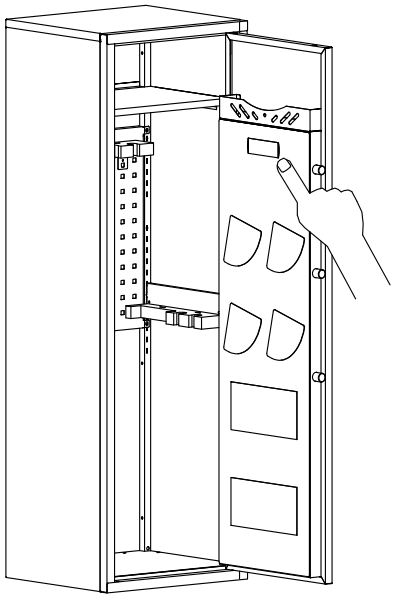

Please scan the QR code with the Google app to watch the installation video.

Fingerprint Lock Manual

I. Fingerprint Settings

(1) Press the setup button to hear a 'beep' sound. The fingerprint scanner and numeric display will light up. Then, place the finger you want to register in the center of the scanner.
(2) Press the finger once and hear a short 'beep' sound, then release the finger and press again;
(3) Press five times to hear the long beep 'beep---' and complete fingerprint registration.
(4) Fingerprint capacity: 30.
(5) You cannot open the door with an empty fingerprint.

II. Password Settings

(1) Press the setting button, and you'll hear a' beep' sound. The fingerprint scanner and the numeric display will light up.
(2) Enter a 3-8 character password and press the "#" key.
(3) When you hear a long beep, enter the same password again and press the # key.
(4) If the two passwords match, you will hear a long beep, indicating the new password is set successfully.

III. Vibration Alarm

(1) Touch the button area to activate the backlight. Press the "*" key to hear the long beep "beep---beep---beep---", which triggers the alarm. The box will sound the alarm for 1 minute upon receiving the vibration. Enter the correct password or fingerprint to disarm the alarm.
(2) When powered on, the system defaults to disabling vibration alerts.
(1) After opening, the vibration alarm will be disabled and needs to be turned on again.

IV. Mute function:

(1) Touch the keypad area to activate backlight. Hold the 1 key for 3 seconds to briefly illuminate the fingerprint sensor's green light while silencing the buzzer.
(2) Touch the keypad area to activate the backlight. Hold down the 1 key for 3 seconds to illuminate the fingerprint sensor's green light, triggering a' beep' sound that activates the audible alert.

V. Restore factory settings

(1) Hold the button for 3-5 seconds (do not release) until you hear a long beep. The factory settings will be restored successfully.
(2) The user password is set to "123456" and the fingerprint is cleared.

VI: Fingerprint Door

(1) Press the button, and after verification, hear the long 'beep---' sound as the electromagnet engages.
(2) If the recognition fails, a short beep will be heard. If the recognition fails six times in a row, the alarm will sound for one minute.

VII. Password to open the door

(1) Password unlock: When the door is locked, touch the touchscreen, enter the password, and press the "#" key to confirm. After verification, you will hear a long "beep---" sound, and the electromagnet will engage.
(2) If the recognition fails, a short beep will be heard. If the recognition fails six times in a row, the alarm will sound for one minute.

VIII: Low voltage

When the voltage is 4.8V or lower (+/-0.3V) and the fingerprint authentication is successful, a 'beep beep beep' sound will be heard, indicating low battery level. Replace the battery to ensure proper operation.