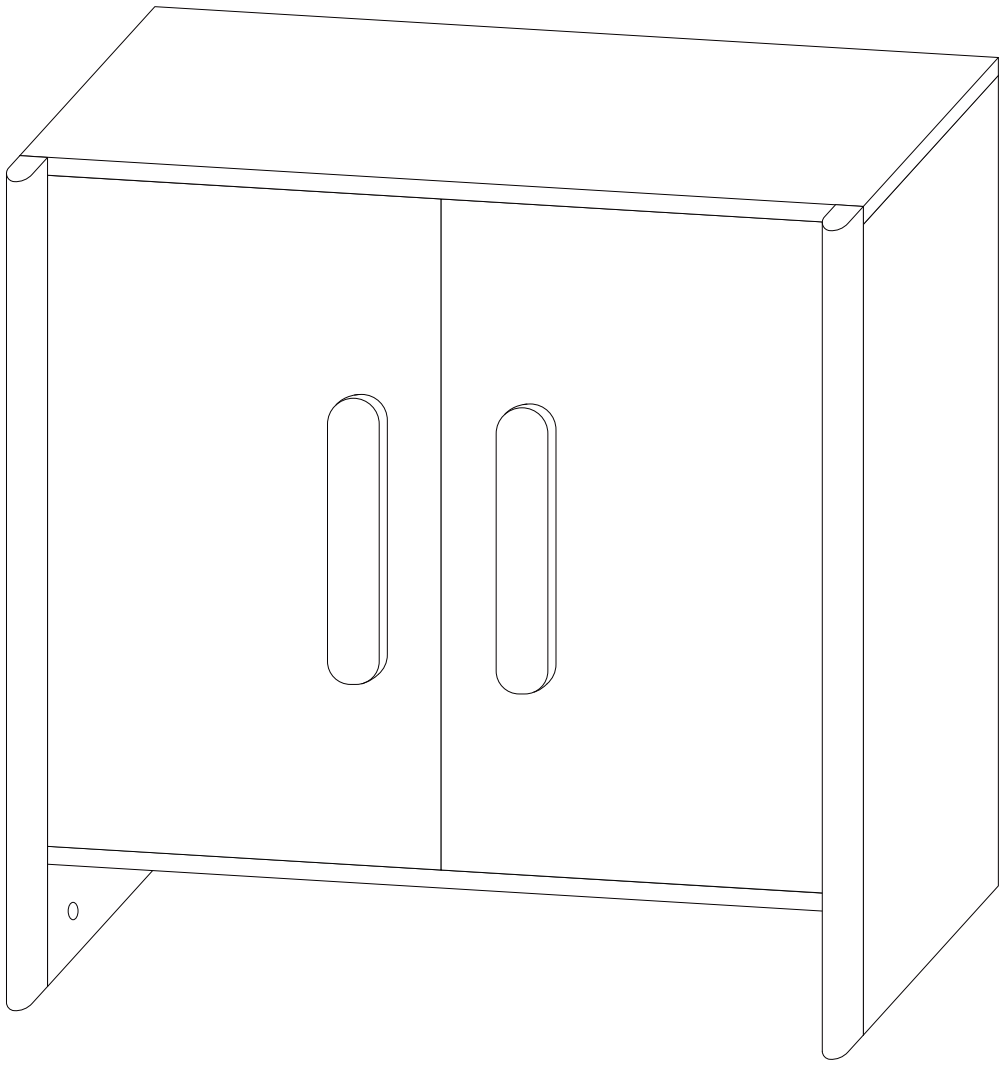
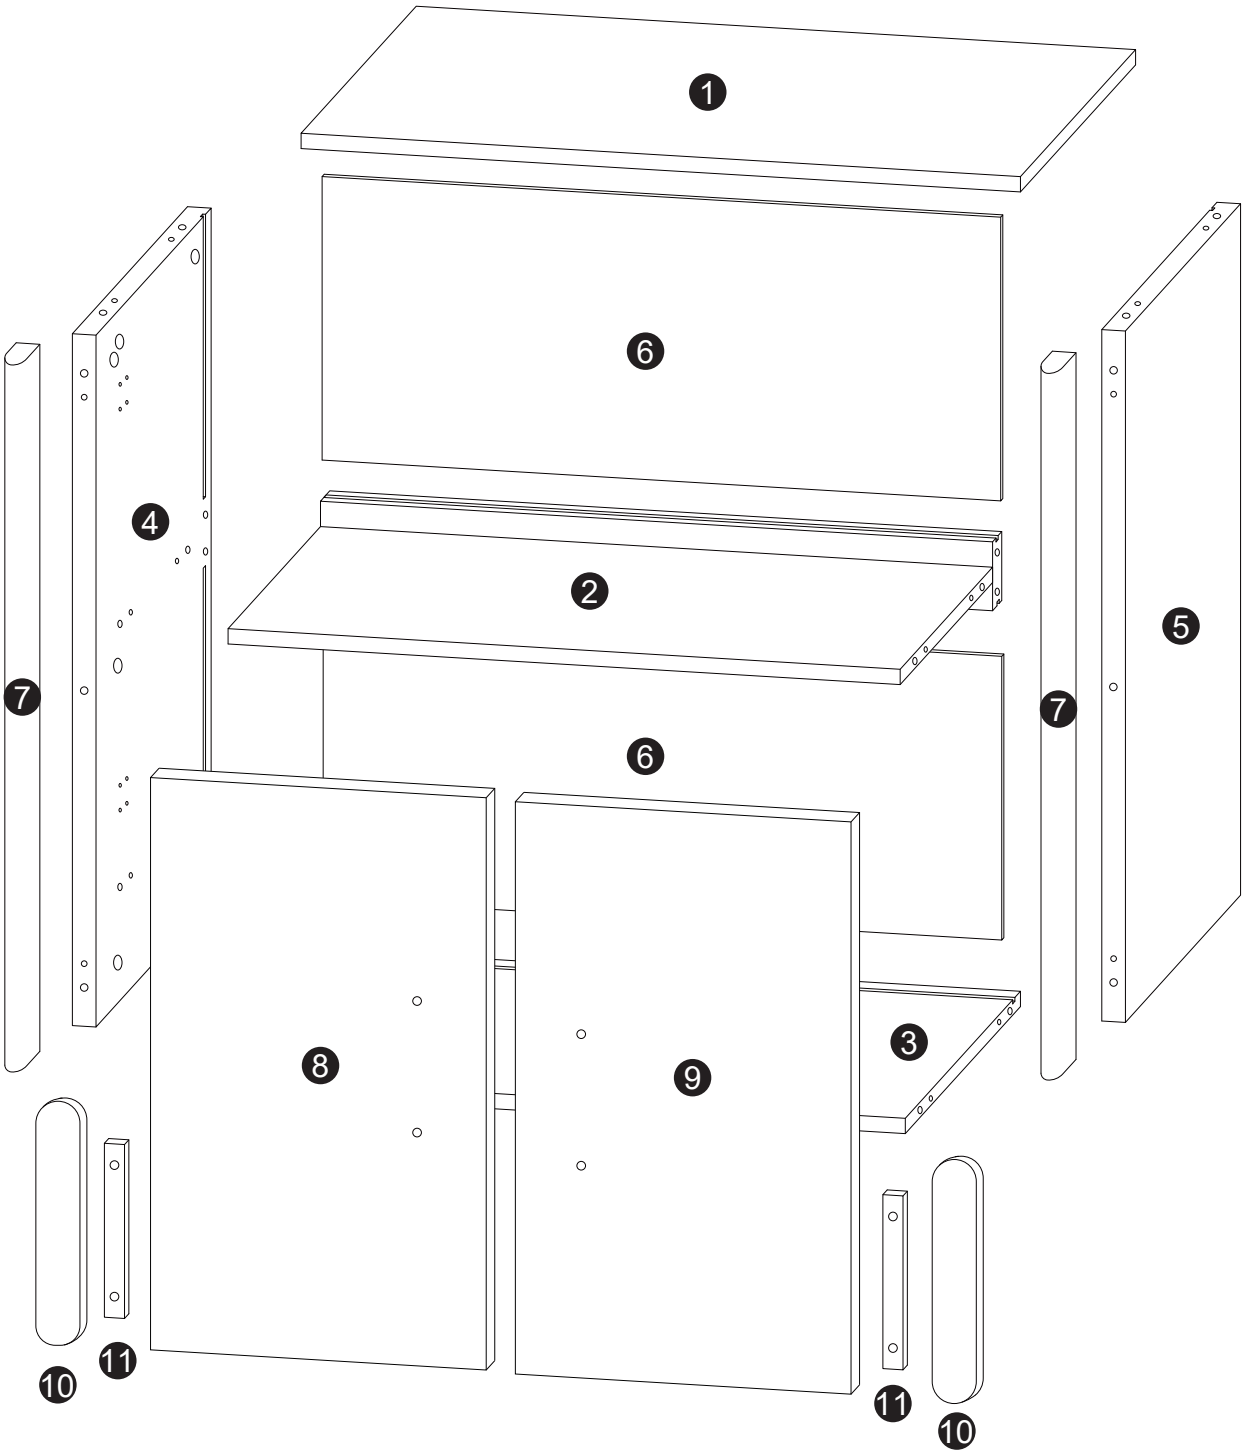
Assembly Instructions



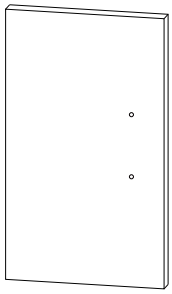
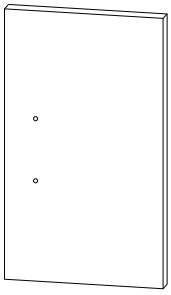










⚠ Caution





Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

❶  1 pc	❷  1 pc	❸  1 pc	❹  1 pc
❺  1 pc	❻  2 pcs	❼  2 pcs	❽  1 pc
❾  2 pcs	❿  2 pcs	⓫  2 pcs	


Hardware List


A	B	C	D	E	F
			 Ø 4x14mm		
22 pcs	16 pcs	22 pcs	24 pcs	4 pcs	1 pc

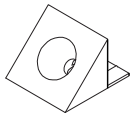G	H	I	J	K	
				 Ø 3x16mm	
4 pcs	4 pcs	1 pc	4 pcs	4 pcs	


Installation of Cams and Pins

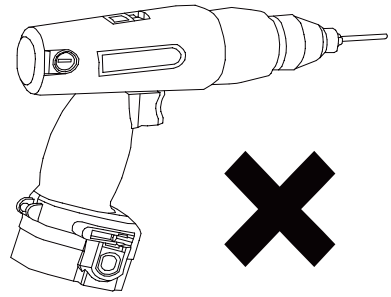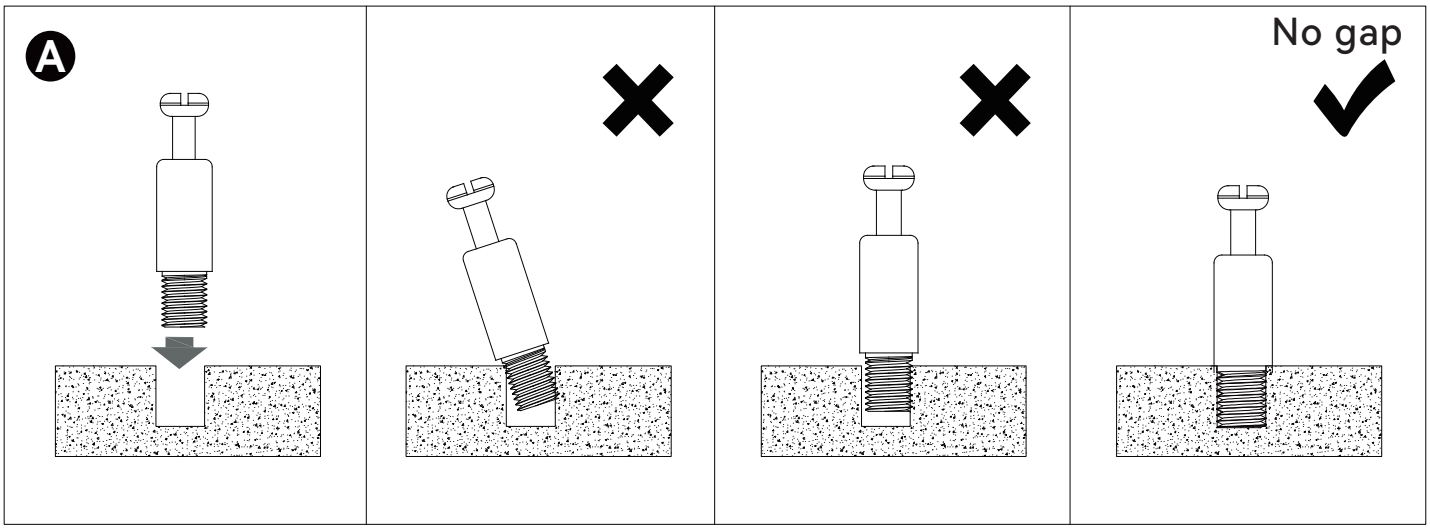Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.








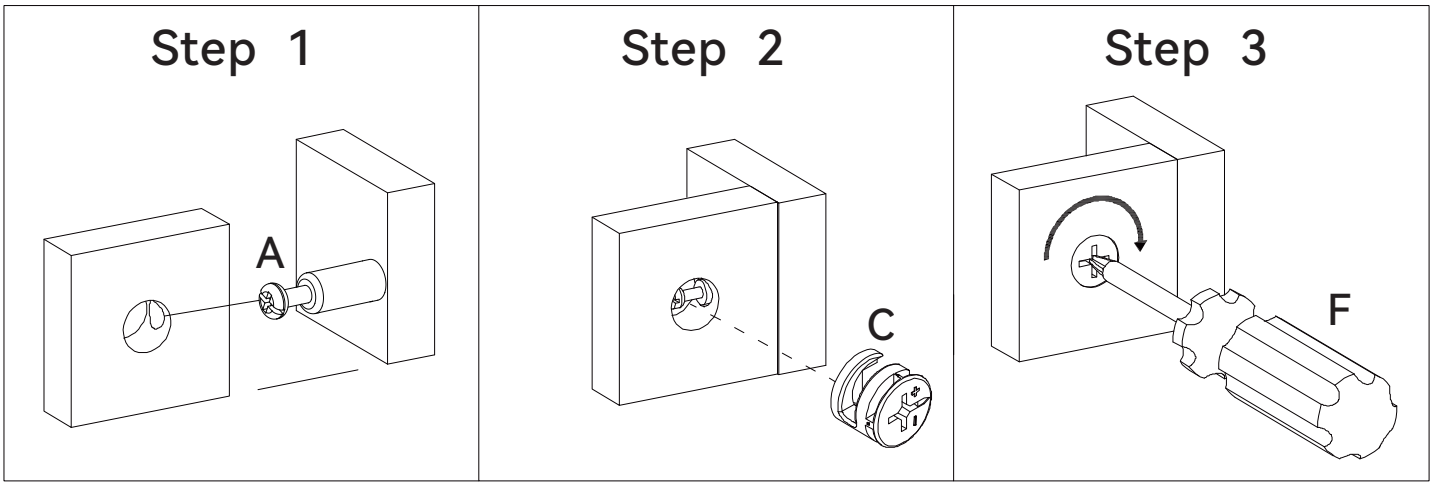
Screw the pin into the hole. Set the cams correctiy by aligning the head of the cams with the lock pins.Lock the cam by turning the cam head with a screw-driver until it is tightened. Please do not use an electric screwdriver to assem-ble the unit.





1


C	B	A
		
2 pcs	2 pcs	2 pcs

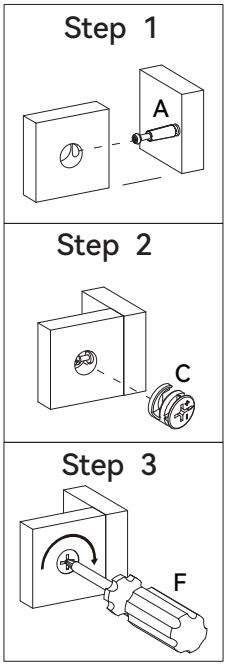

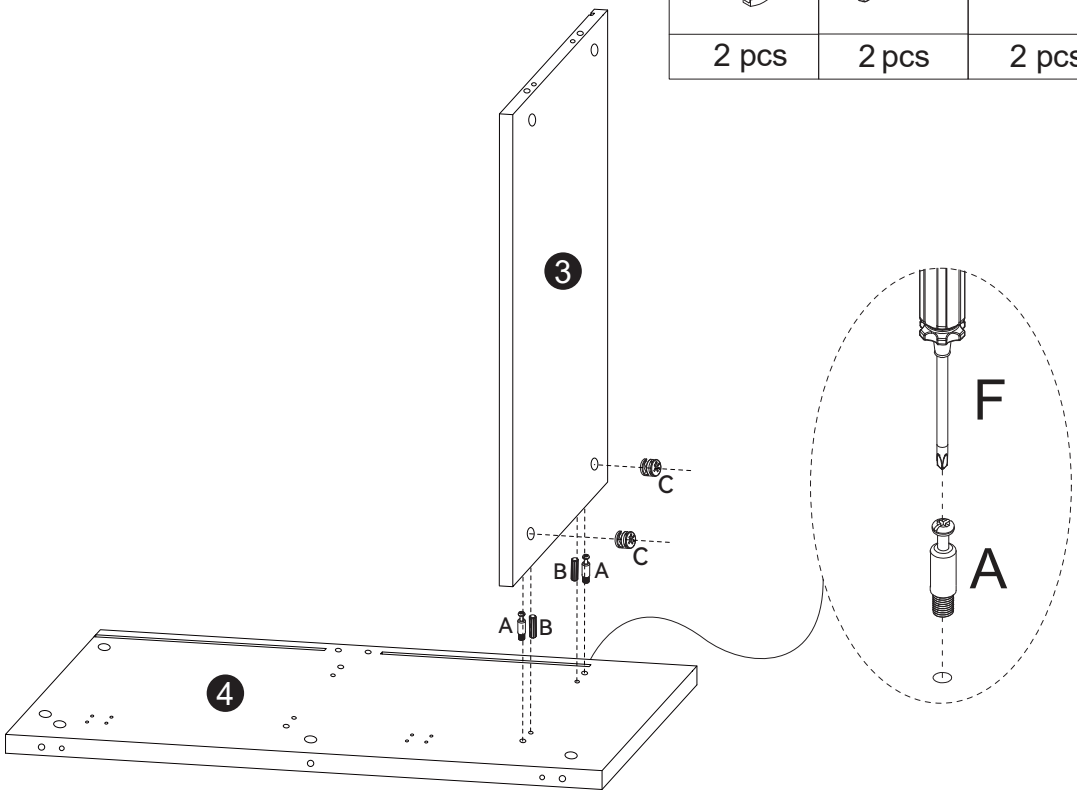

2


C	B	A
		
2 pcs	2 pcs	4 pcs

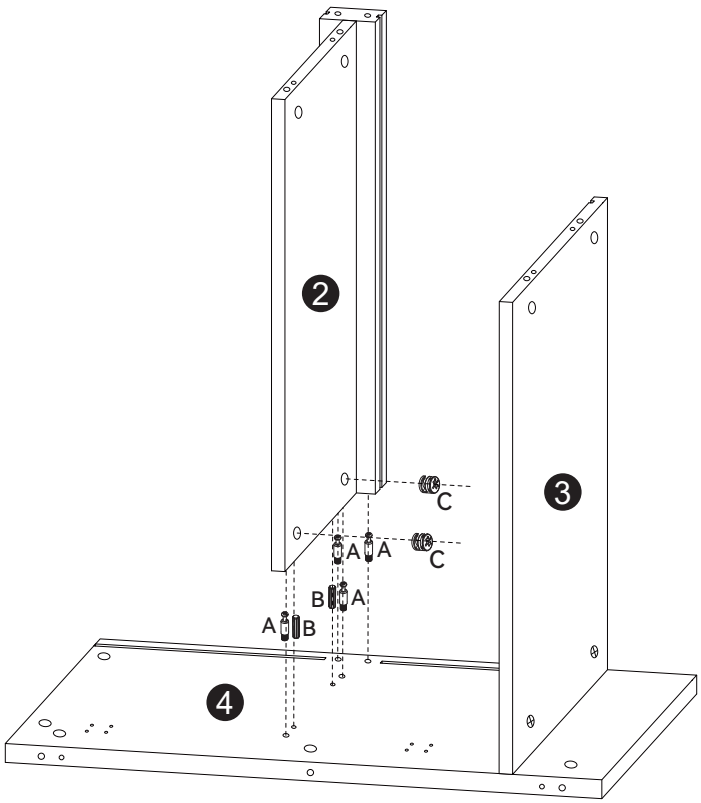


3

C


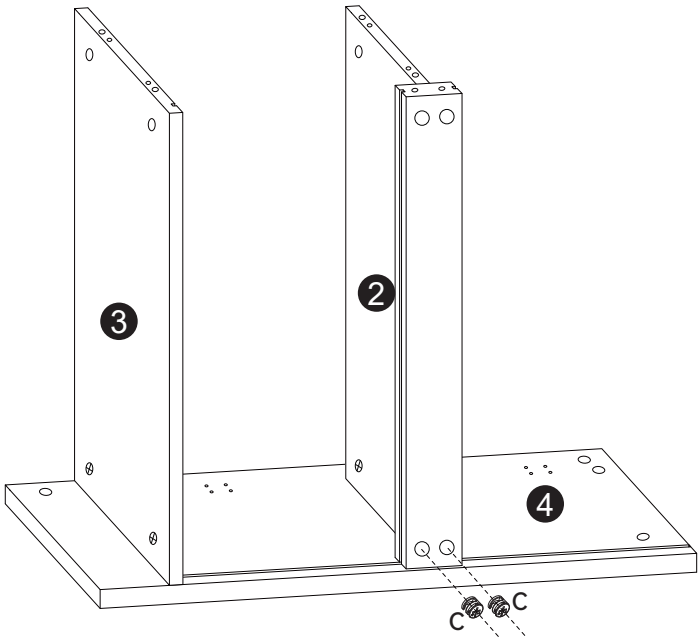
2 pcs




4

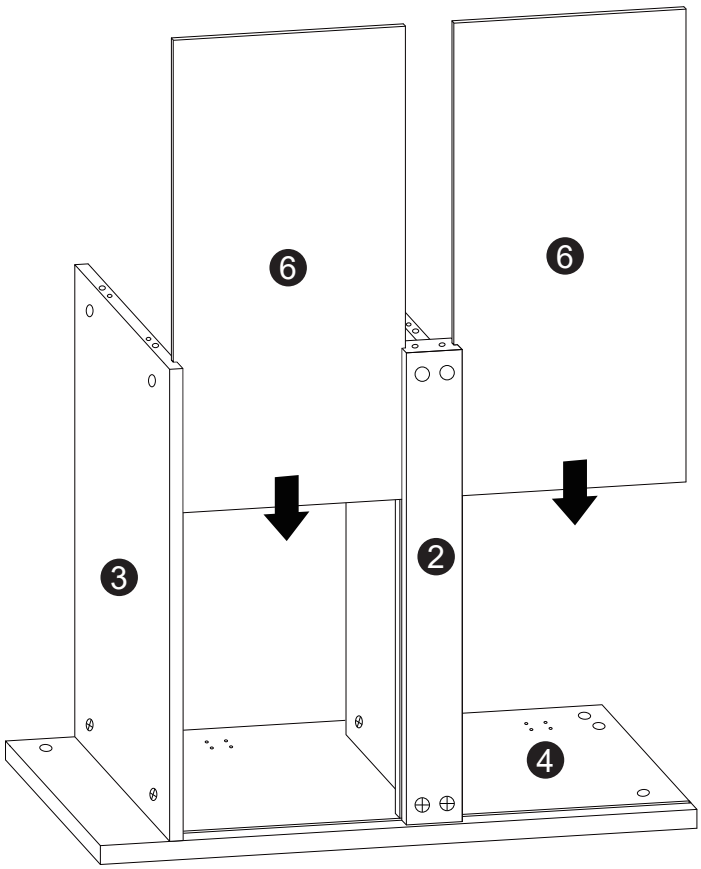

5


B	A
	
4 pcs	6 pcs

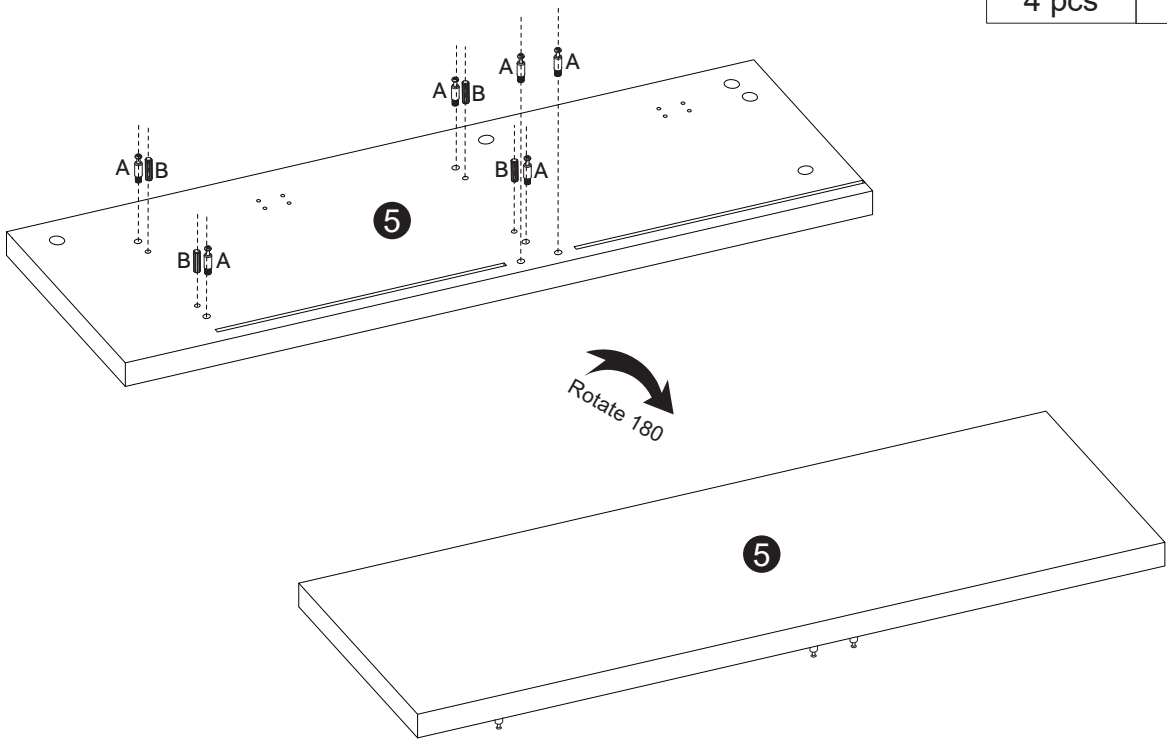



6


C

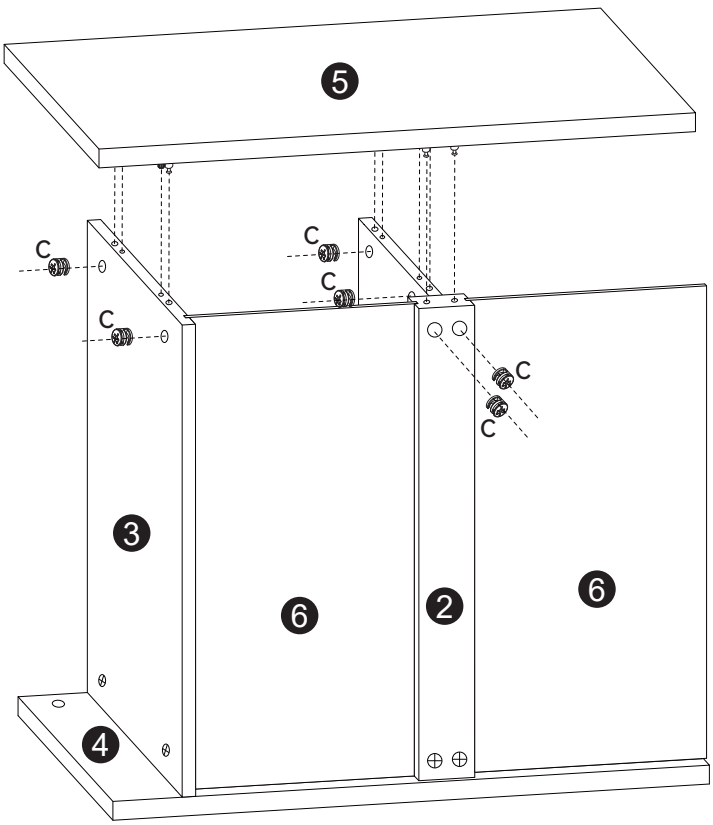6 pcs



7


B	A
	
4 pcs	4 pcs

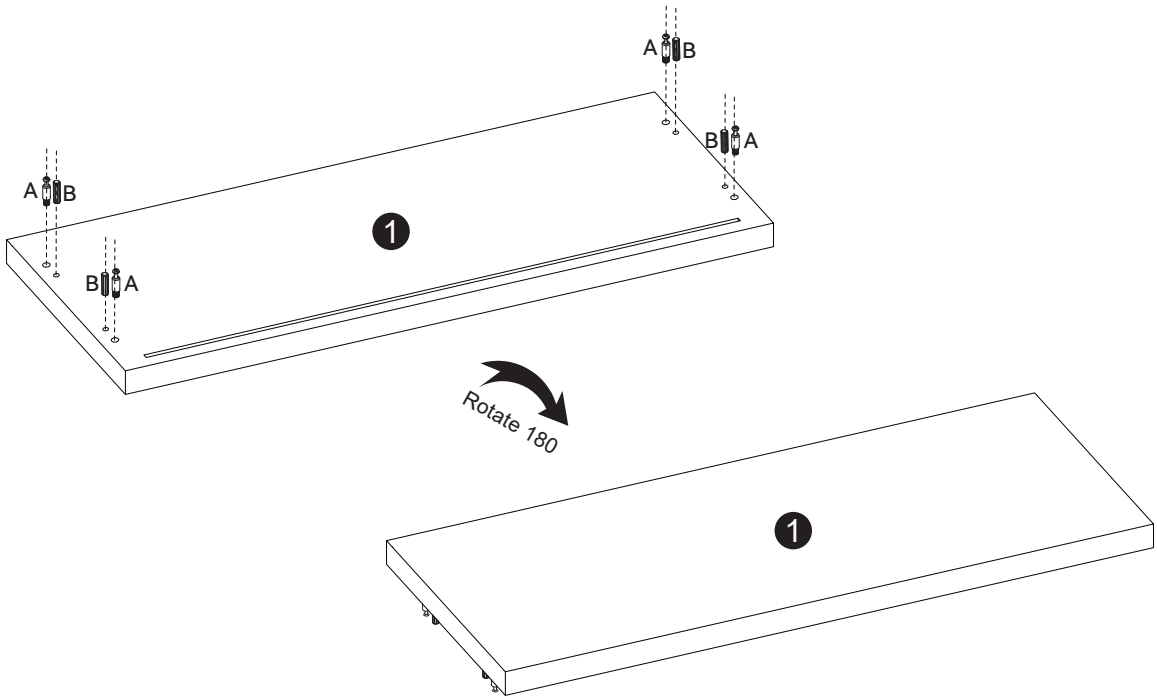



8


C

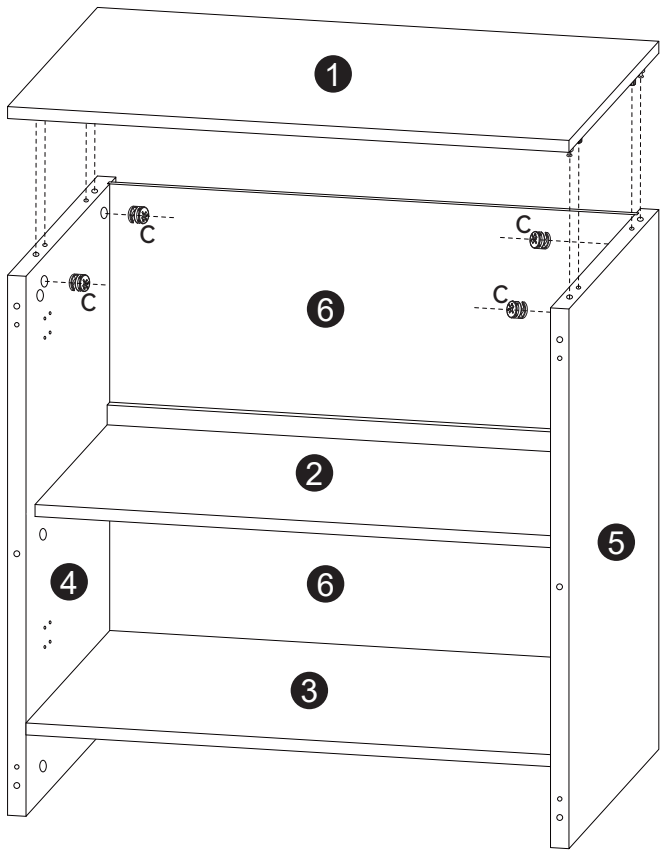4 pcs



9


B	A
	
4 pcs	6 pcs

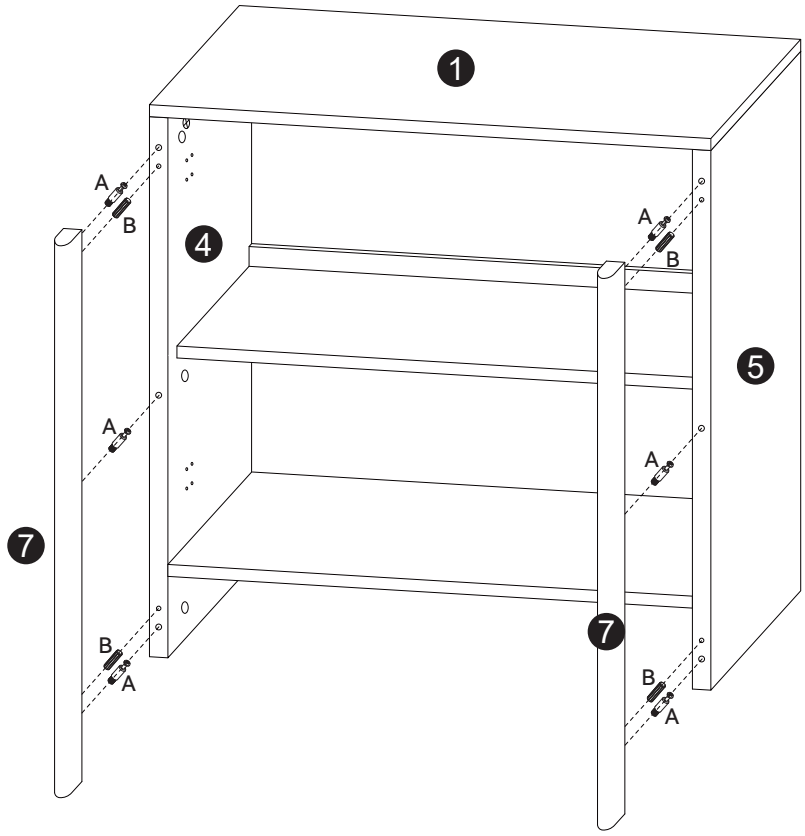


10

C

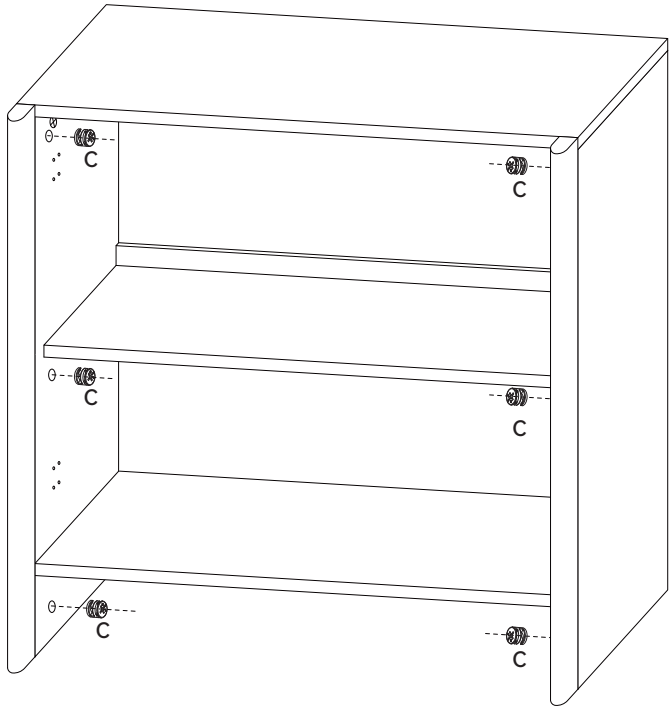6 pcs




11

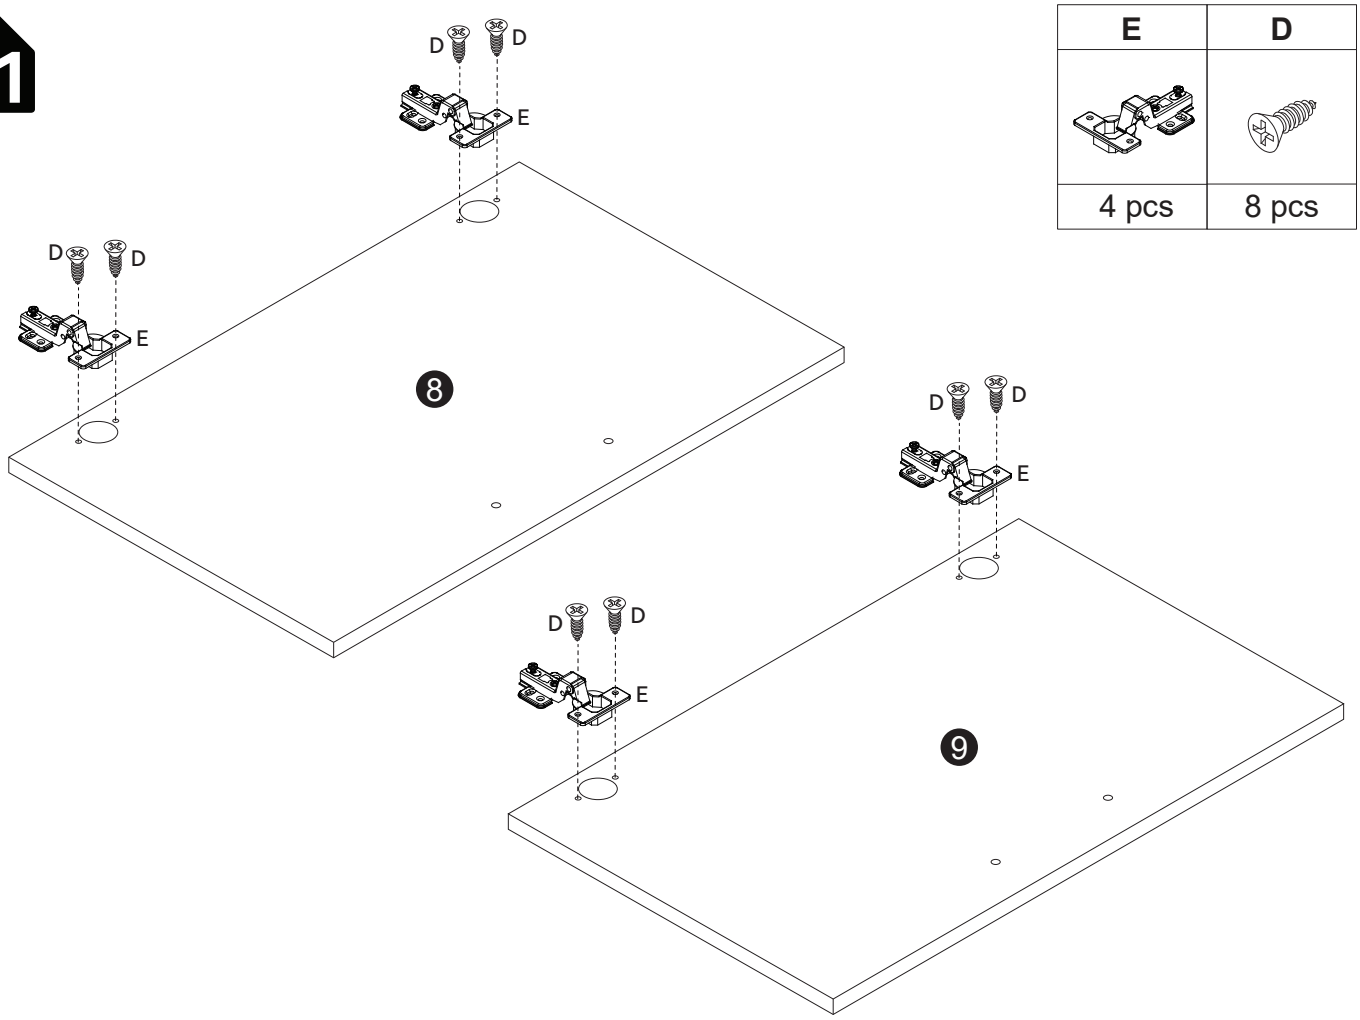


E	D
4 pcs	8 pcs

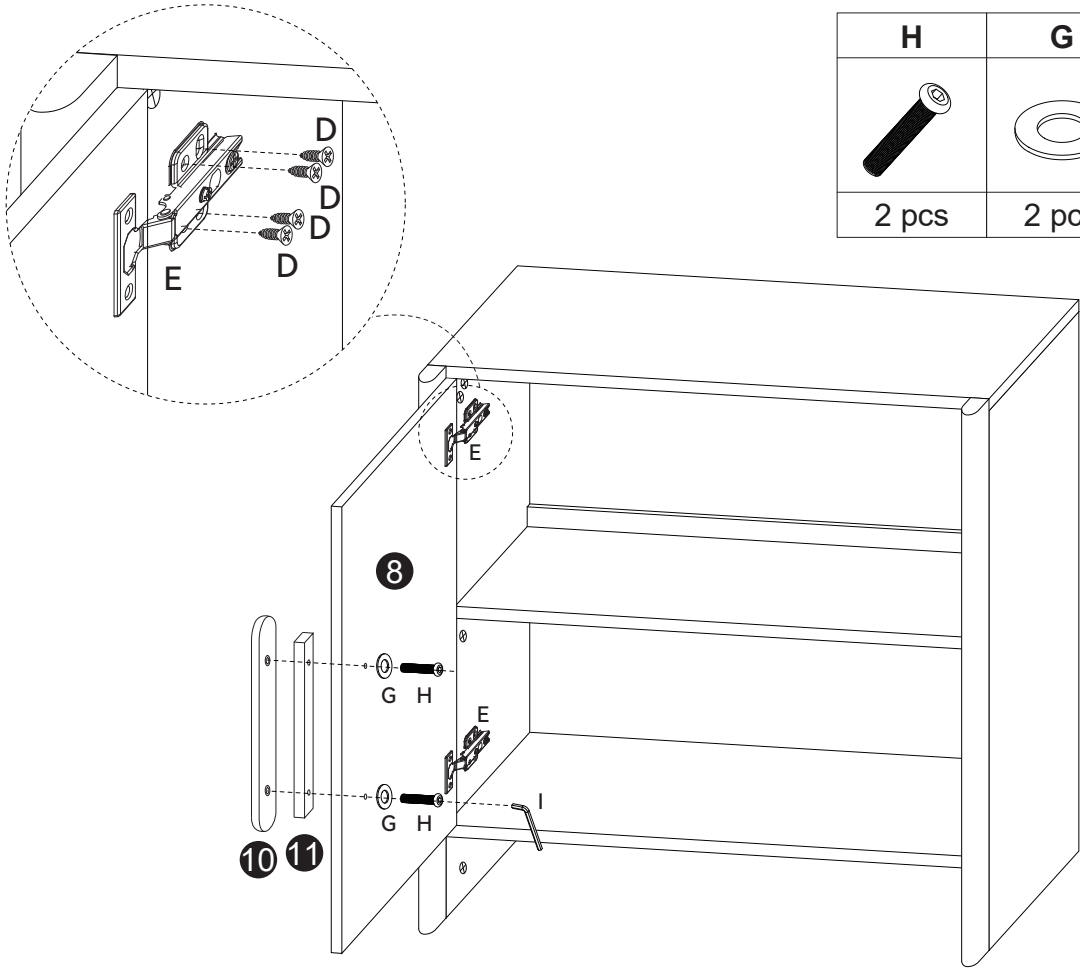
12




H	G	D
		
2 pcs	2 pcs	8 pcs

13

H	G	D
		
2 pcs	2 pcs	8 pcs

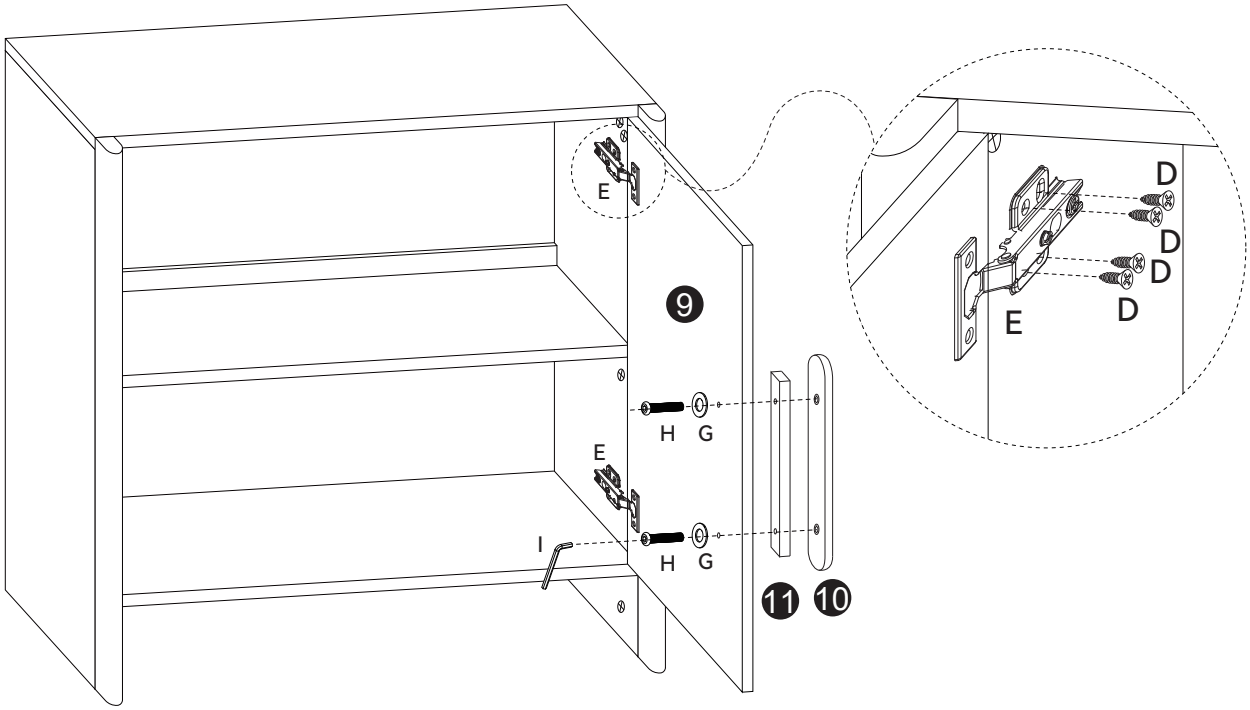

14

K	J
	
4 pcs	4 pcs

Thank you for your support!

