



ASSEMBLY INSTRUCTIONS

TWIN DAYBED WITH TRUNDLE







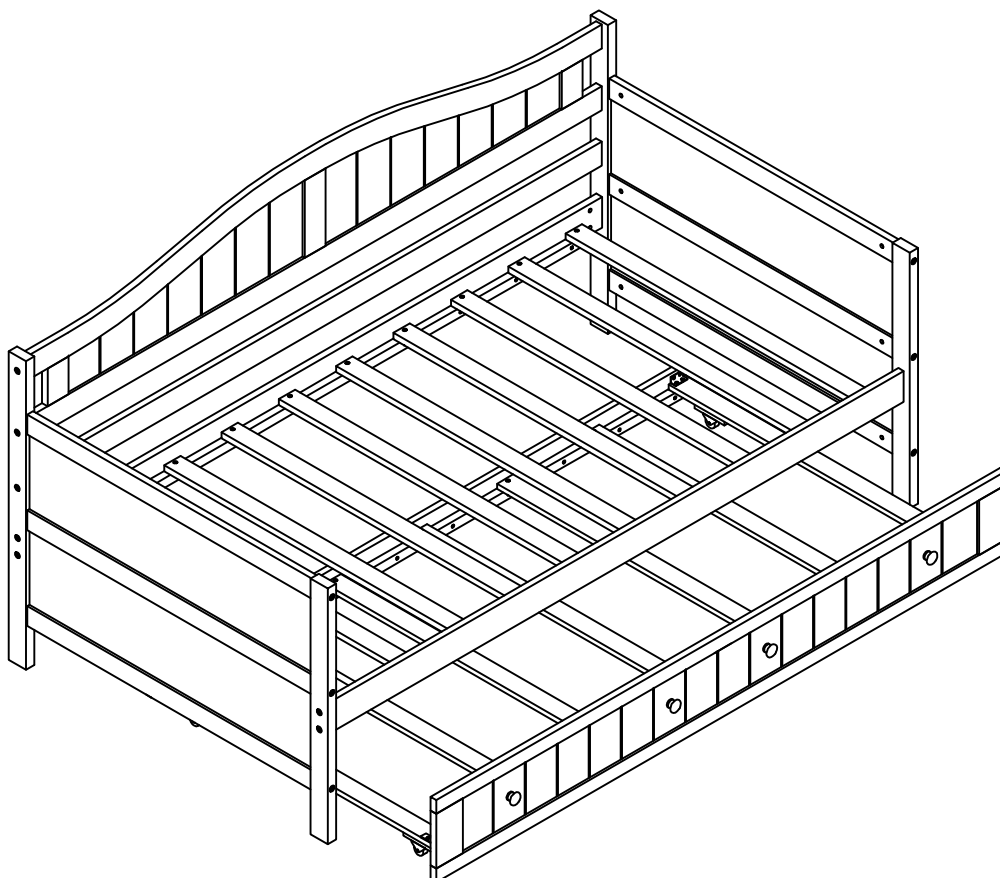


US-BED271AT08/US-BED271AT77







Detail View

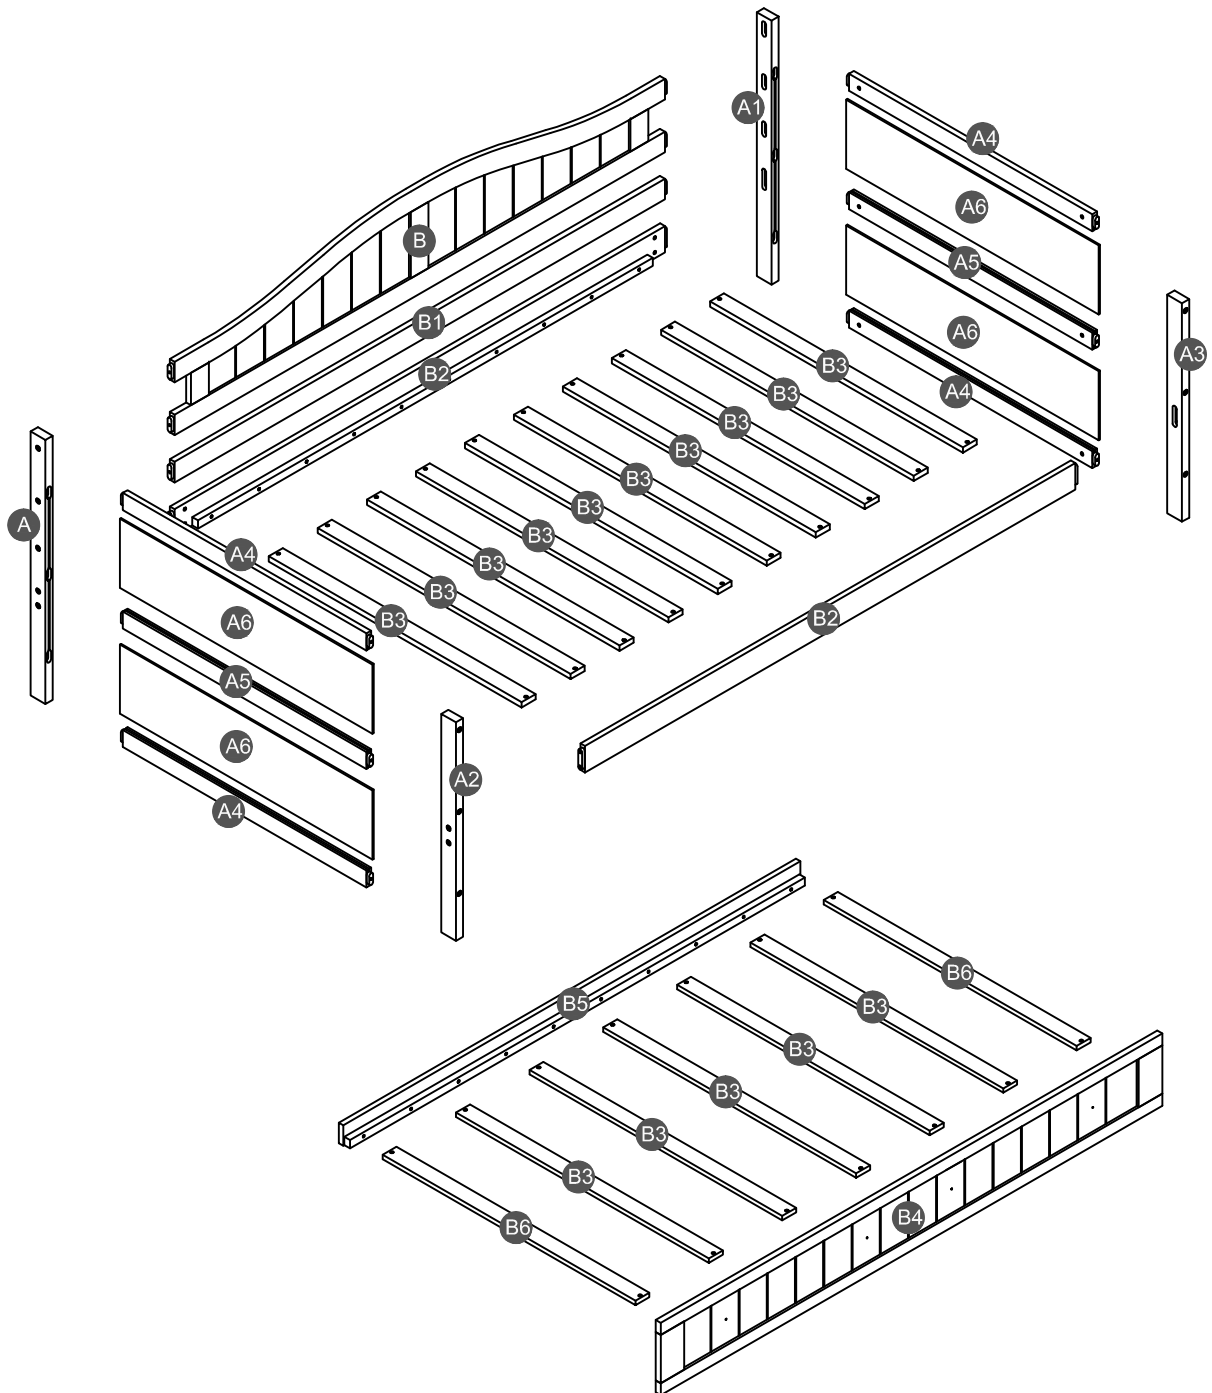



Part List

A  Leg HB (Left) - 1pc	A1  Leg HB (Right) - 1pc	A2  Leg FB (Left) - 1pc
A3  Leg FB (Right) - 1pc	A4  Horizontal bars HB&FB - 4pcs	A5  Horizontal center HB&FB - 2pcs
A6  Side panel (HB&FB) - 4pcs	B  Guard rail (back)- 1pc	B1  Horizontal bar (back) - 1pc
B2  Side rail (Front & Back) - 2pcs	B3  Slats - 15pcs	B4  Front panel of Trundle - 1pc
B5  Back panel side rail of Trundle -1pc	B6  Slats of Trundle - 2pcs	

Hardware List

1  (Ø15)1/4"*100mm Hex-Head bolts (12pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (14pcs)	3  1/4"*15 (9.5mm) Horizontal-Hole bolts(26pcs)
4  Ø4*30mm Wood screws (46pcs)	5  Ø3.5*15mm Wood screws (16pcs)	6  Ø38*31mm Pine Knob (4pcs)
7  3/16"*15mm Ph zinc(Knob) (4pcs)	8  80*45*19 mm Drawer stopper (2pcs)	9  40*17*17*1.6mm Metal bracket (2pcs)
10  100*61*20 mm Wheels (4pcs)	11  95*95*18*3mm Metal bracket (2pcs)	12  Ø1/4"*16*2mm Flat Washer (4pcs)
13  (1/4")4.5*58mm Allen key (1pc)		

OPTIONAL TOOLS FOR ASSEMBLY (NOT INCLUDED)





Electric
Screwdriver

PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:


1		3	
12PCS		12PCS	

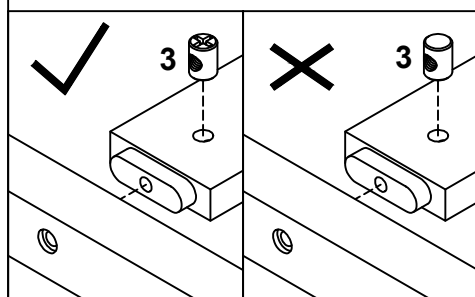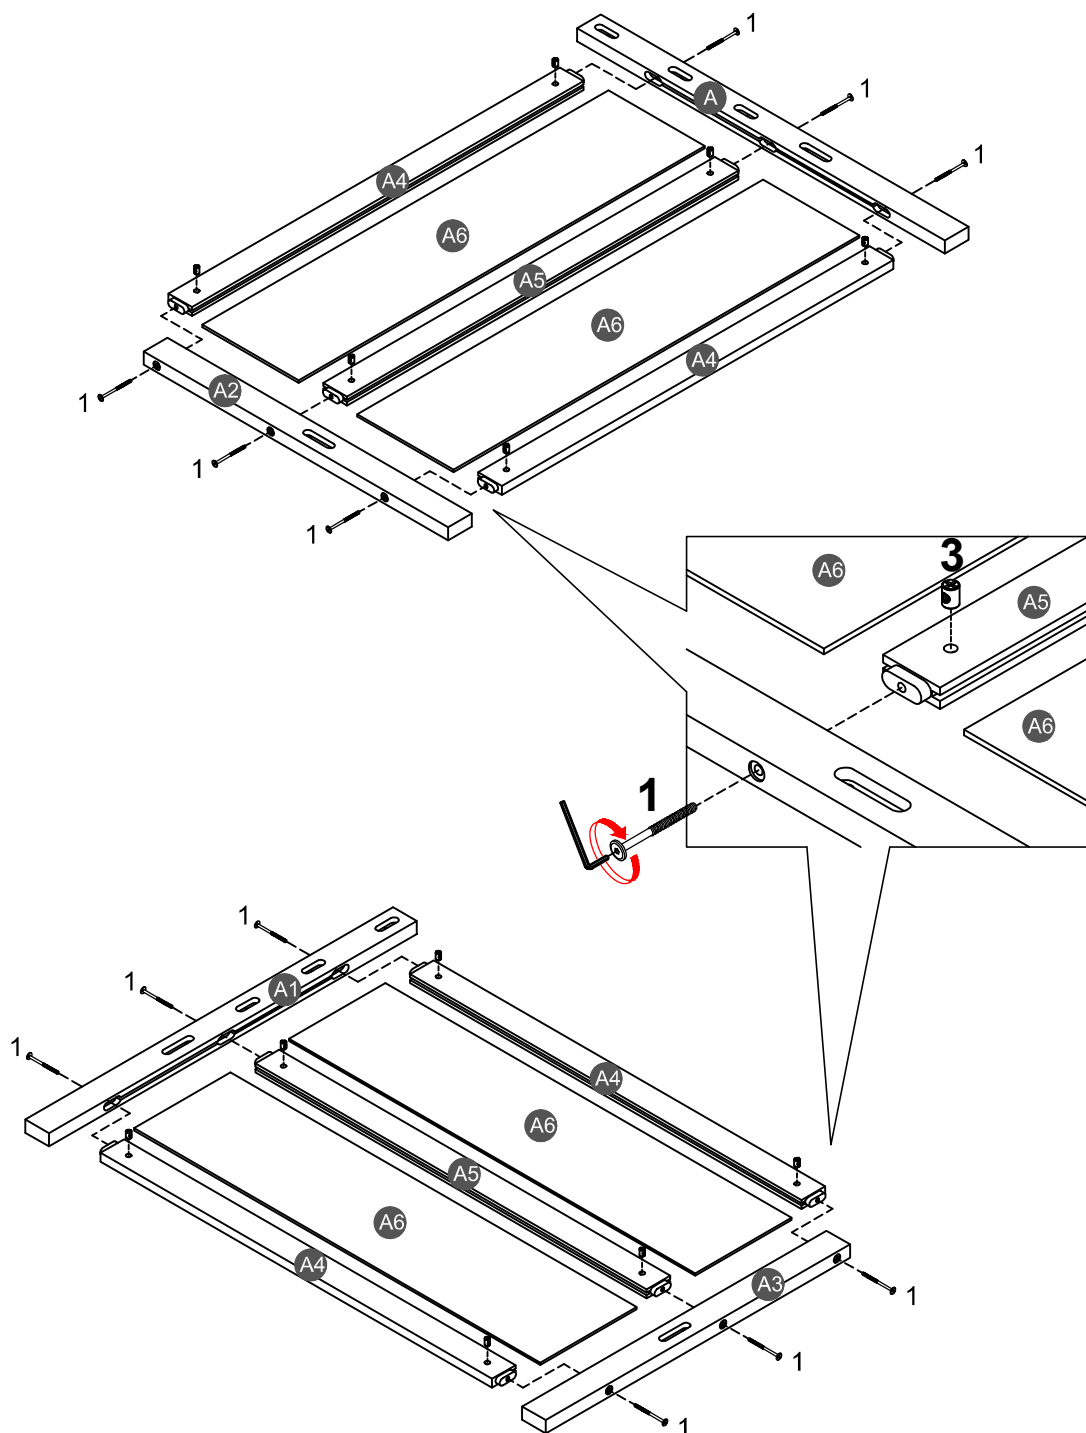


Note: Part 3 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:

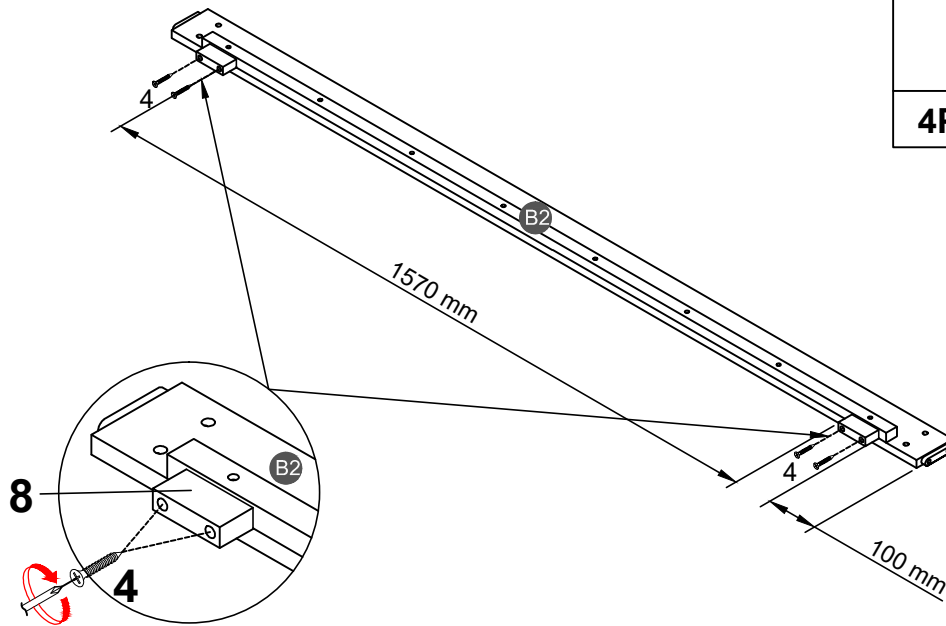

4		8	
4PCS		2PCS	

STEP 3:

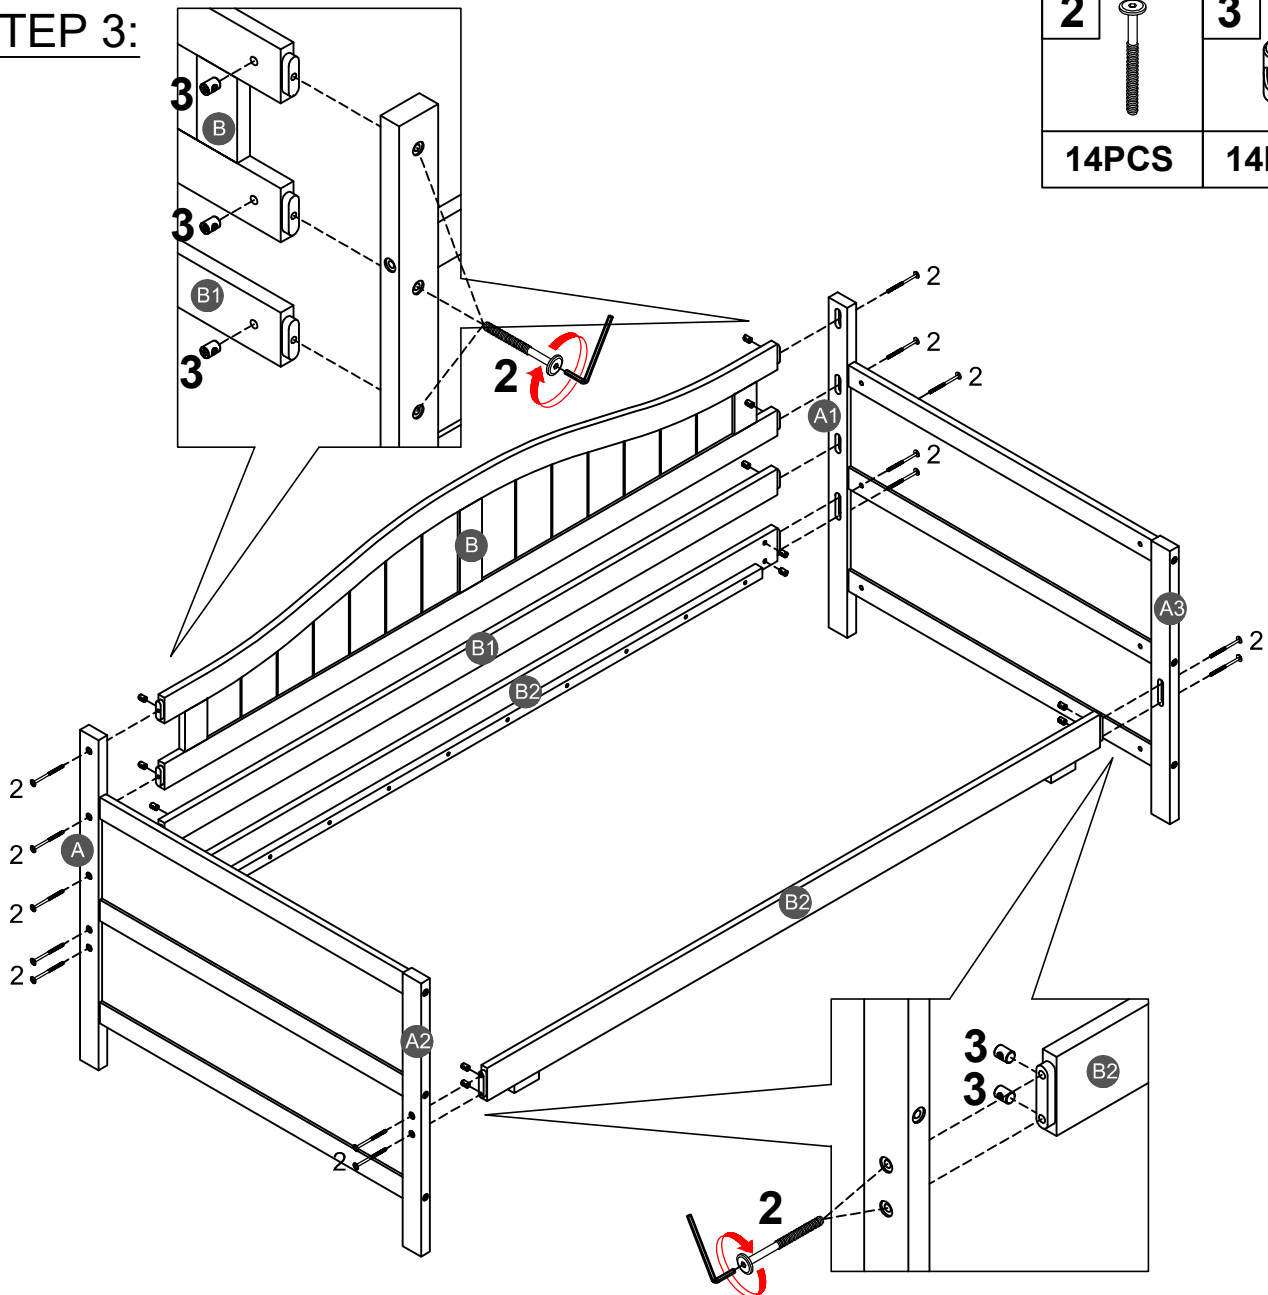

2		3	
14PCS		14PCS	




STEP 4:

For better fixing effect, there is no pre-drilled hole on the side rails. Please use self-tapping screws to fix it.

4




20PCS

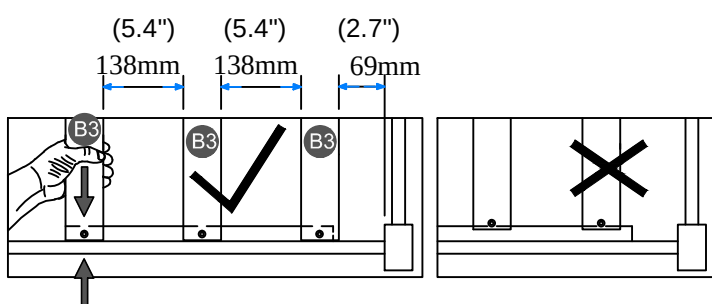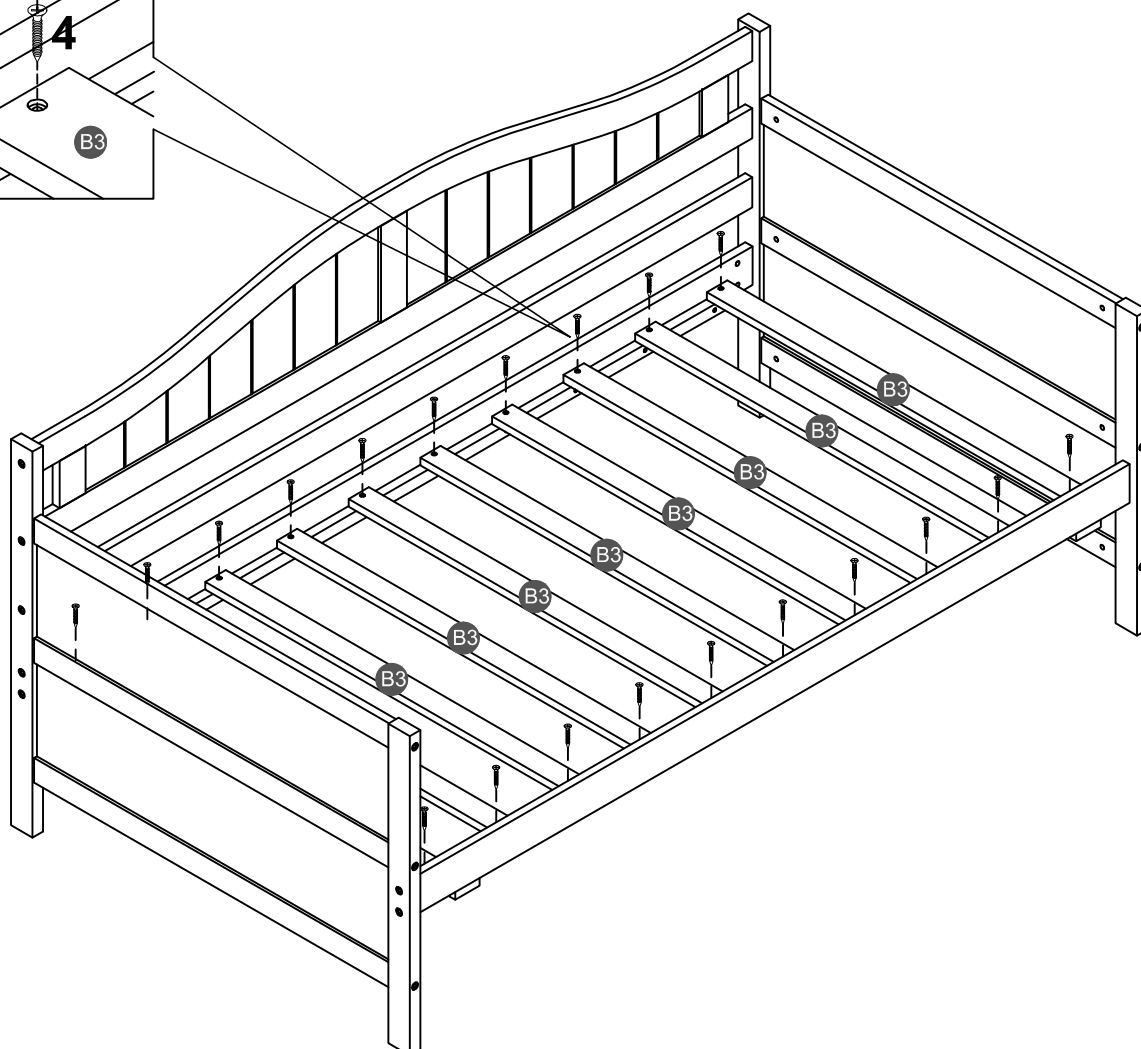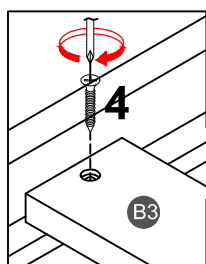

NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.


STEP 5:

4	10
	
8PCS	4PCS

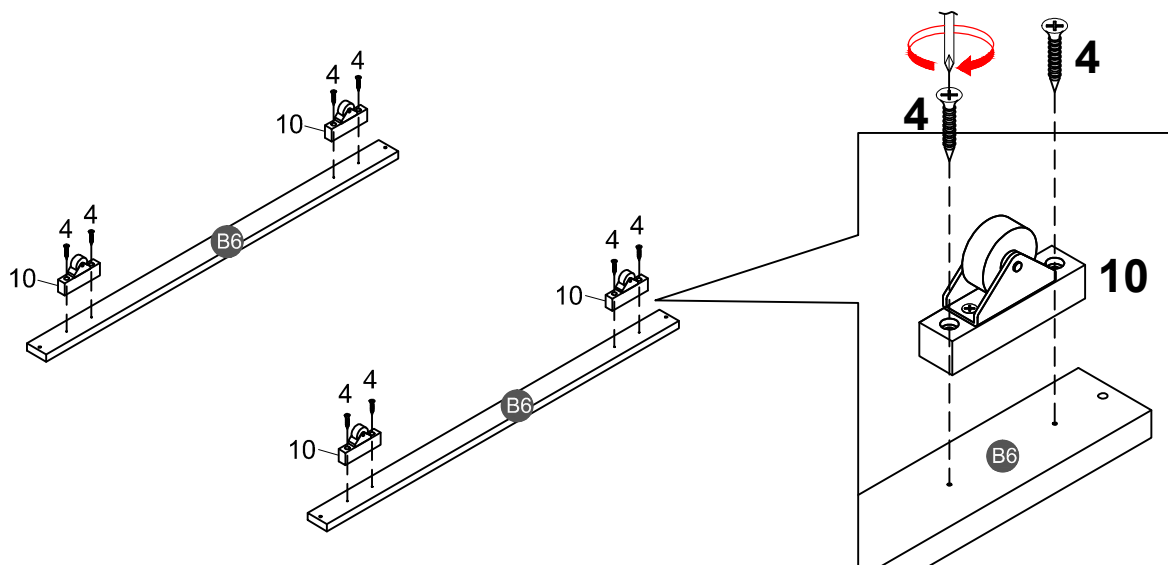


STEP 6:


4	
14PCS	

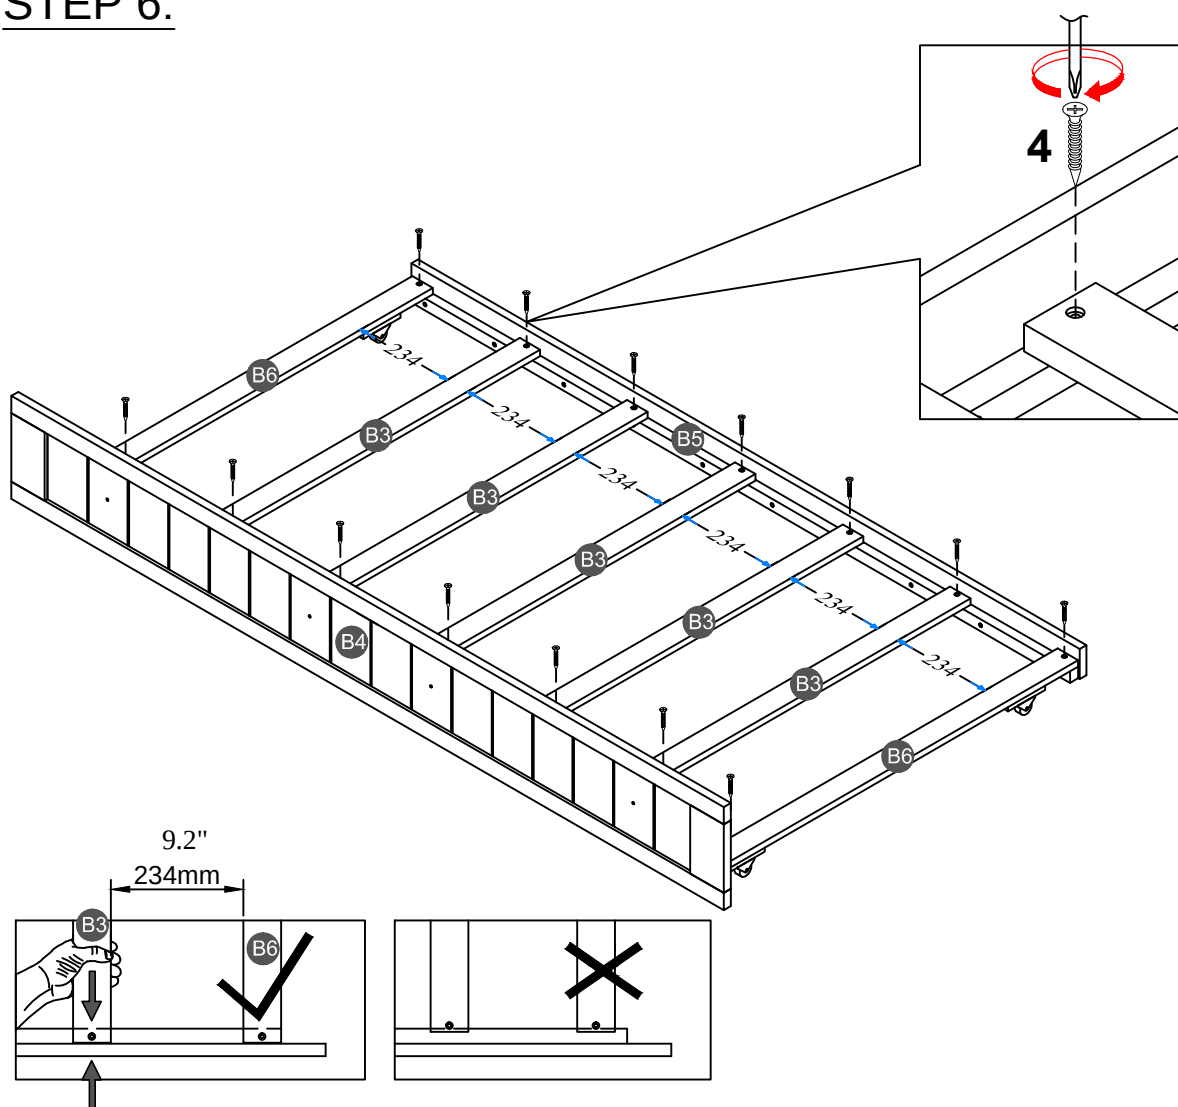


STEP 7:

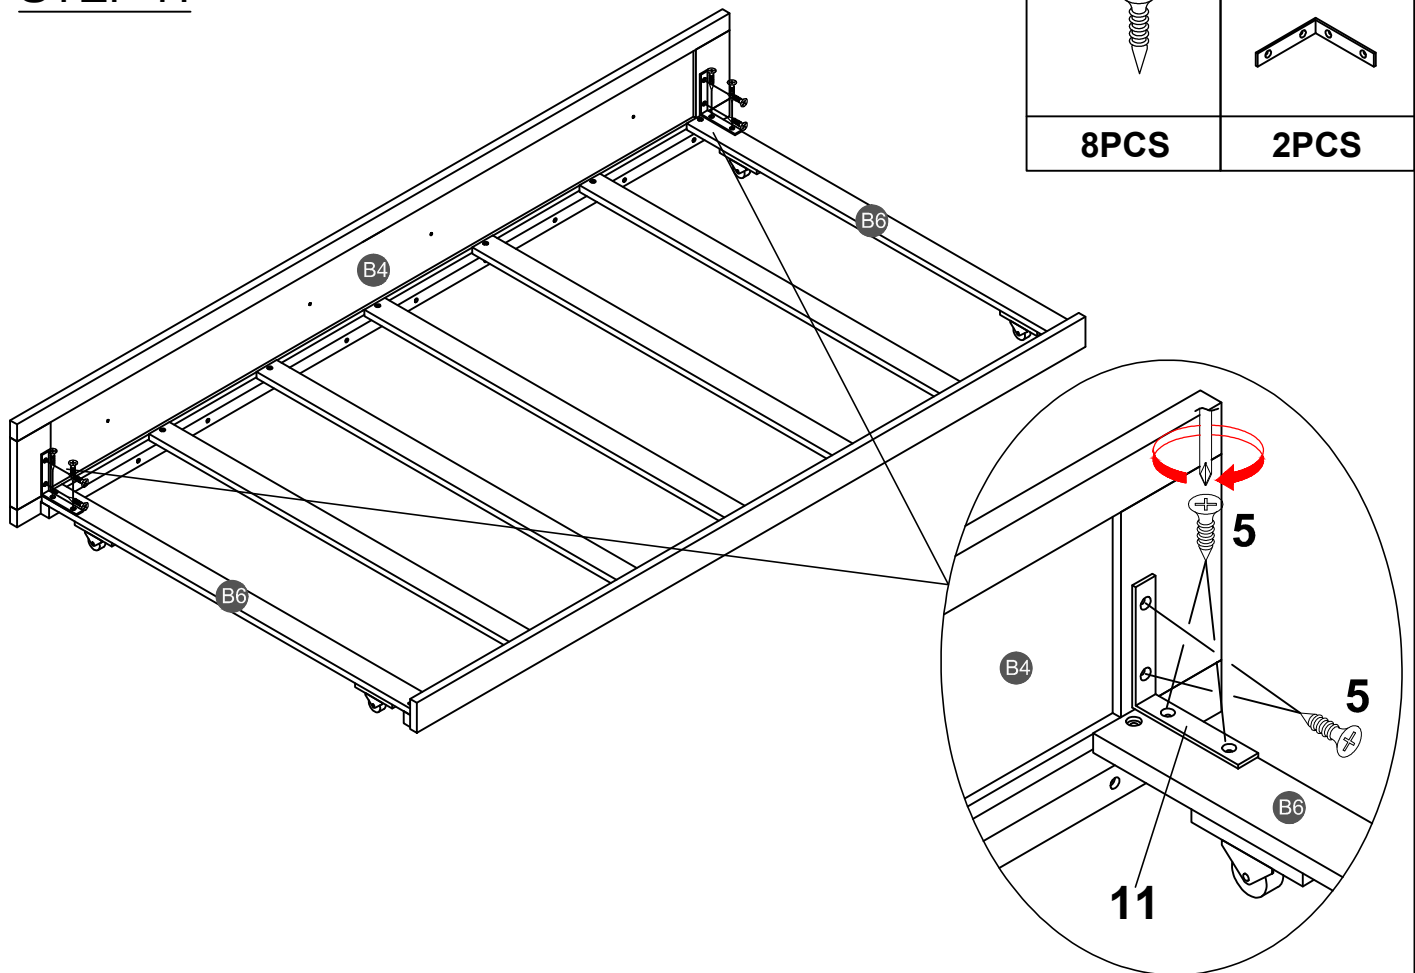

STEP 8:

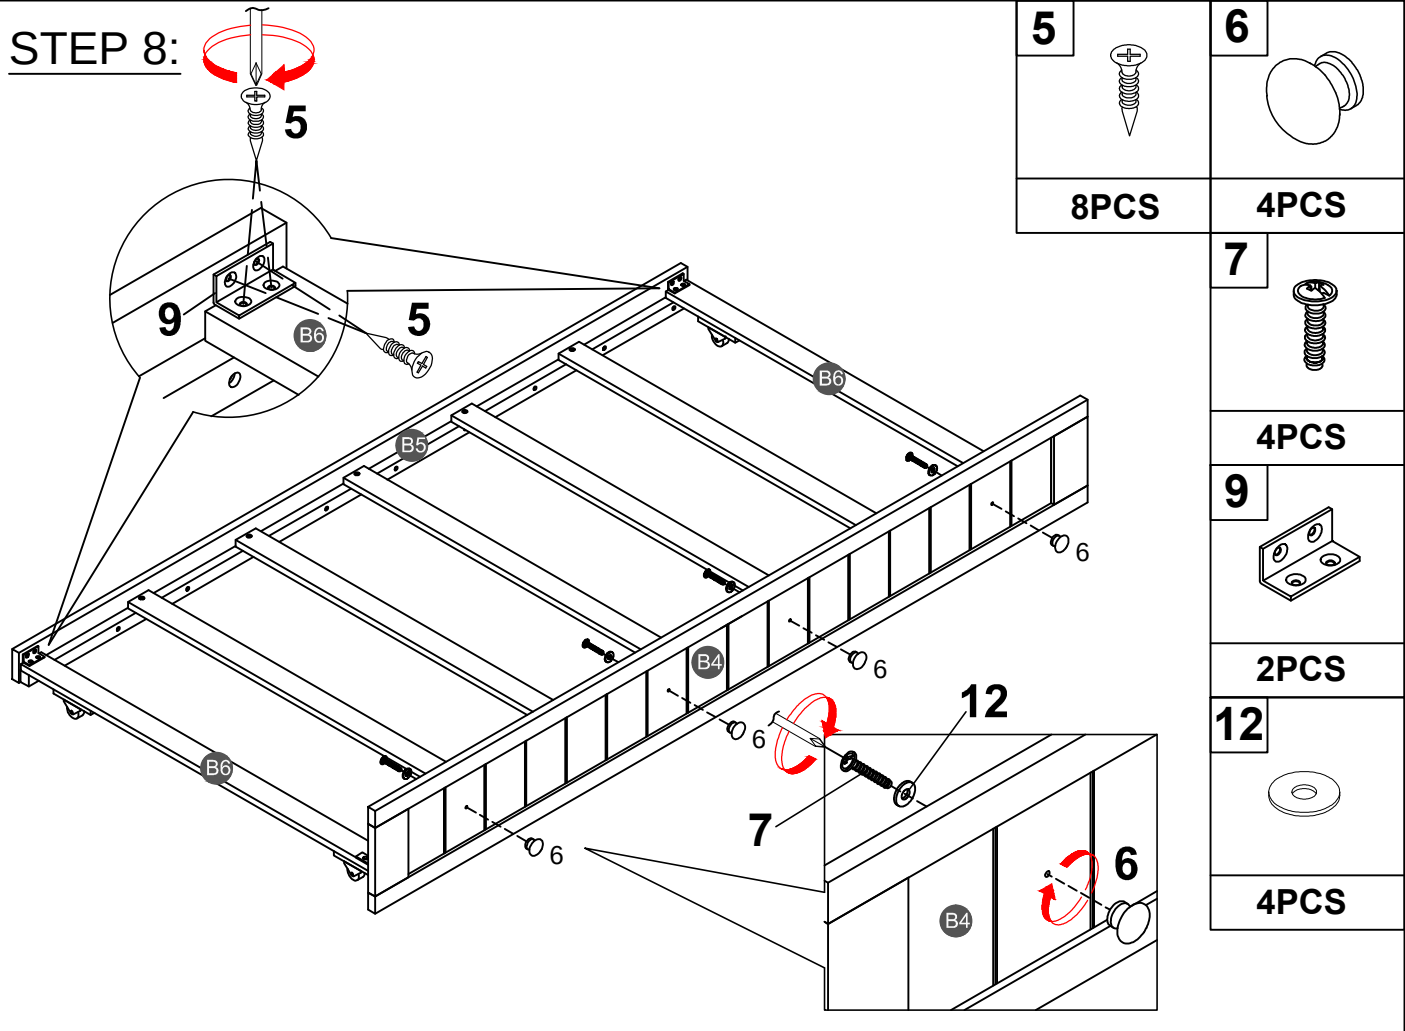

STEP 9:

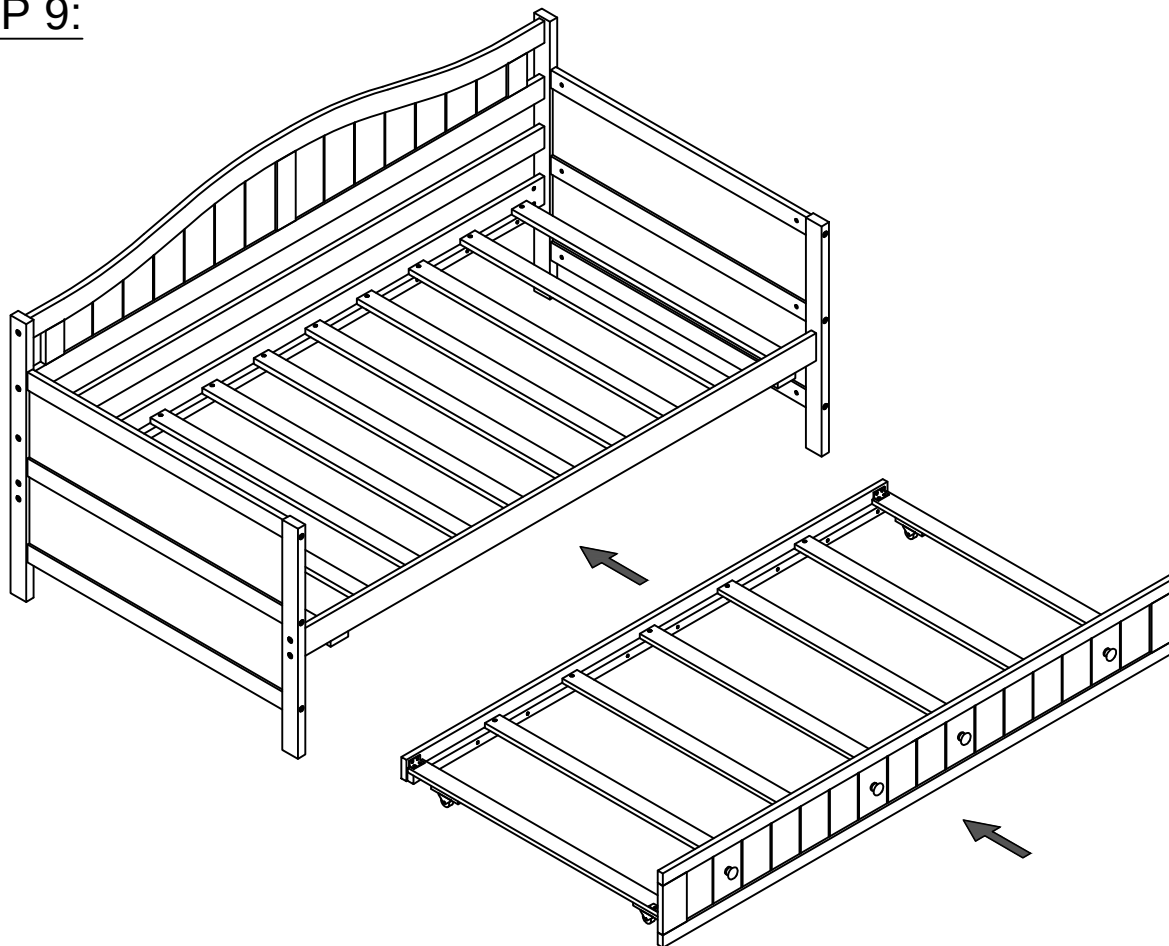

Push Trundle under the bottom of bed.

