
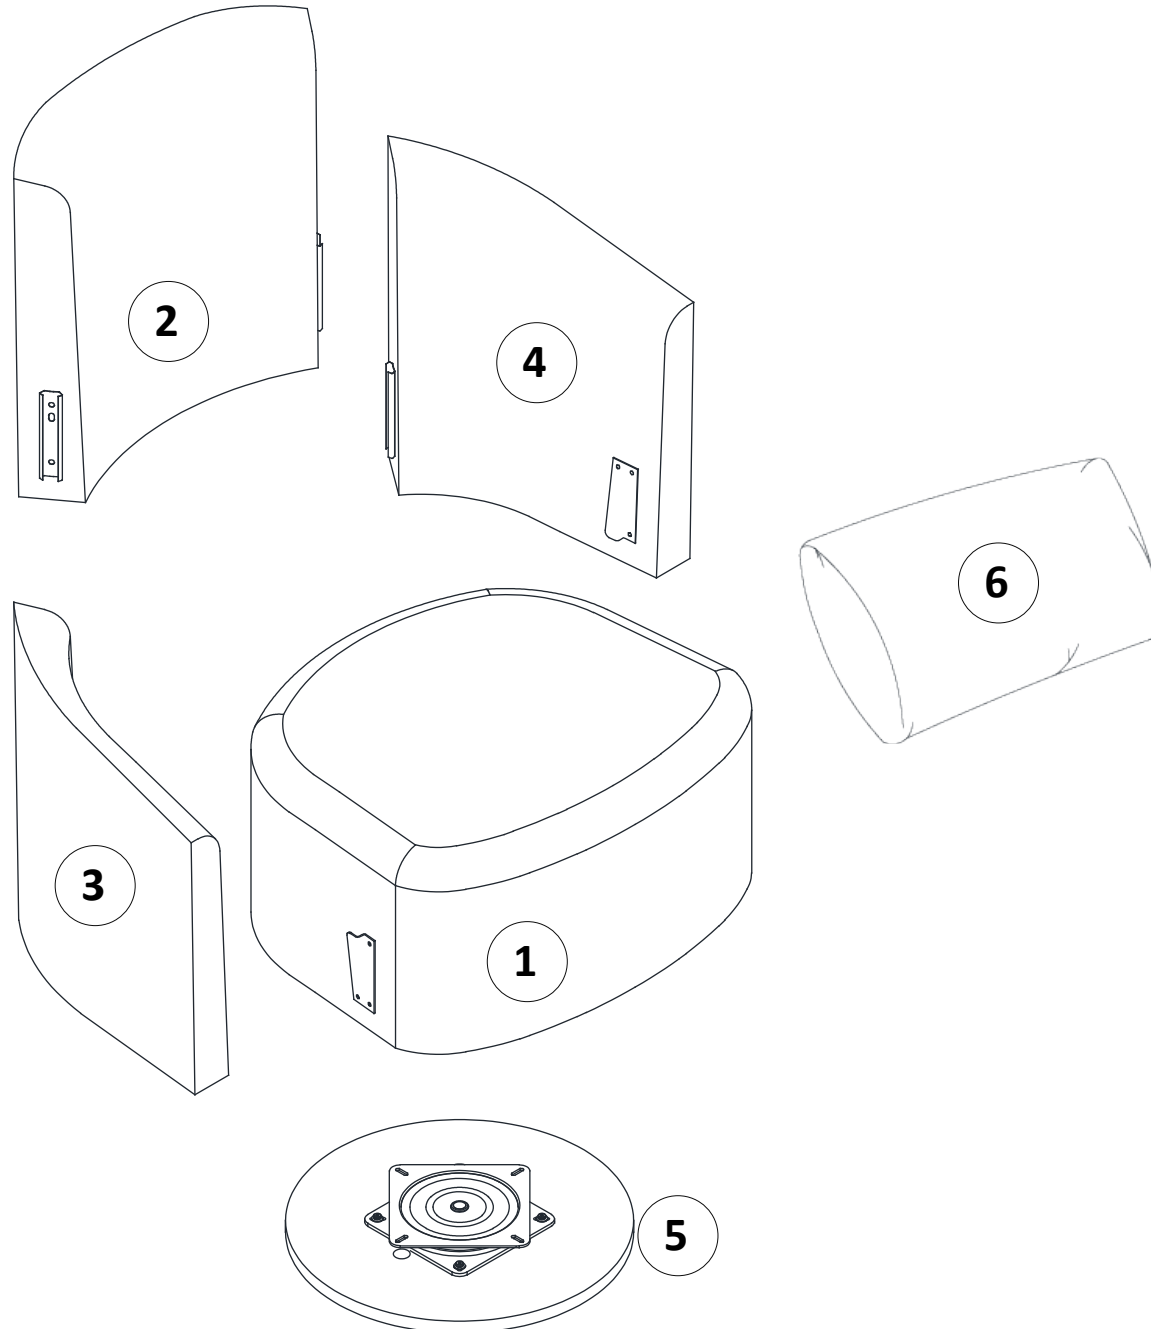
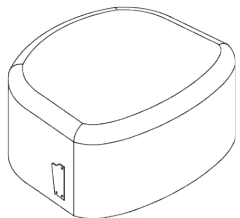
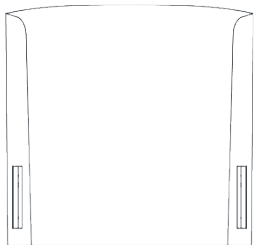
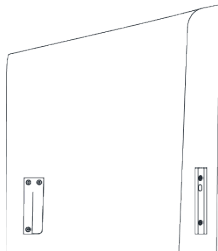
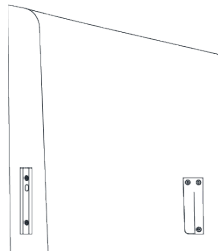
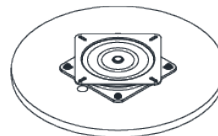


PART

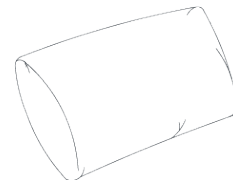

PARTS LIST


1 	2 	3 	4 	5 	6 
Seat	Backrest	Left Armrest	Right Armrest	Swivel Base	Back Cushion

HARDWARE LIST

A M6 X 35mm	B M6			
Bolt X 4PCS	Allen key X 1 PC			



Step 1

Attach the Armrest **C** & **D** to the Backrest **B** & Seat **A** by sliding the brackets on the side and back of Armrest **C** & **D** into the glide on the Seat **A** and Backrest **B** as shown.

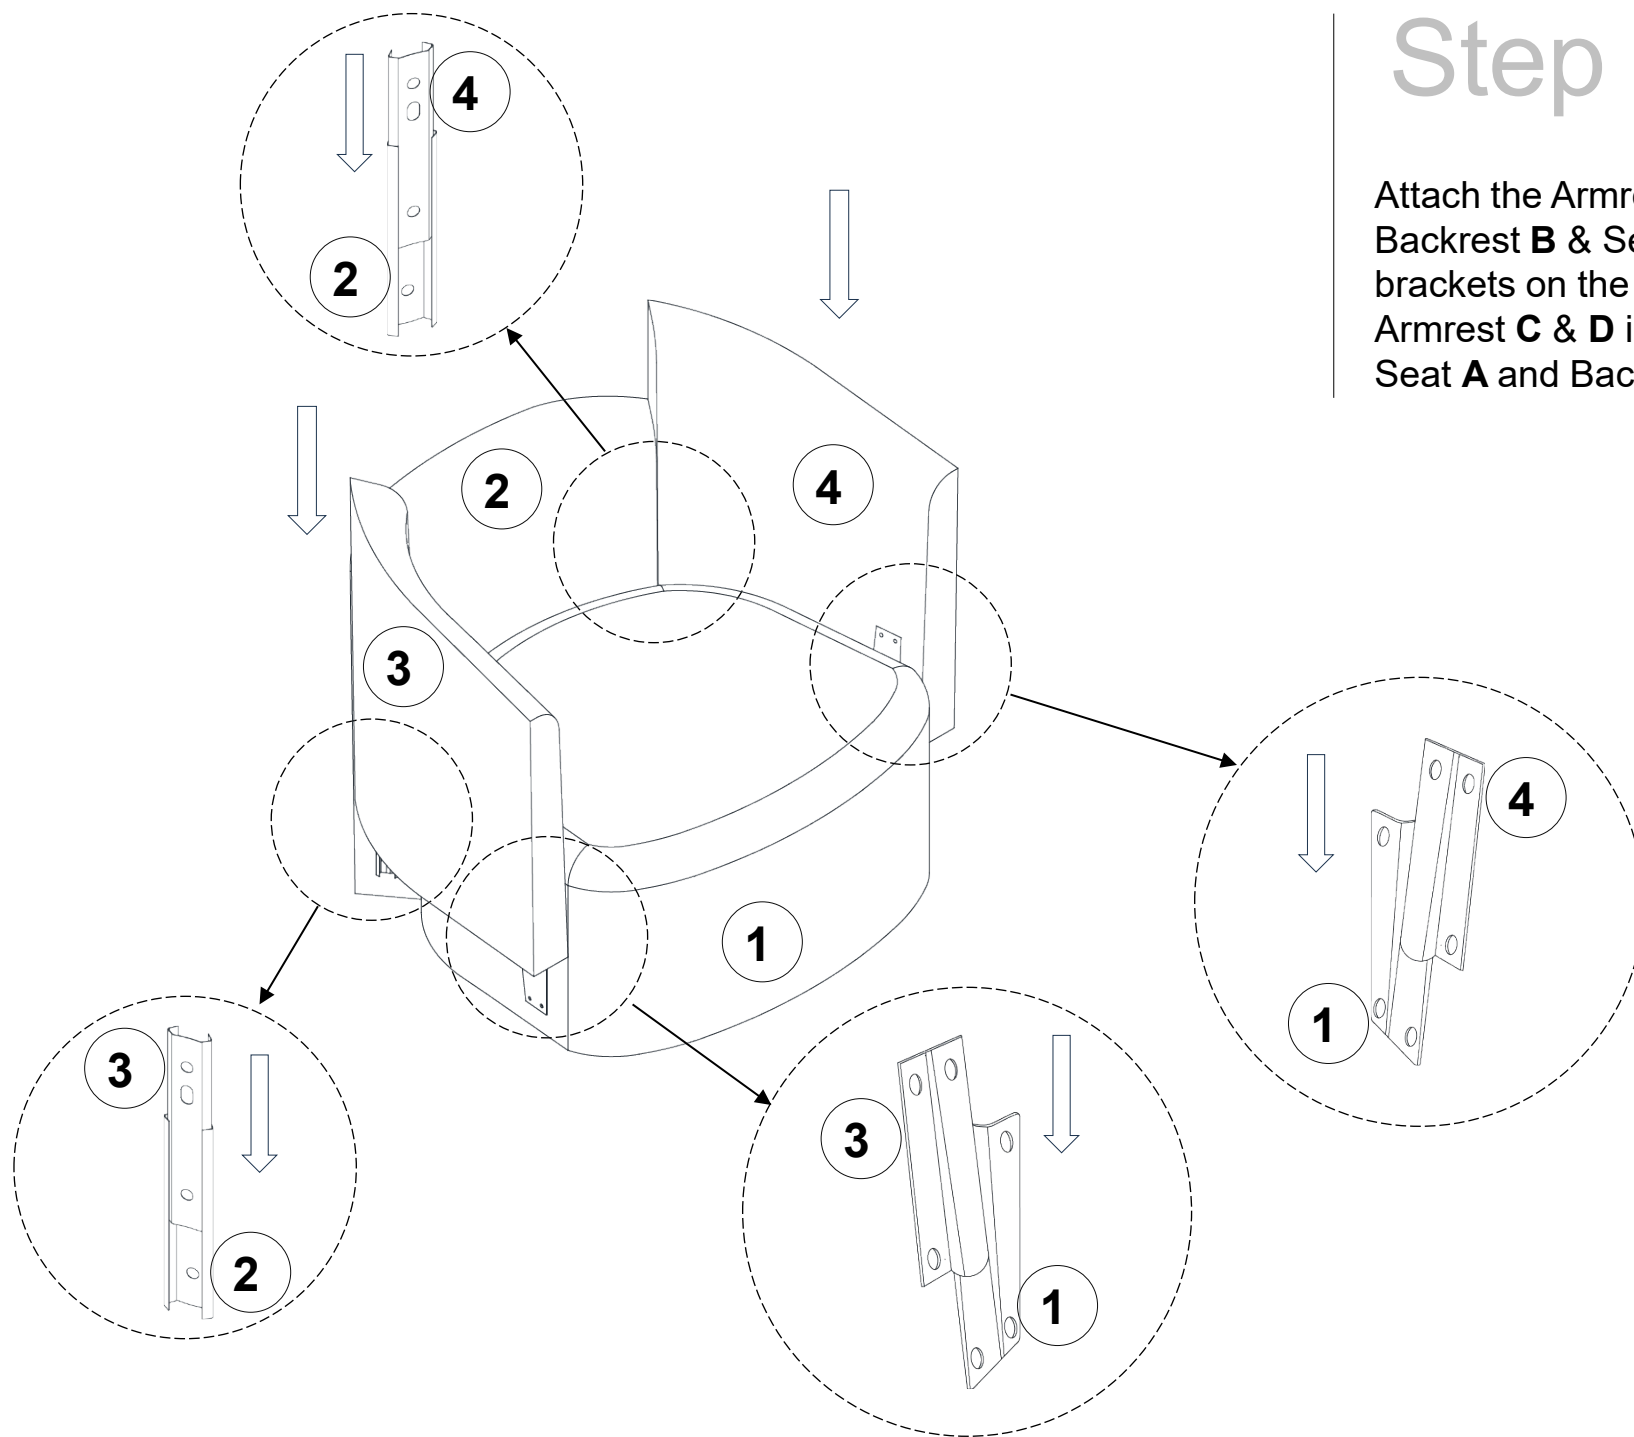


Step 2

Attach the Swivel Base **5** to the Seat **1** with Bolt **A** , the Allen Key **B** as shown. Rotate the swivel base to attach the other two bolts.

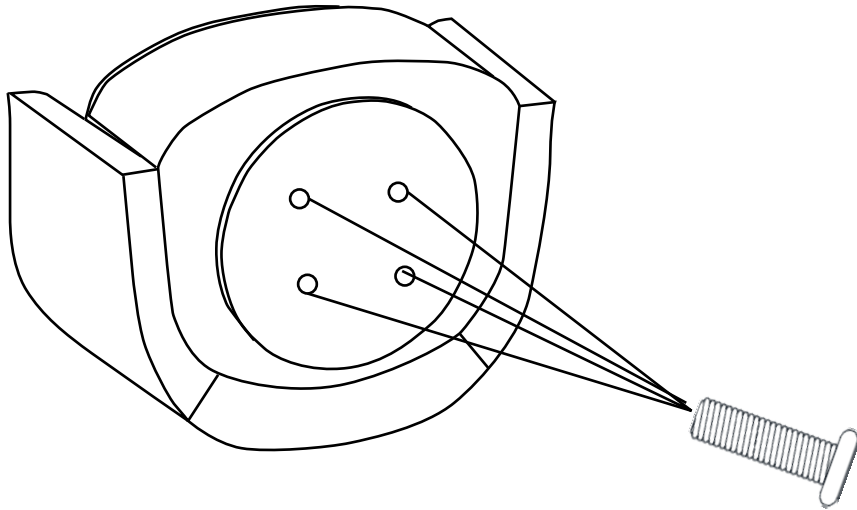

A

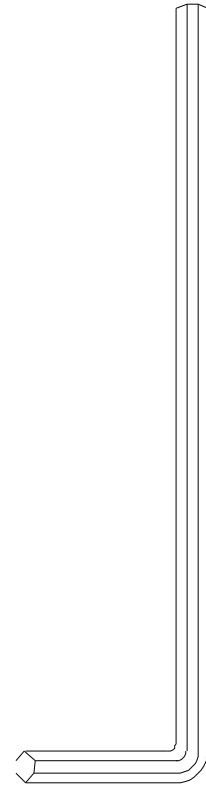


B


5

Step 3

Place the Back Cushion **6** on the Seat **1** as shown.

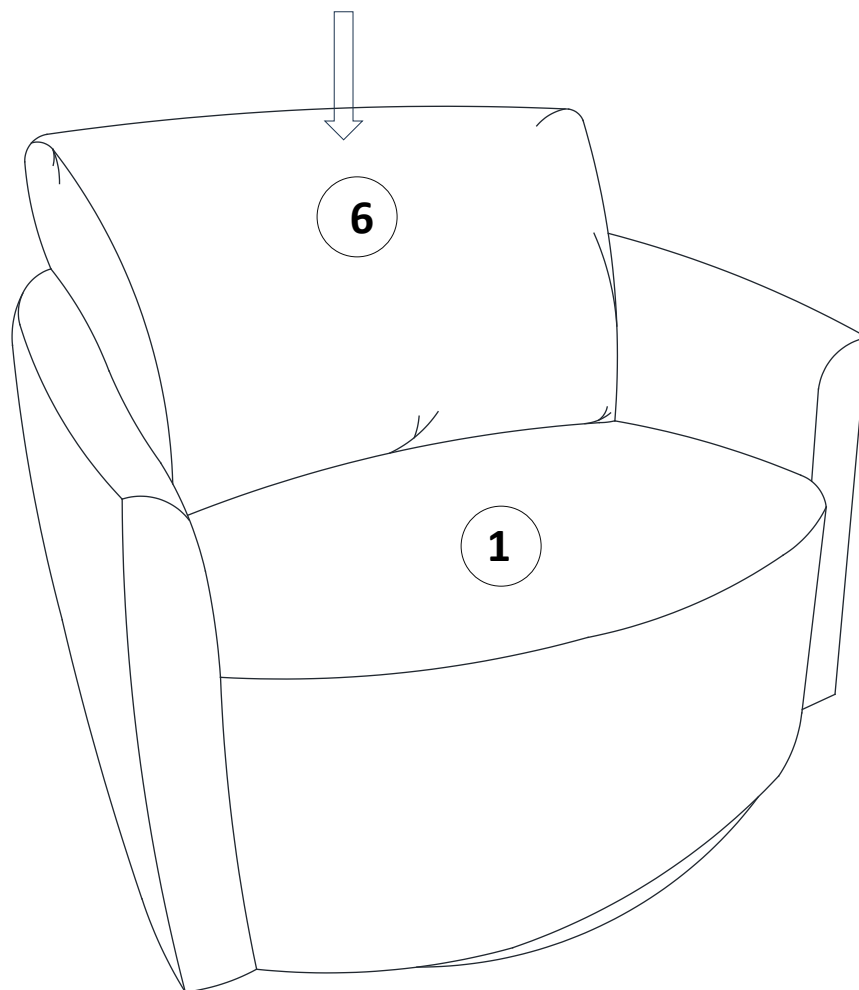

⚠ CAUTION: This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.

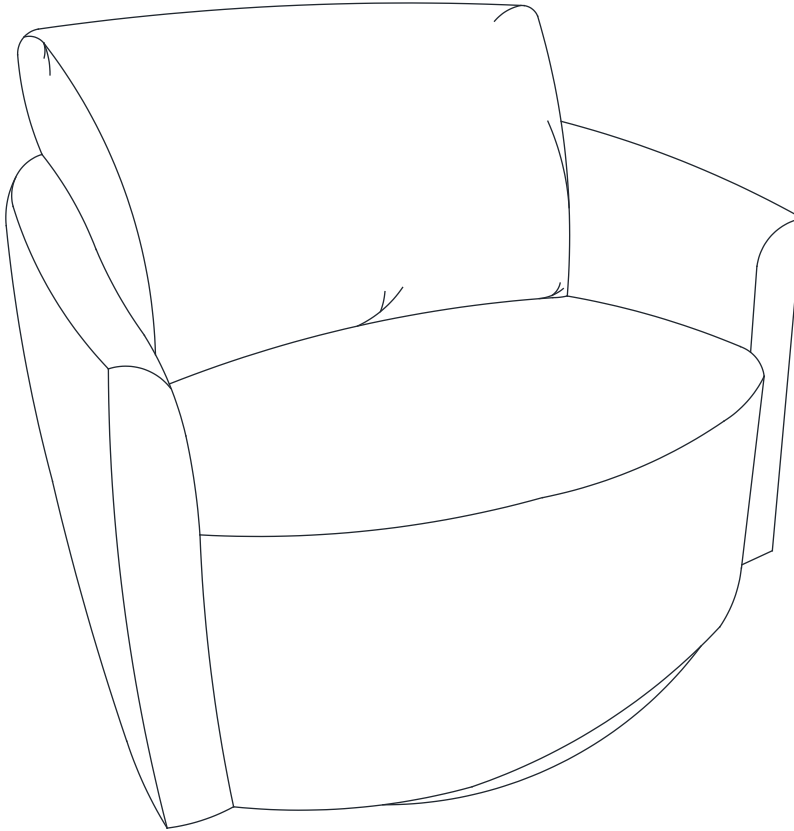

⚠ Weight Limit:
250 lb /113Kg

Helpful Hints

- Move your new furniture carefully, with two people lifting and carrying the unit to its new location.
- Your furniture can be disassembled and reassembled to move.
- Clean the product with a soft damp cloth. DO NOT use harsh chemicals or abrasive cleaners.
- Some parts have been pre-assembled for this item. They are illustrated on this page and available for replacement.
- Check bolts and nuts periodically and tighten if necessary.

That's it ! You've finished assembling your **Ines Rounded Swivel Accent Chair!!**