



ASSEMBLY INSTRUCTIONS

TWIN DAYBED WITH SIDE BOOKCASE







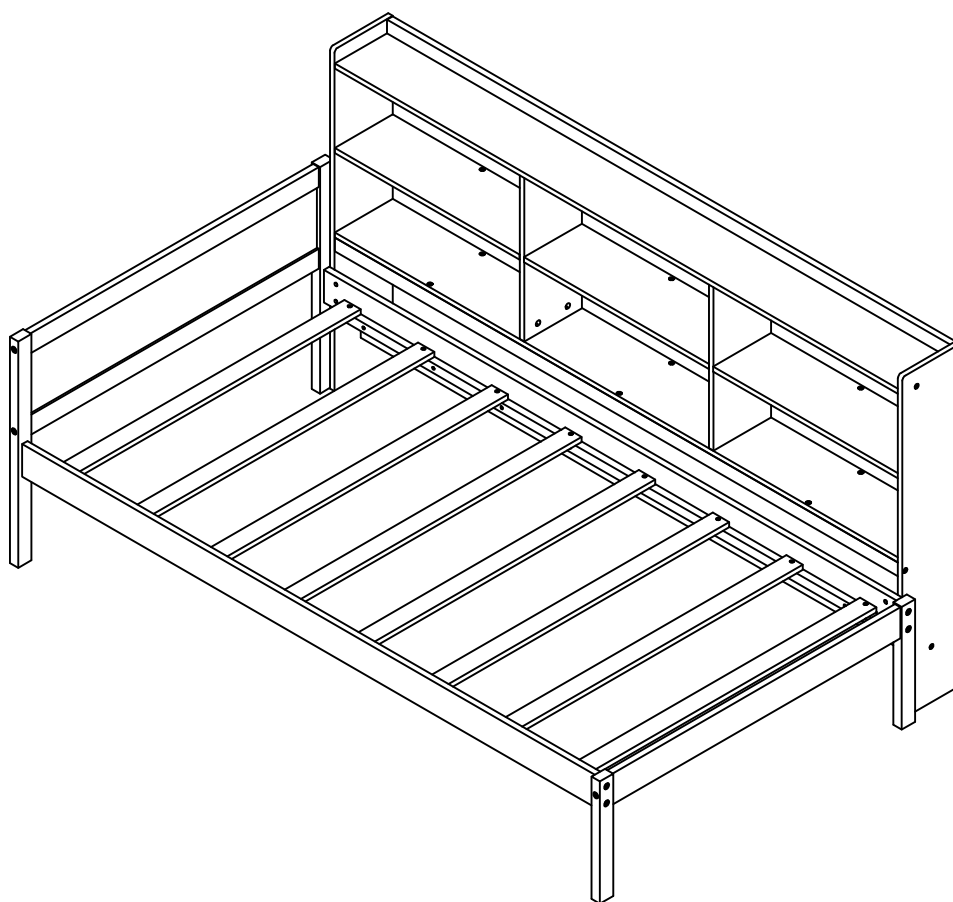


US-BED286AT08/US-BED286AT77





Detail View

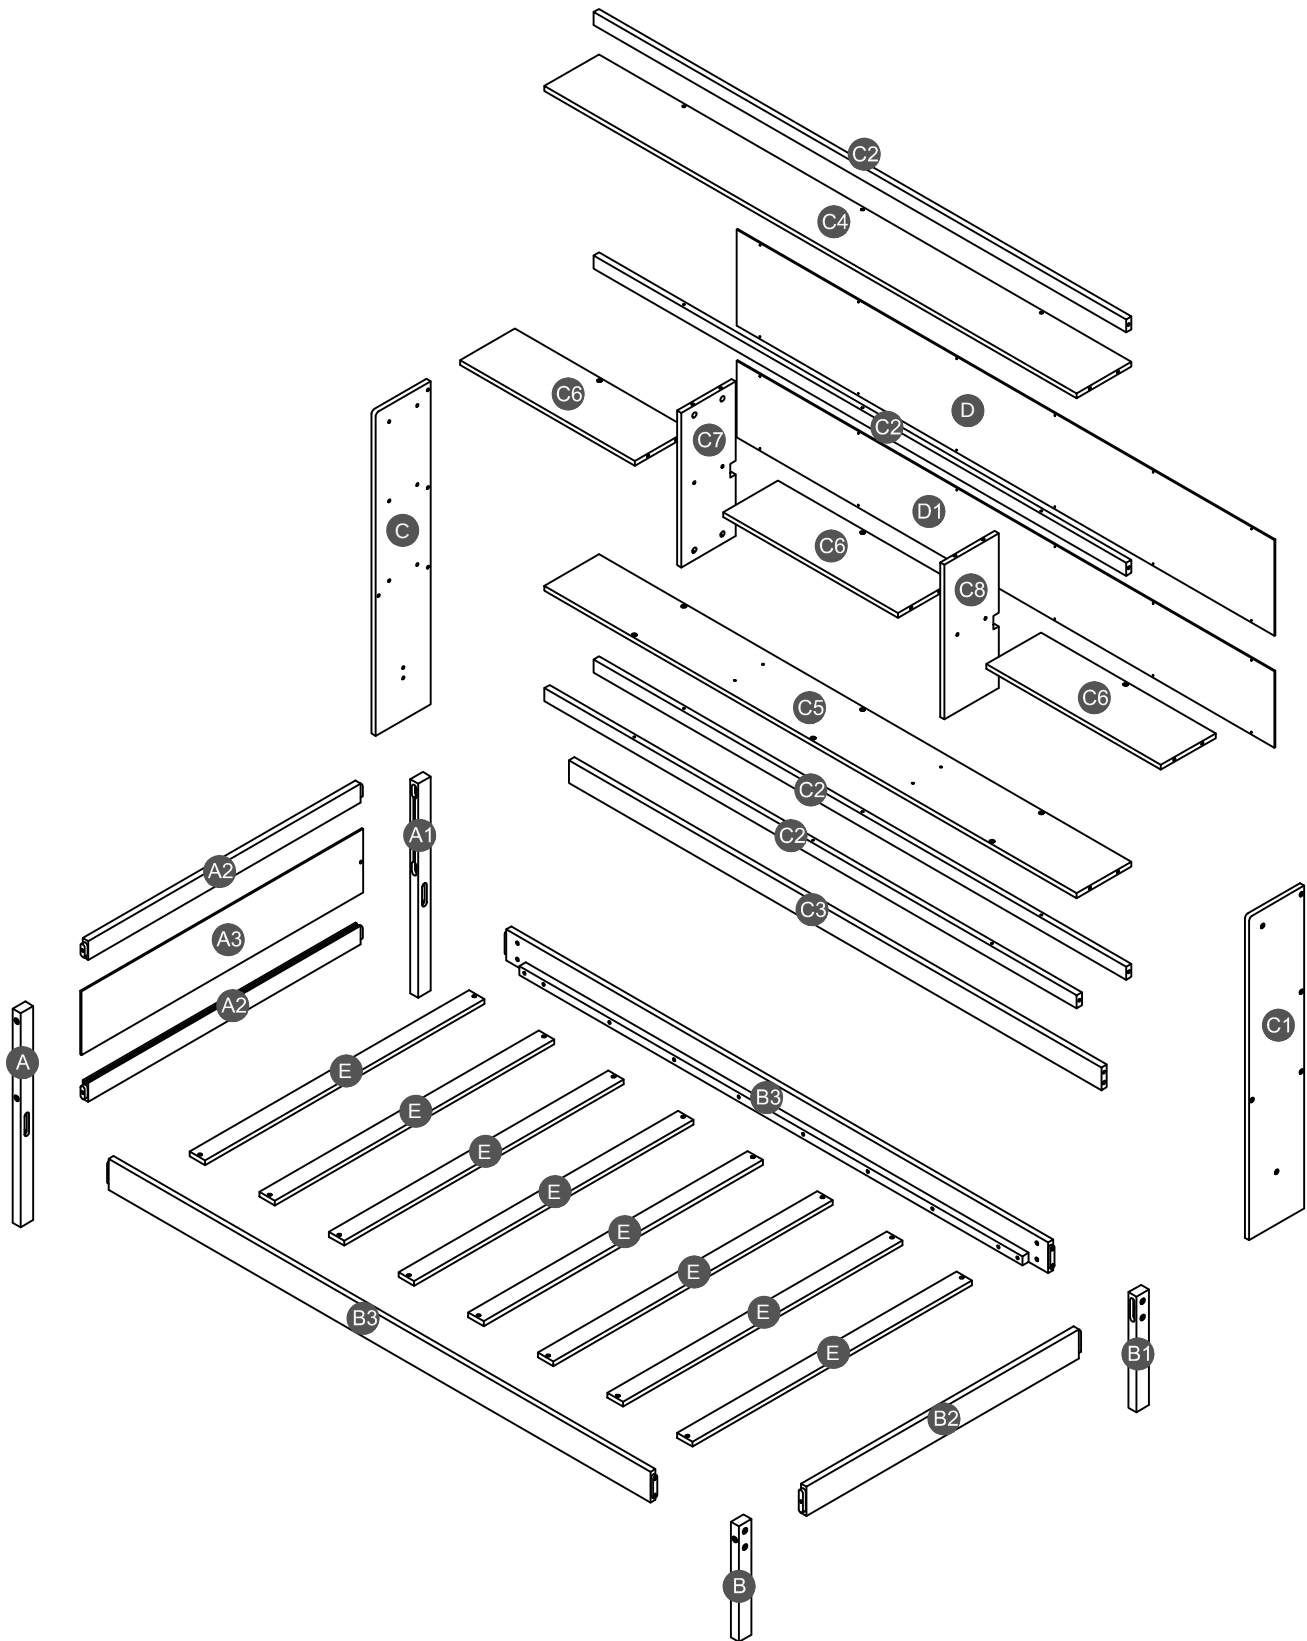



Part List

A  Leg HB (left) - 1pc	A1  Leg HB (right) - 1pc	A2  Horizontal bar HB - 2pcs
A3  Side panel HB - 1pc	B  Leg FB (left) - 1pc	B1  Leg FB (right) - 1pc
B2  Horizontal bar FB - 1pc	B3  Side rail - 2pcs	C  Side panel (left) - 1pc
C1  Side panel (right) - 1pc	C2  Horizontal bar - 4pcs	C3  Lower horizontal bar - 1pc
C4  Top panel - 1pc	C5  Bottom panel - 1pc	C6  Shelf panel - 3pcs
C7  Divider panel (left) - 1pc	C8  Divider panel (right) - 1pc	D  Upper back panel - 1pc
D1  Lower back panel - 1pc	E  Slat - 8pcs	

Hardware List

1  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (20pcs)	2  $(\varnothing 15) 1/4" \times 80 \text{mm}$ Hex-Head bolts (14pcs)	3  $(\varnothing 12) 1/4" \times 60 \text{mm}$ Hex-Head bolts (12pcs)
4  $1/4" \times 15 \text{ (9.5mm)}$ Horizontal-Hole bolts(26pcs)	5  $(\varnothing 12) 1/4" \times 40 \text{mm}$ Hex-Head bolts (12pcs)	6  $\varnothing 4 \times 30 \text{mm}$ Wood screws (16pcs)
7  $\varnothing 3.5 \times 15 \text{mm}$ Wood screws (16pcs)	8  $\varnothing 3 \times 12 \text{mm}$ Wood screws (24pcs)	9  $40 \times 17 \times 17 \times 1.6 \text{mm}$ Metal bracket (4pcs)
10  $\varnothing 7" \times 35 \text{mm}$ Cam lock (8pcs)	11  $\varnothing 14 \times 9 \text{mm}$ Cam lock (8pcs)	12  $(1/4") 4.5 \times 58 \text{mm}$ Allen key (1pc)

OPTIONAL TOOLS FOR ASSEMBLY (NOT INCLUDED)



Electric
Screwdriver

PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

2





2PCS

4



2PCS

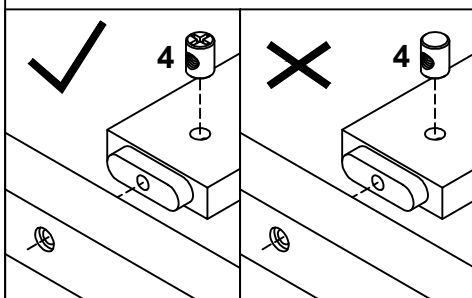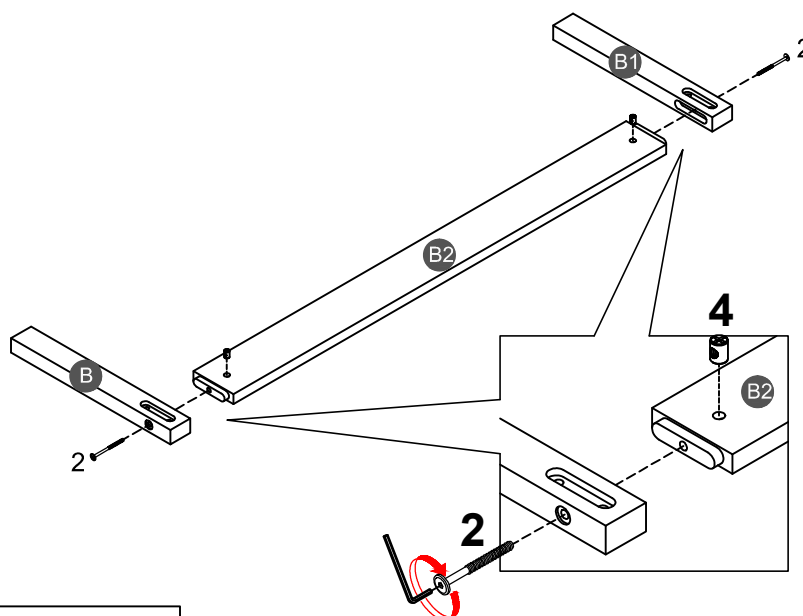

Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:

2




4PCS

4




4PCS

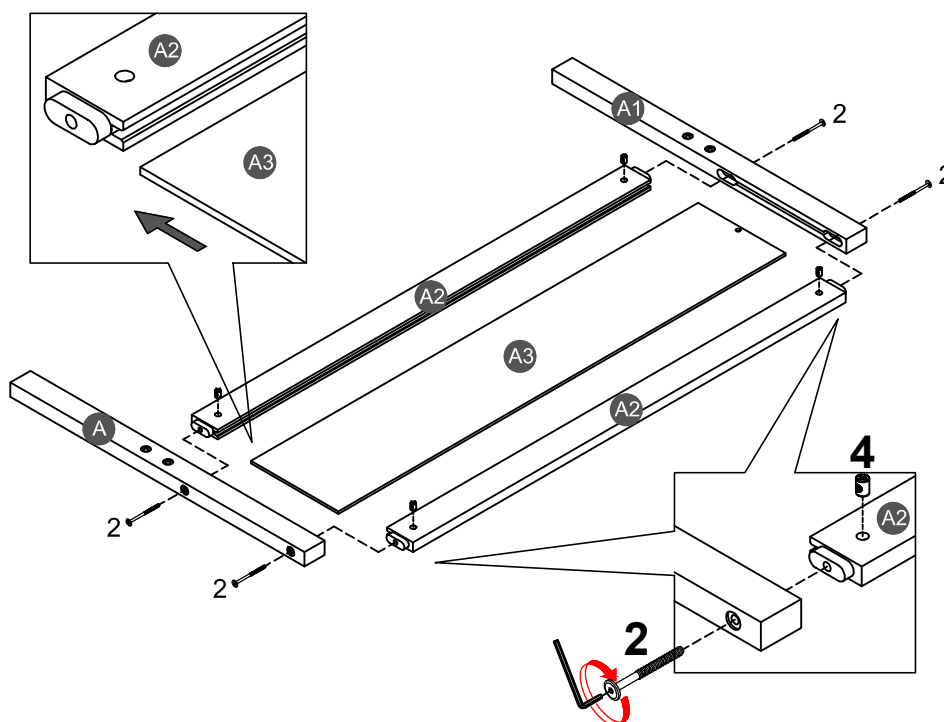

STEP 3:

2		4	
8PCS		8PCS	

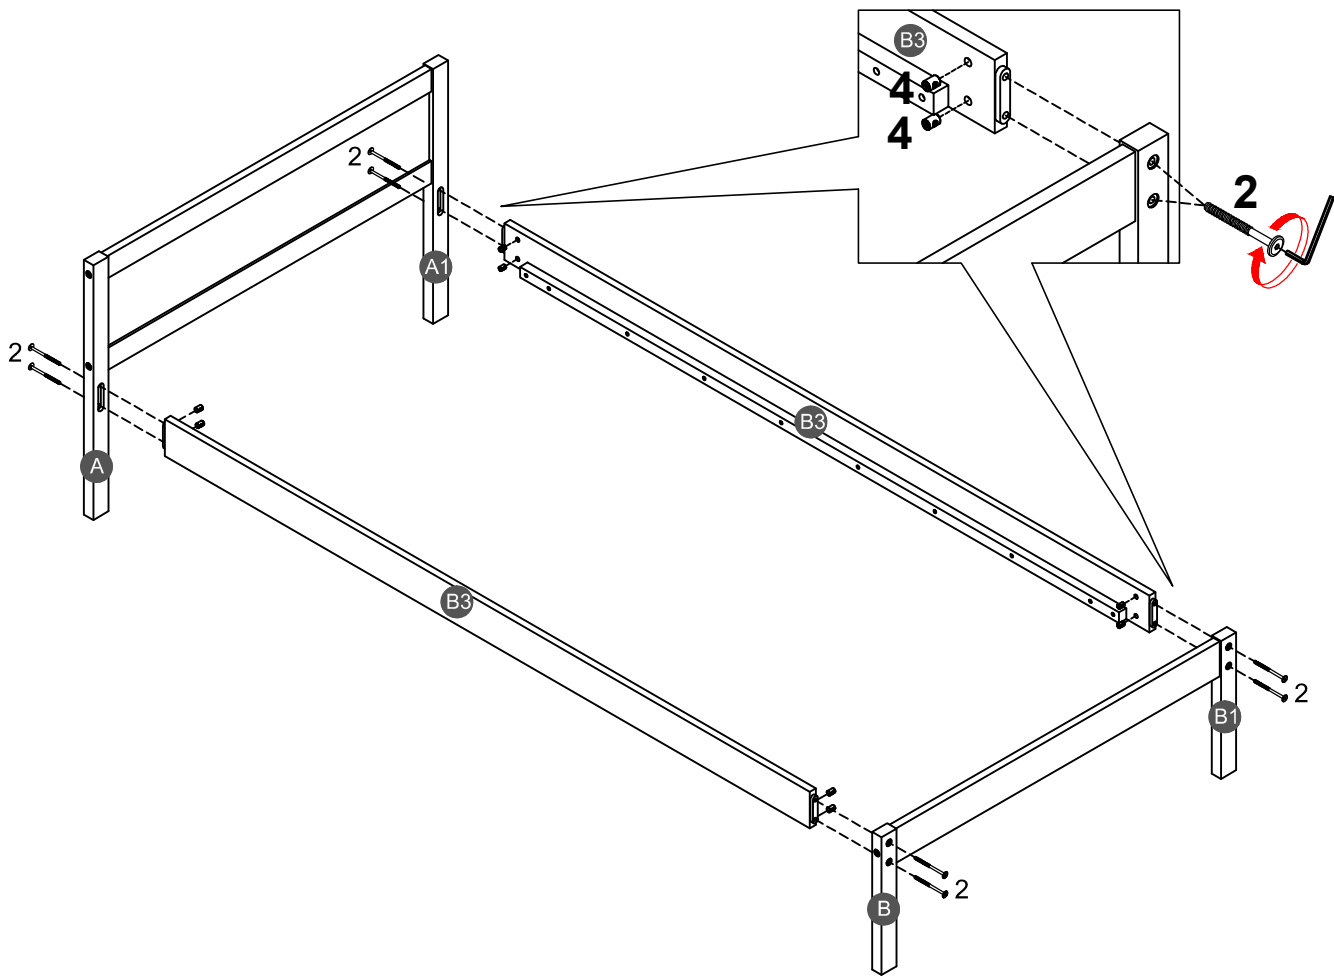



STEP 4:

For better fixing effect, there is no pre-drilled hole on the side rails. Please use self-tapping screws to fix it.

6




16PCS

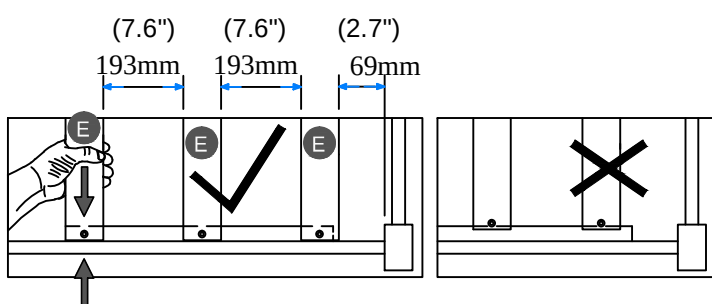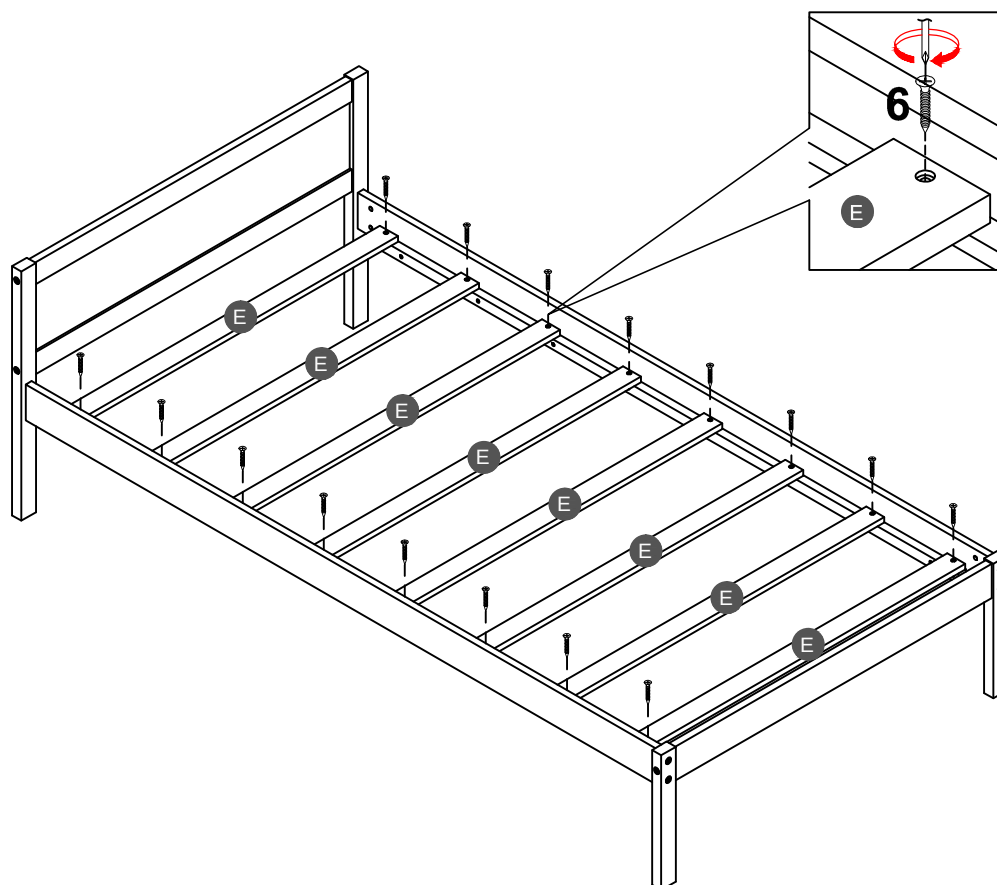




NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.

STEP 5:

10



8PCS

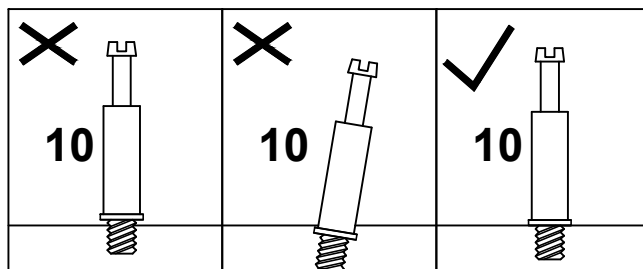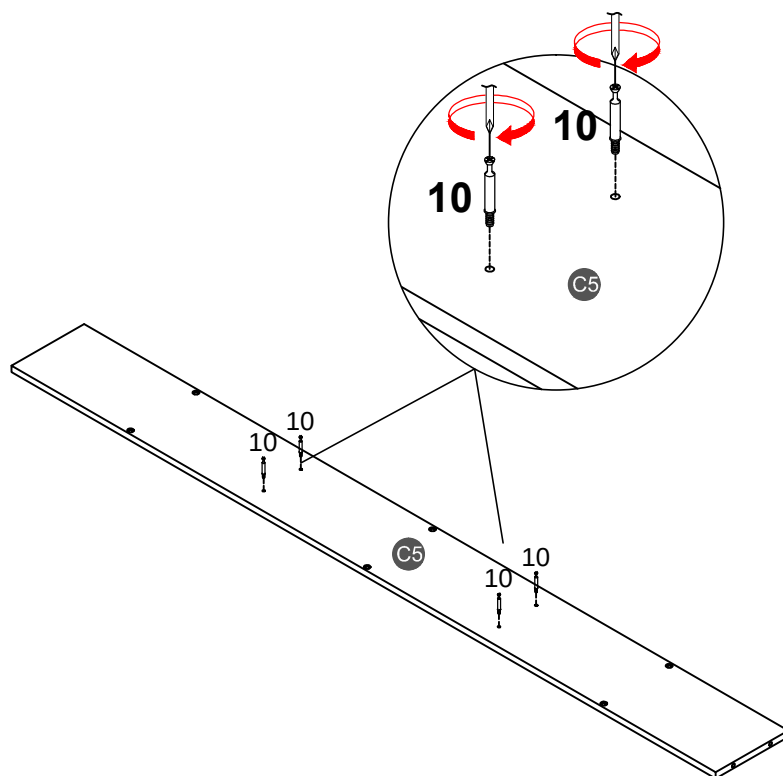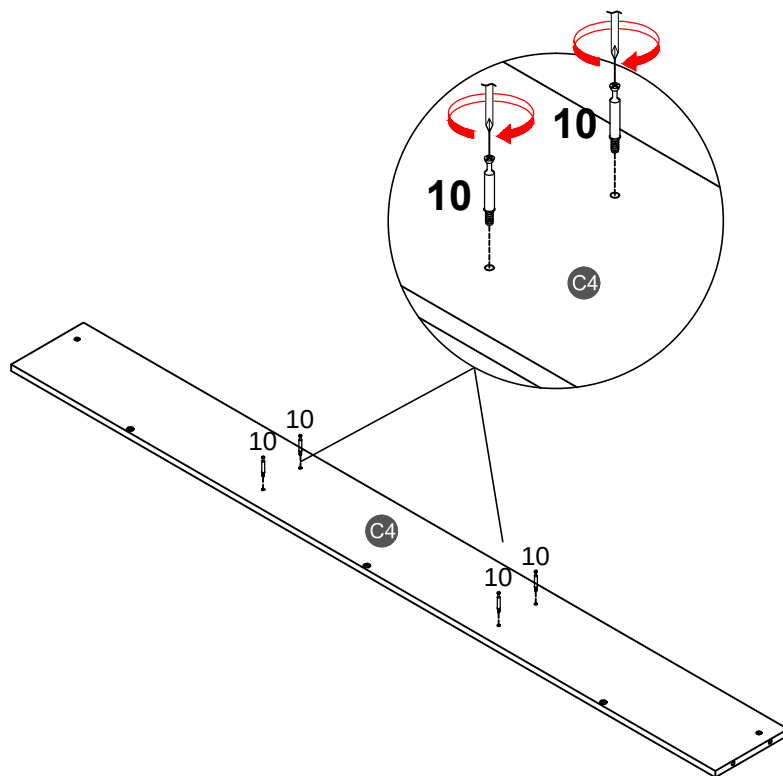


STEP 6:

5



6PCS

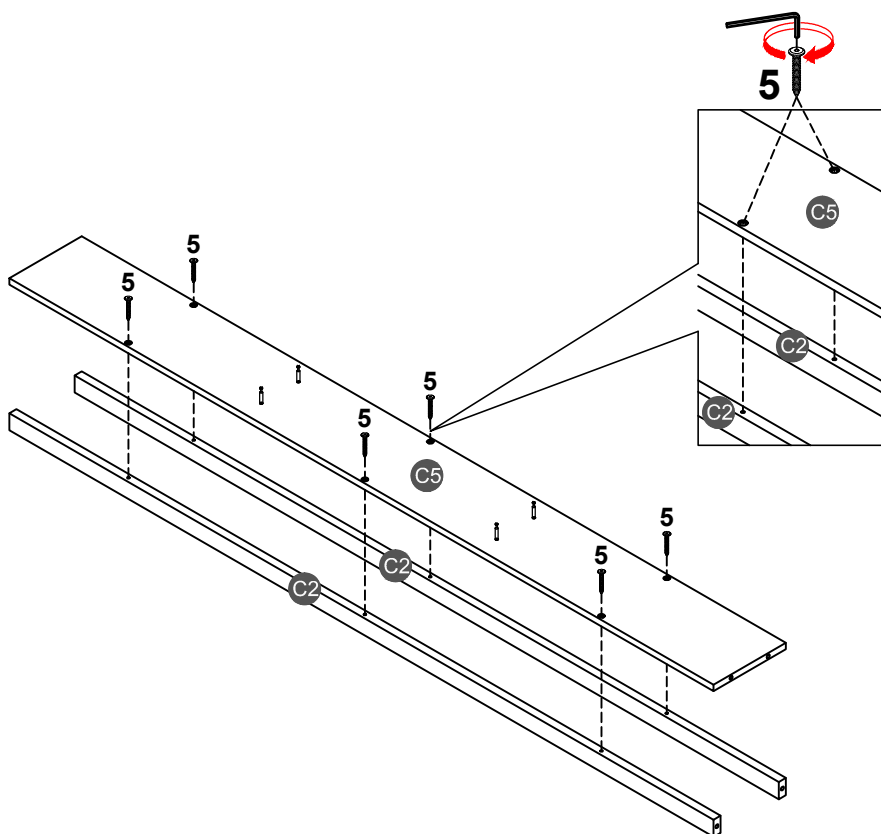


STEP 7:

5



3PCS

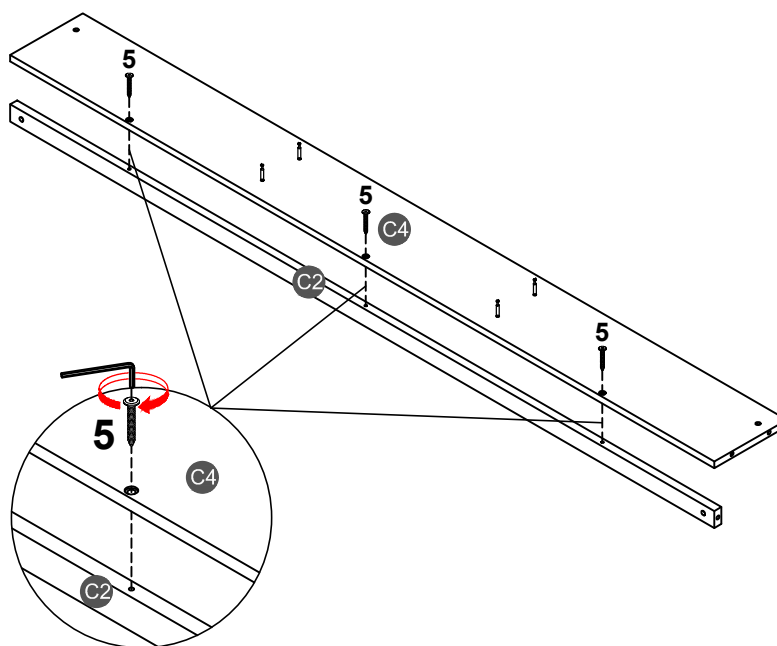


STEP 8:

1



8PCS

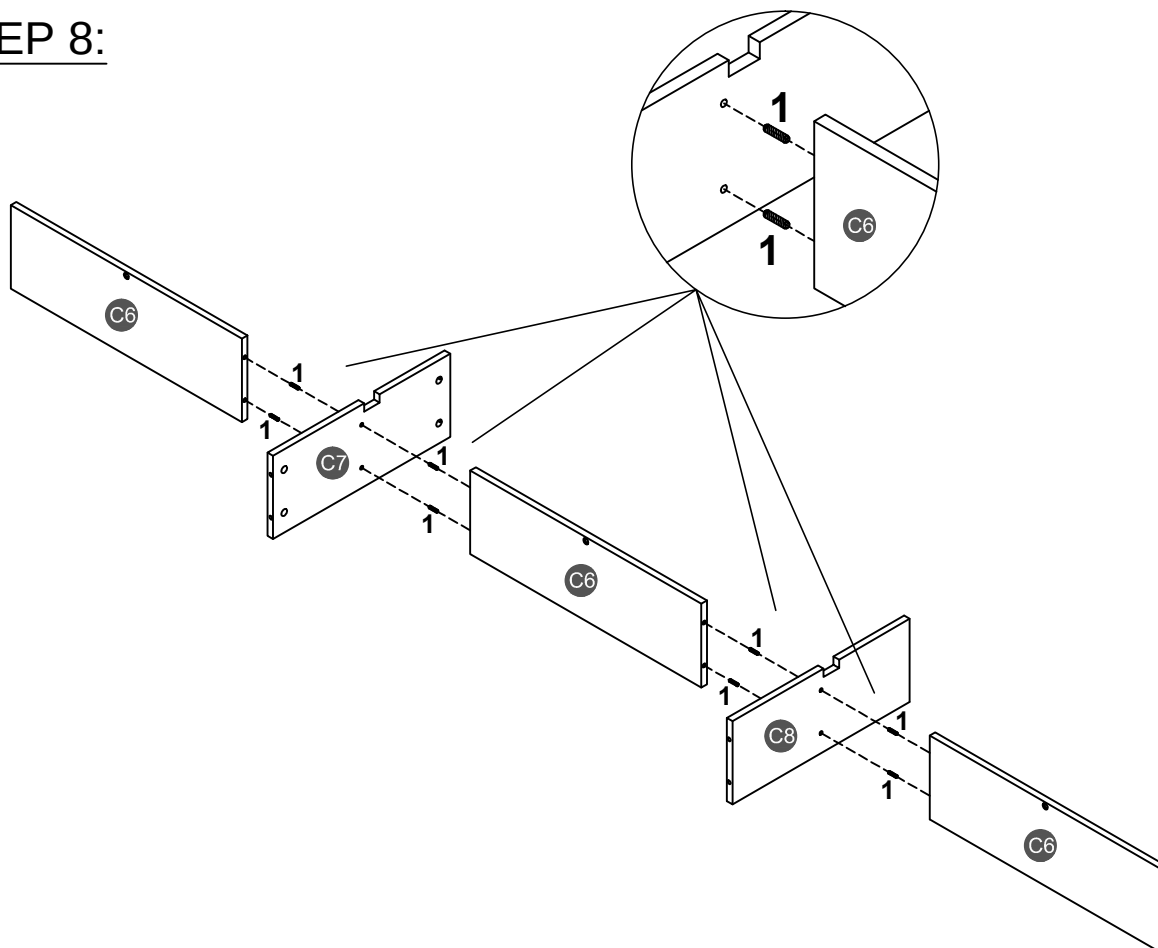


STEP 9:

5



3PCS

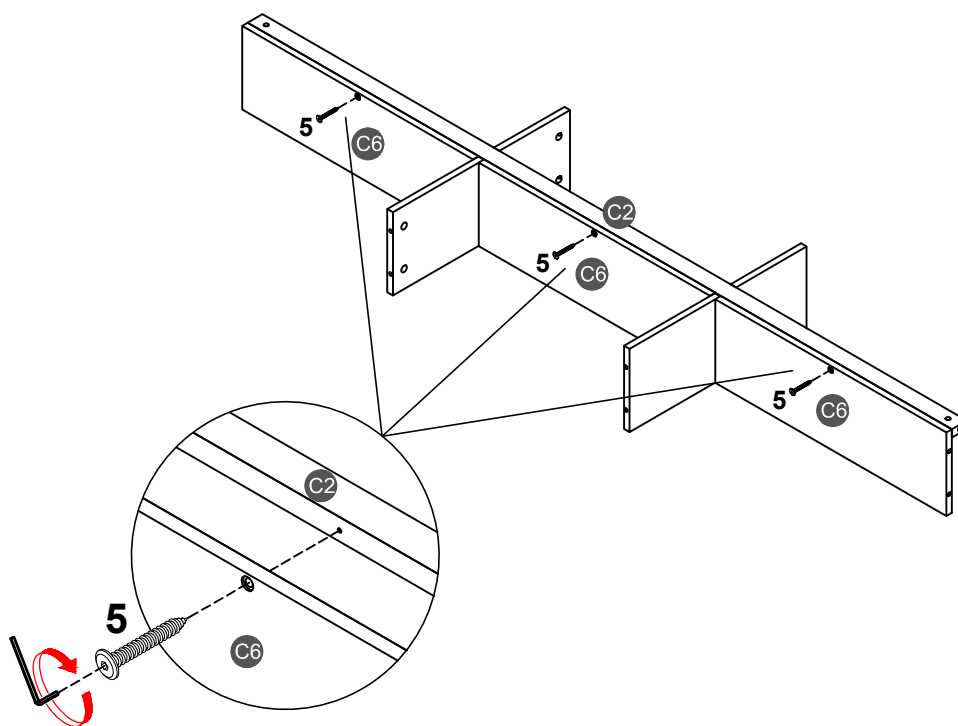


STEP 10:


11



4PCS

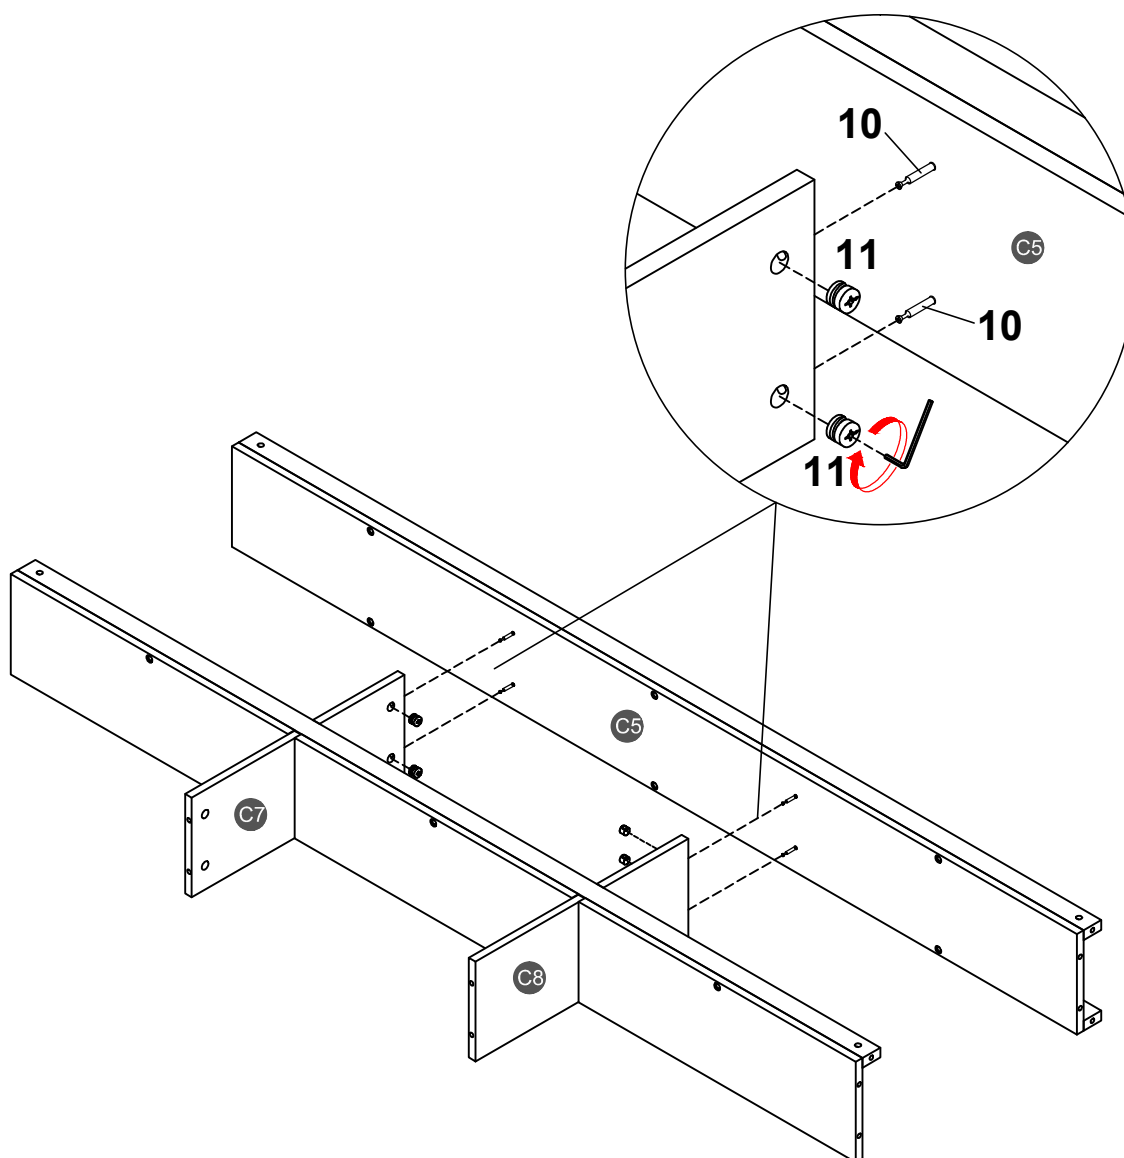

Note: Place hardware #11 with the "X" face outward, and make sure that the arrowhead is upward. Then, place hardware #11 into the hole of hardware #10 and tighten it clockwise with a hand screwdriver. (Please do NOT use an electric screwdriver.)

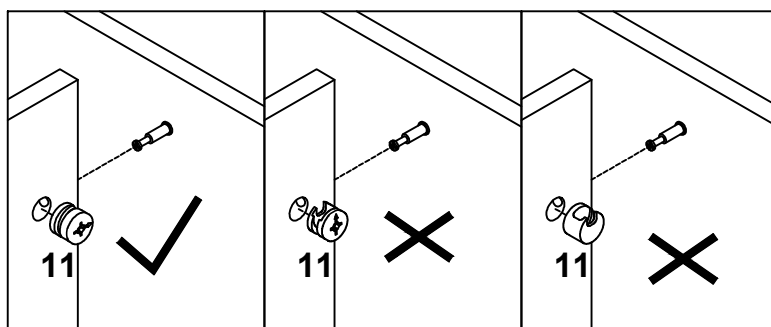


STEP 11:

11




4PCS

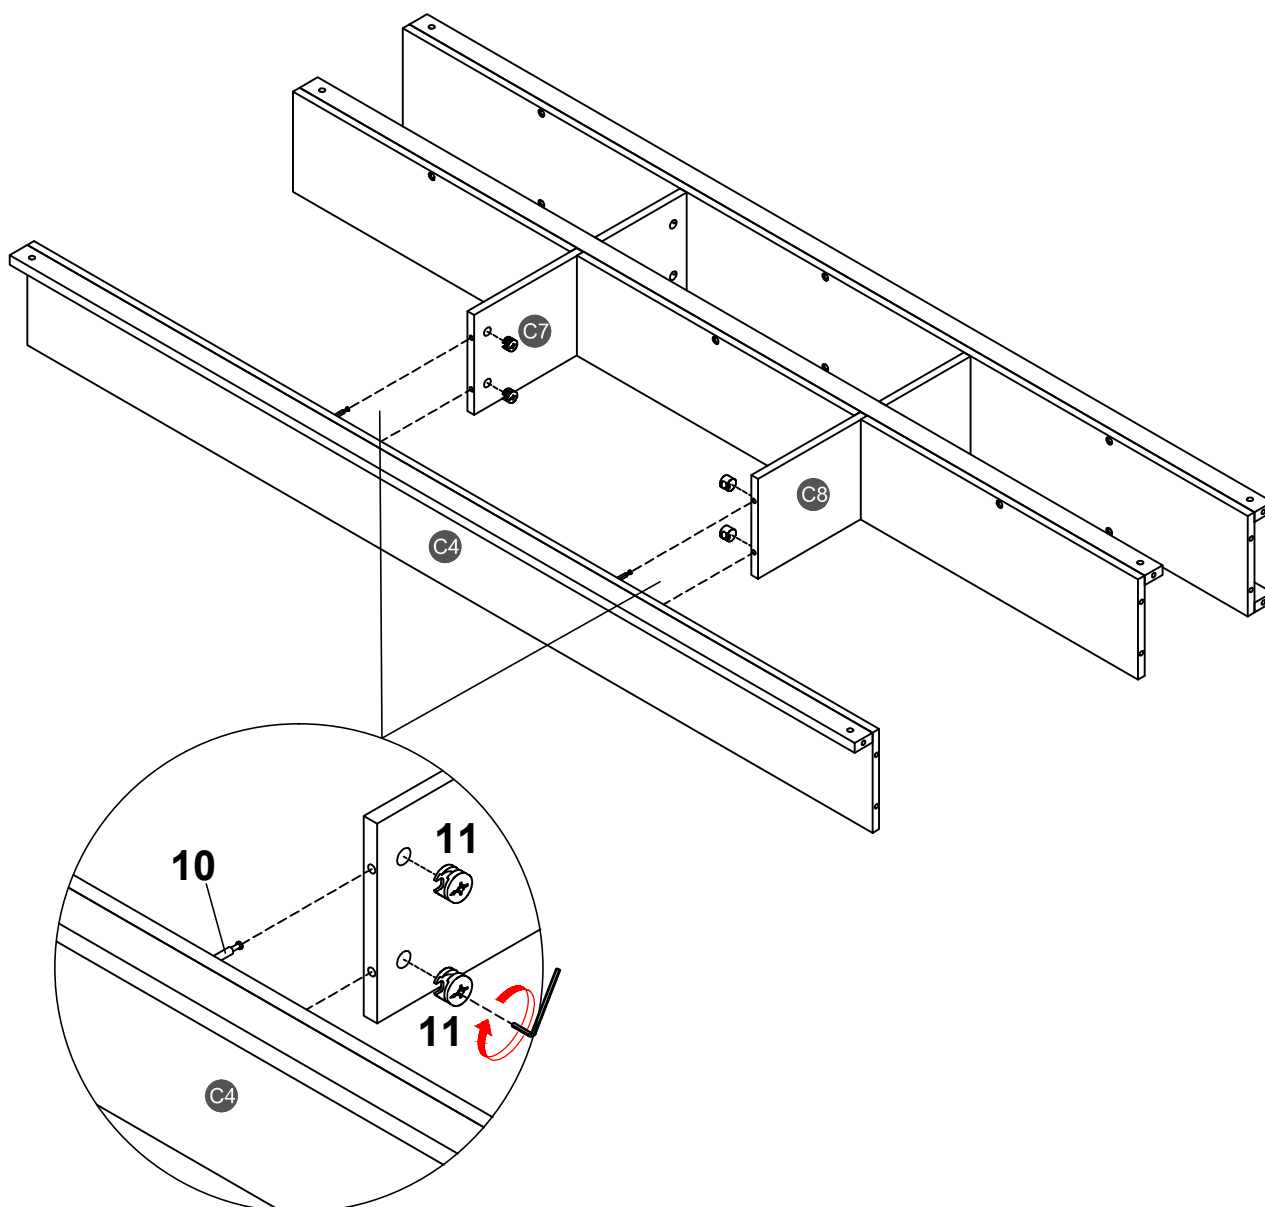


STEP 12:

1		3		4	
5PCS		5PCS		5PCS	

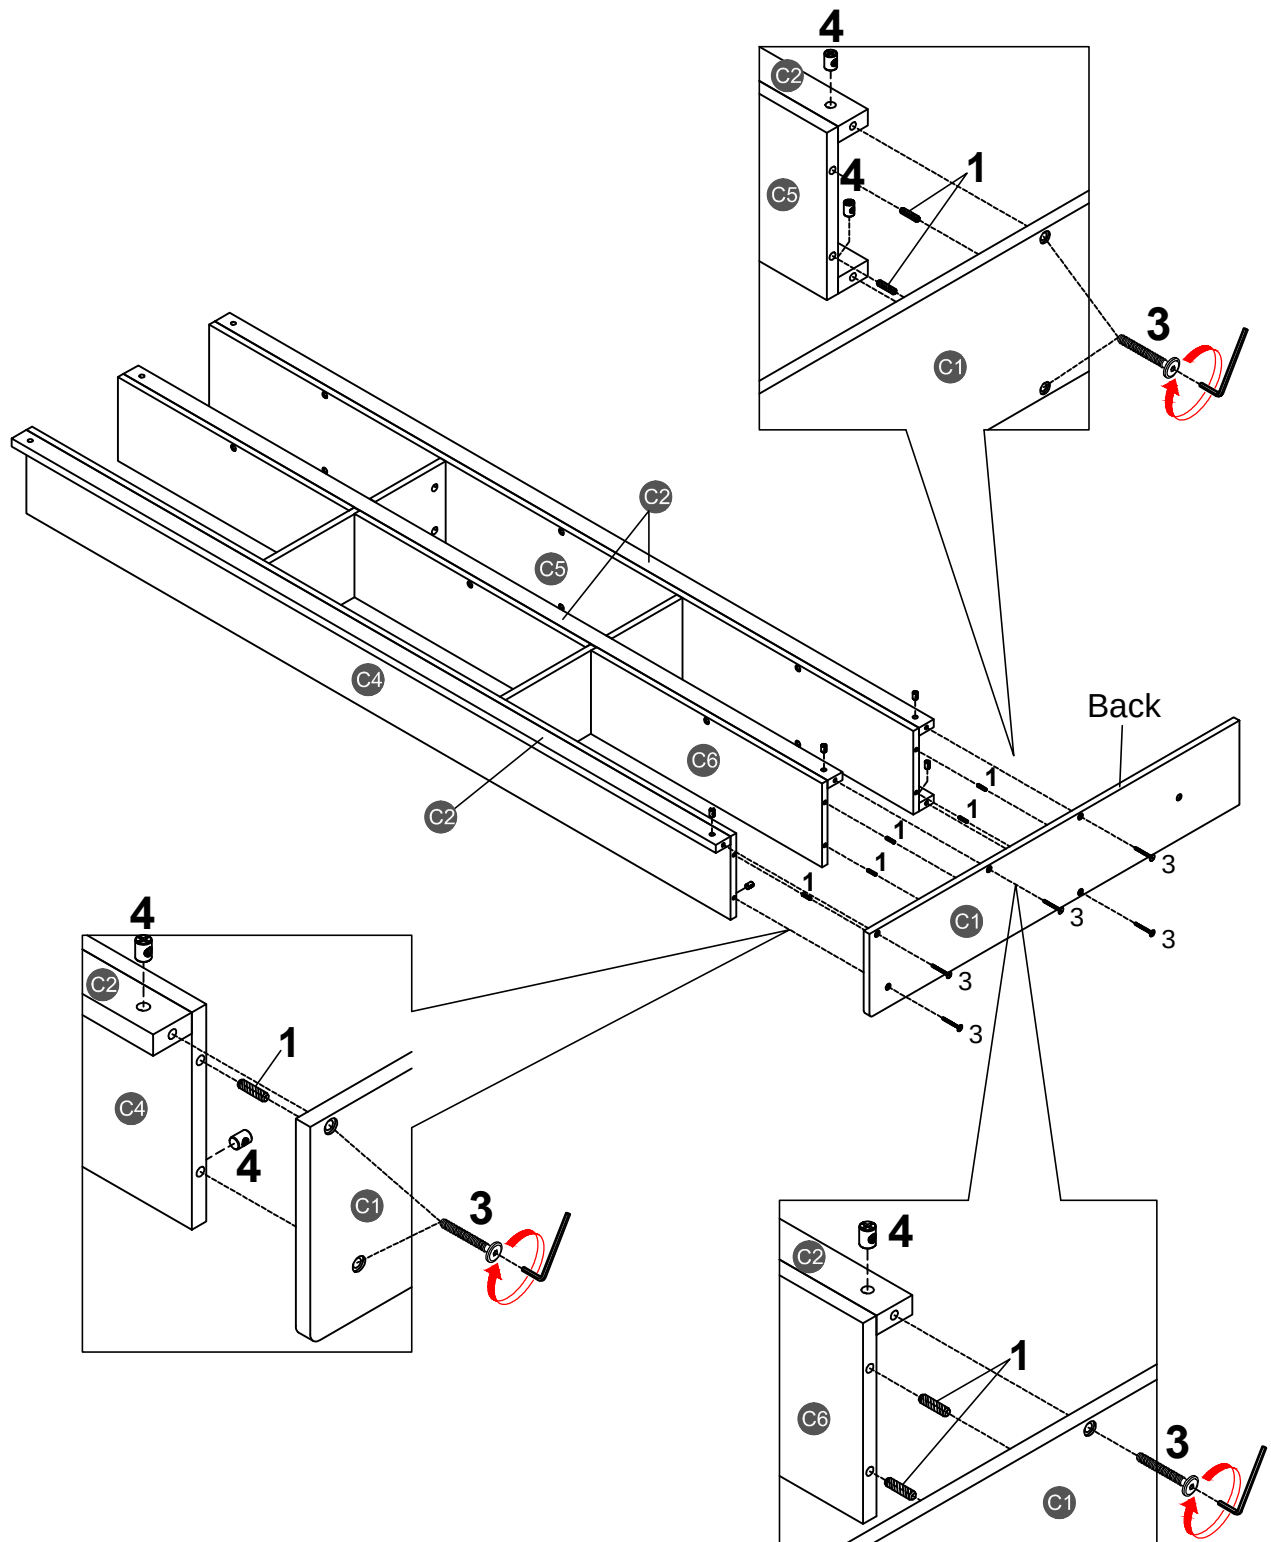


STEP 13:


1	3	4
		
7PCS	7PCS	7PCS

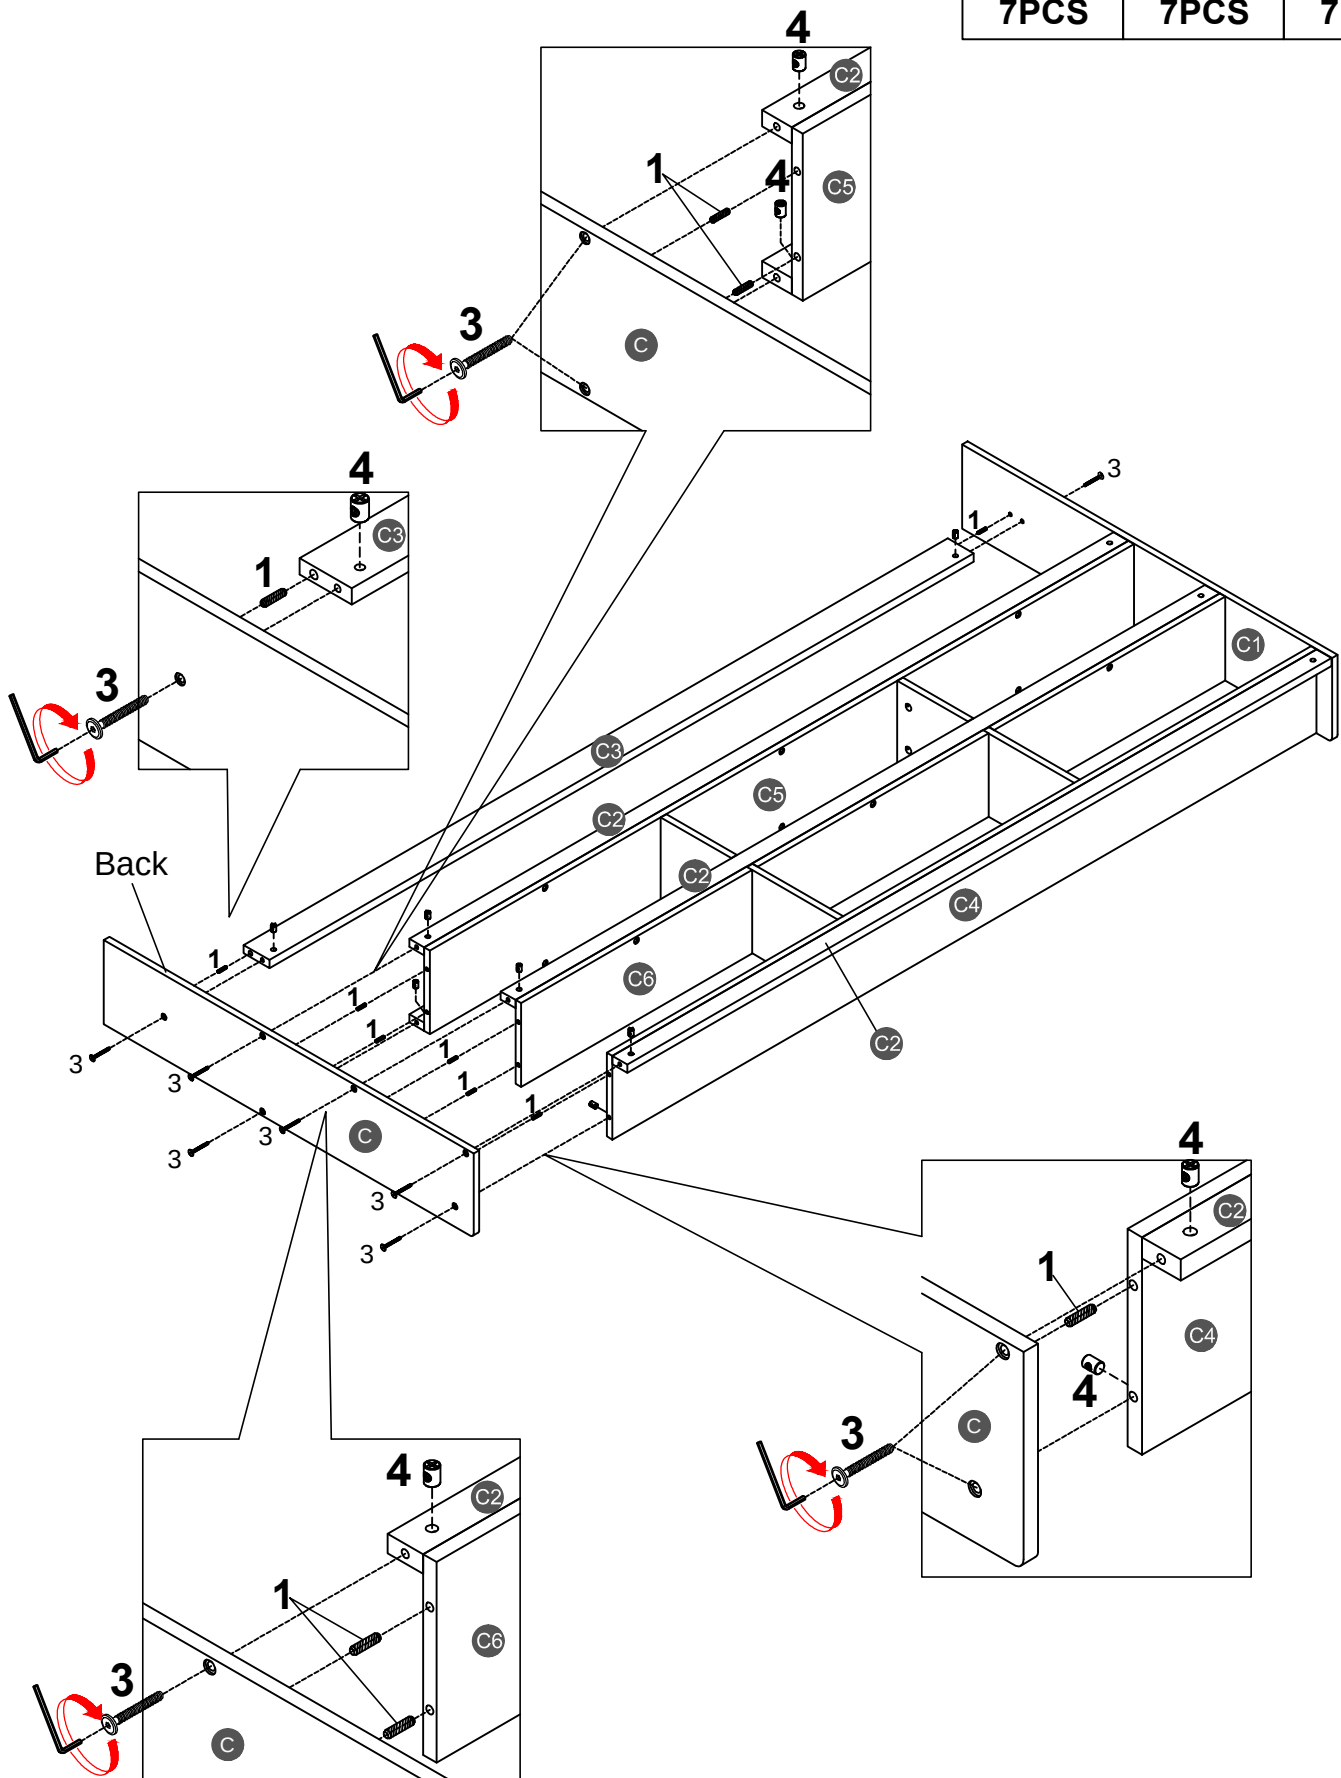

STEP 14:

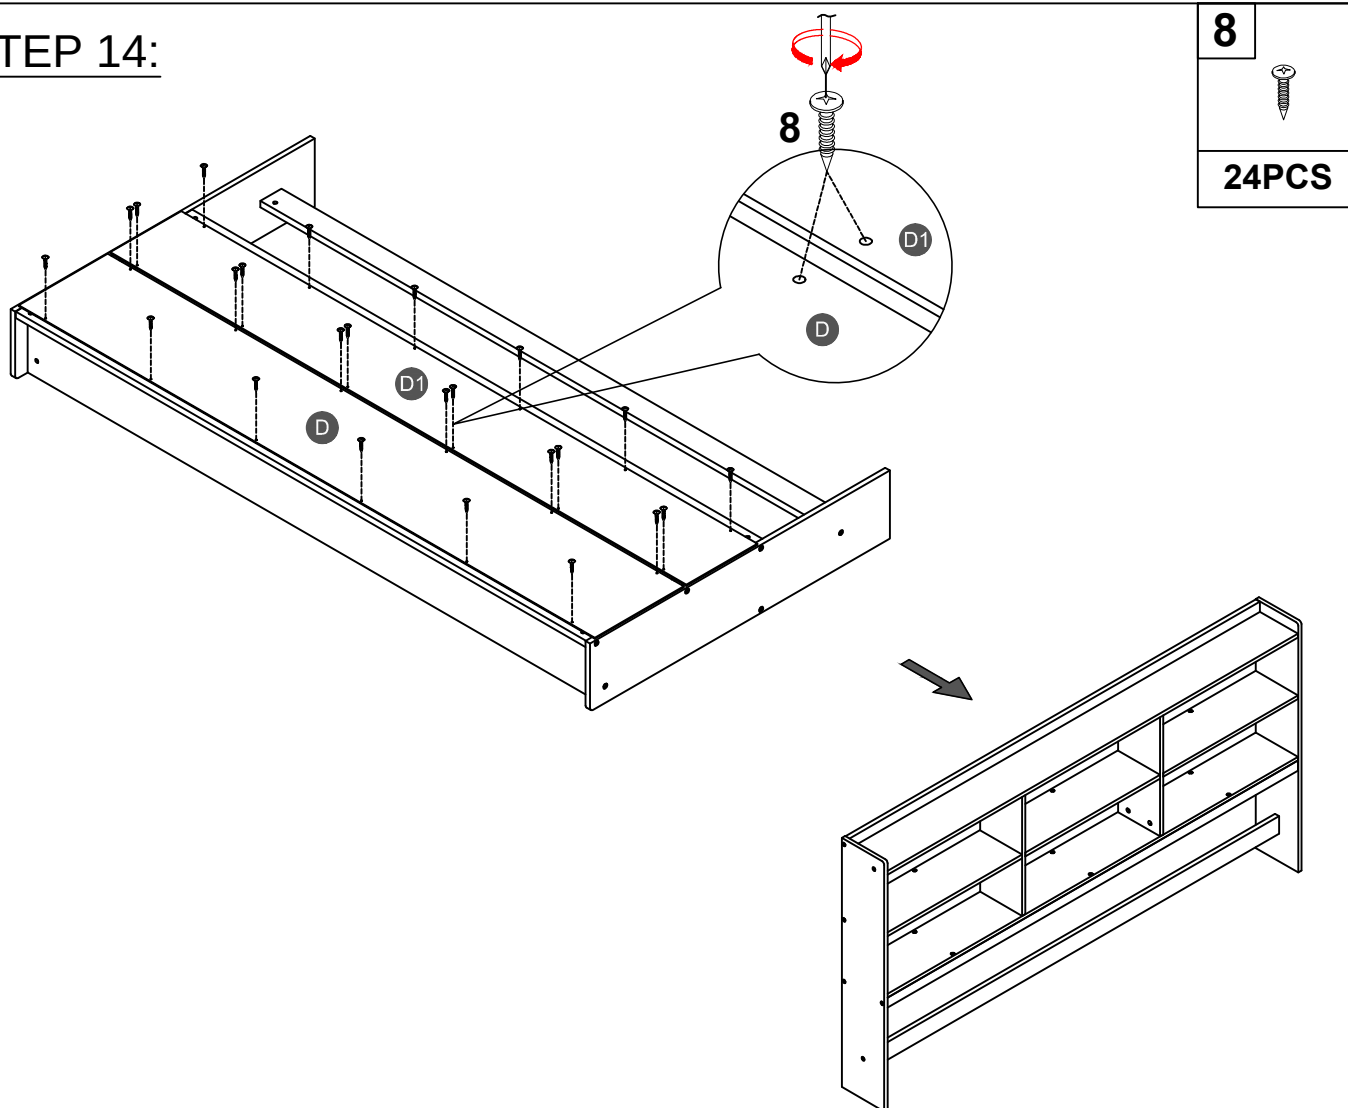

STEP 15:

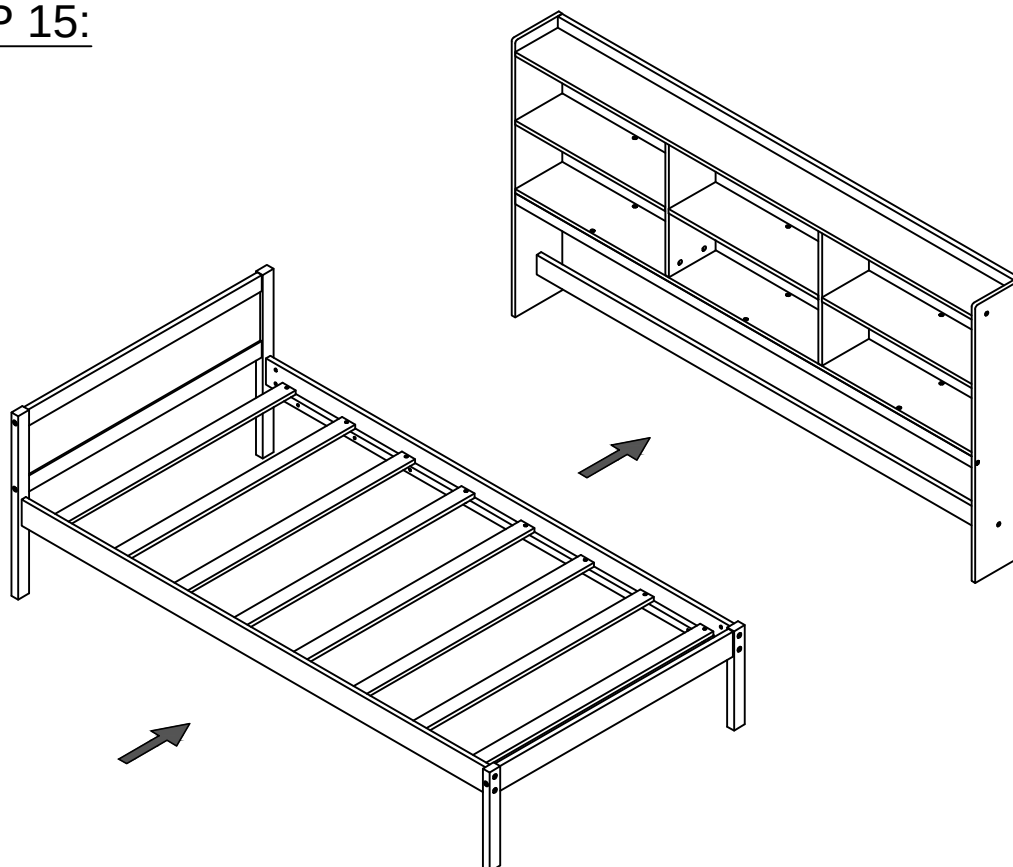


STEP 16:

7



16PCS

9



4PCS

