VANITY TABLE

918M-W, 918M-B

INSTALLATION MANUAL



Before assembly please scan the code to get the installation video.

How to install the rail and mirror? please scan the code to get the video.

How to adjust the mirror light? please scan the code to get the video.

918M real show video.

This is the unified installation manual for the 918M (middle size) dressing table, suitable for three versions: simple, basic, and luxury.

Simple version: There is no mirror light, built-in socket or hair dryer stand function, so there is no mirror light power plug (N), built-in socket (K) or hairdryer bracket (L) in the accessories.

Basic version: with mirror light function, no built-in socket or hair dryer stand function. Therefore, there is no built-in socket (K) or hair dryer bracket (L) in the accessories.

Luxury version: With mirror light, built-in socket, and hair dryer stand function, including all illustrated accessories.

Also note that:


1. There are marked points where the track needs to be fixed. Please use 12mm screws to secure the track at the marked point.

2. Screw C is a drawer positioning pin that prevents the drawer from falling off when opened. After installation, please confirm that all positioning screws C have been installed.






3. For luxury version, part 26 has rectangular hole for installing build-in socket, part 27 has wiring hole, and part 31 has mirror light; For basic version part 26 does not have rectangular hole for installing socket, part 27 does not have wiring hole, but part 31 has mirror light; For simple version, part 26 does not have rectangular hole for installing build-in socket, part 27 does not have wiring hole, and part 31 does not have mirror light.

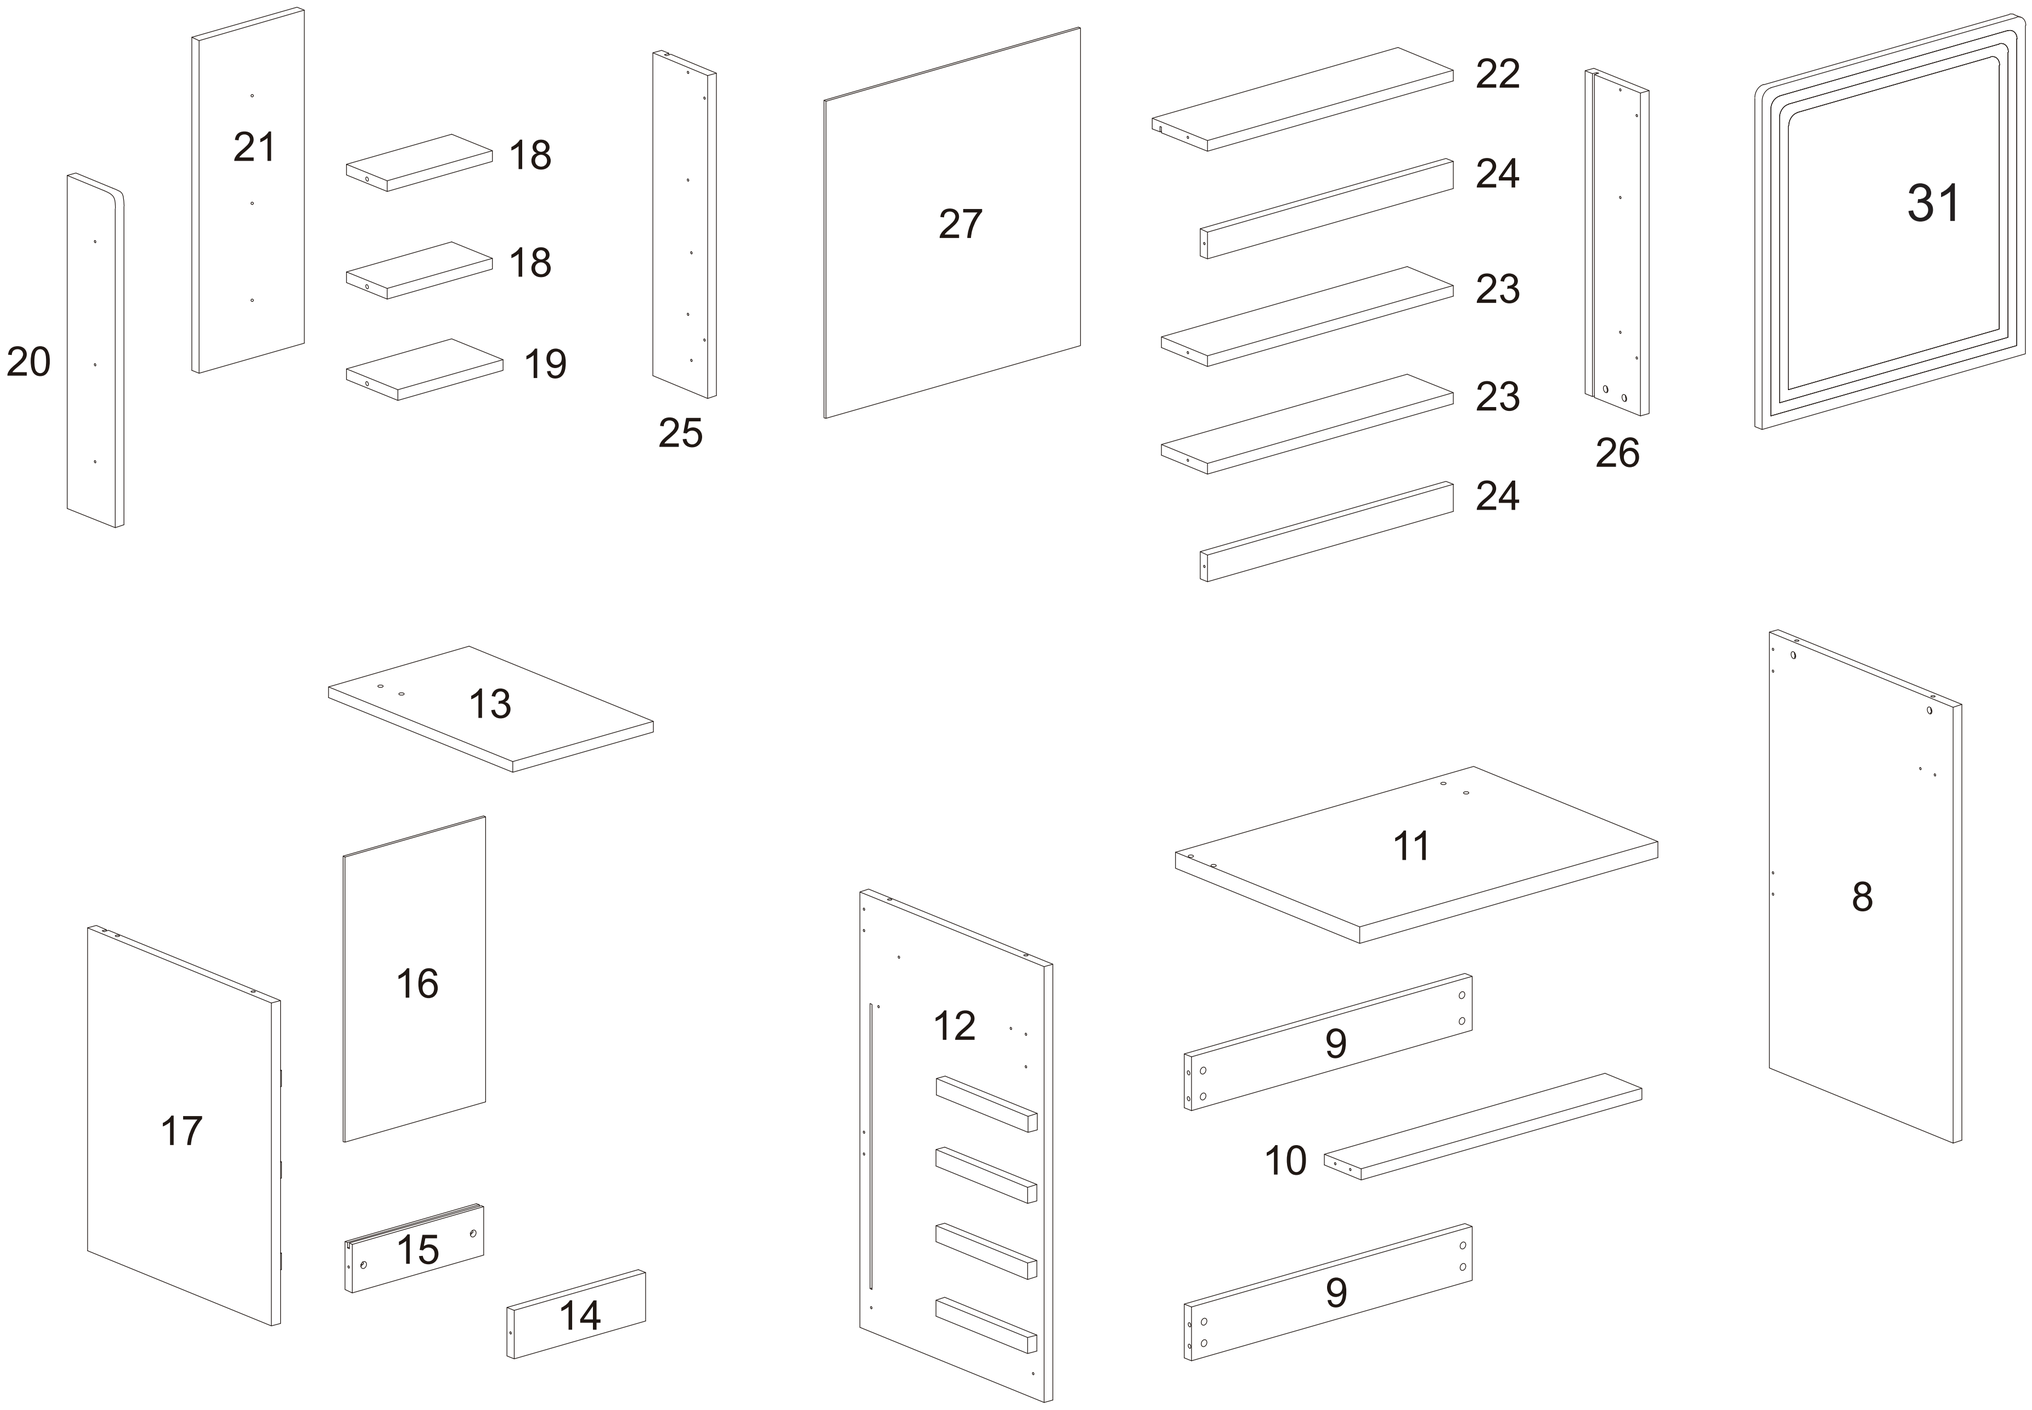

1 - x10	16 - x1
2 - x1	17 - x1
3 - x1	18 - x2
4 - x1	19 - x1
5 - x4	20 - x1
6 - x4	21 - x1
7 - x4	22 - x1
8 - x1	23 - x2
9 - x2	24 - x2
10 - x1	25 - x1
11 - x1	26 - x1
12 - x1	27 - x1
13 - x1	28 - x1
14 - x1	29 - x2
15 - x1	30 - x2

Before installation, please use an erasable marker to write the corresponding numbers on each board according to the numbers in the figure below, and then arrange all boards according to the method shown in the figure.

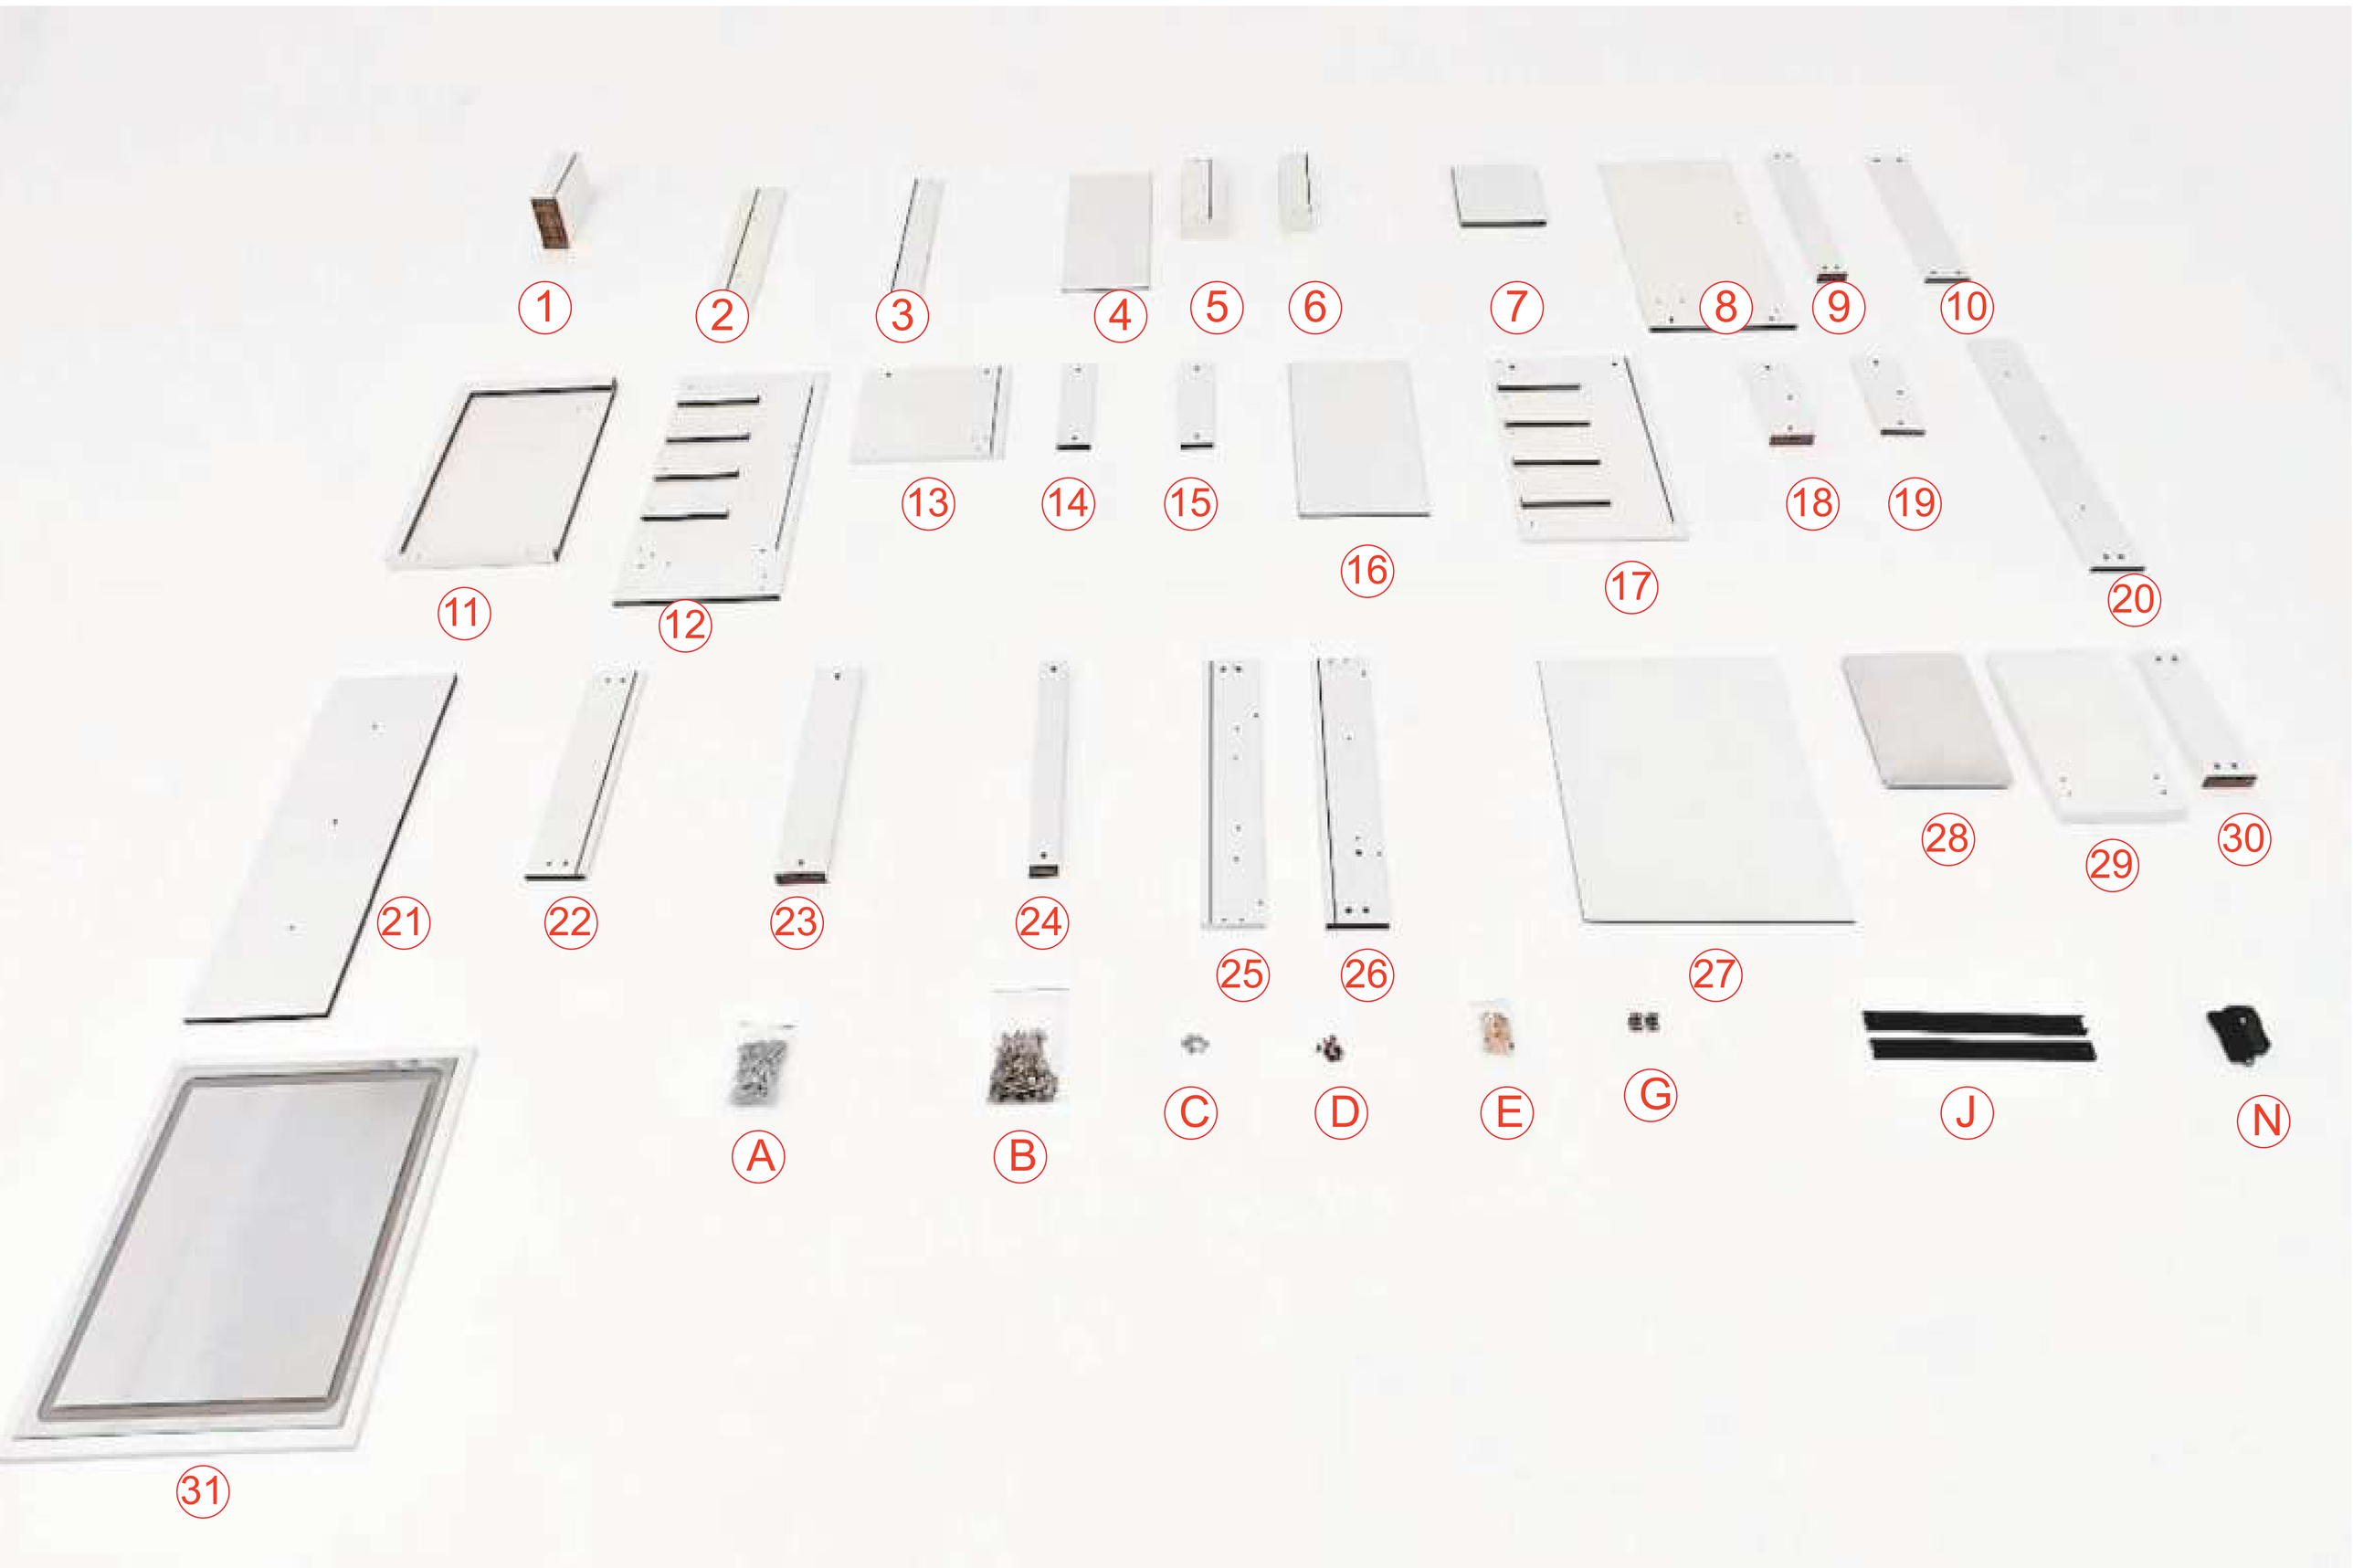



1 -x10




2 -x1




3 -x1


4 -x1

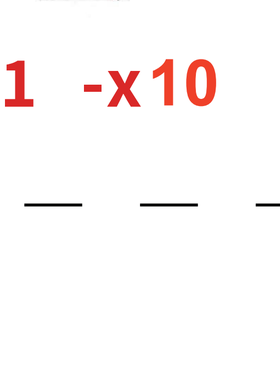

5 -x4

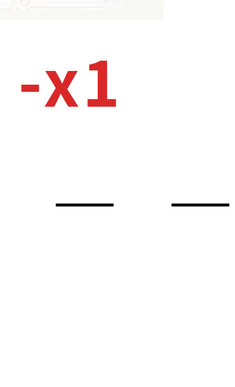

6 -x4

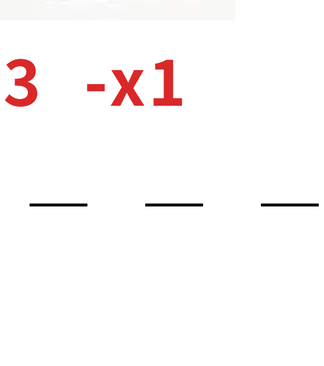

7 -x4




8 -x1



9 -x2

10 -x1

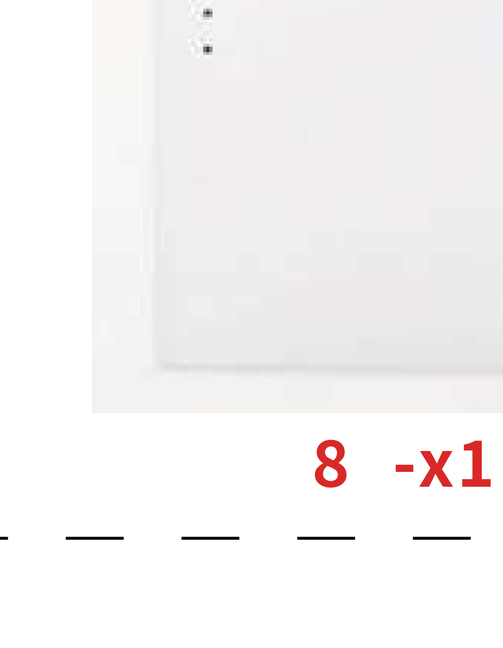

11 -x1



12 -x1



13 -x1



14 -x1



15 -x1

16 -x1



17 -x1



18 -x2



19 -x1



20 -x1



21 -x1



22 -x1



23 -x2




24 -x2



25 -x1



26 -x1

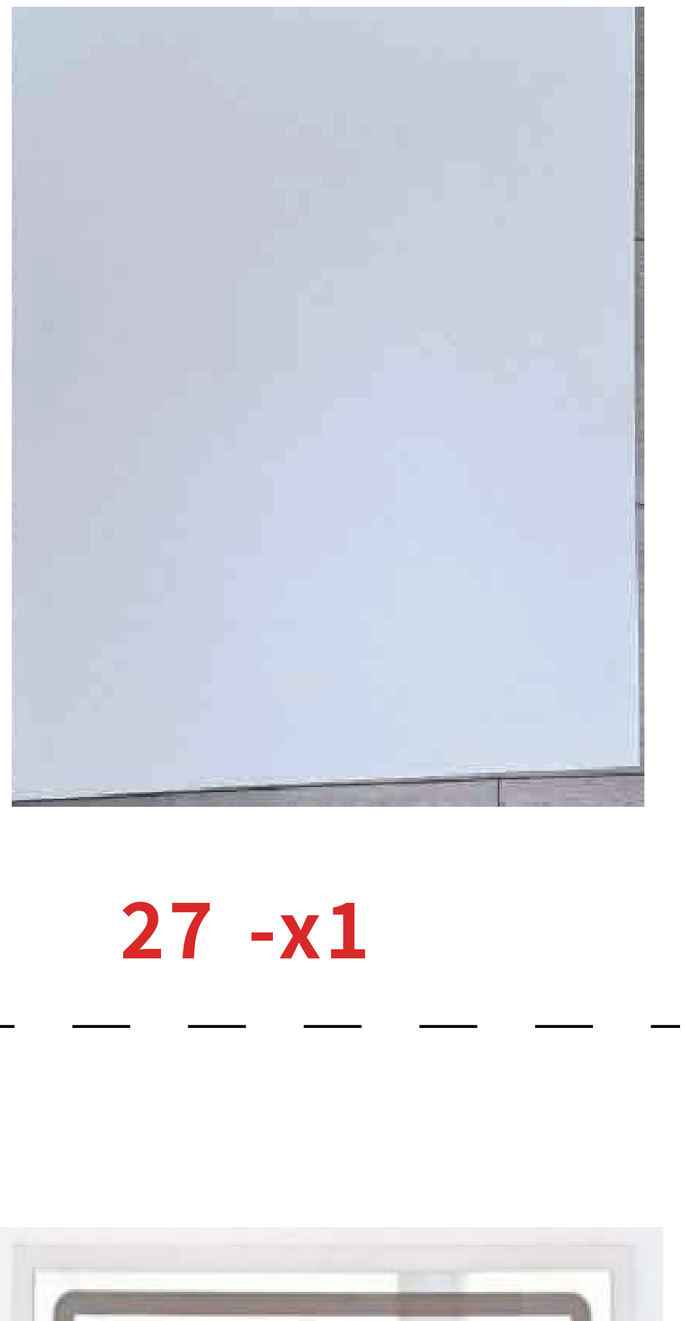

27 -x1

28 -x1



29 -x2



30 -x2



31 -x1

HARDWARE



A	2 IN 1 SCREW AND LOCK	X 46



B	3 IN 1 SCREW AND LOCK	X 60



C	DRAWER POSITIONING SCREW	X10



D	12MM SCREW	X16



E	DRAWER HANDLE	X 6




G	L PLATE	X2



J	GUIDE RAIL	X2


1. Screw installation method

When the screw is installed, please keep it in line with the board, and do not tighten it too tightly

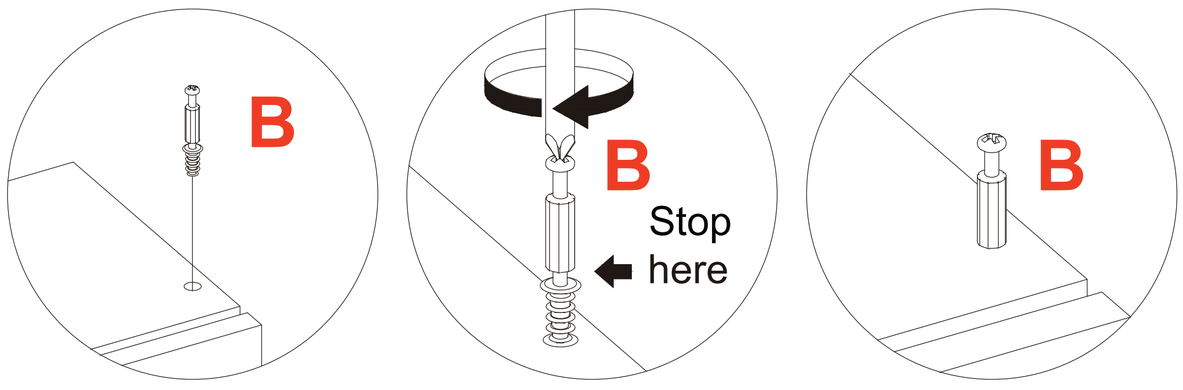


2. Check the Nut direction

This direction of the marked nutis consistent with the direction in which the scre is inserted

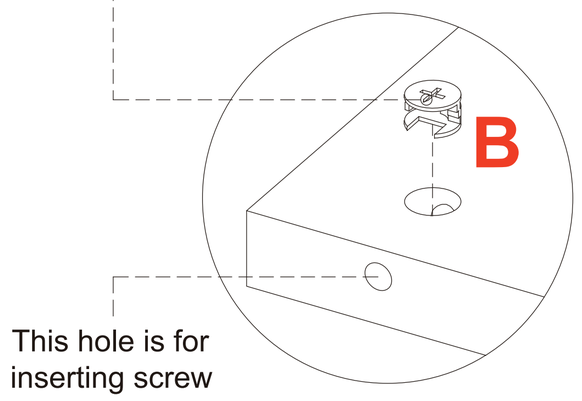



This hole is for inserting screw

3. Installation on thr board with fixing screws

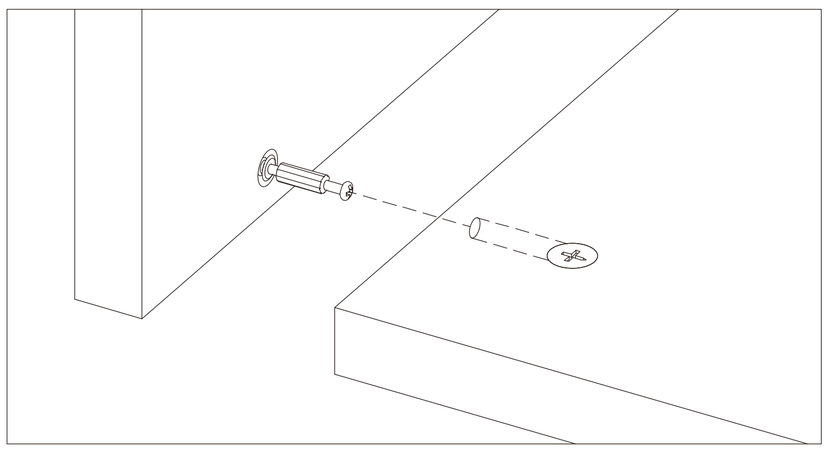


3. Rotate slowlyuntil it stops

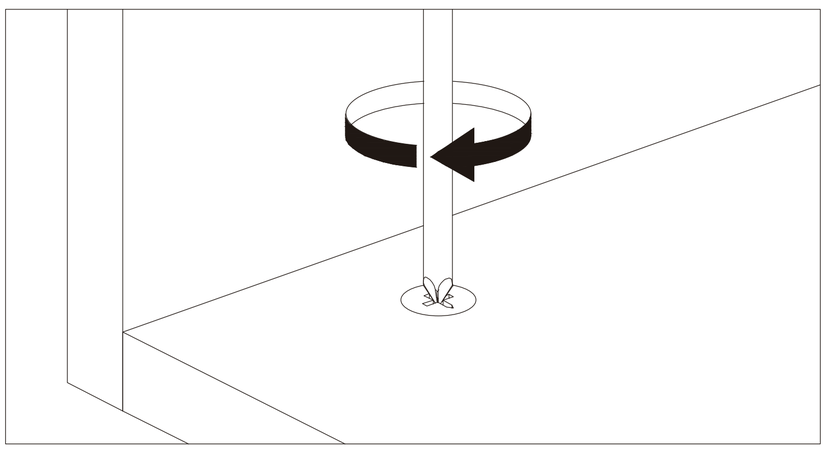


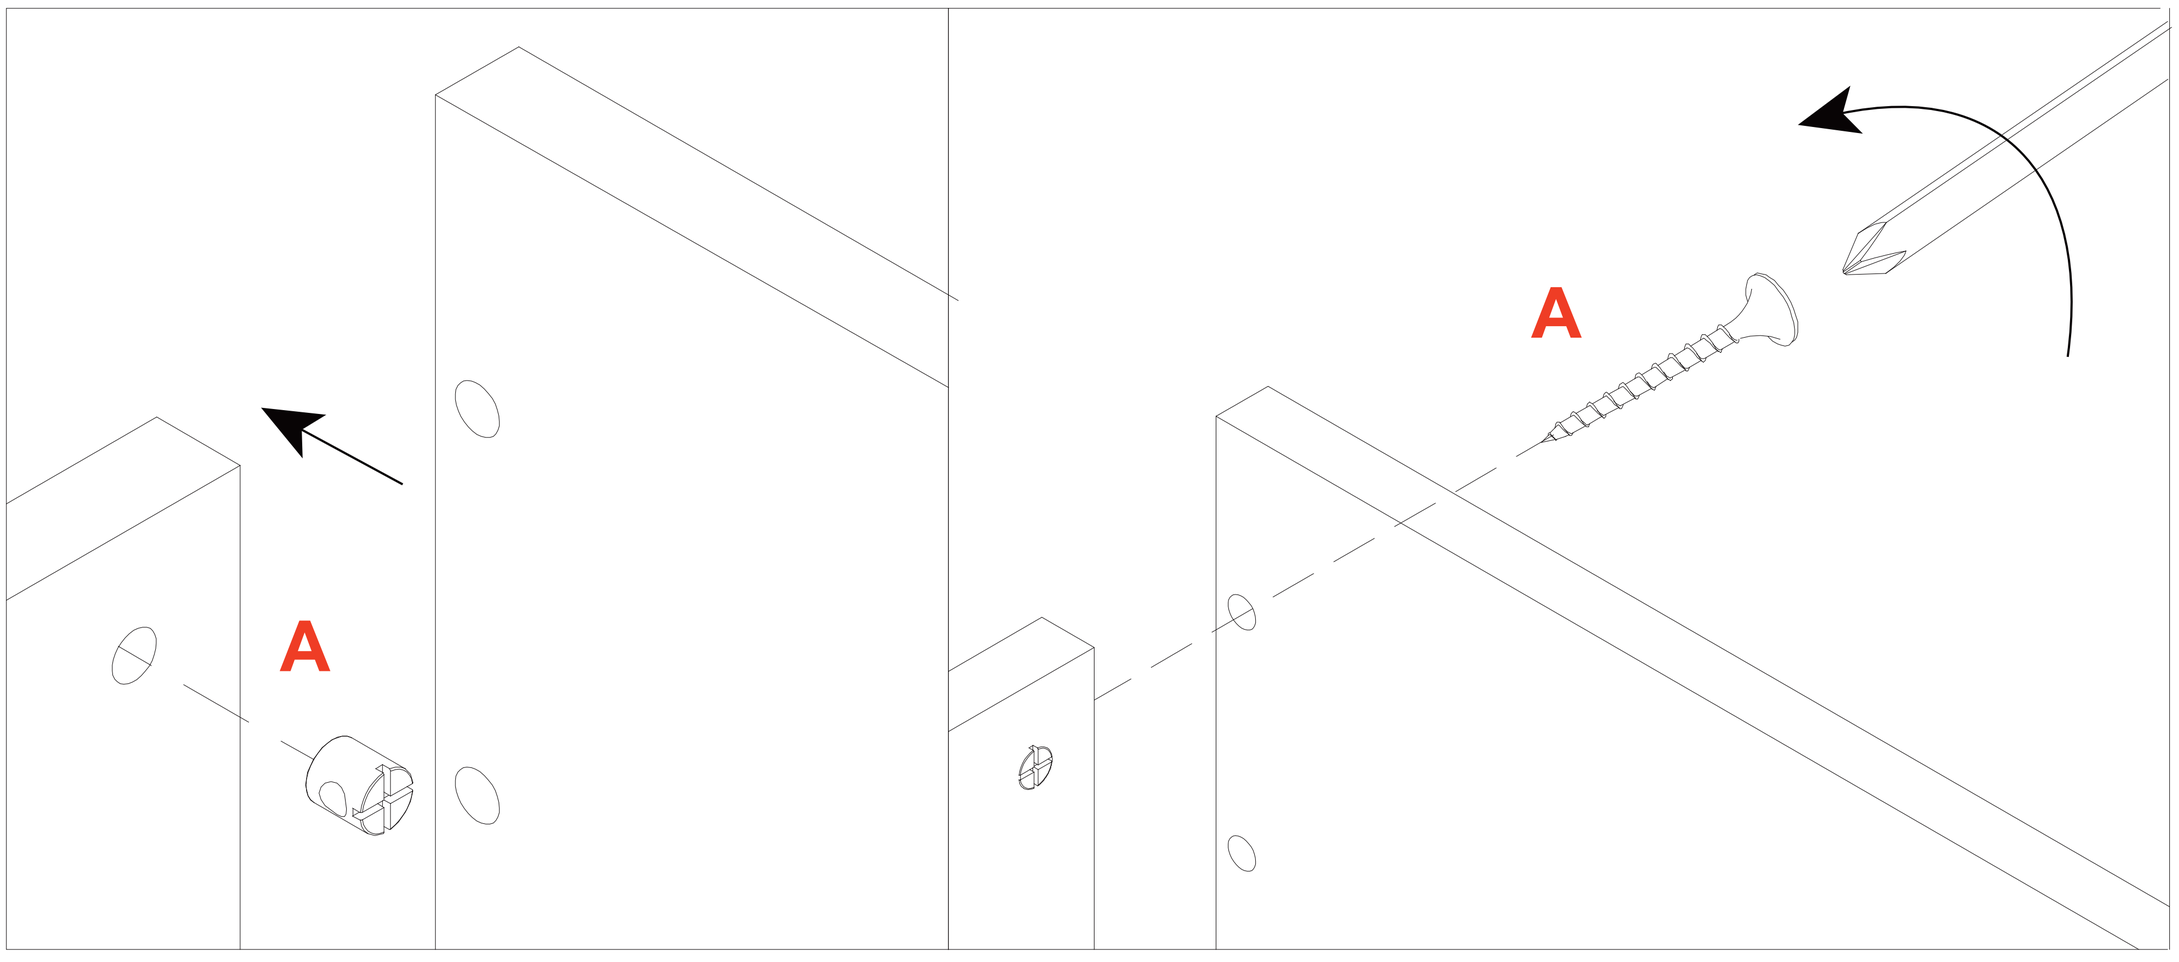


Step 01 pick up①x2,②x1,③x1,④x1

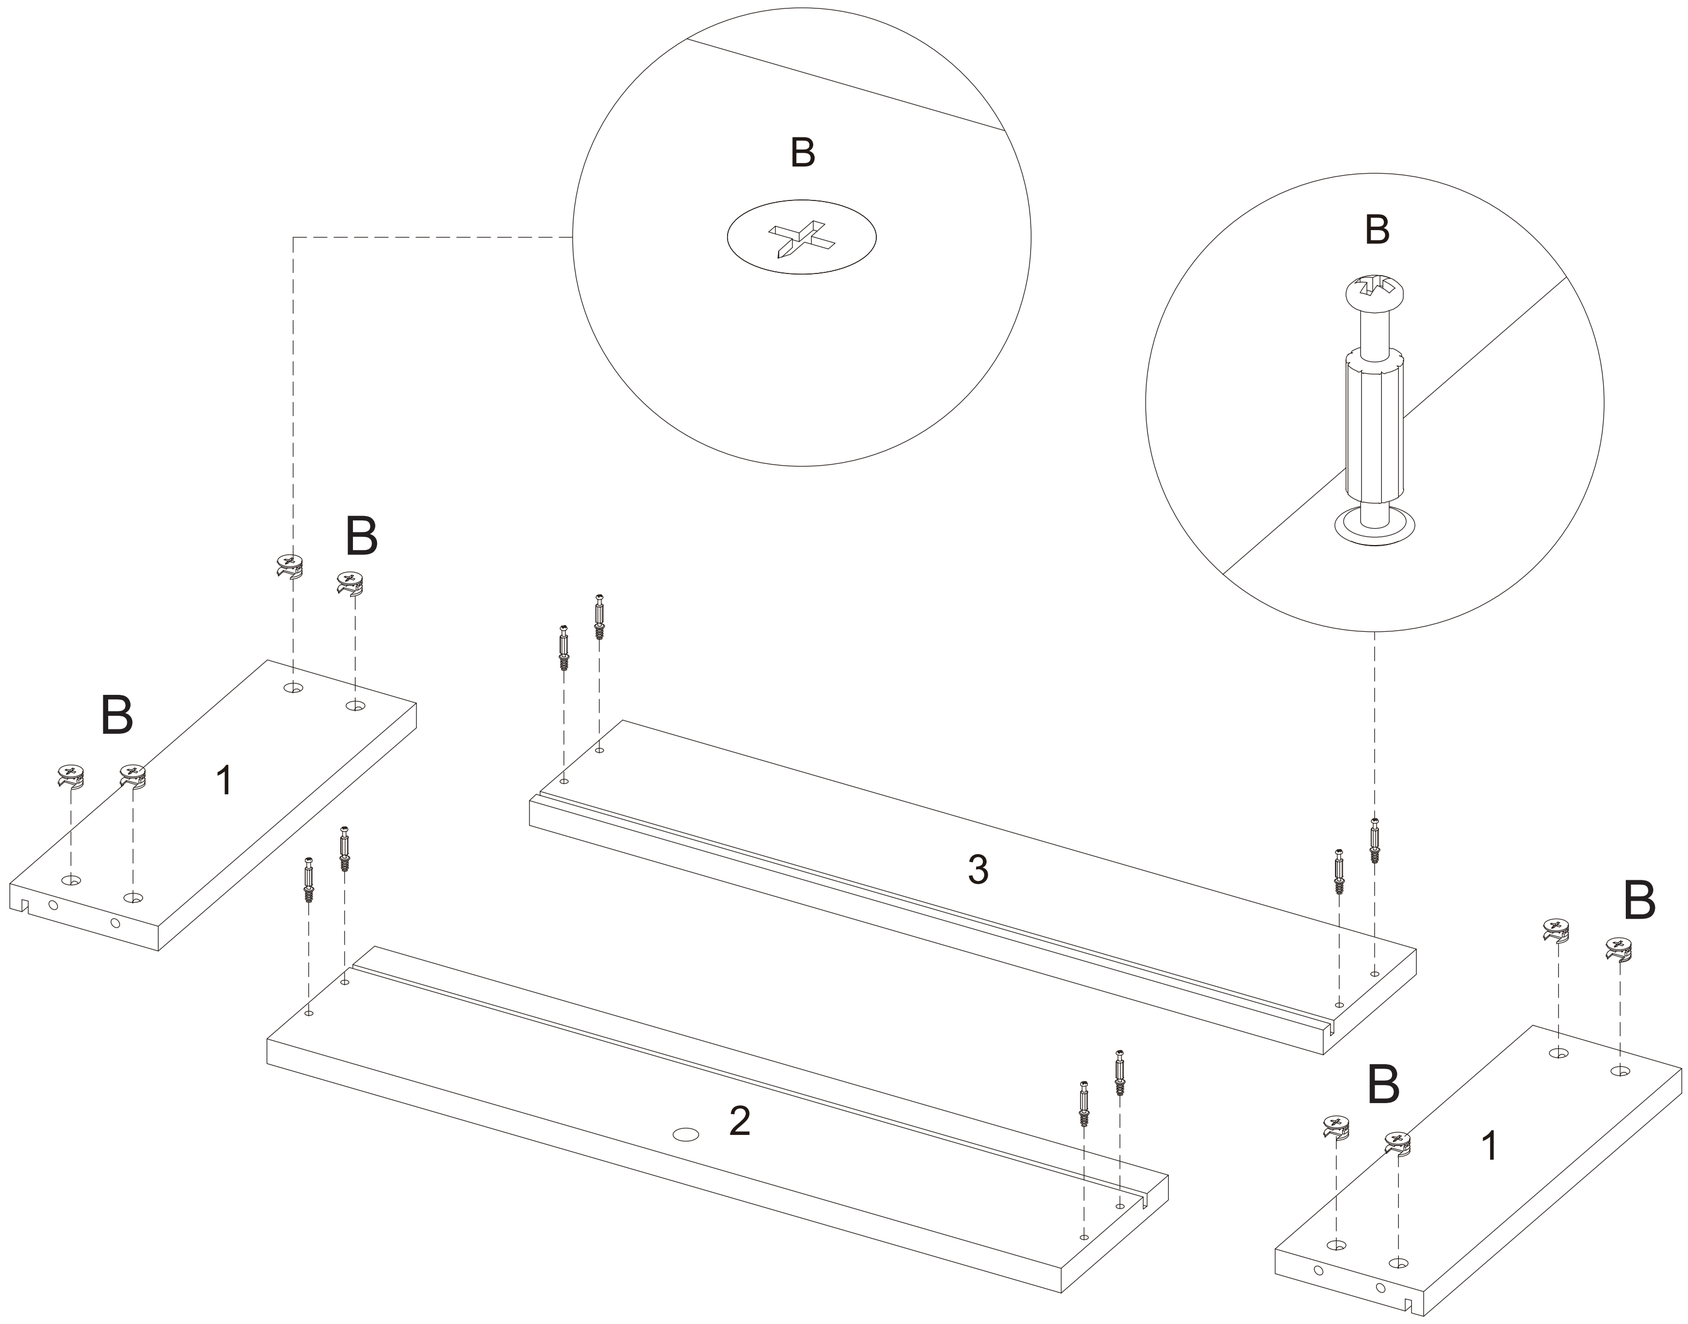


Step 02

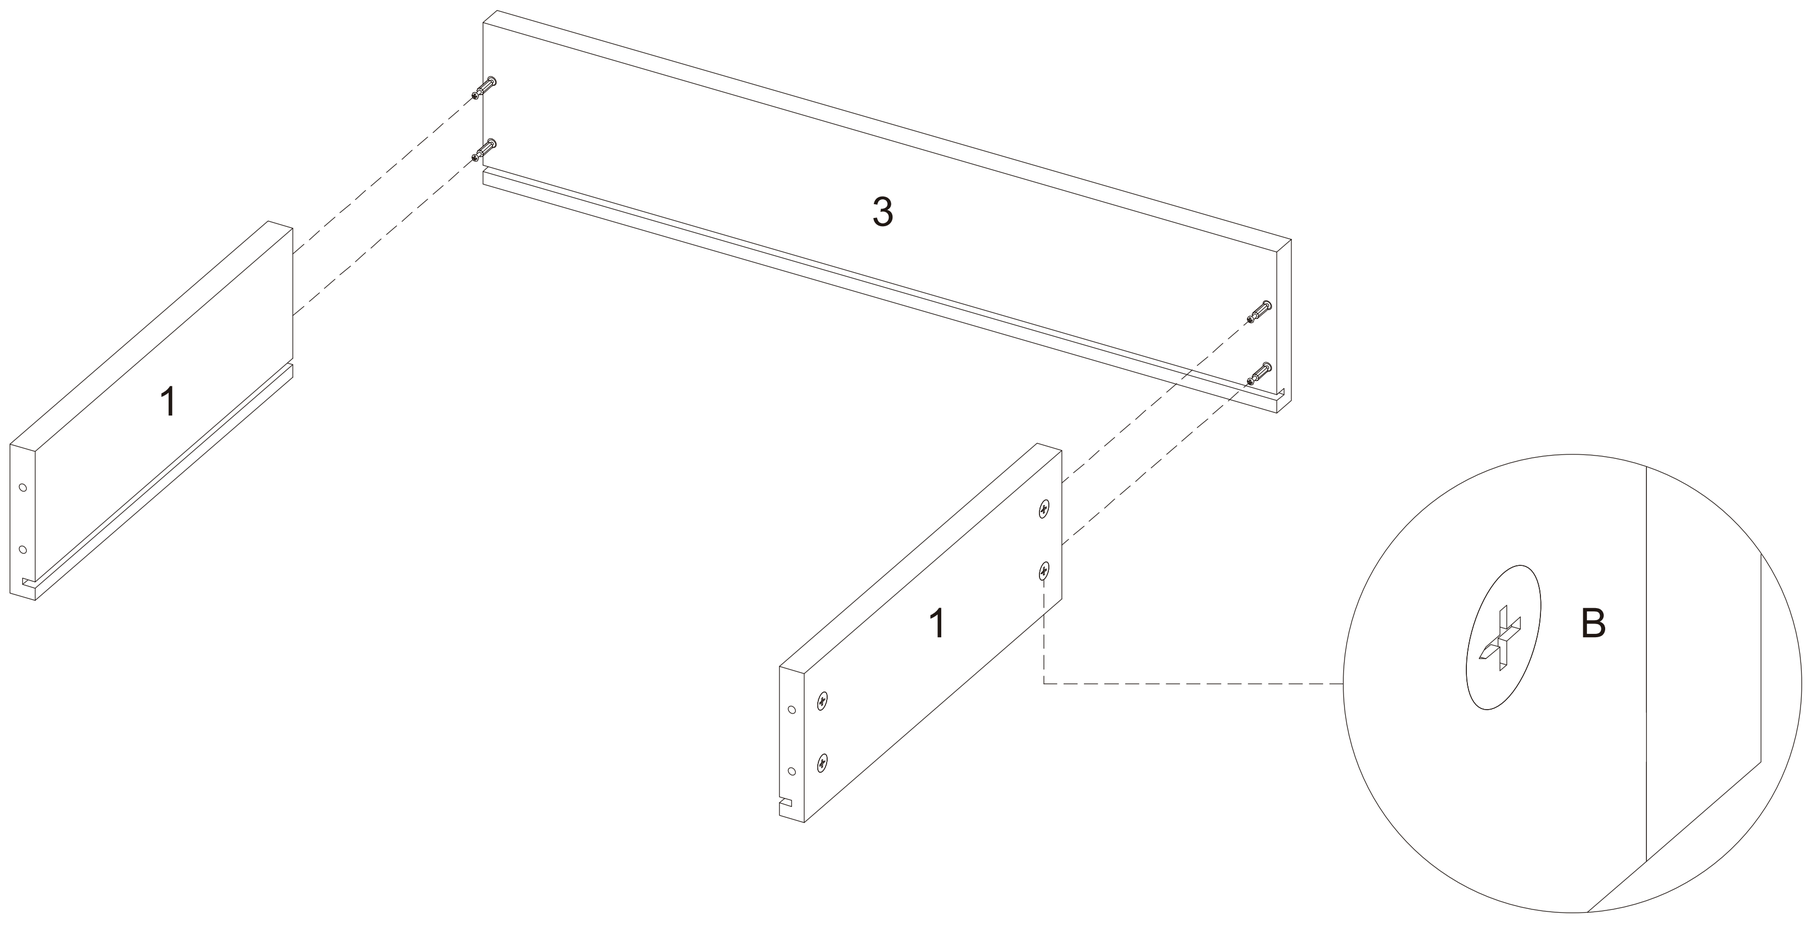


Step 03

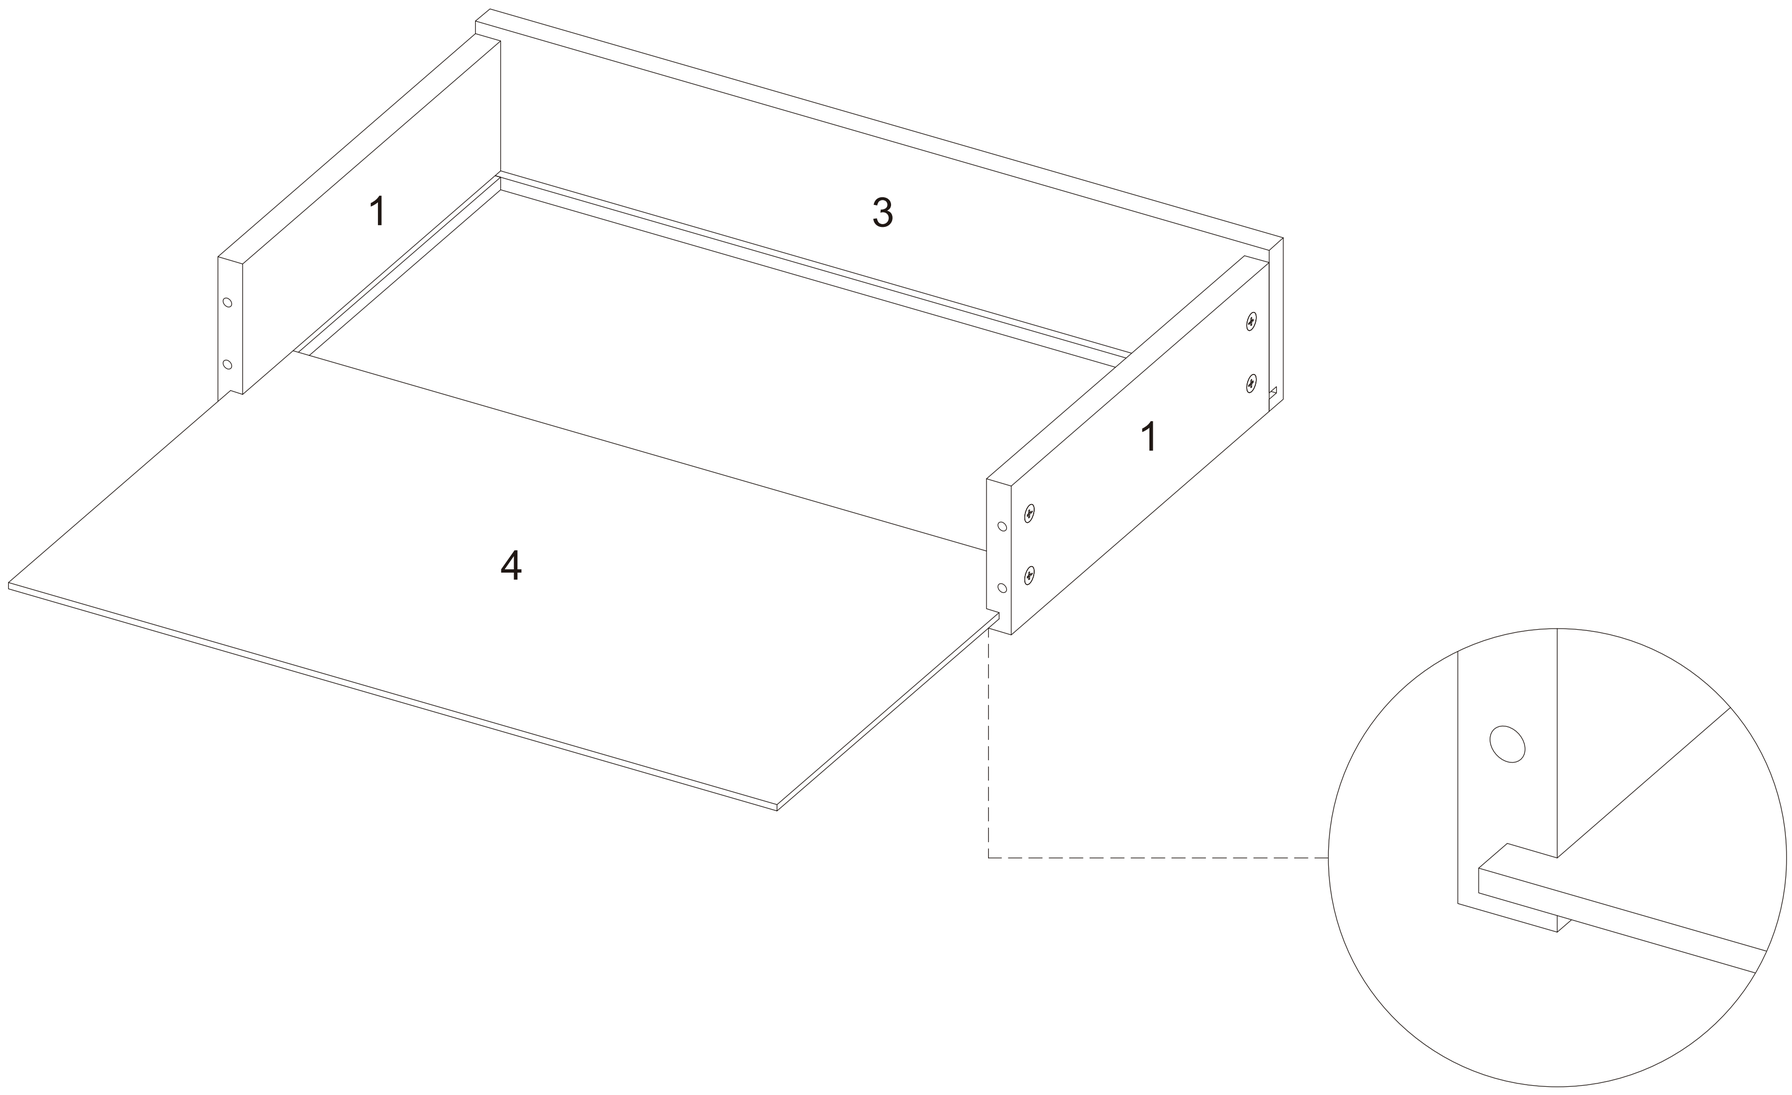


Step 04

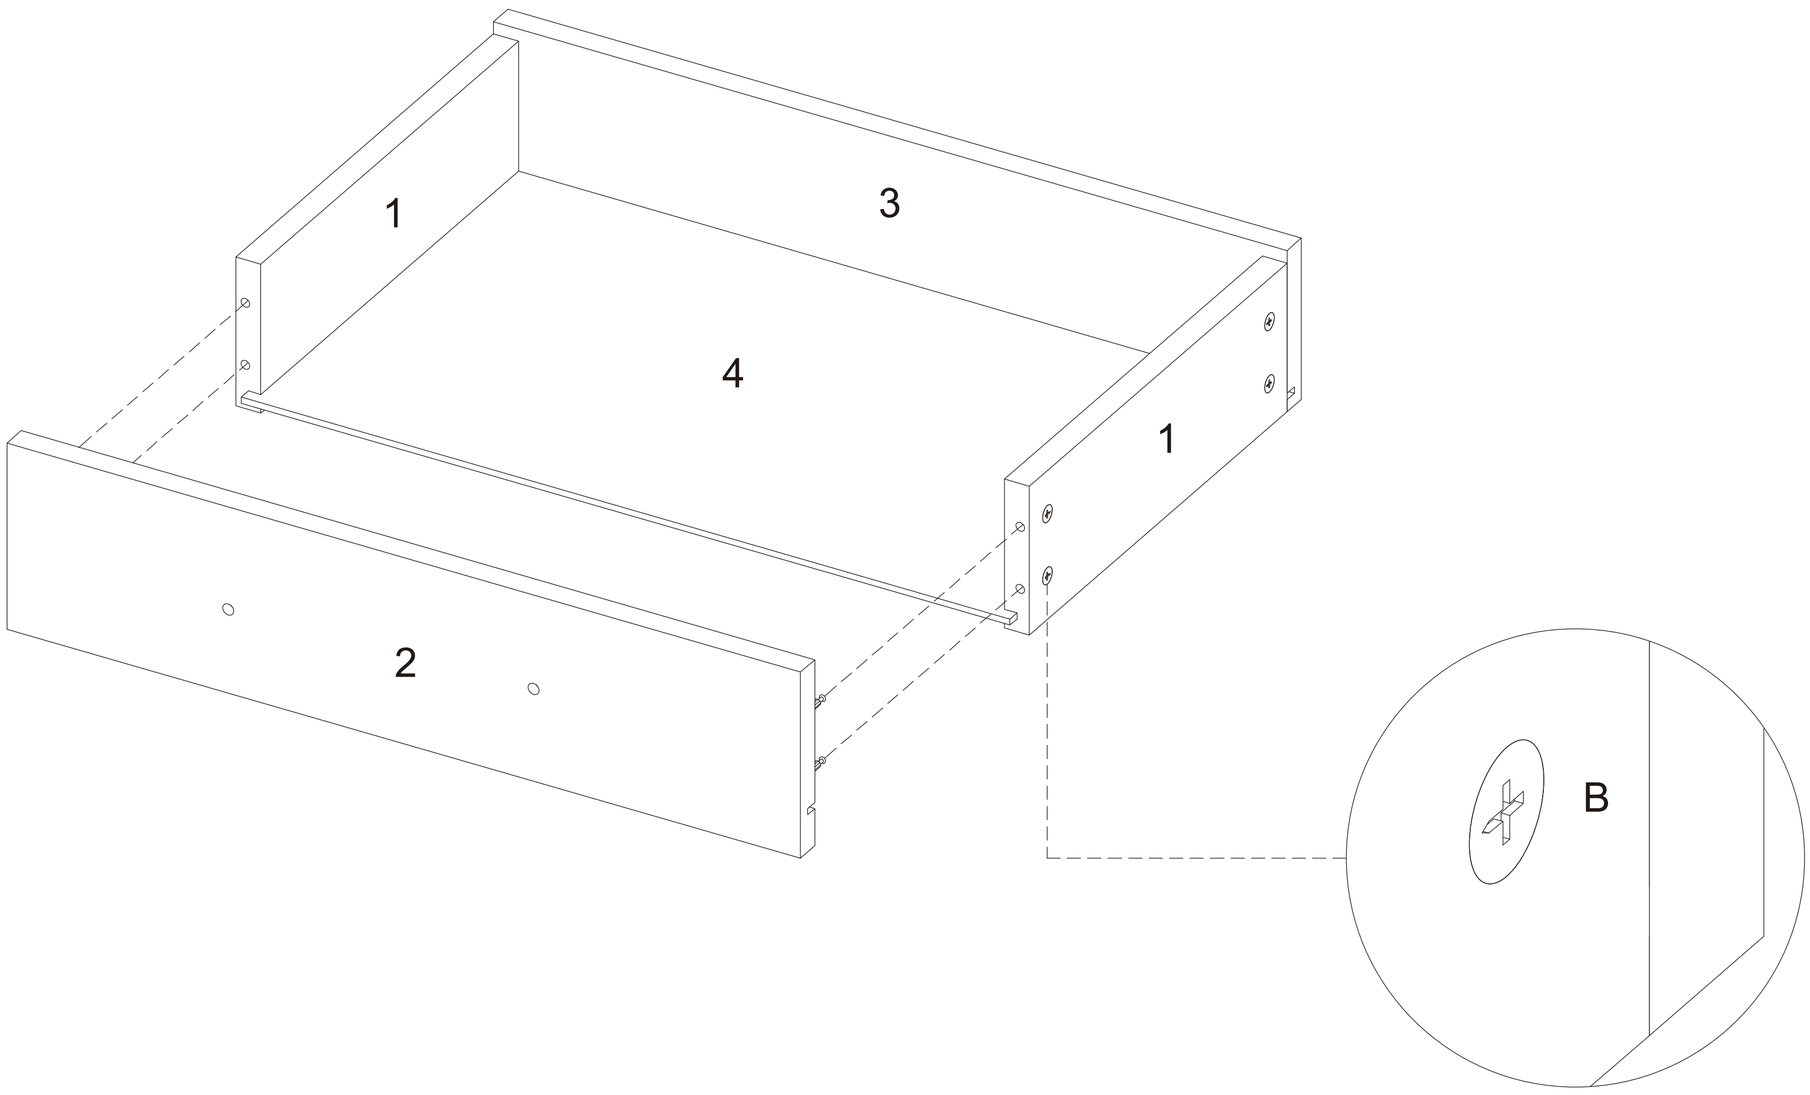

Step 05

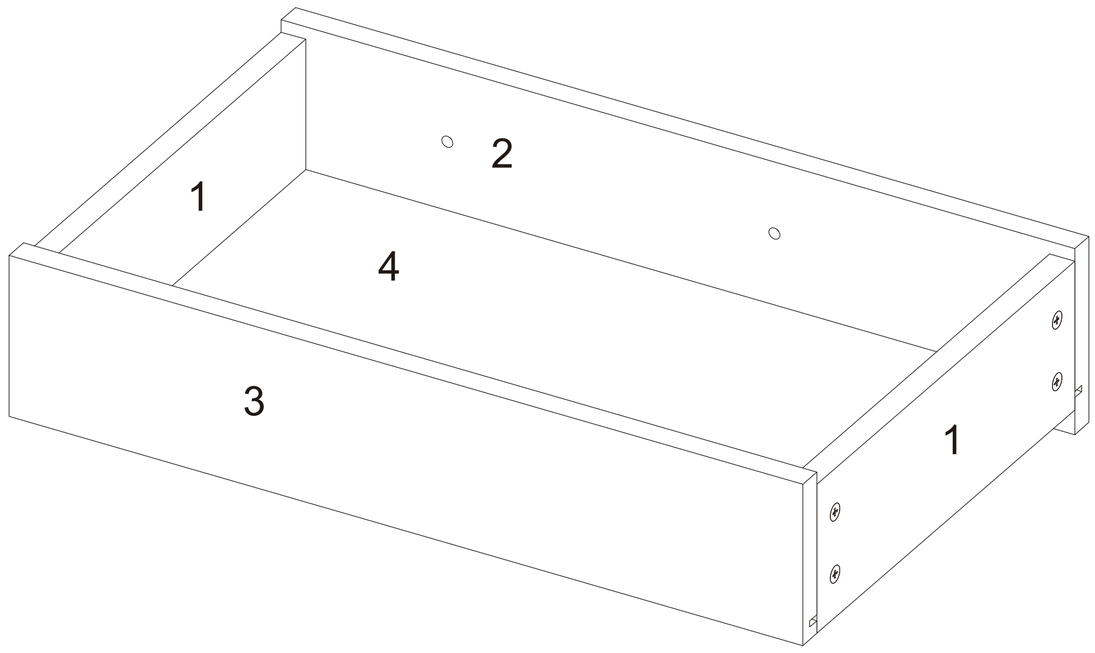


Step 06

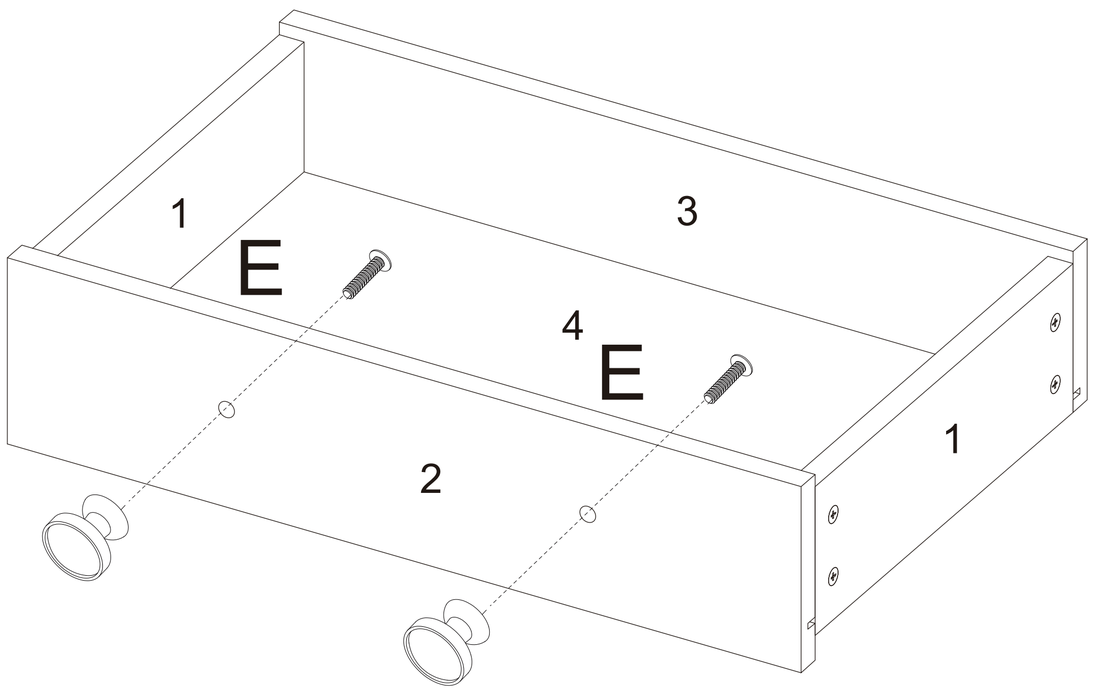


Step 07


pick up①x8,⑤x4,⑥x4,⑦x4

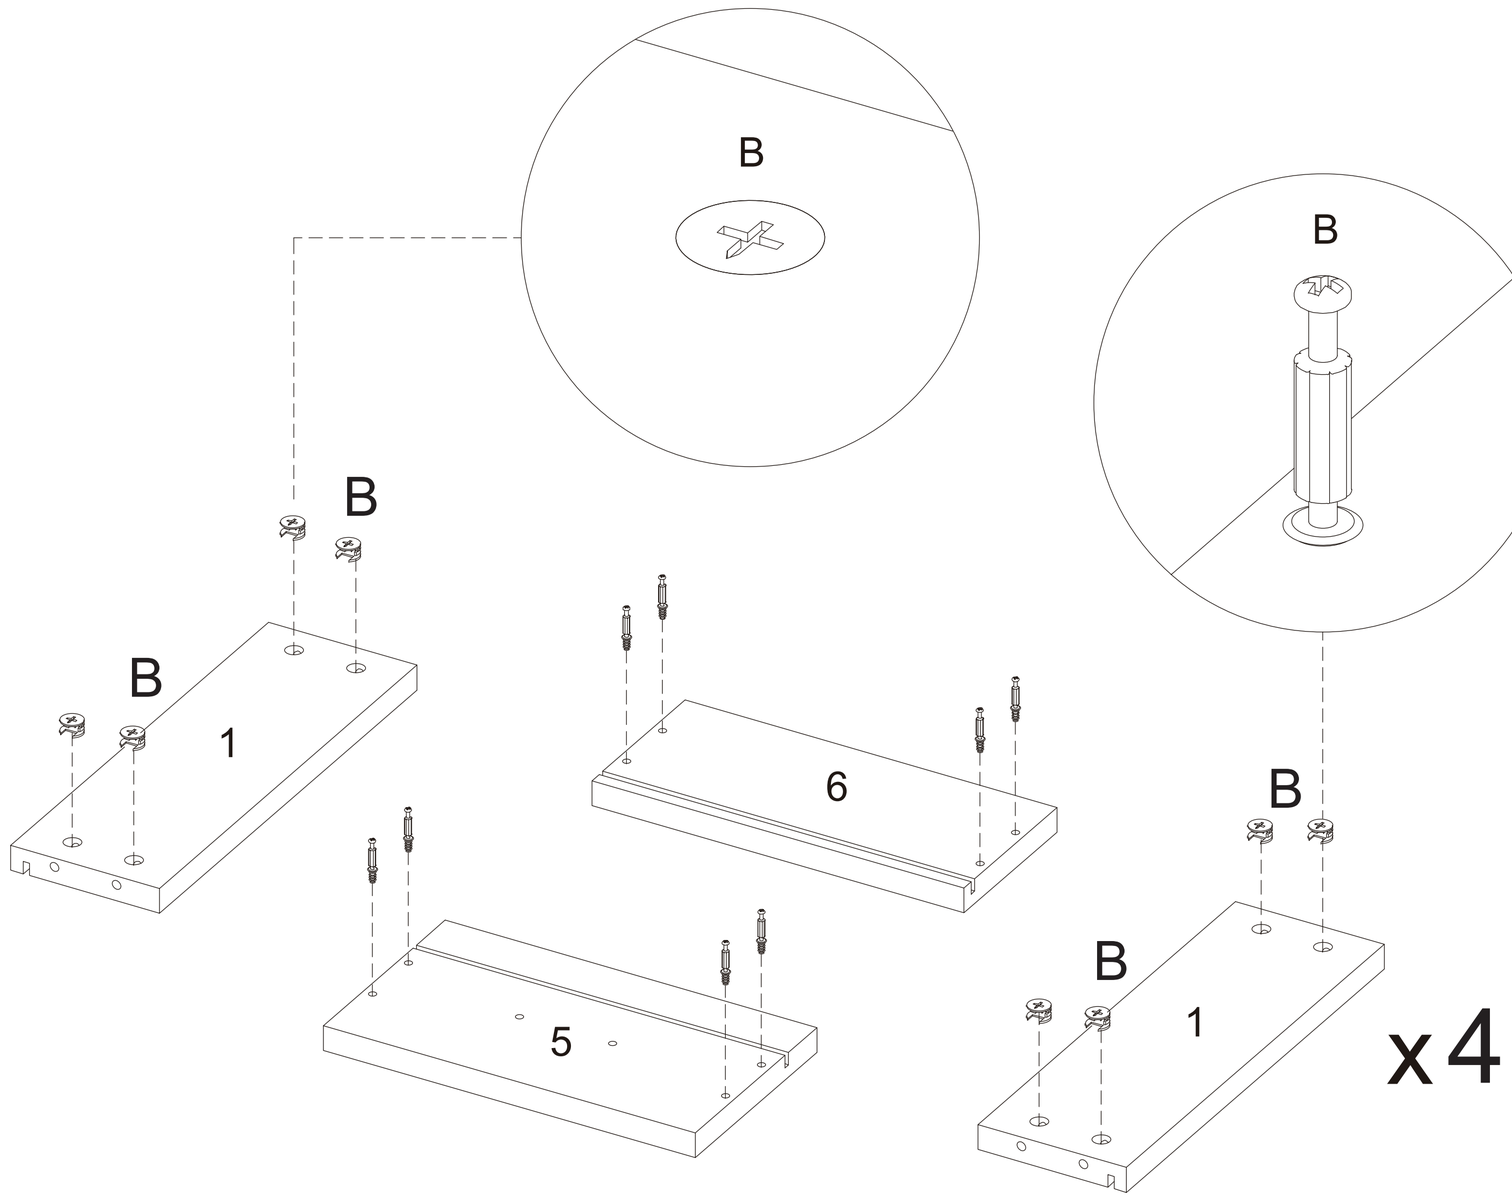


Step 08

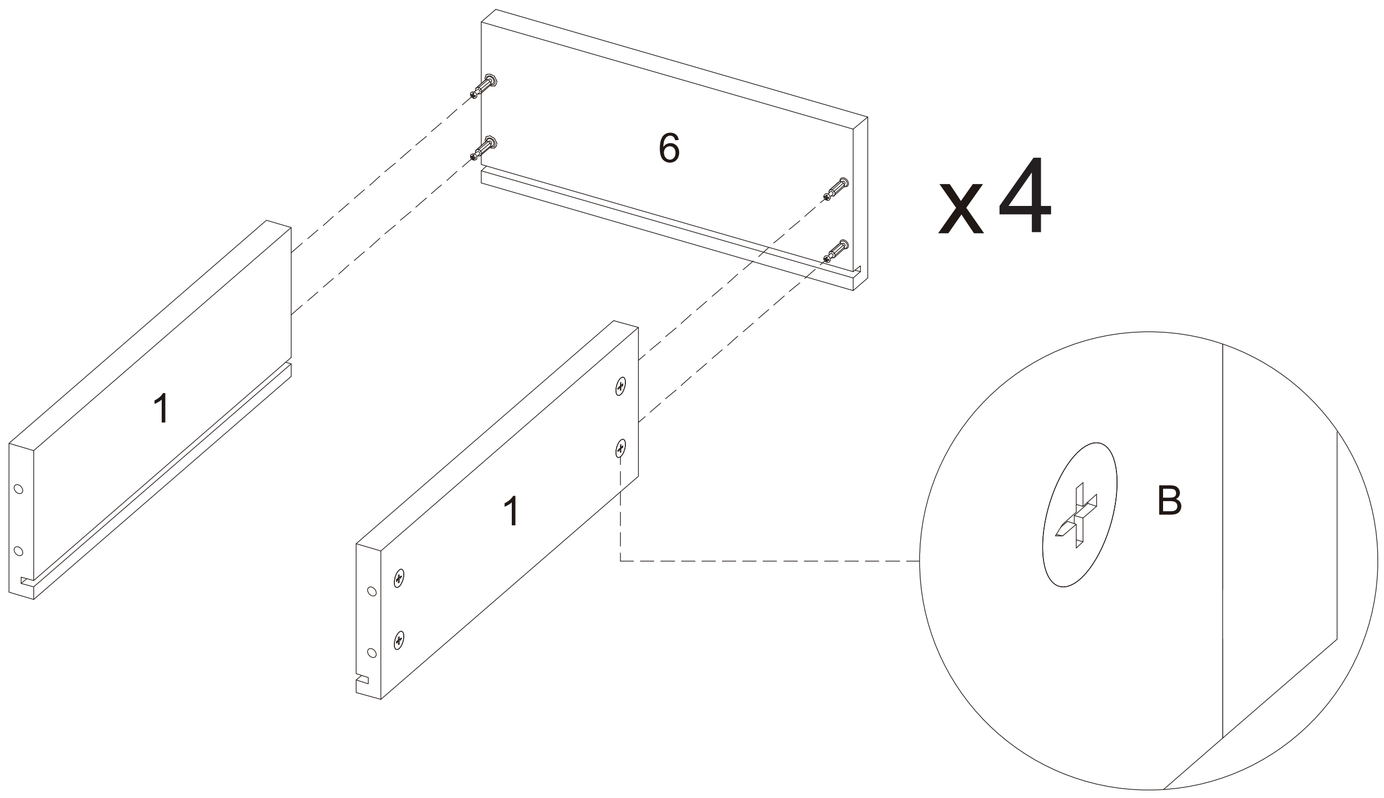


Step 09

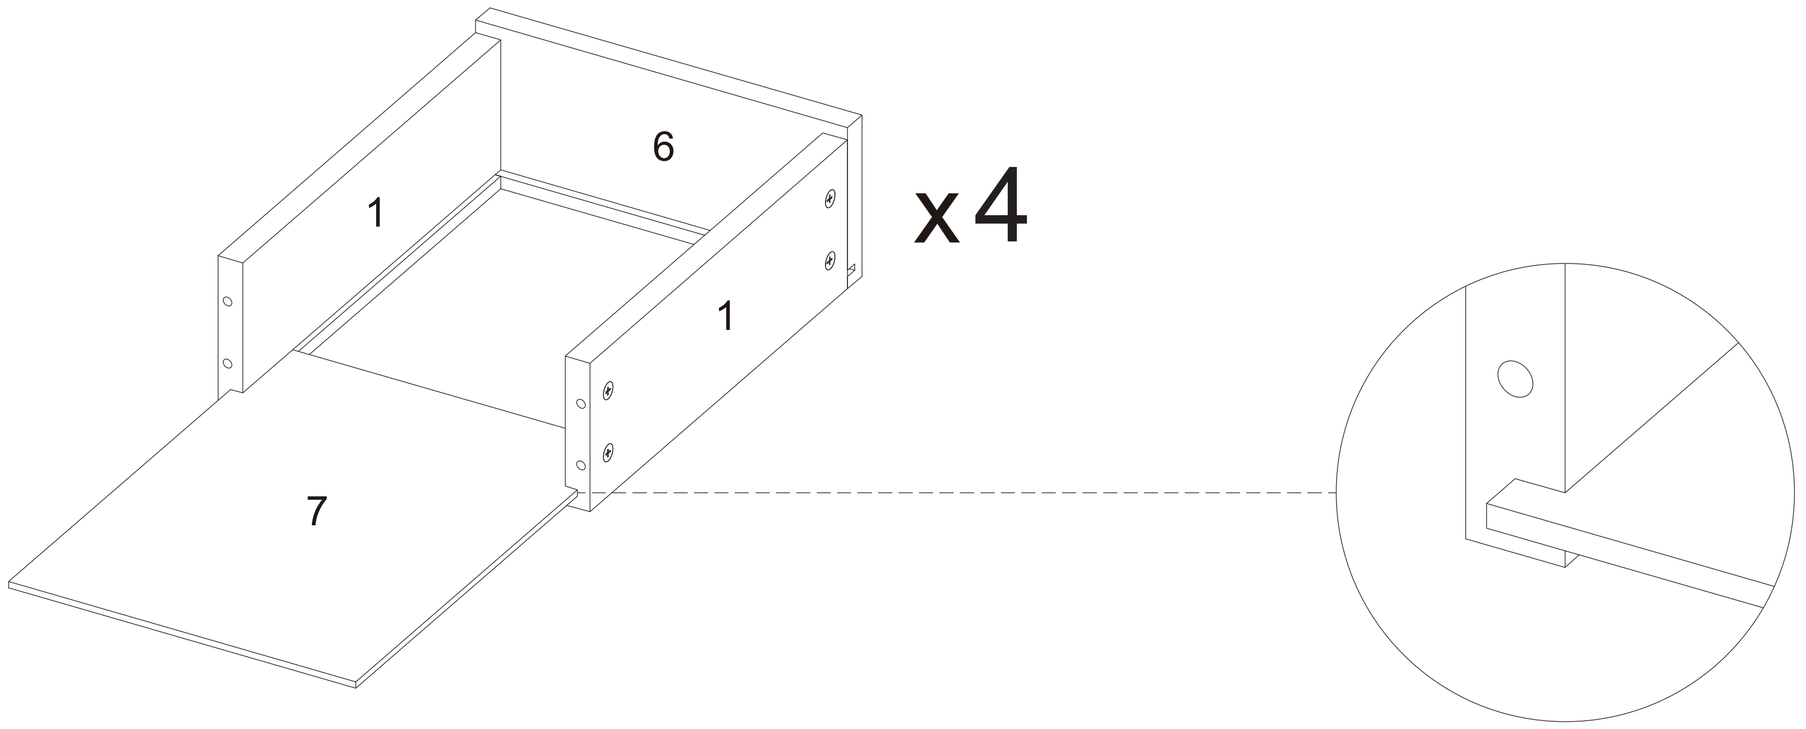


Step 10

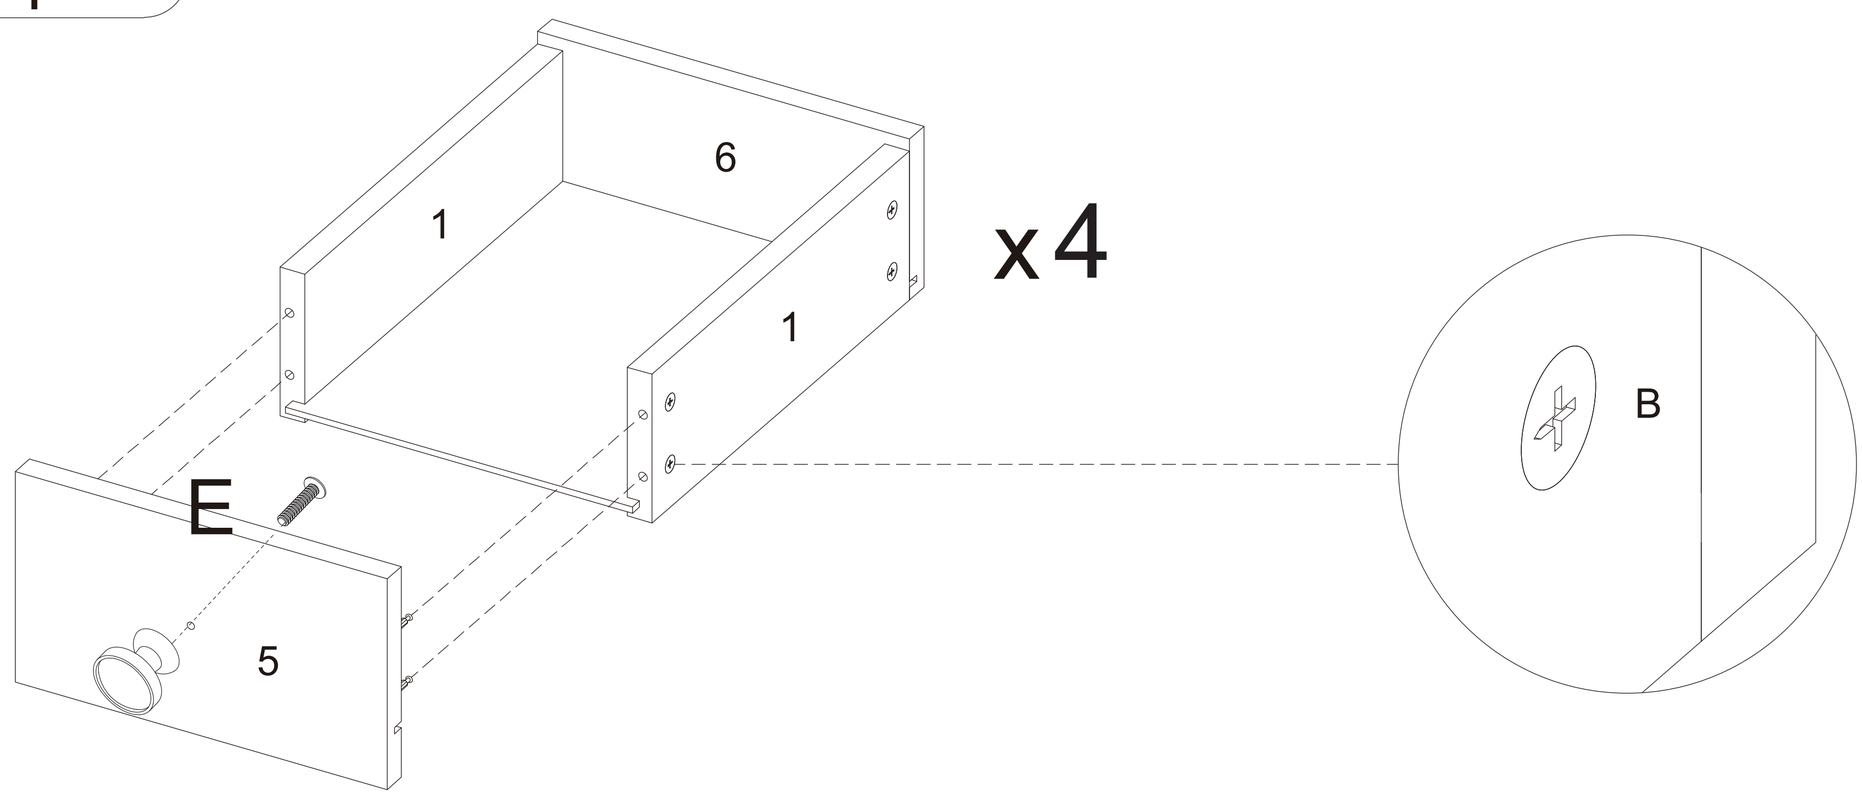


Step 11

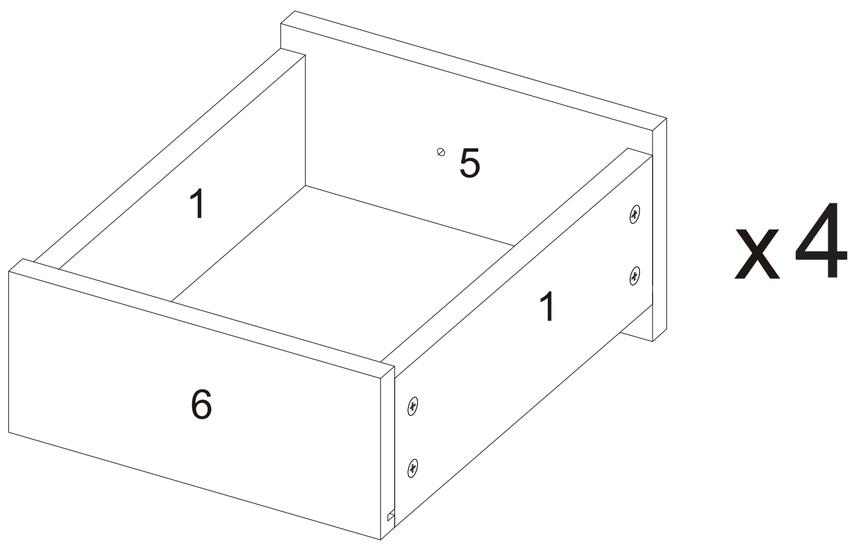


Step 12 pick up ⑧ x1, ⑨ x2, ⑩ x1, ⑫ x1, ⑪ x1

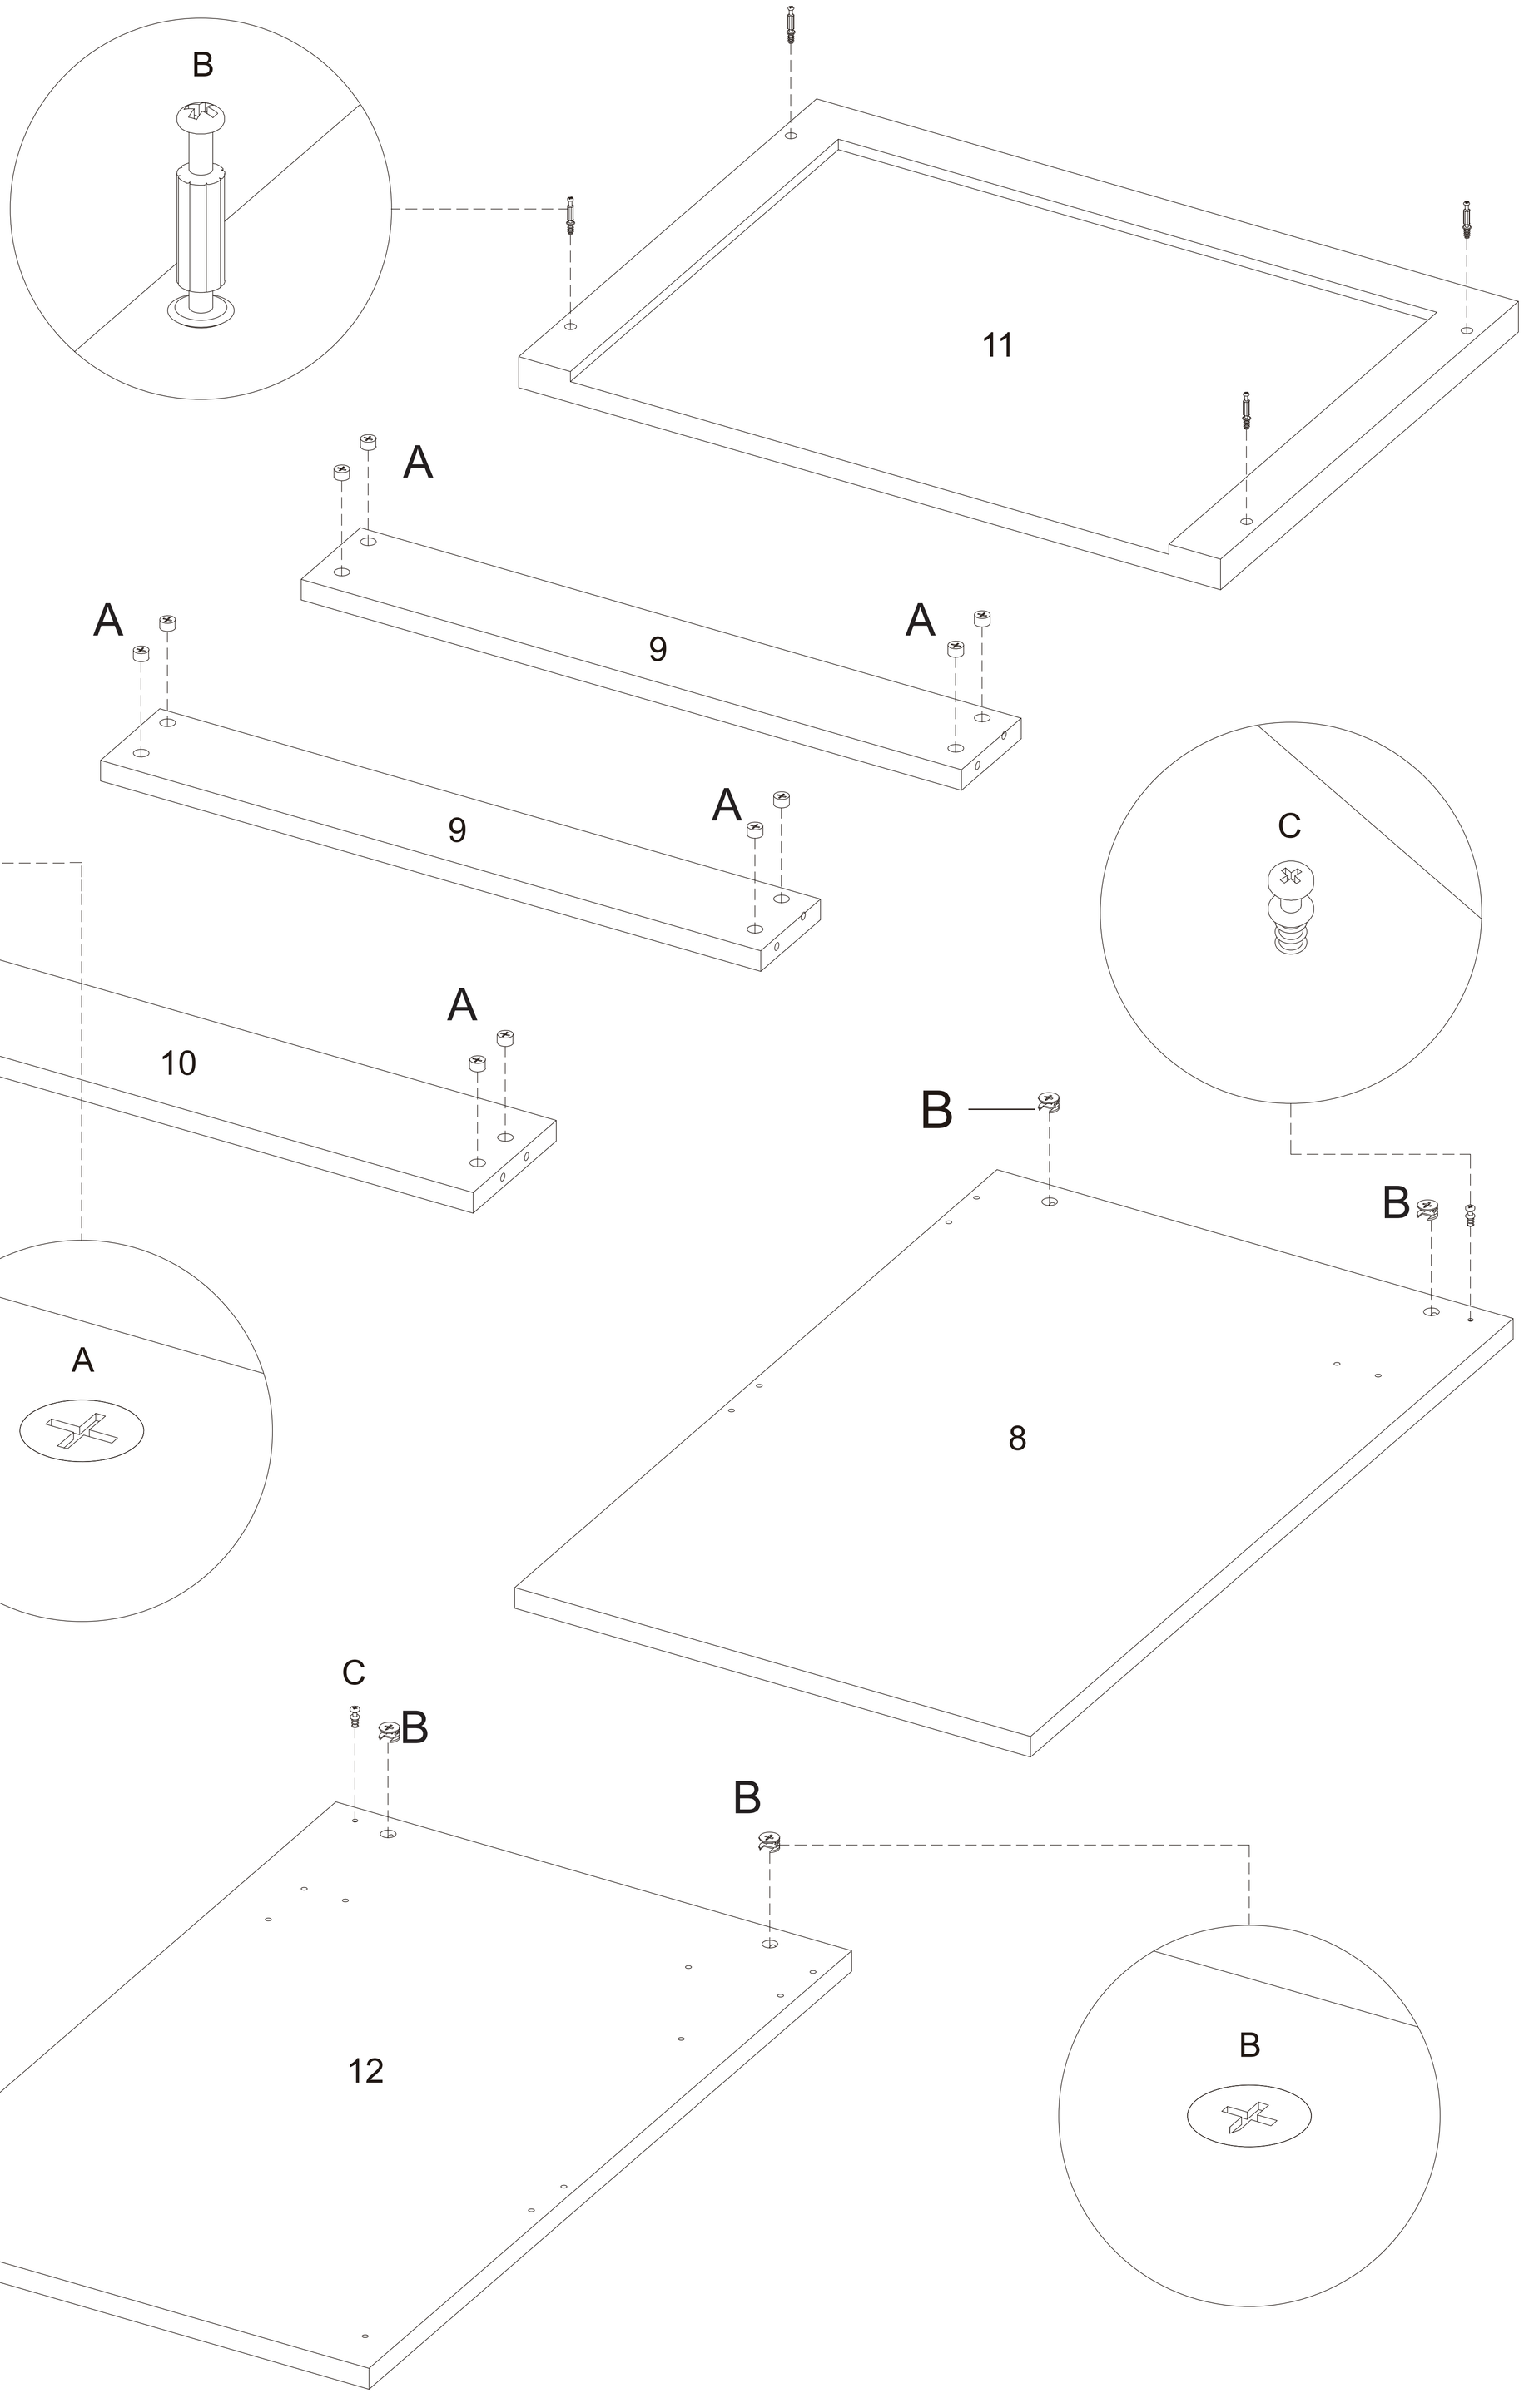


Step 13

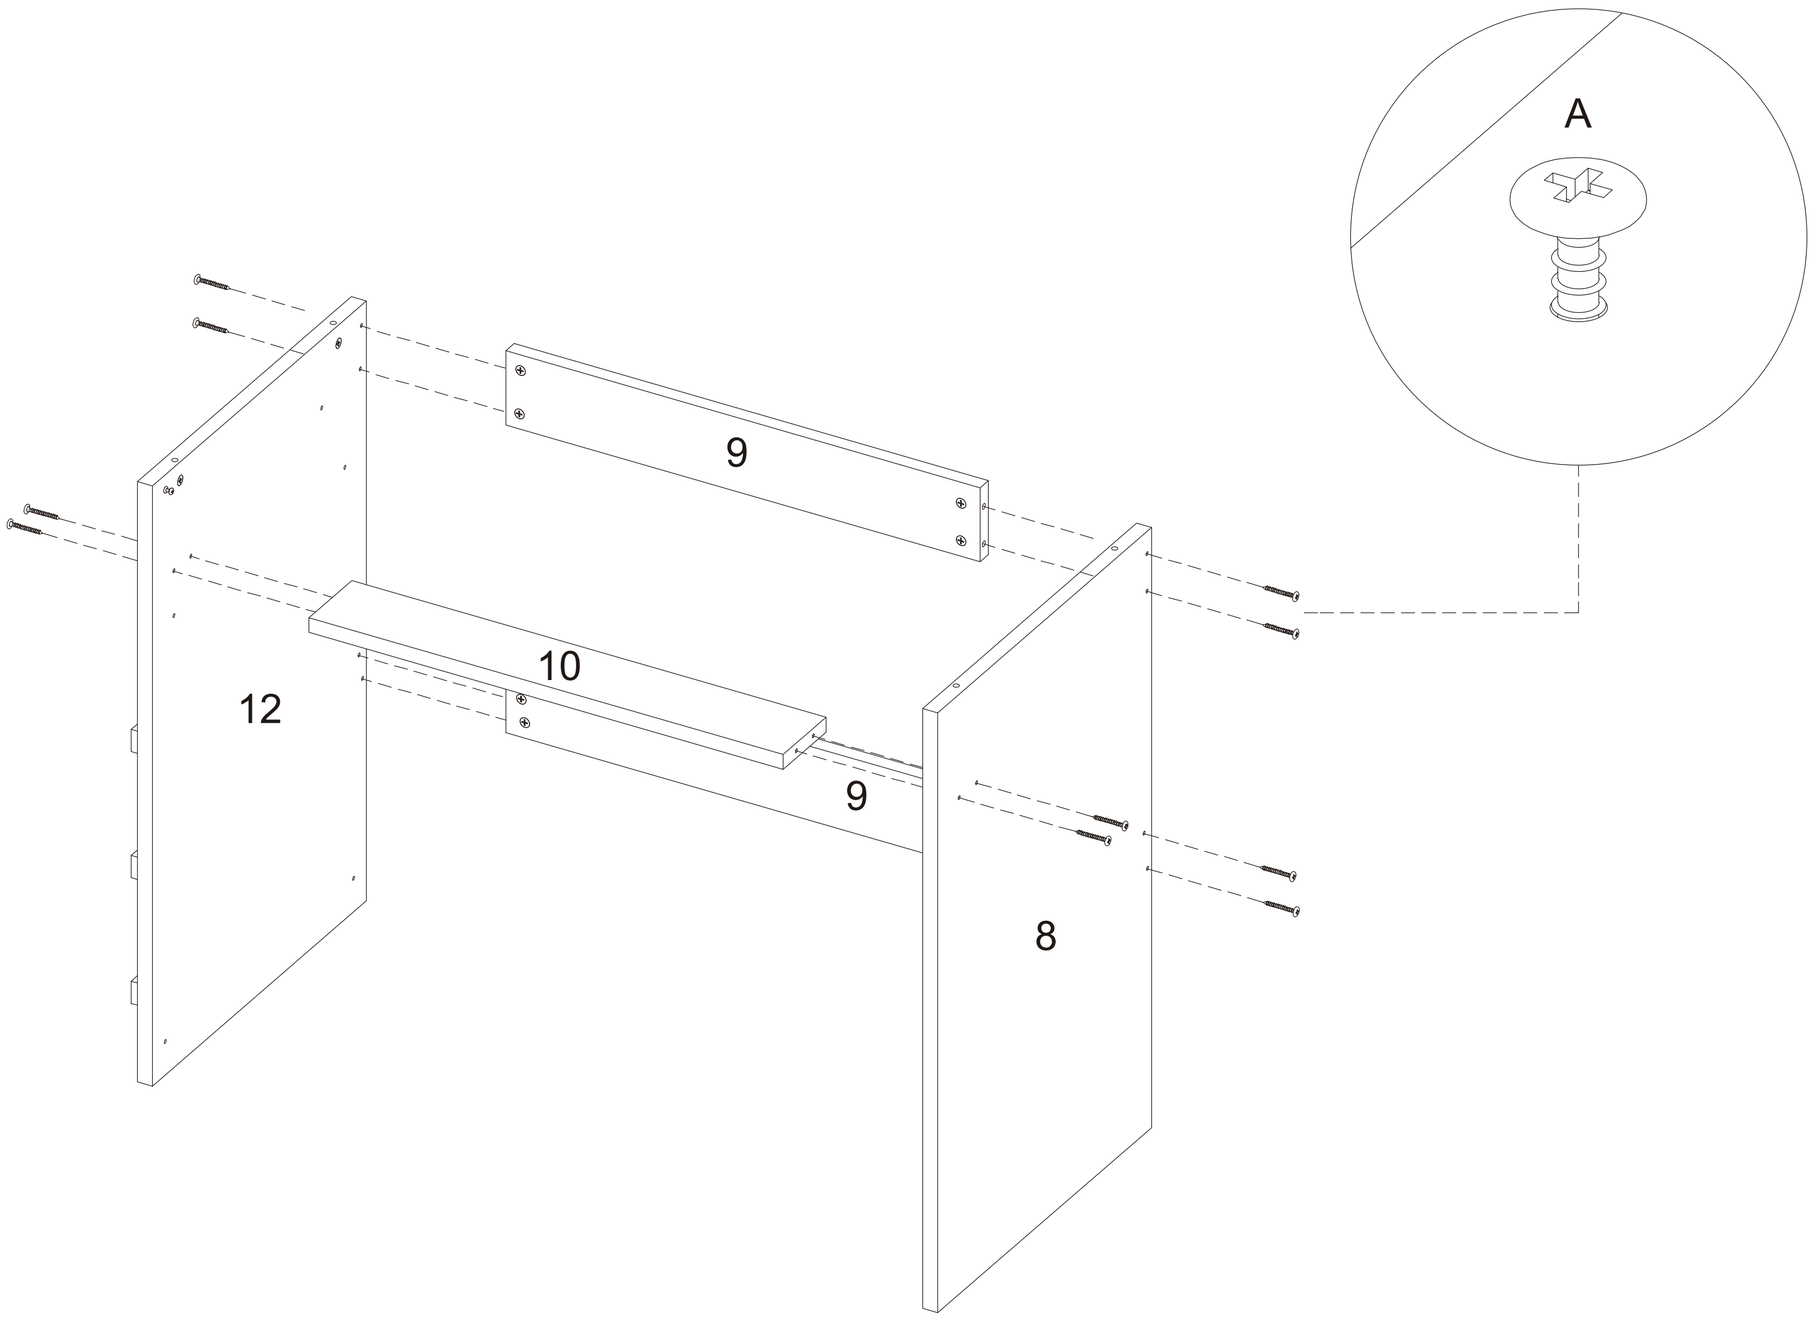


Step 14

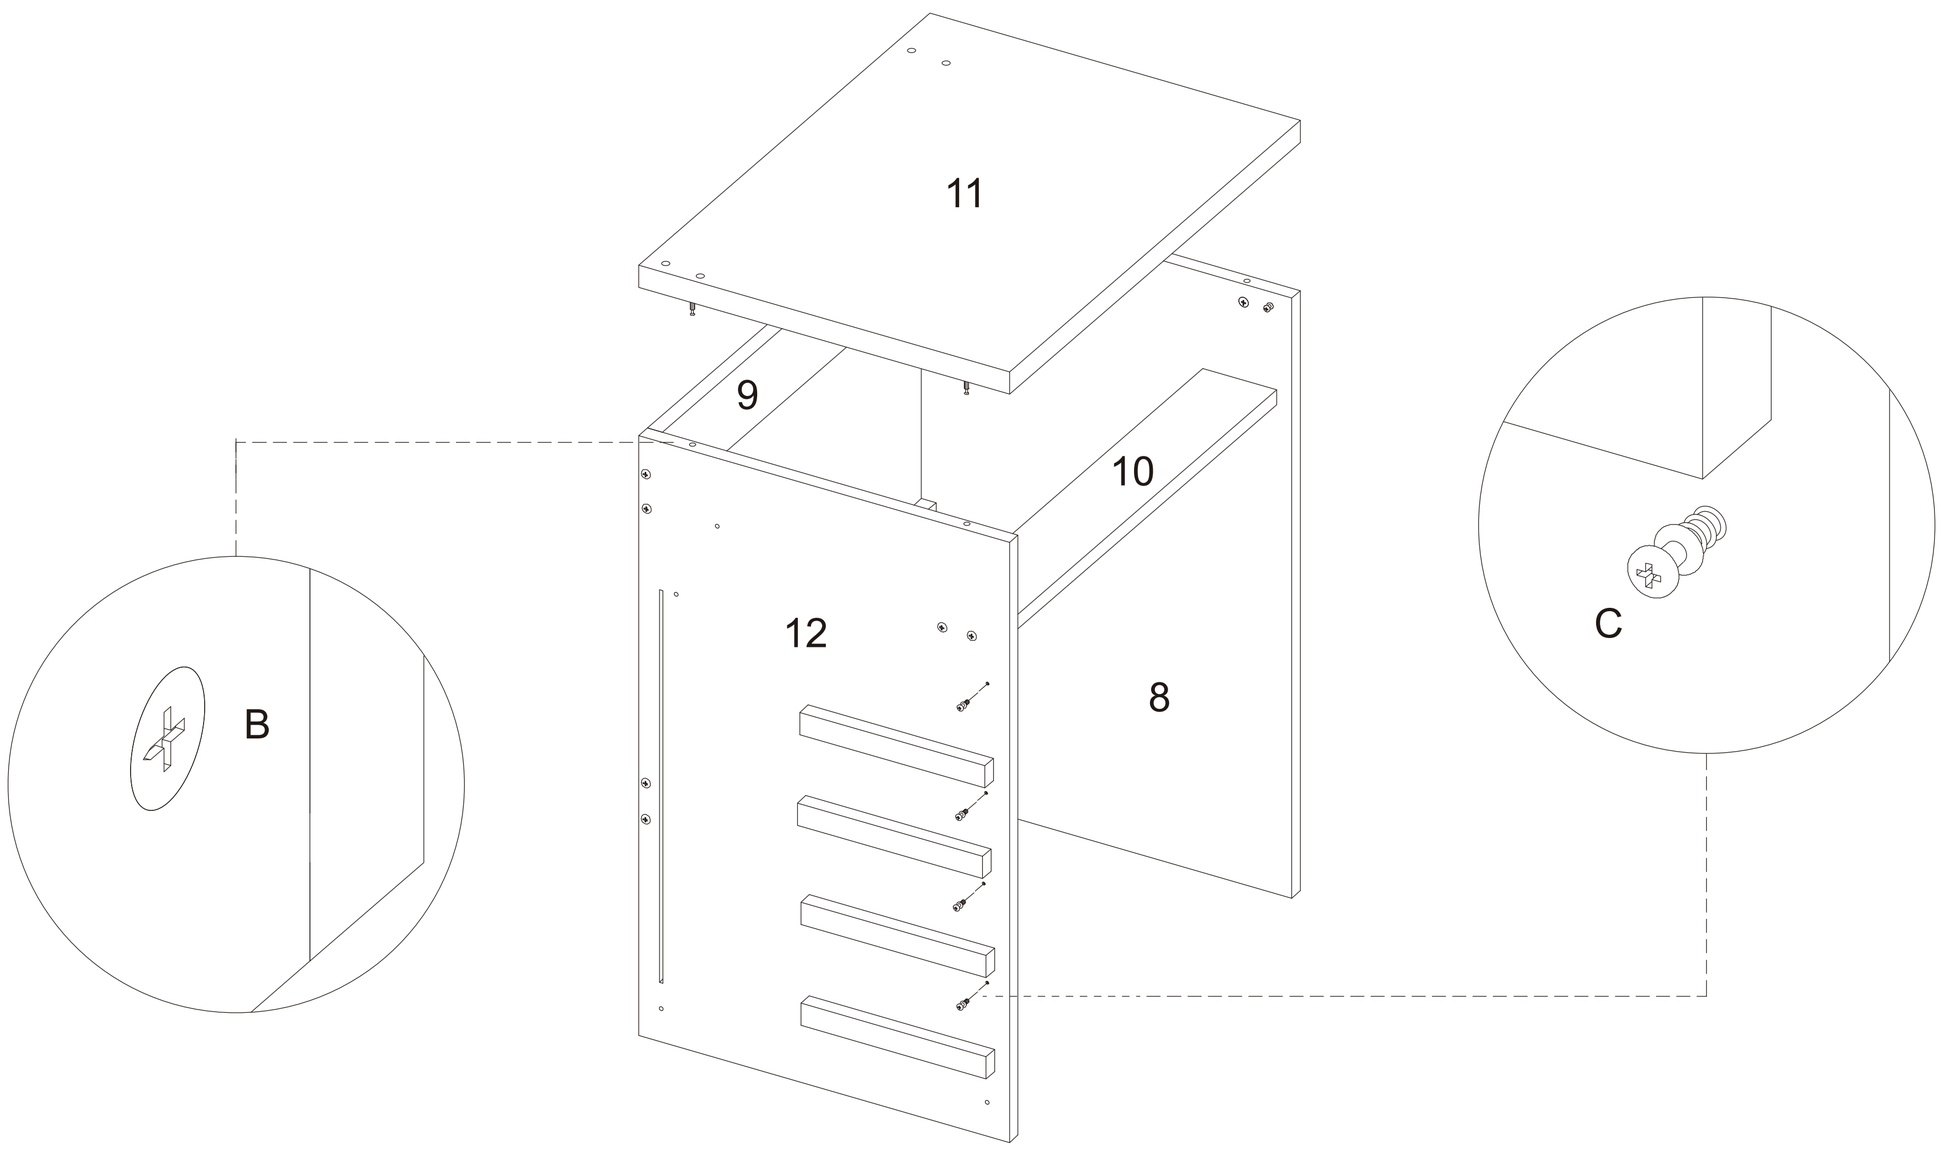


Step 15 pick up (13) x1, (14) x1, (15) x1, (16) x1, (17) x1

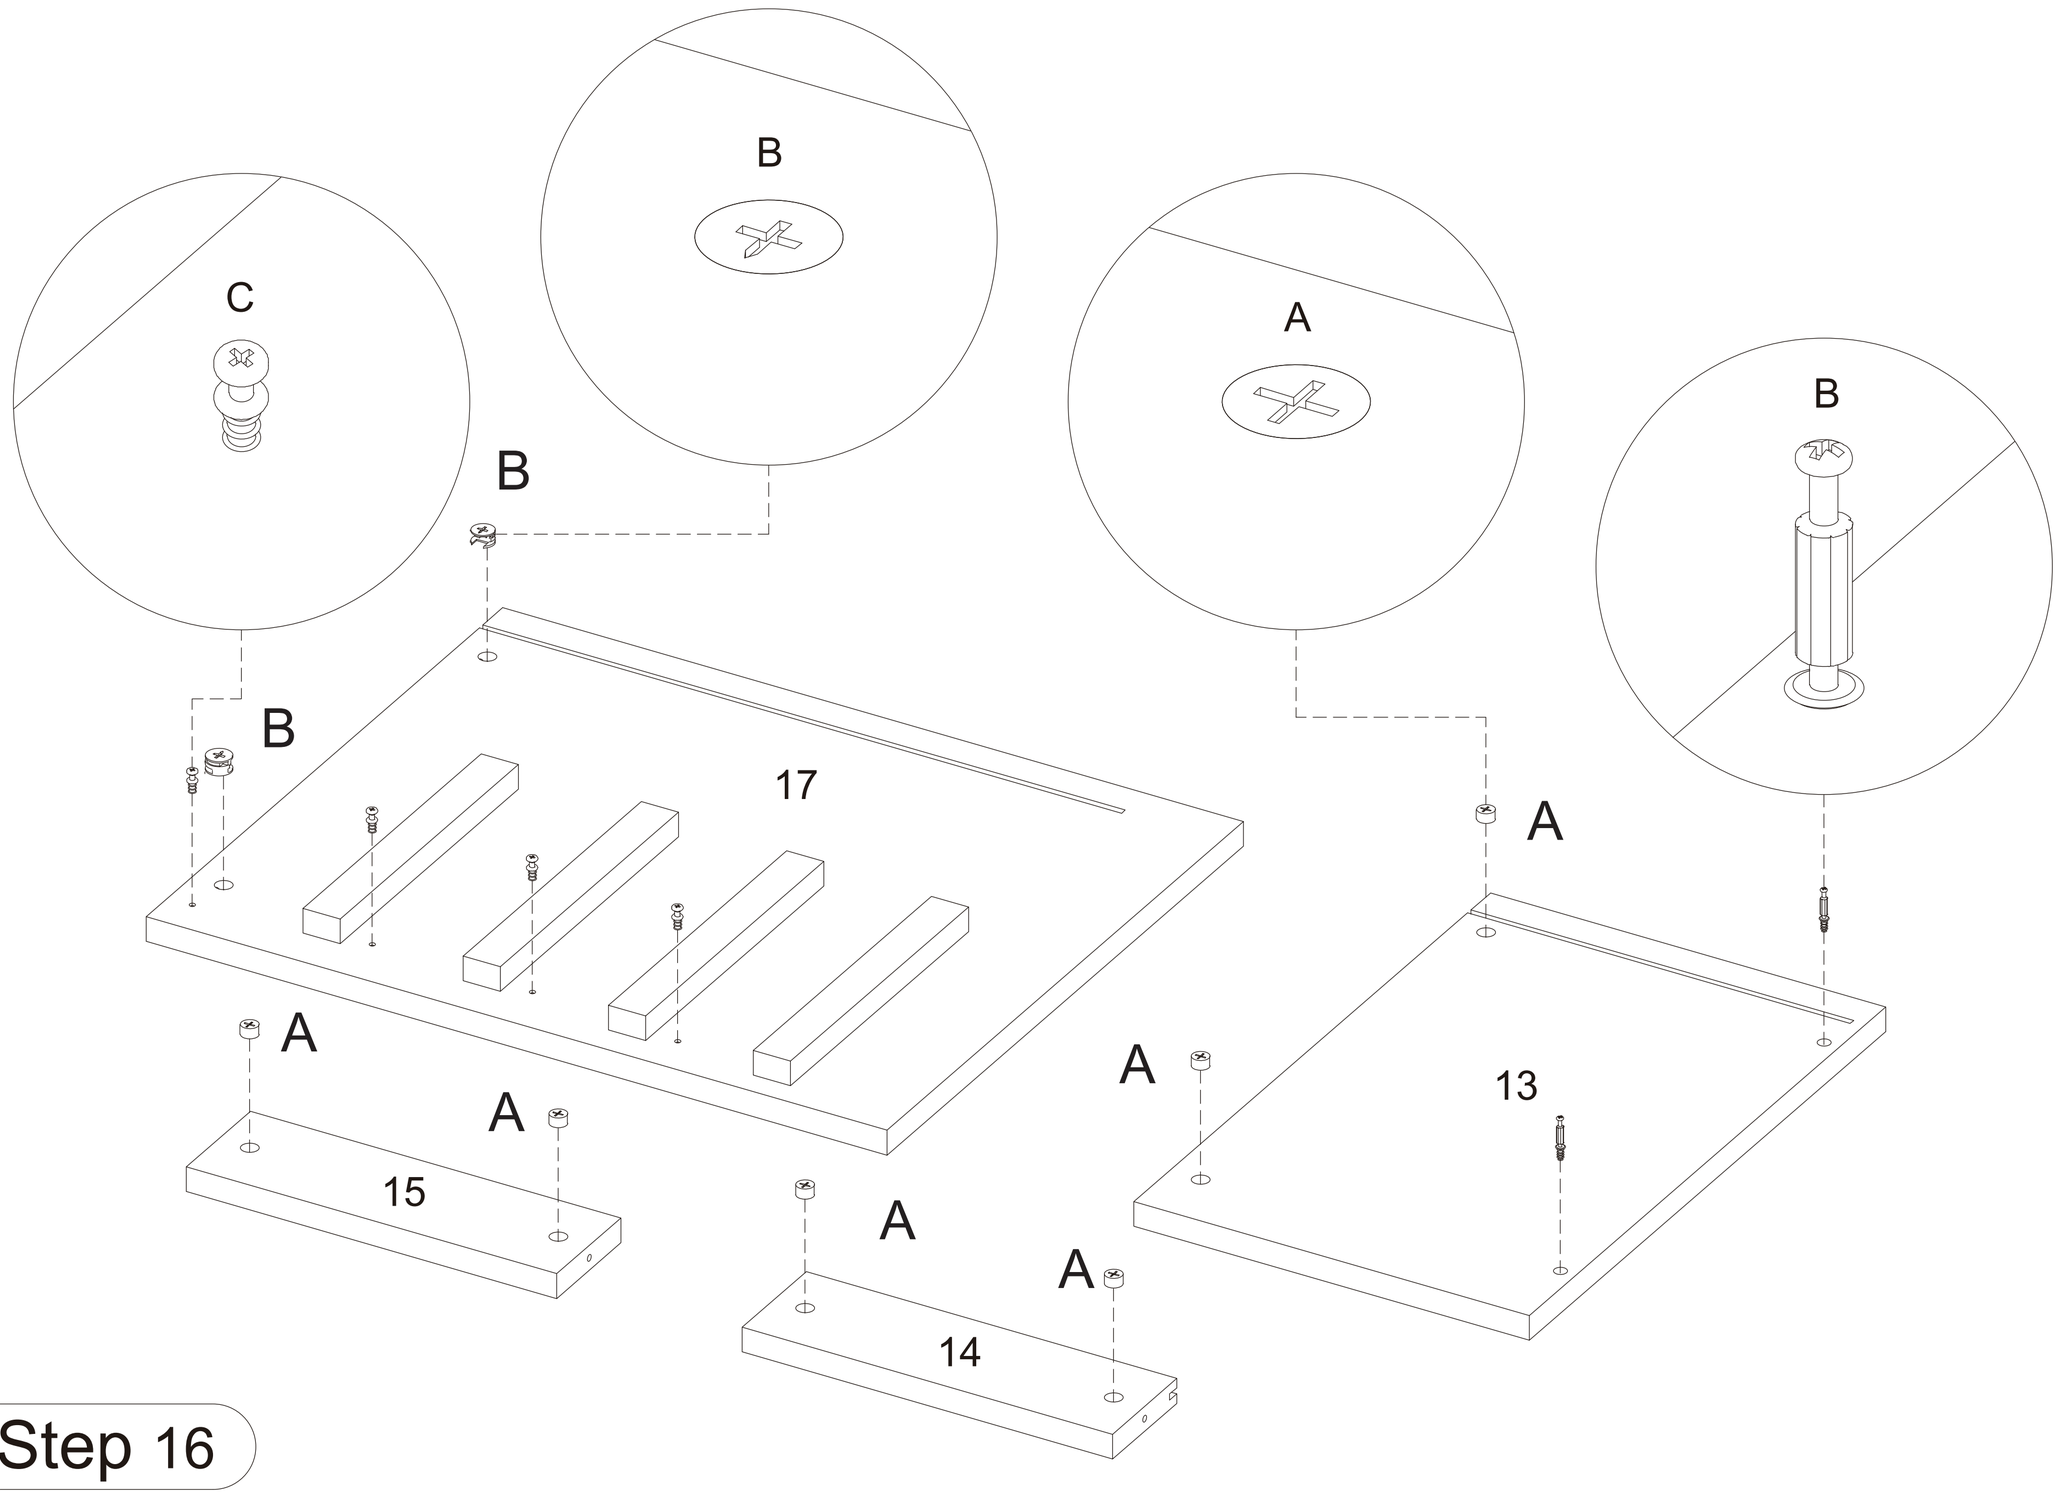


Step 16

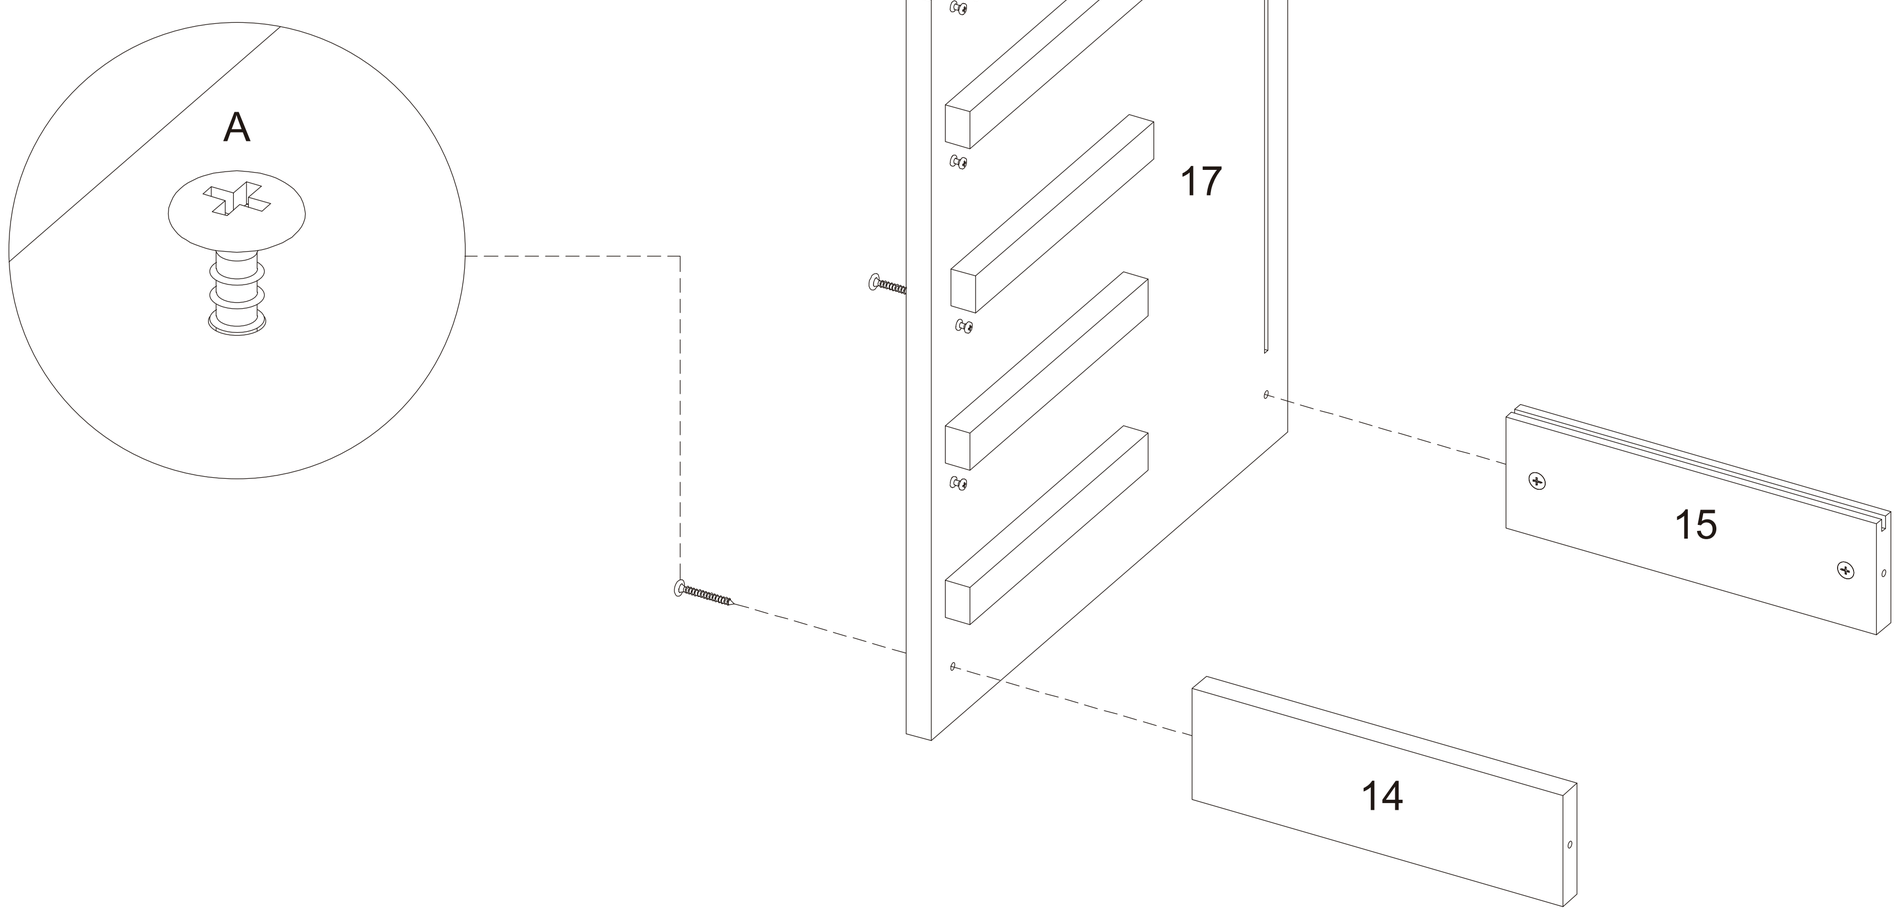


Step 17

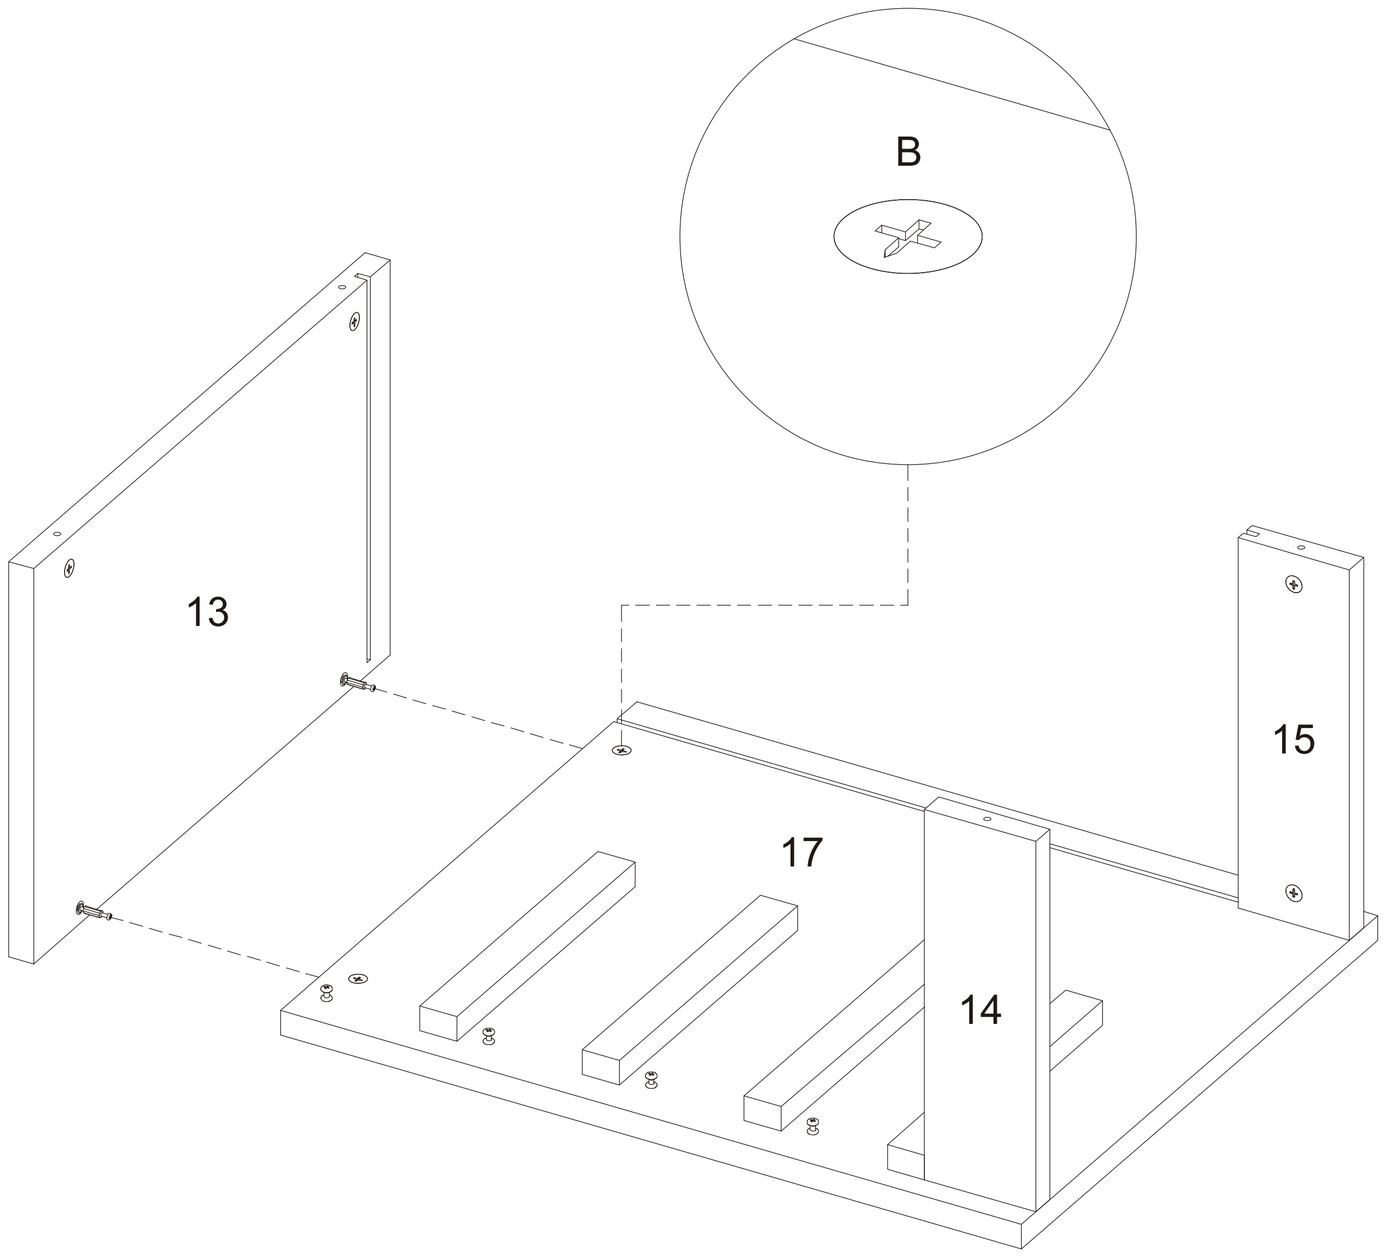


Step 18

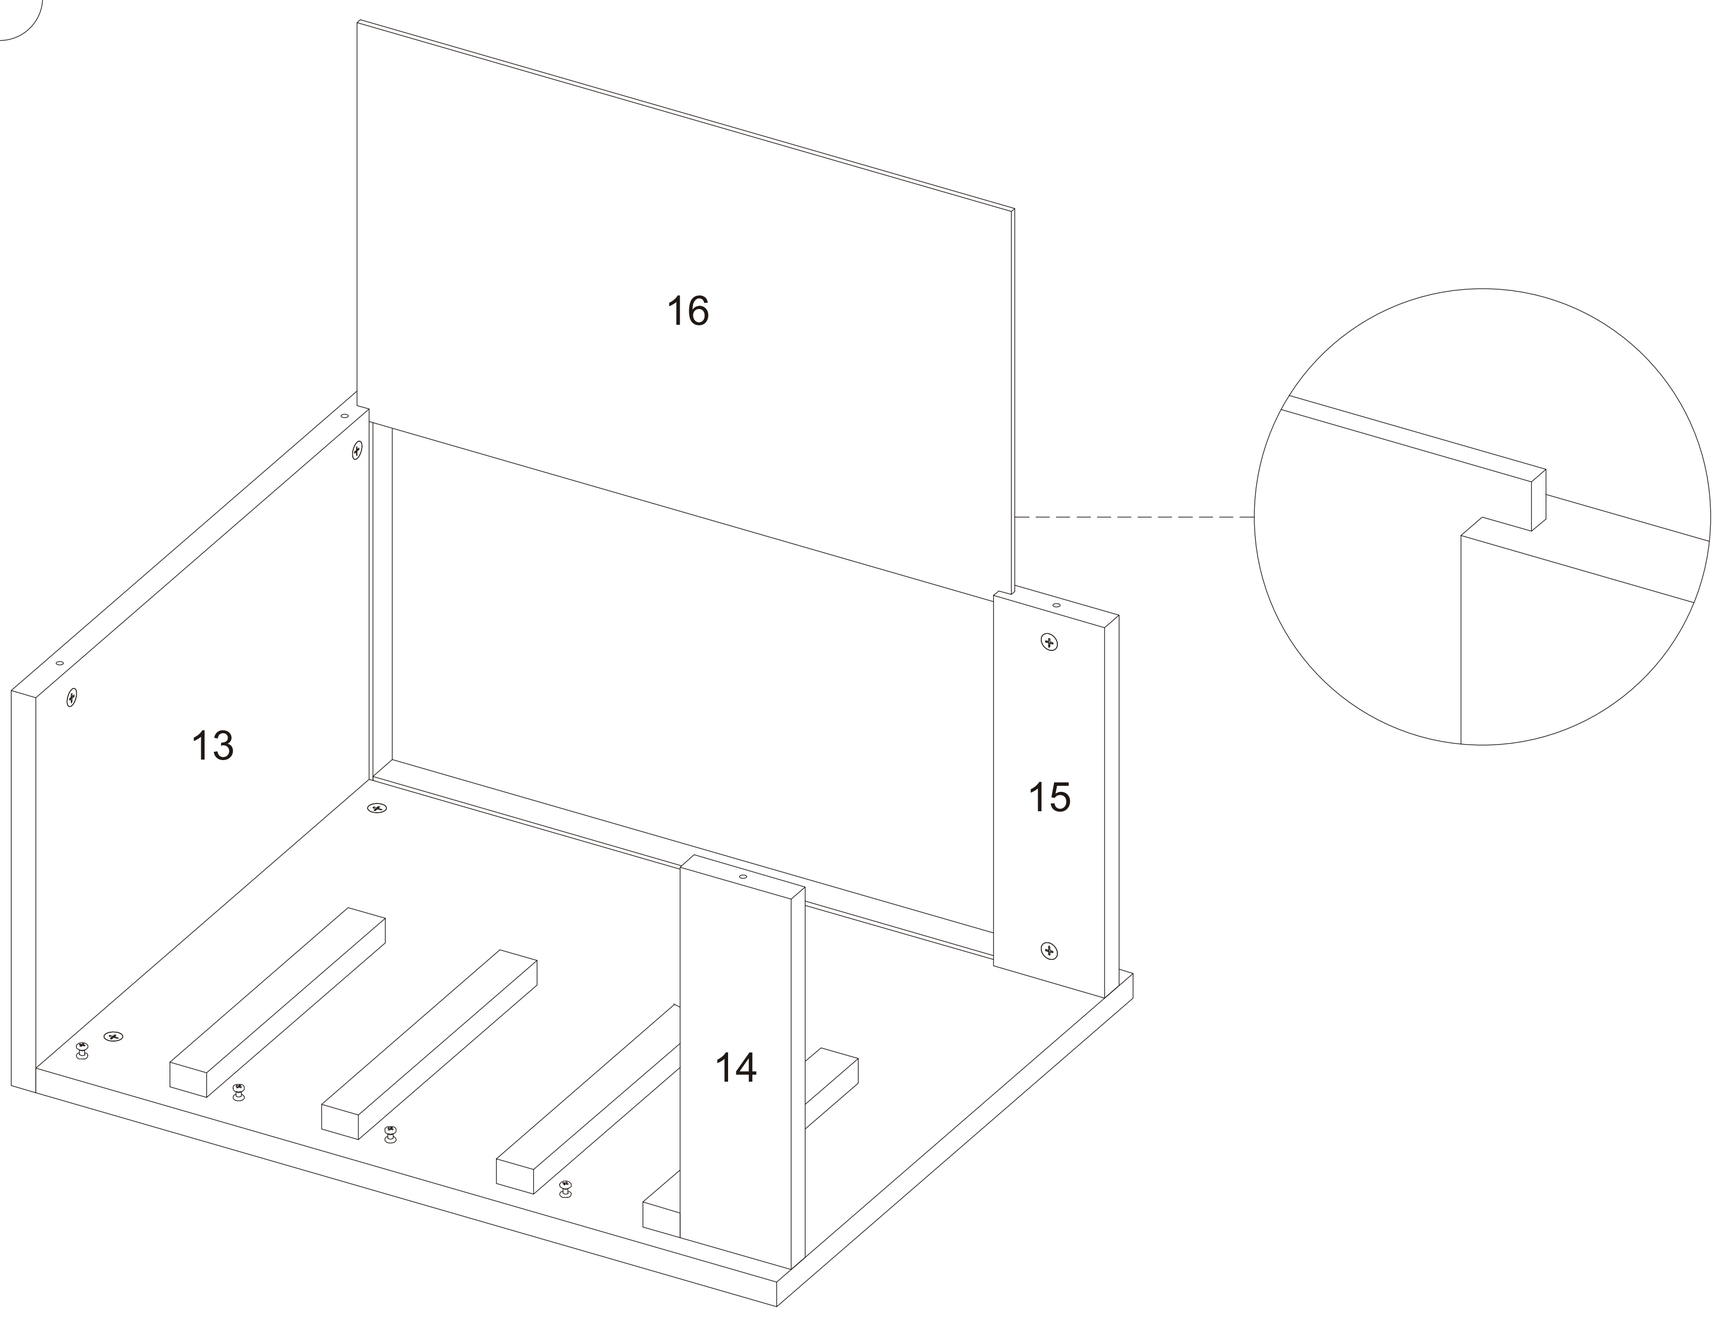


Step 19

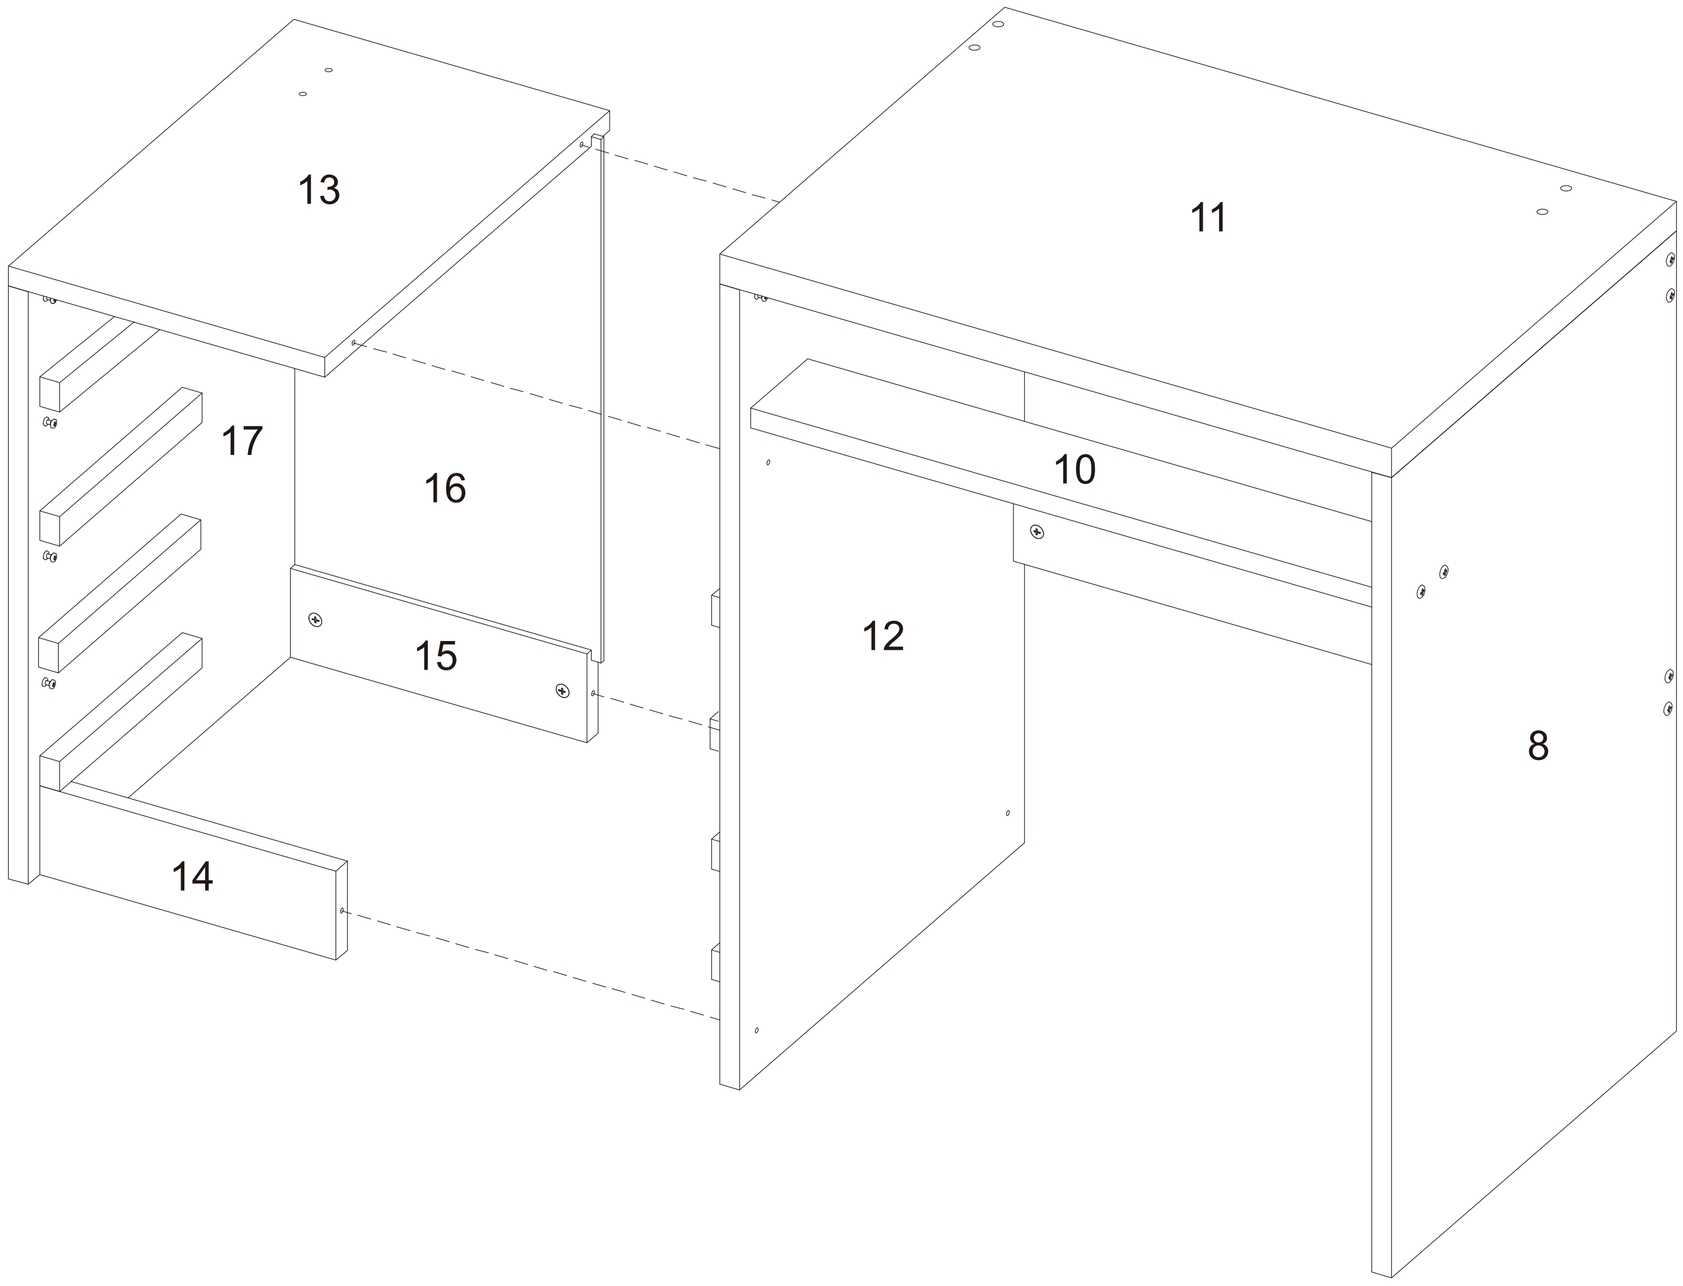


Step 20

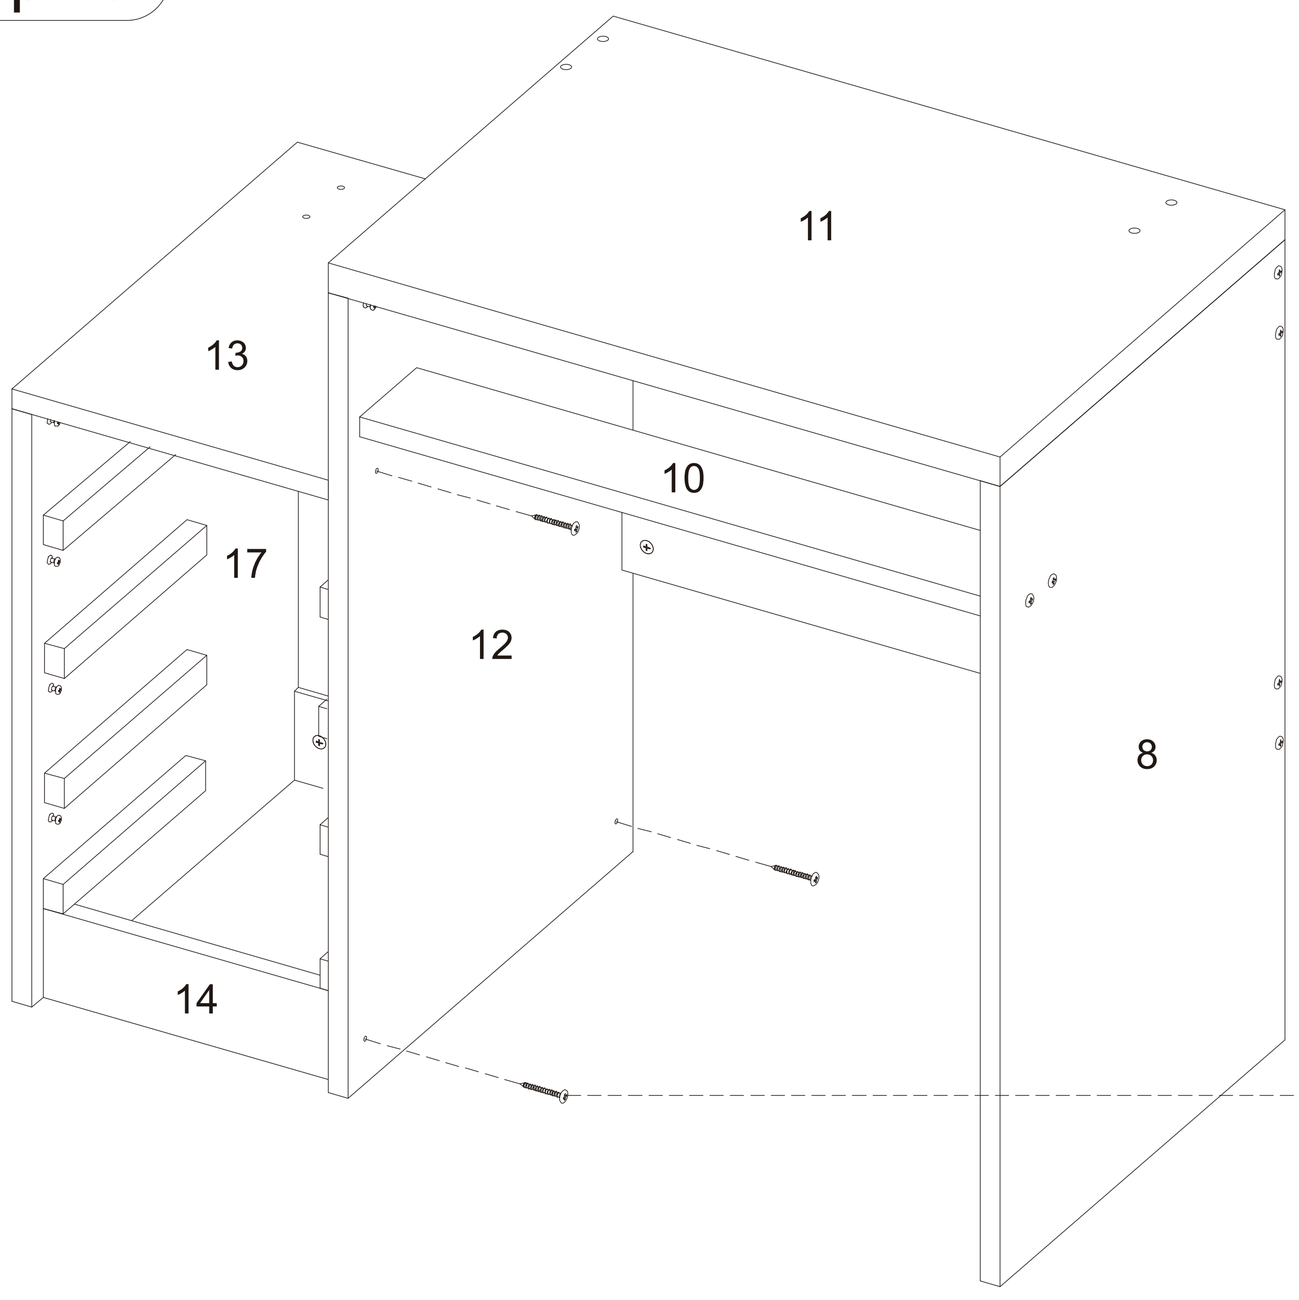


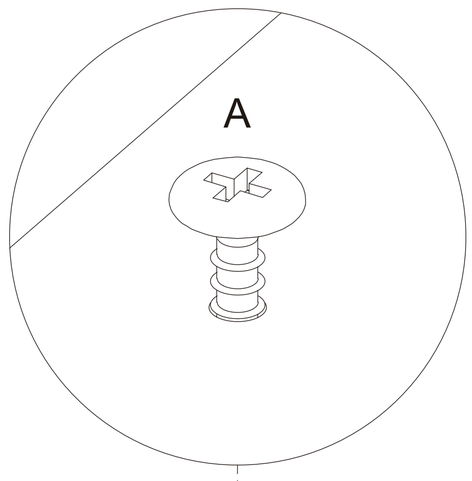


Step 21 pick up ⑱ x2, ⑲ x1, 20 x1, ㉑ x1

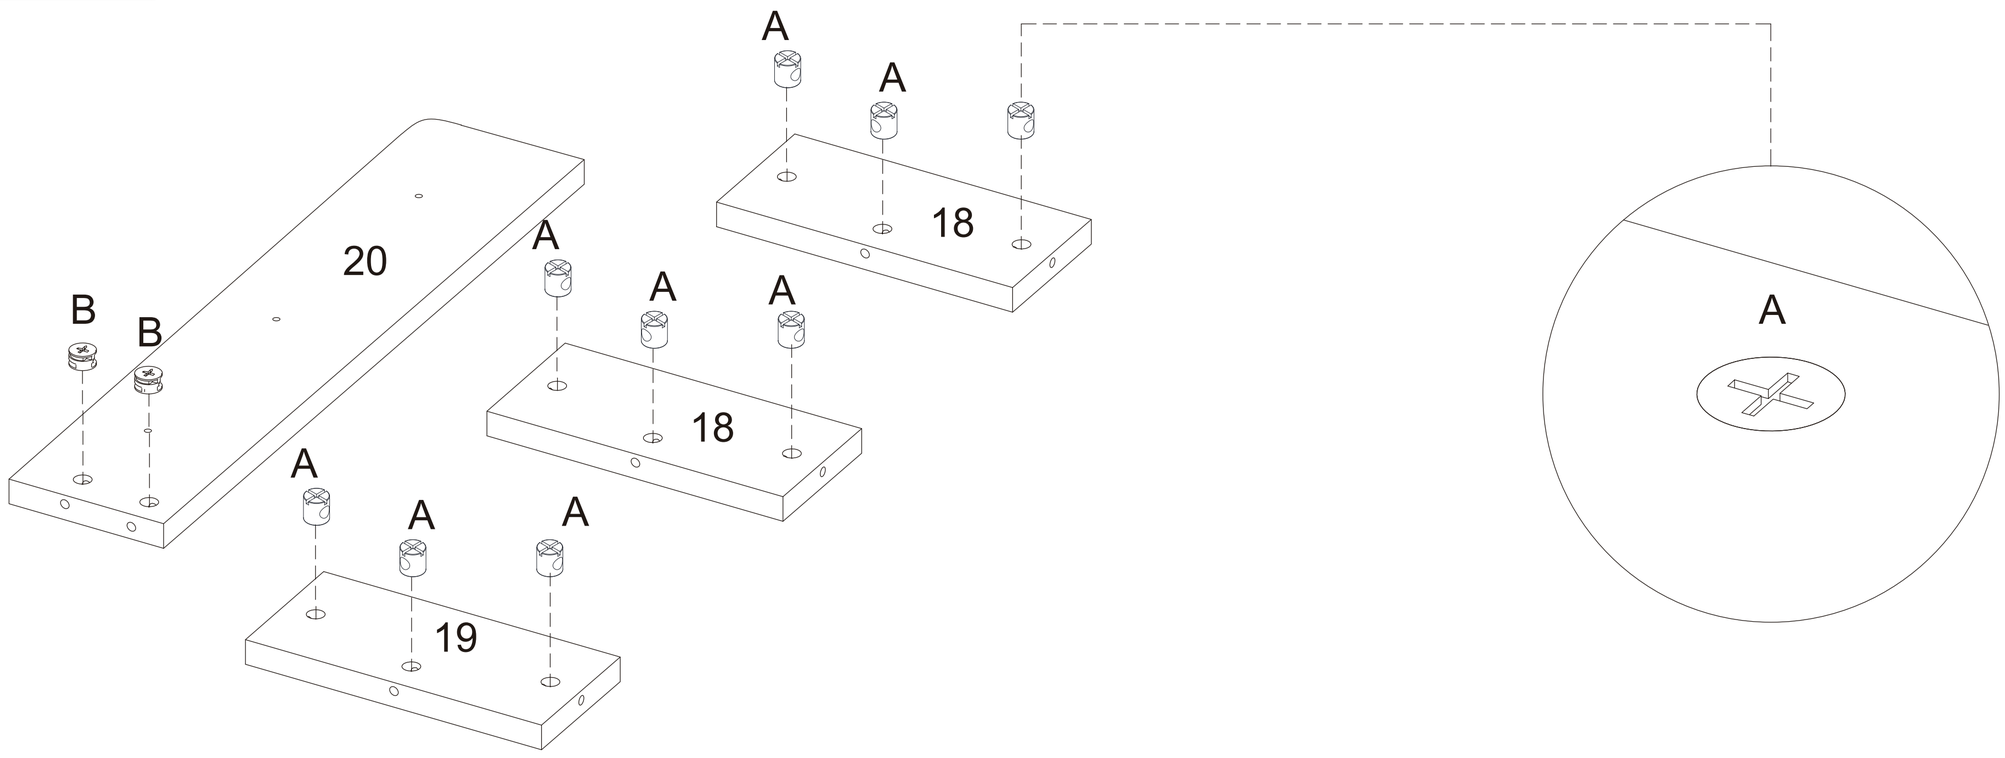


Step 22

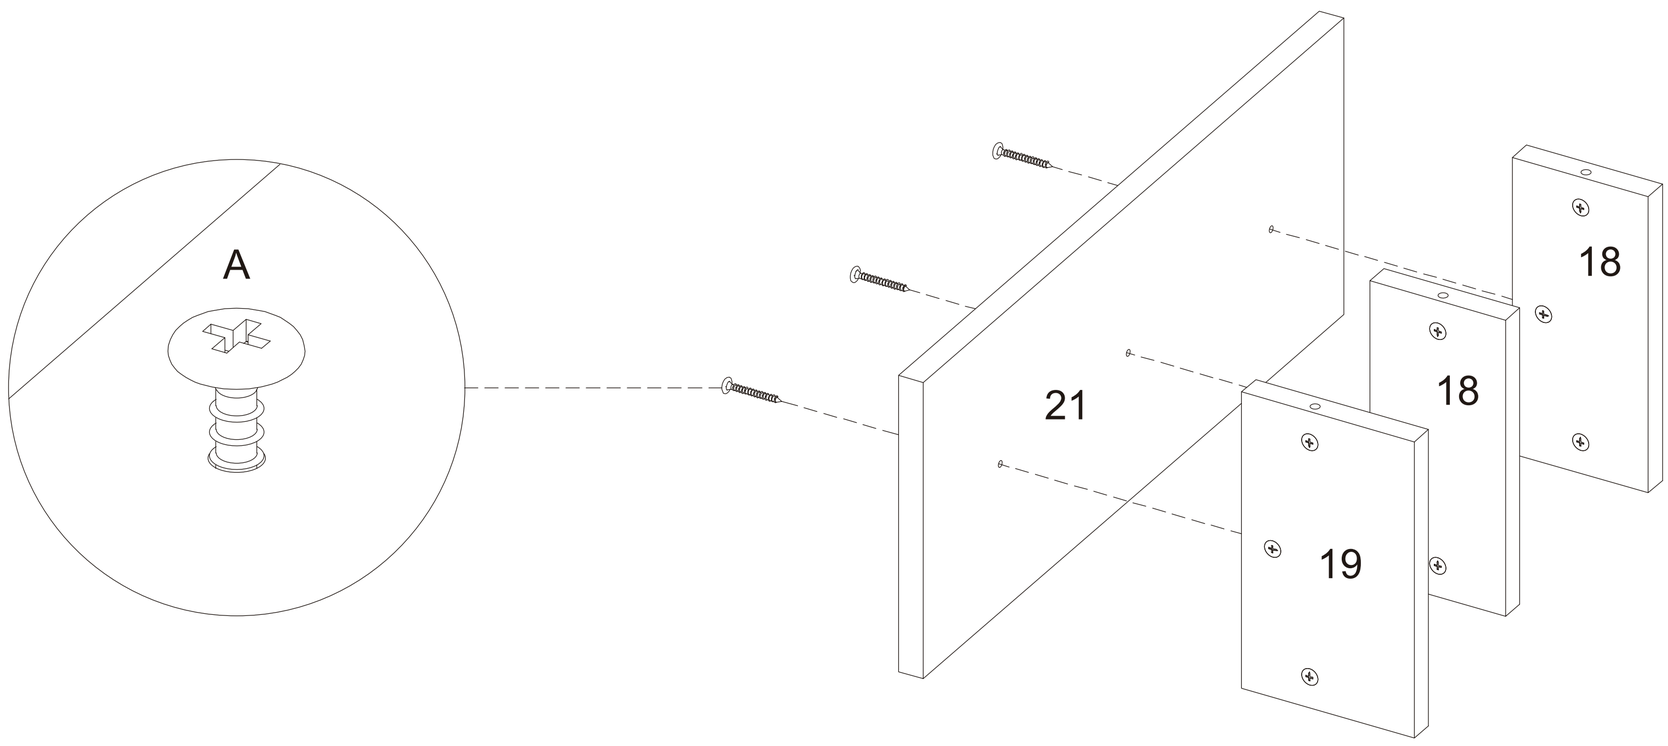


Step 23

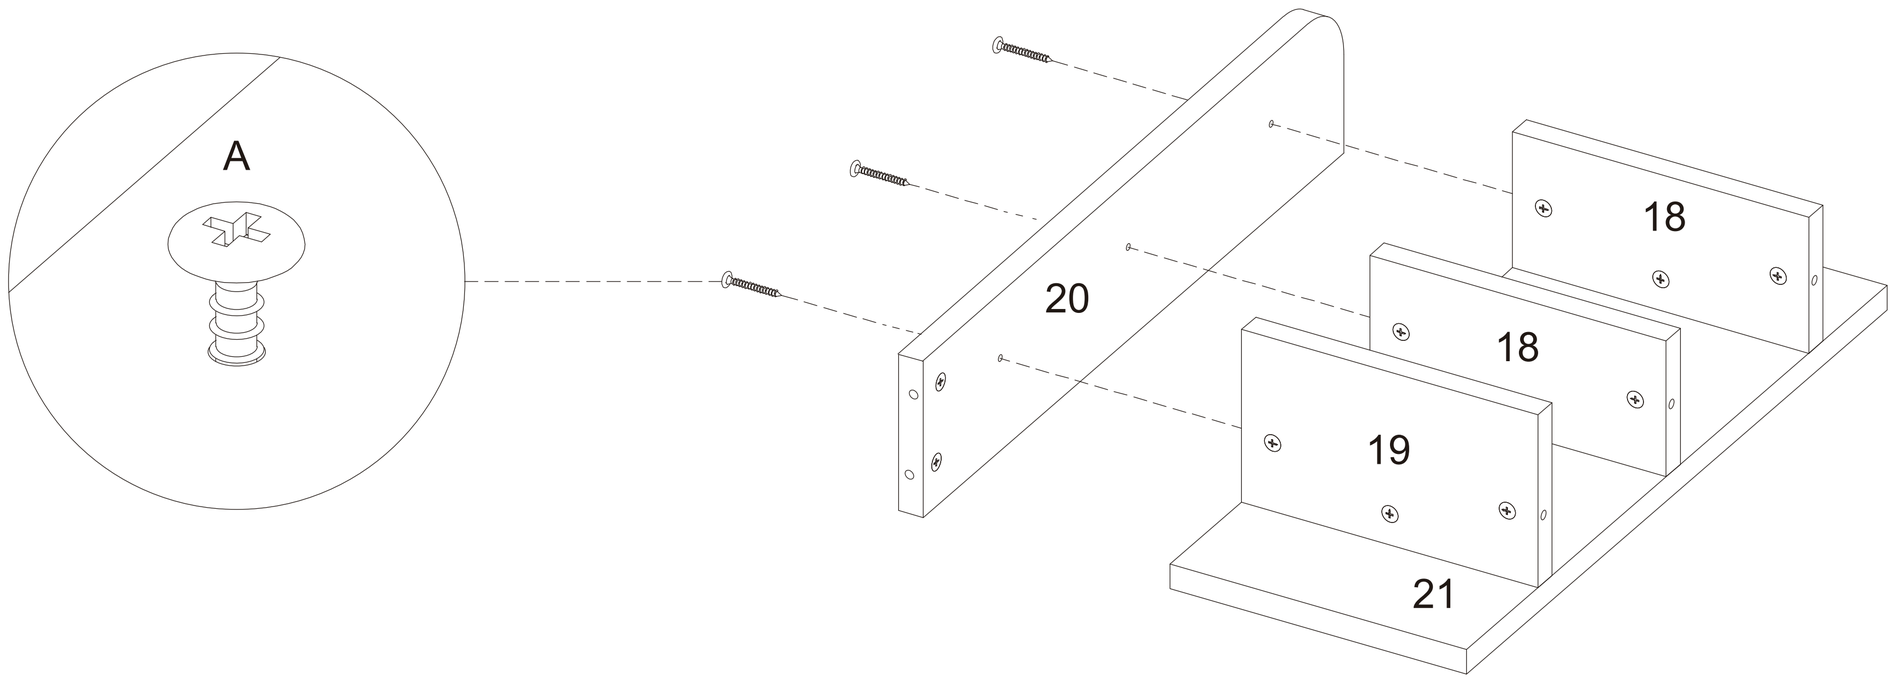


Step 24 pick up (22) x1, (23) x2, (24) x2, (25) x1, (26) x1, (27) x1

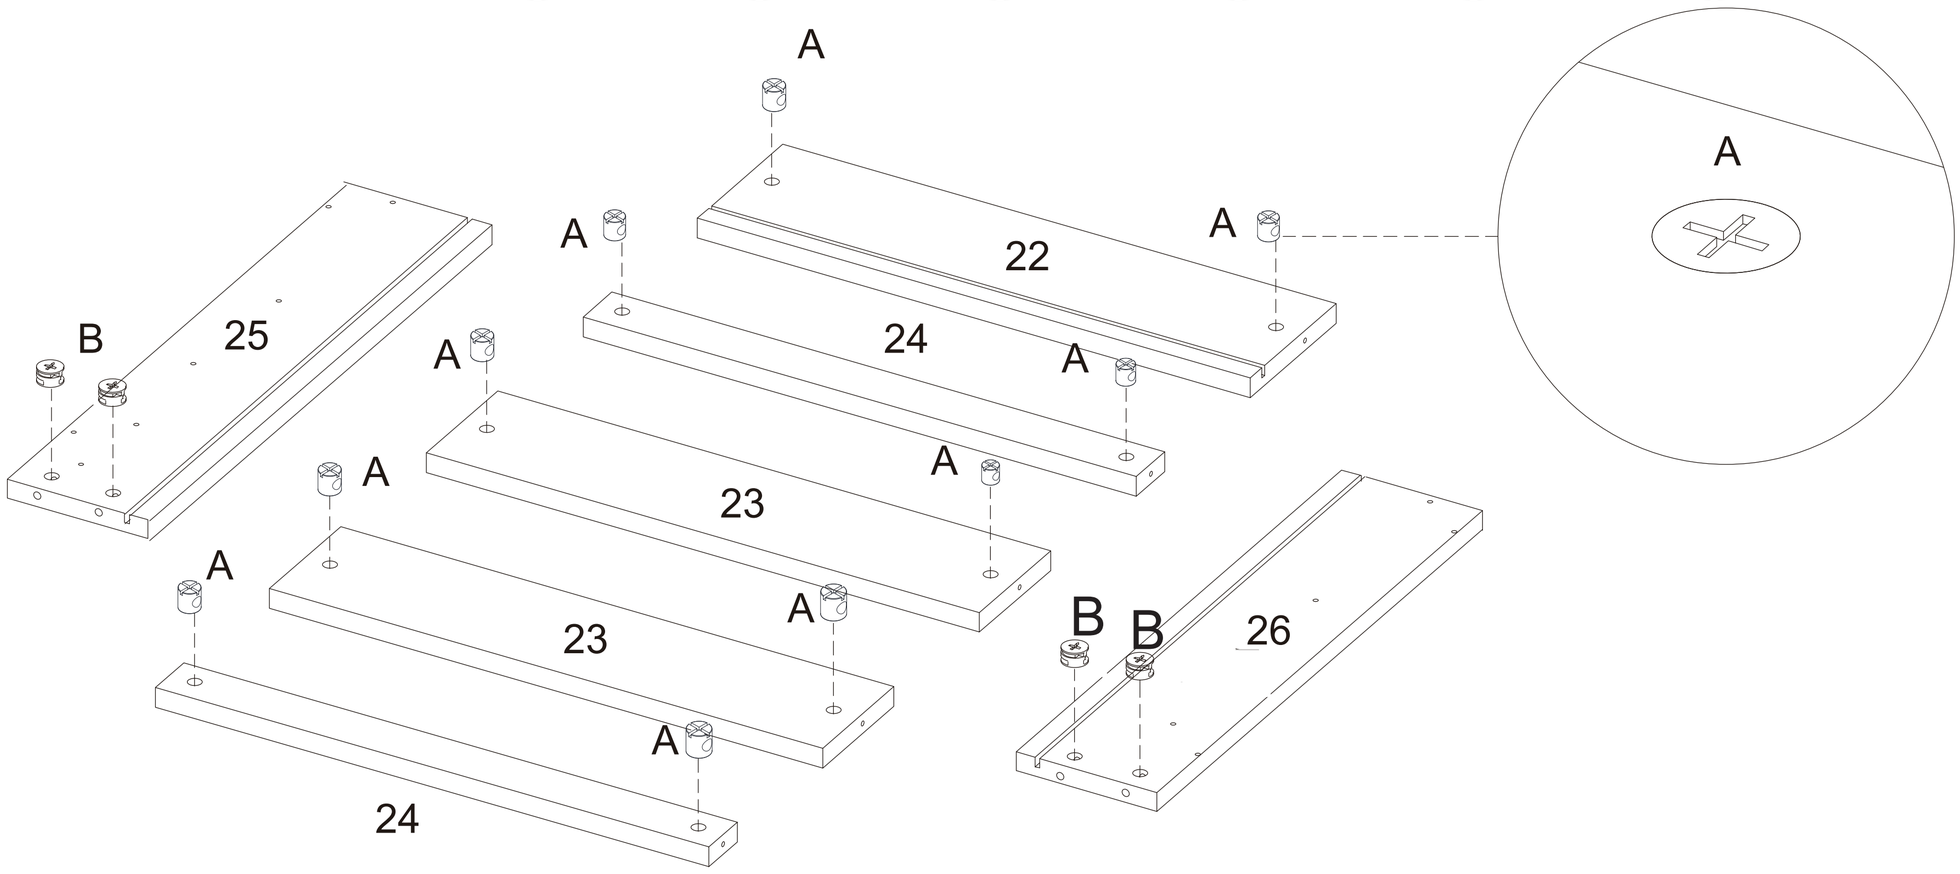


Step 25

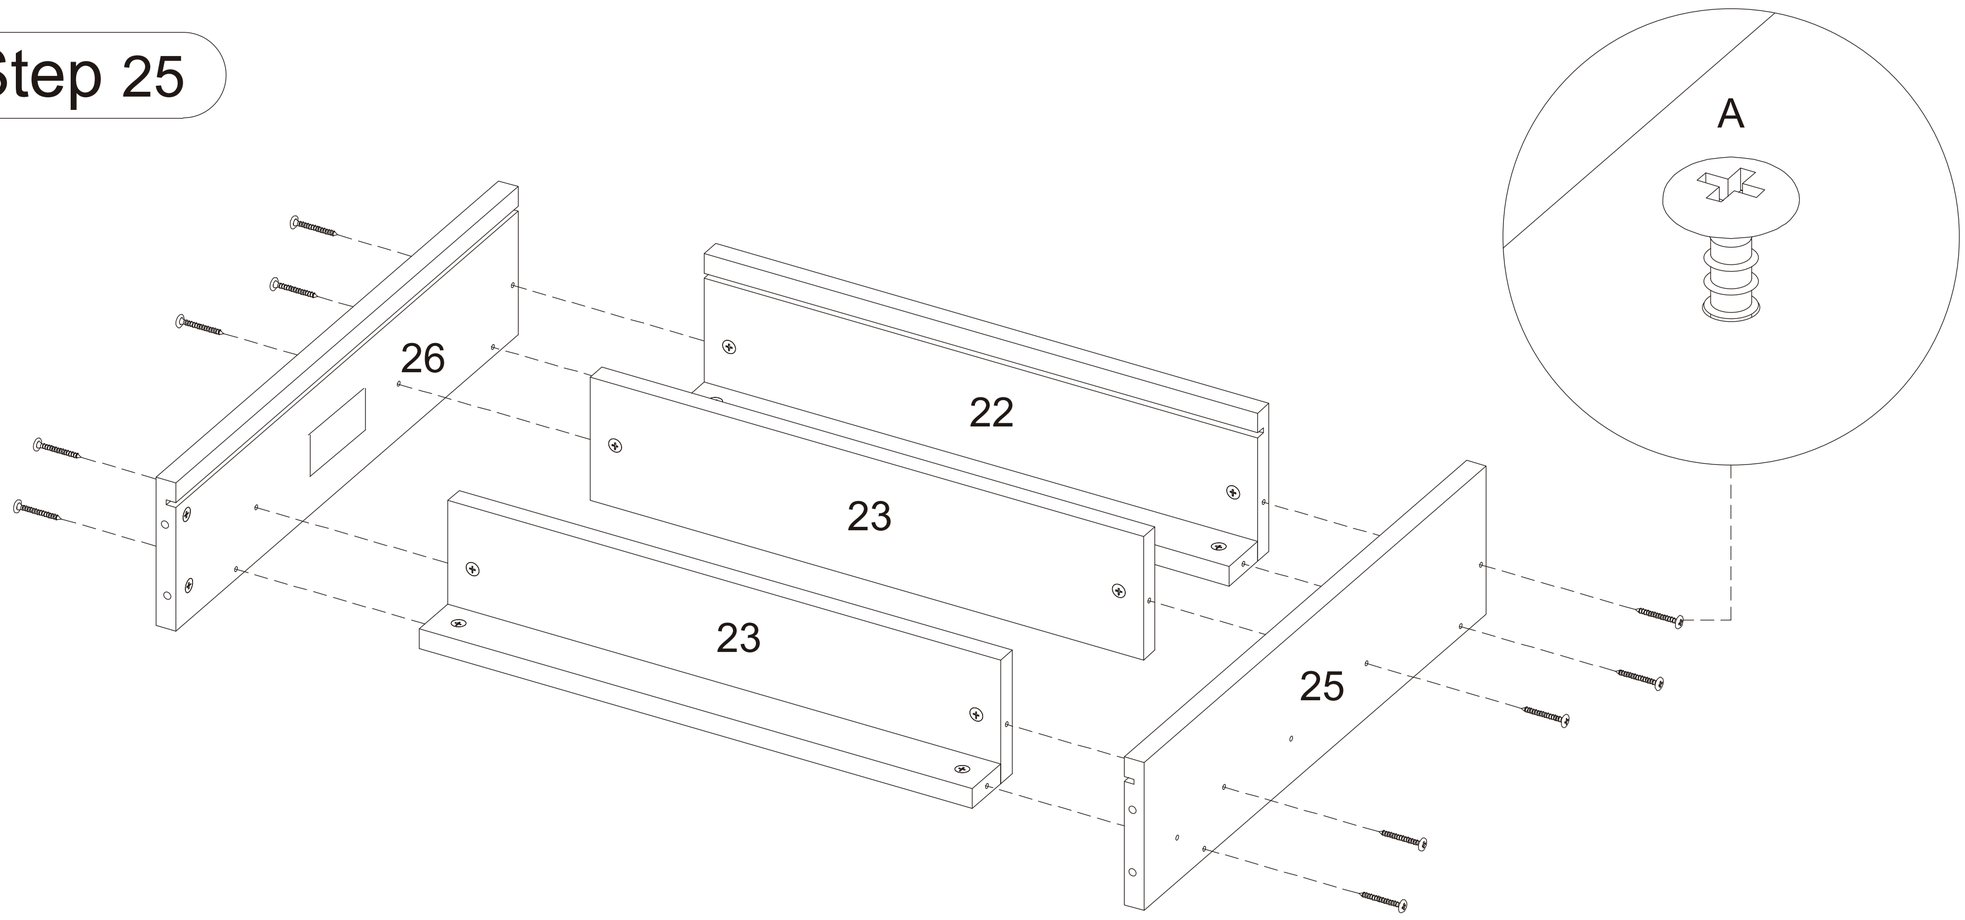


Step 26

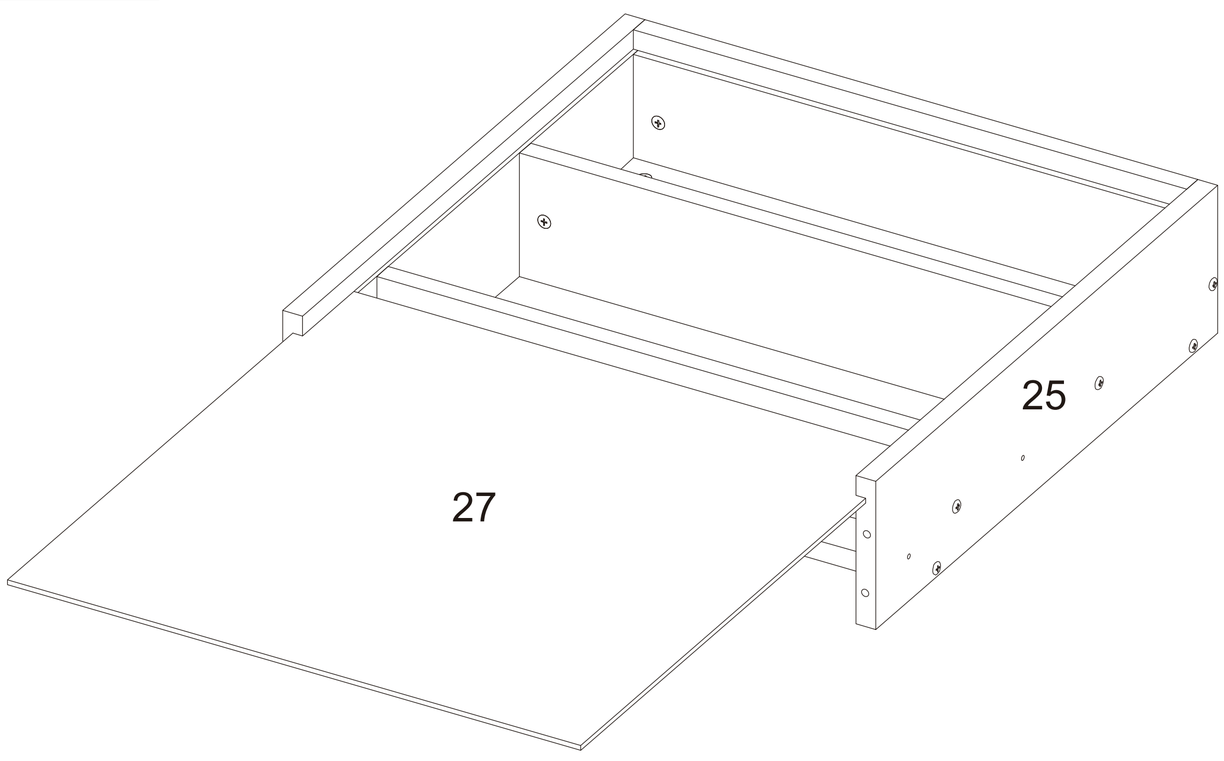


Step 27

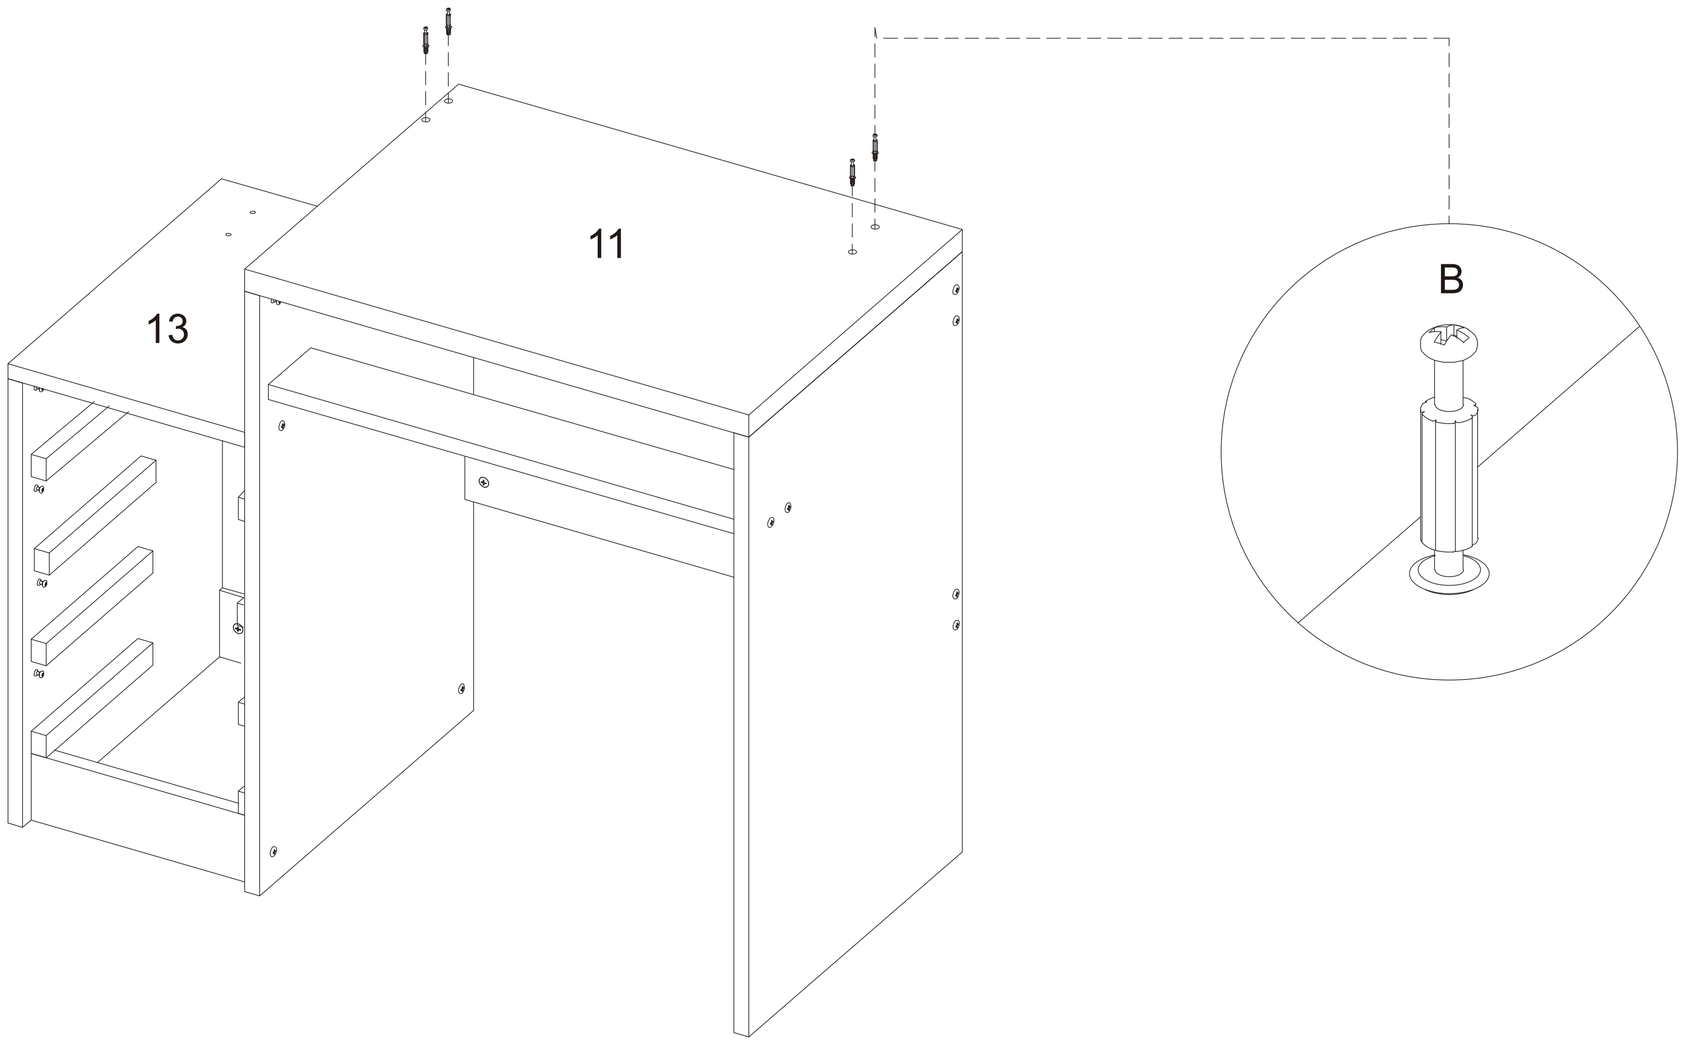


Step 28

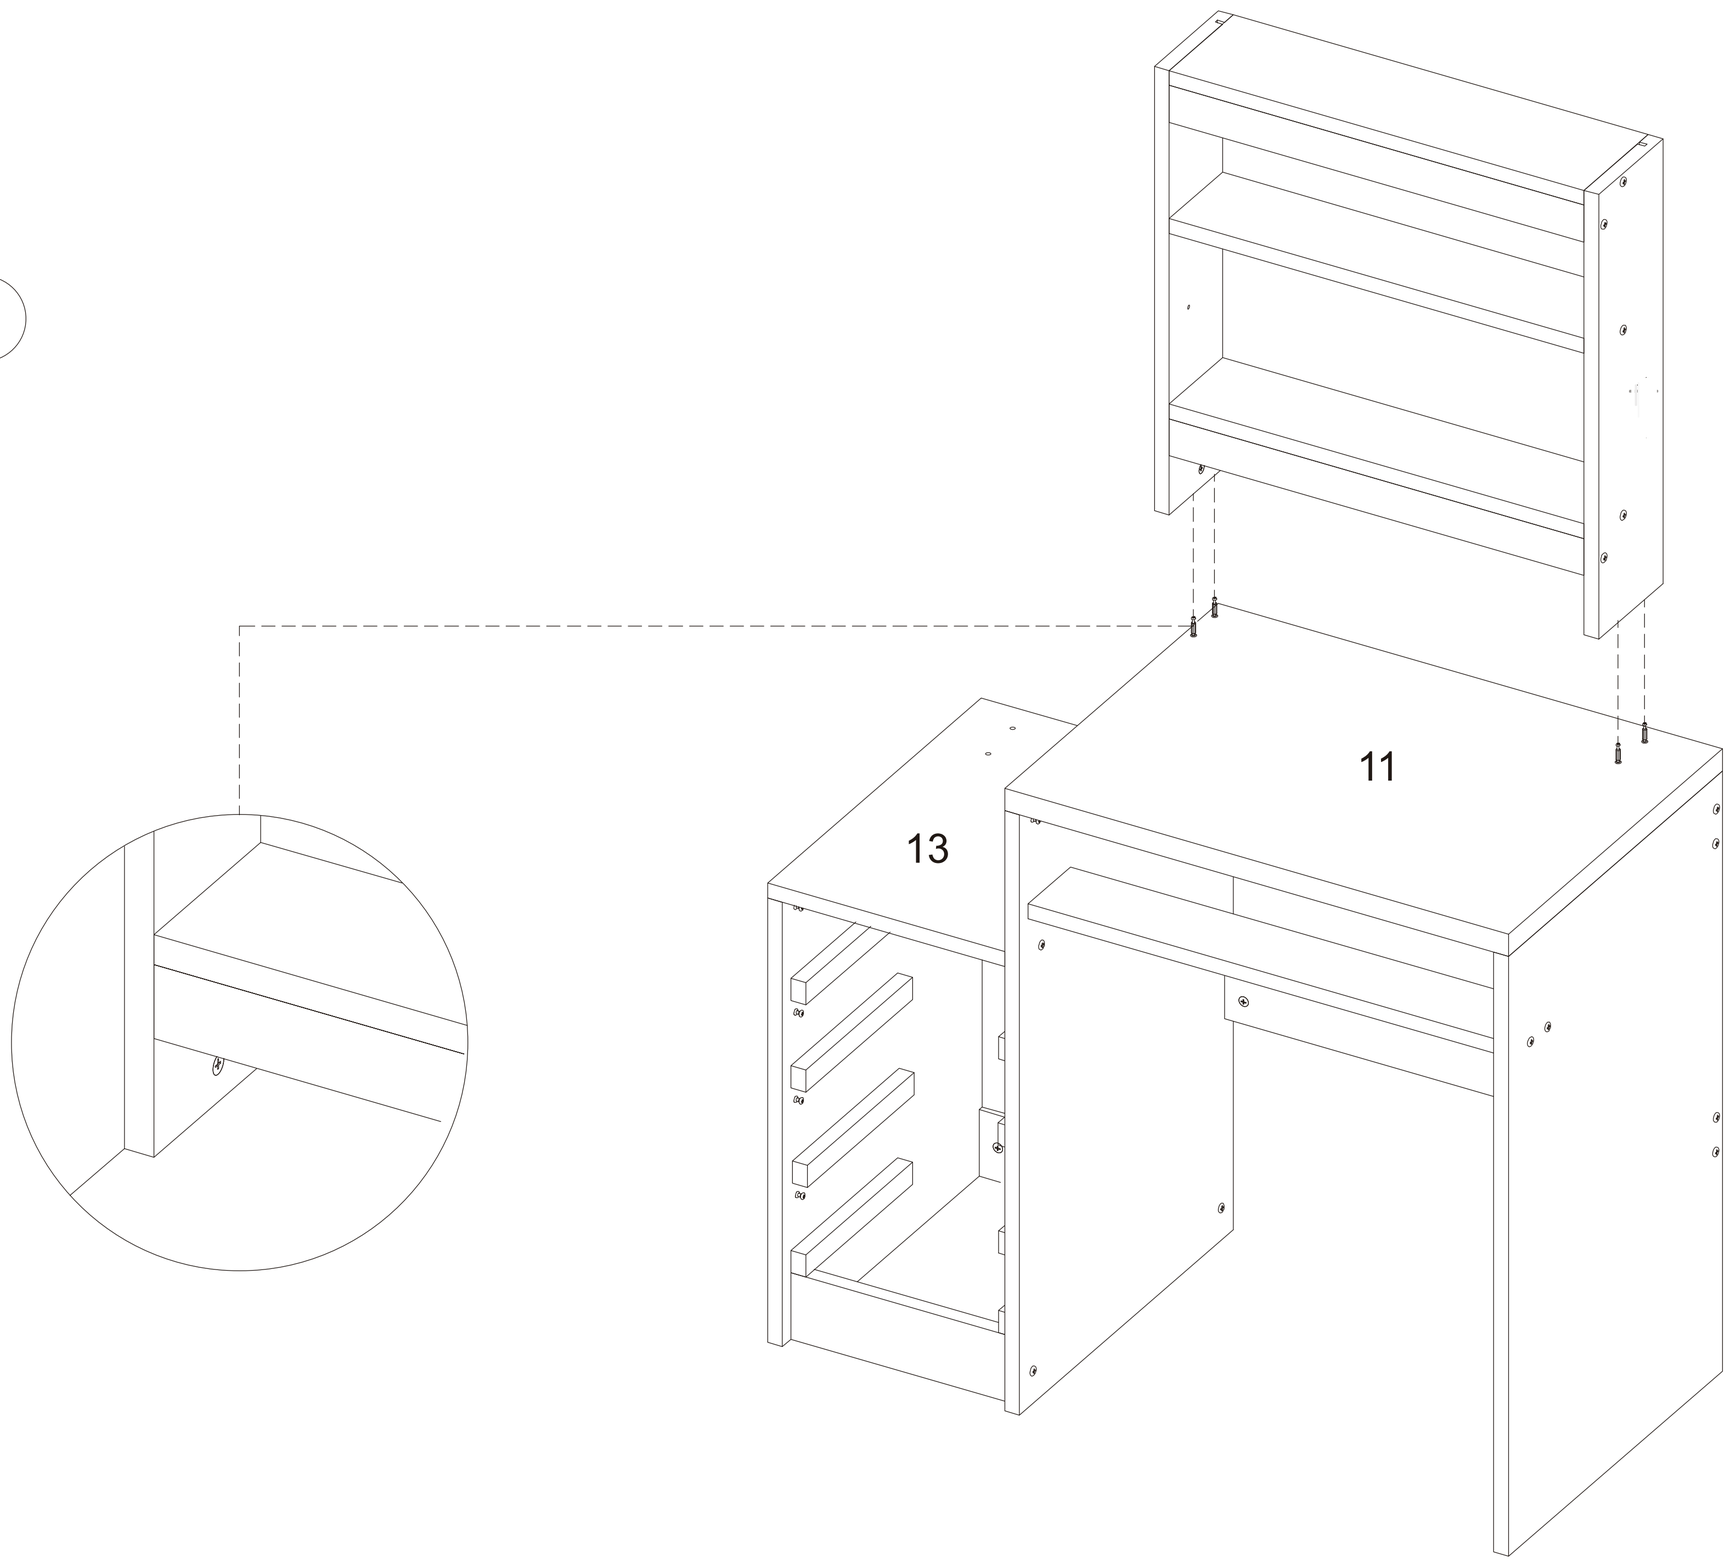


Step 29

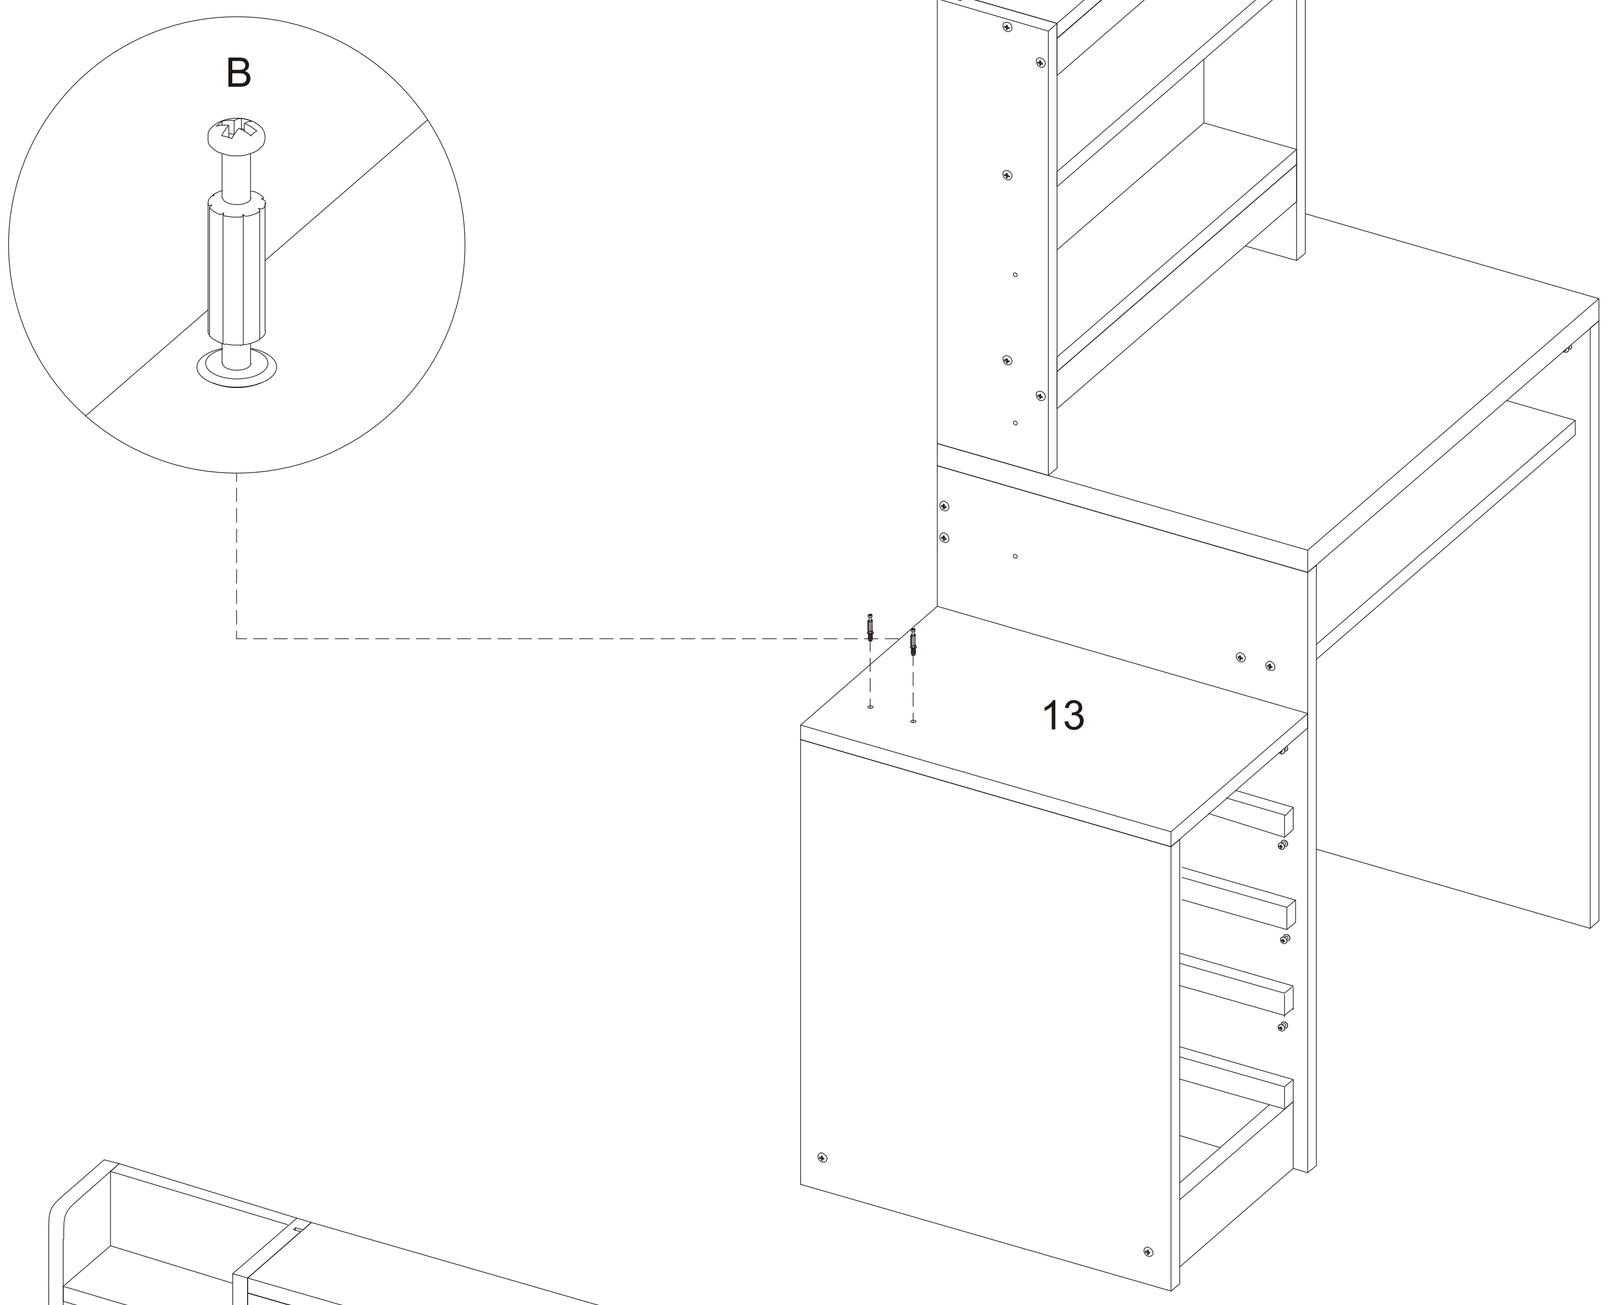


Step 30

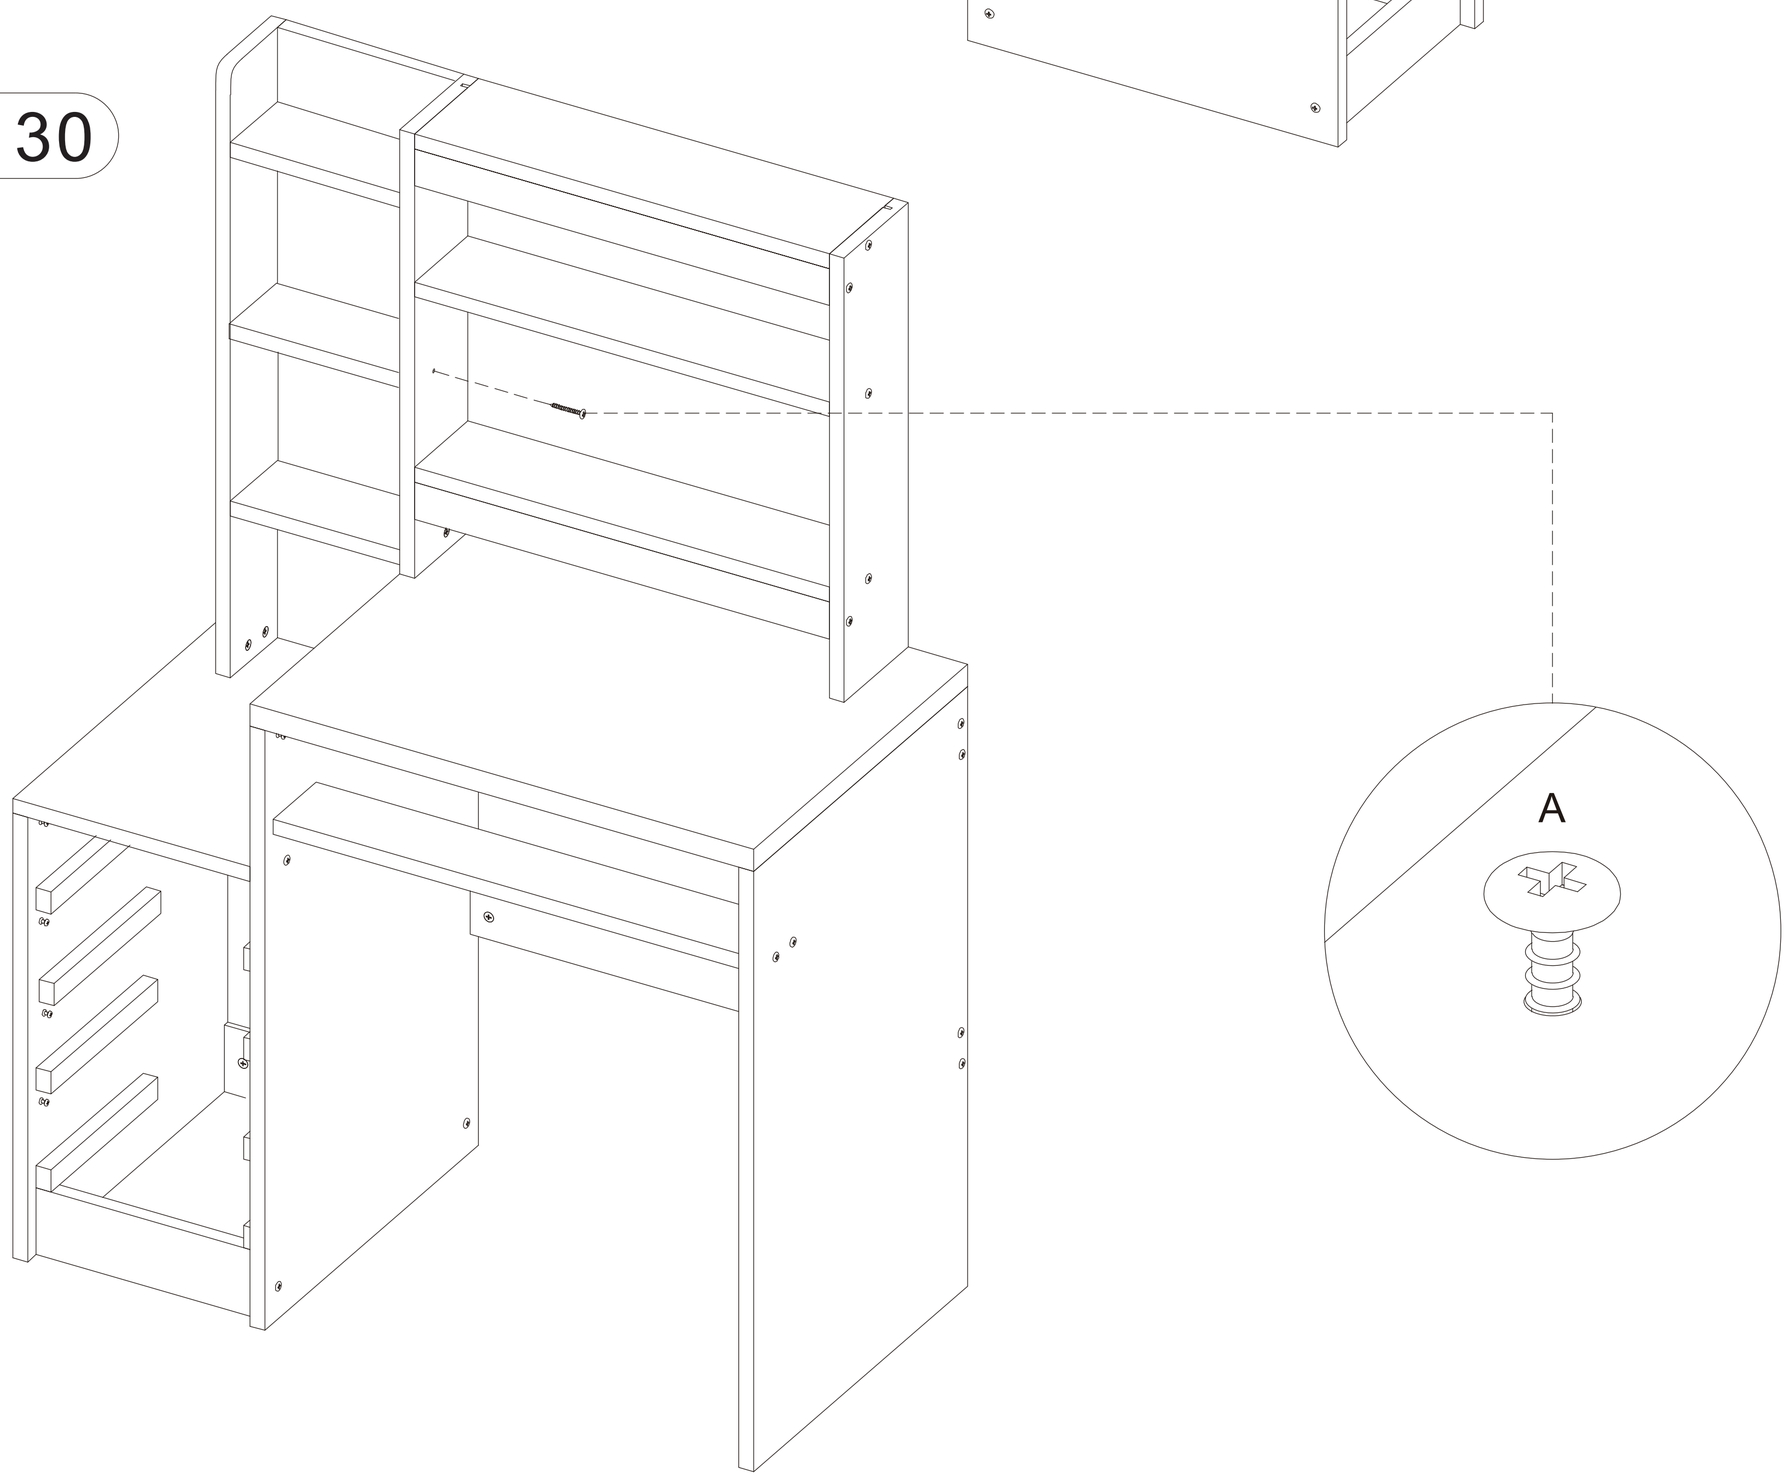

Step 32

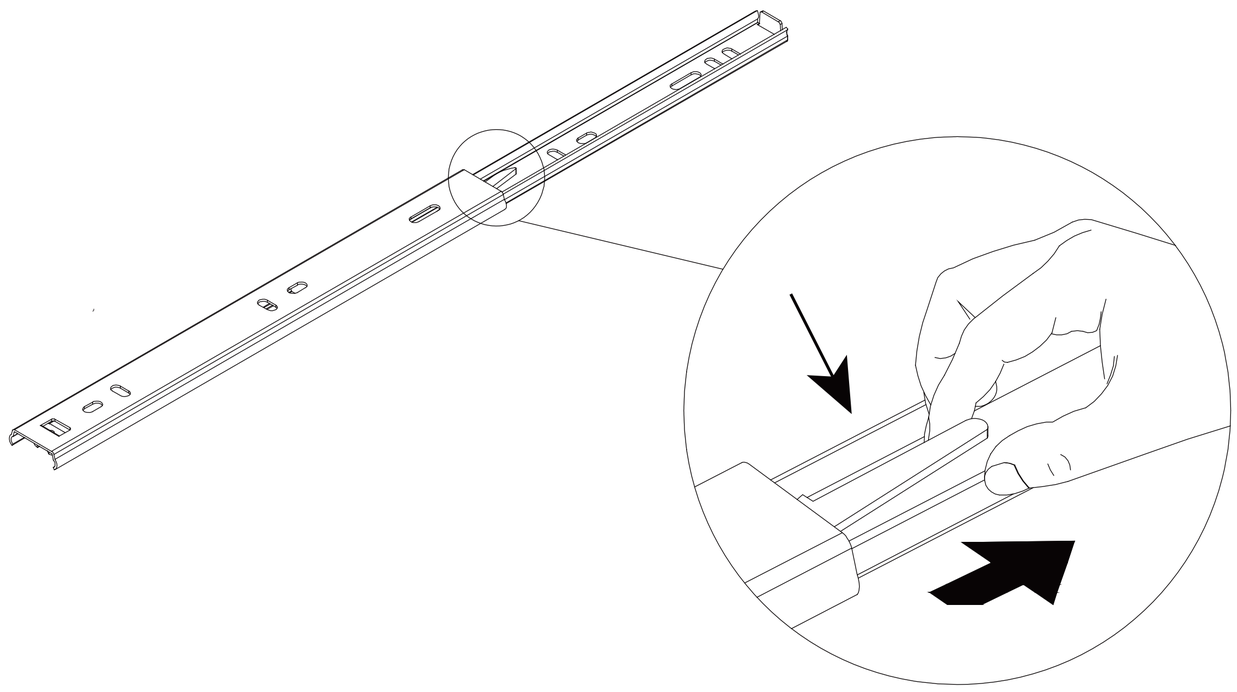


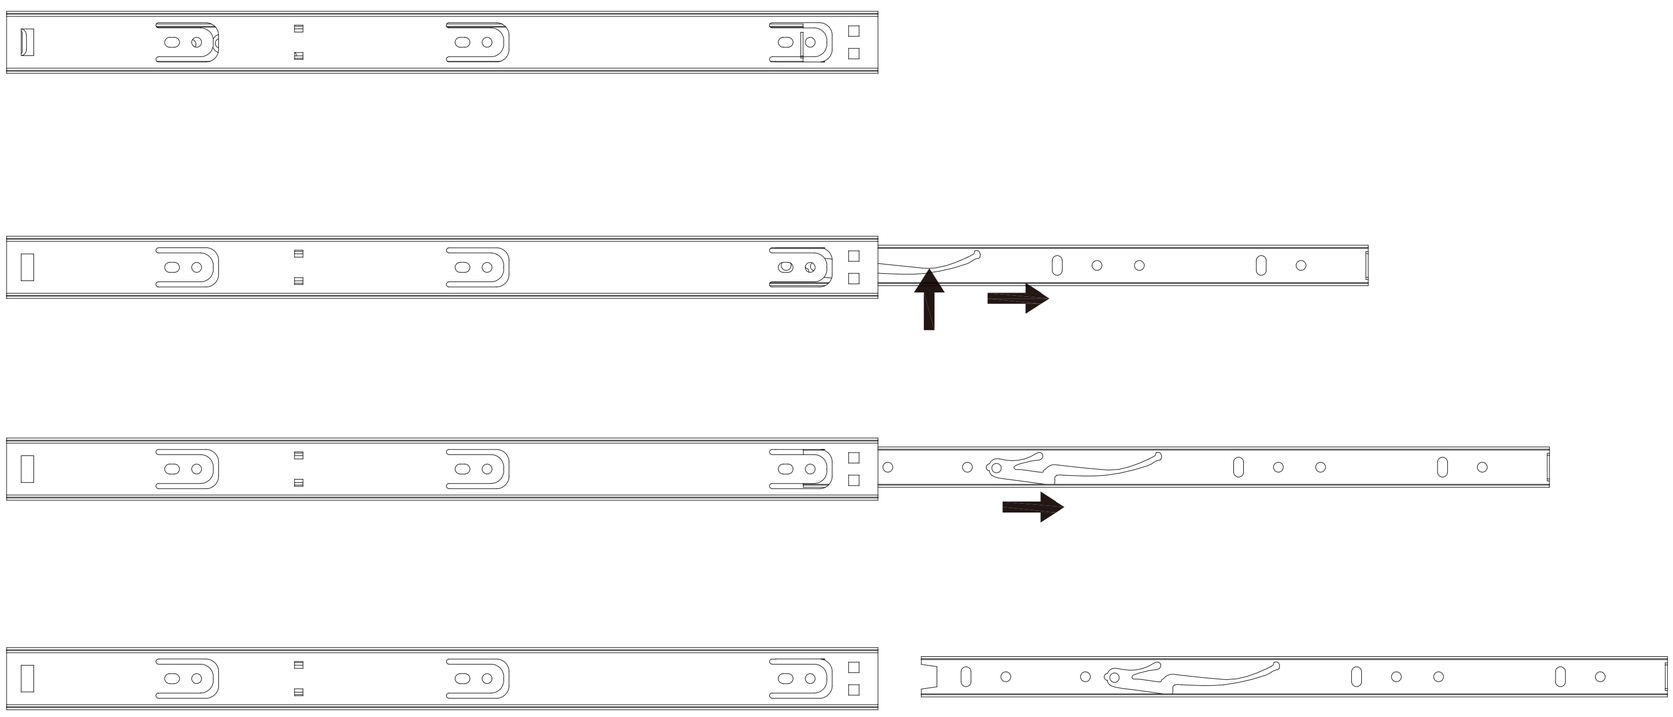

J-1

J-2

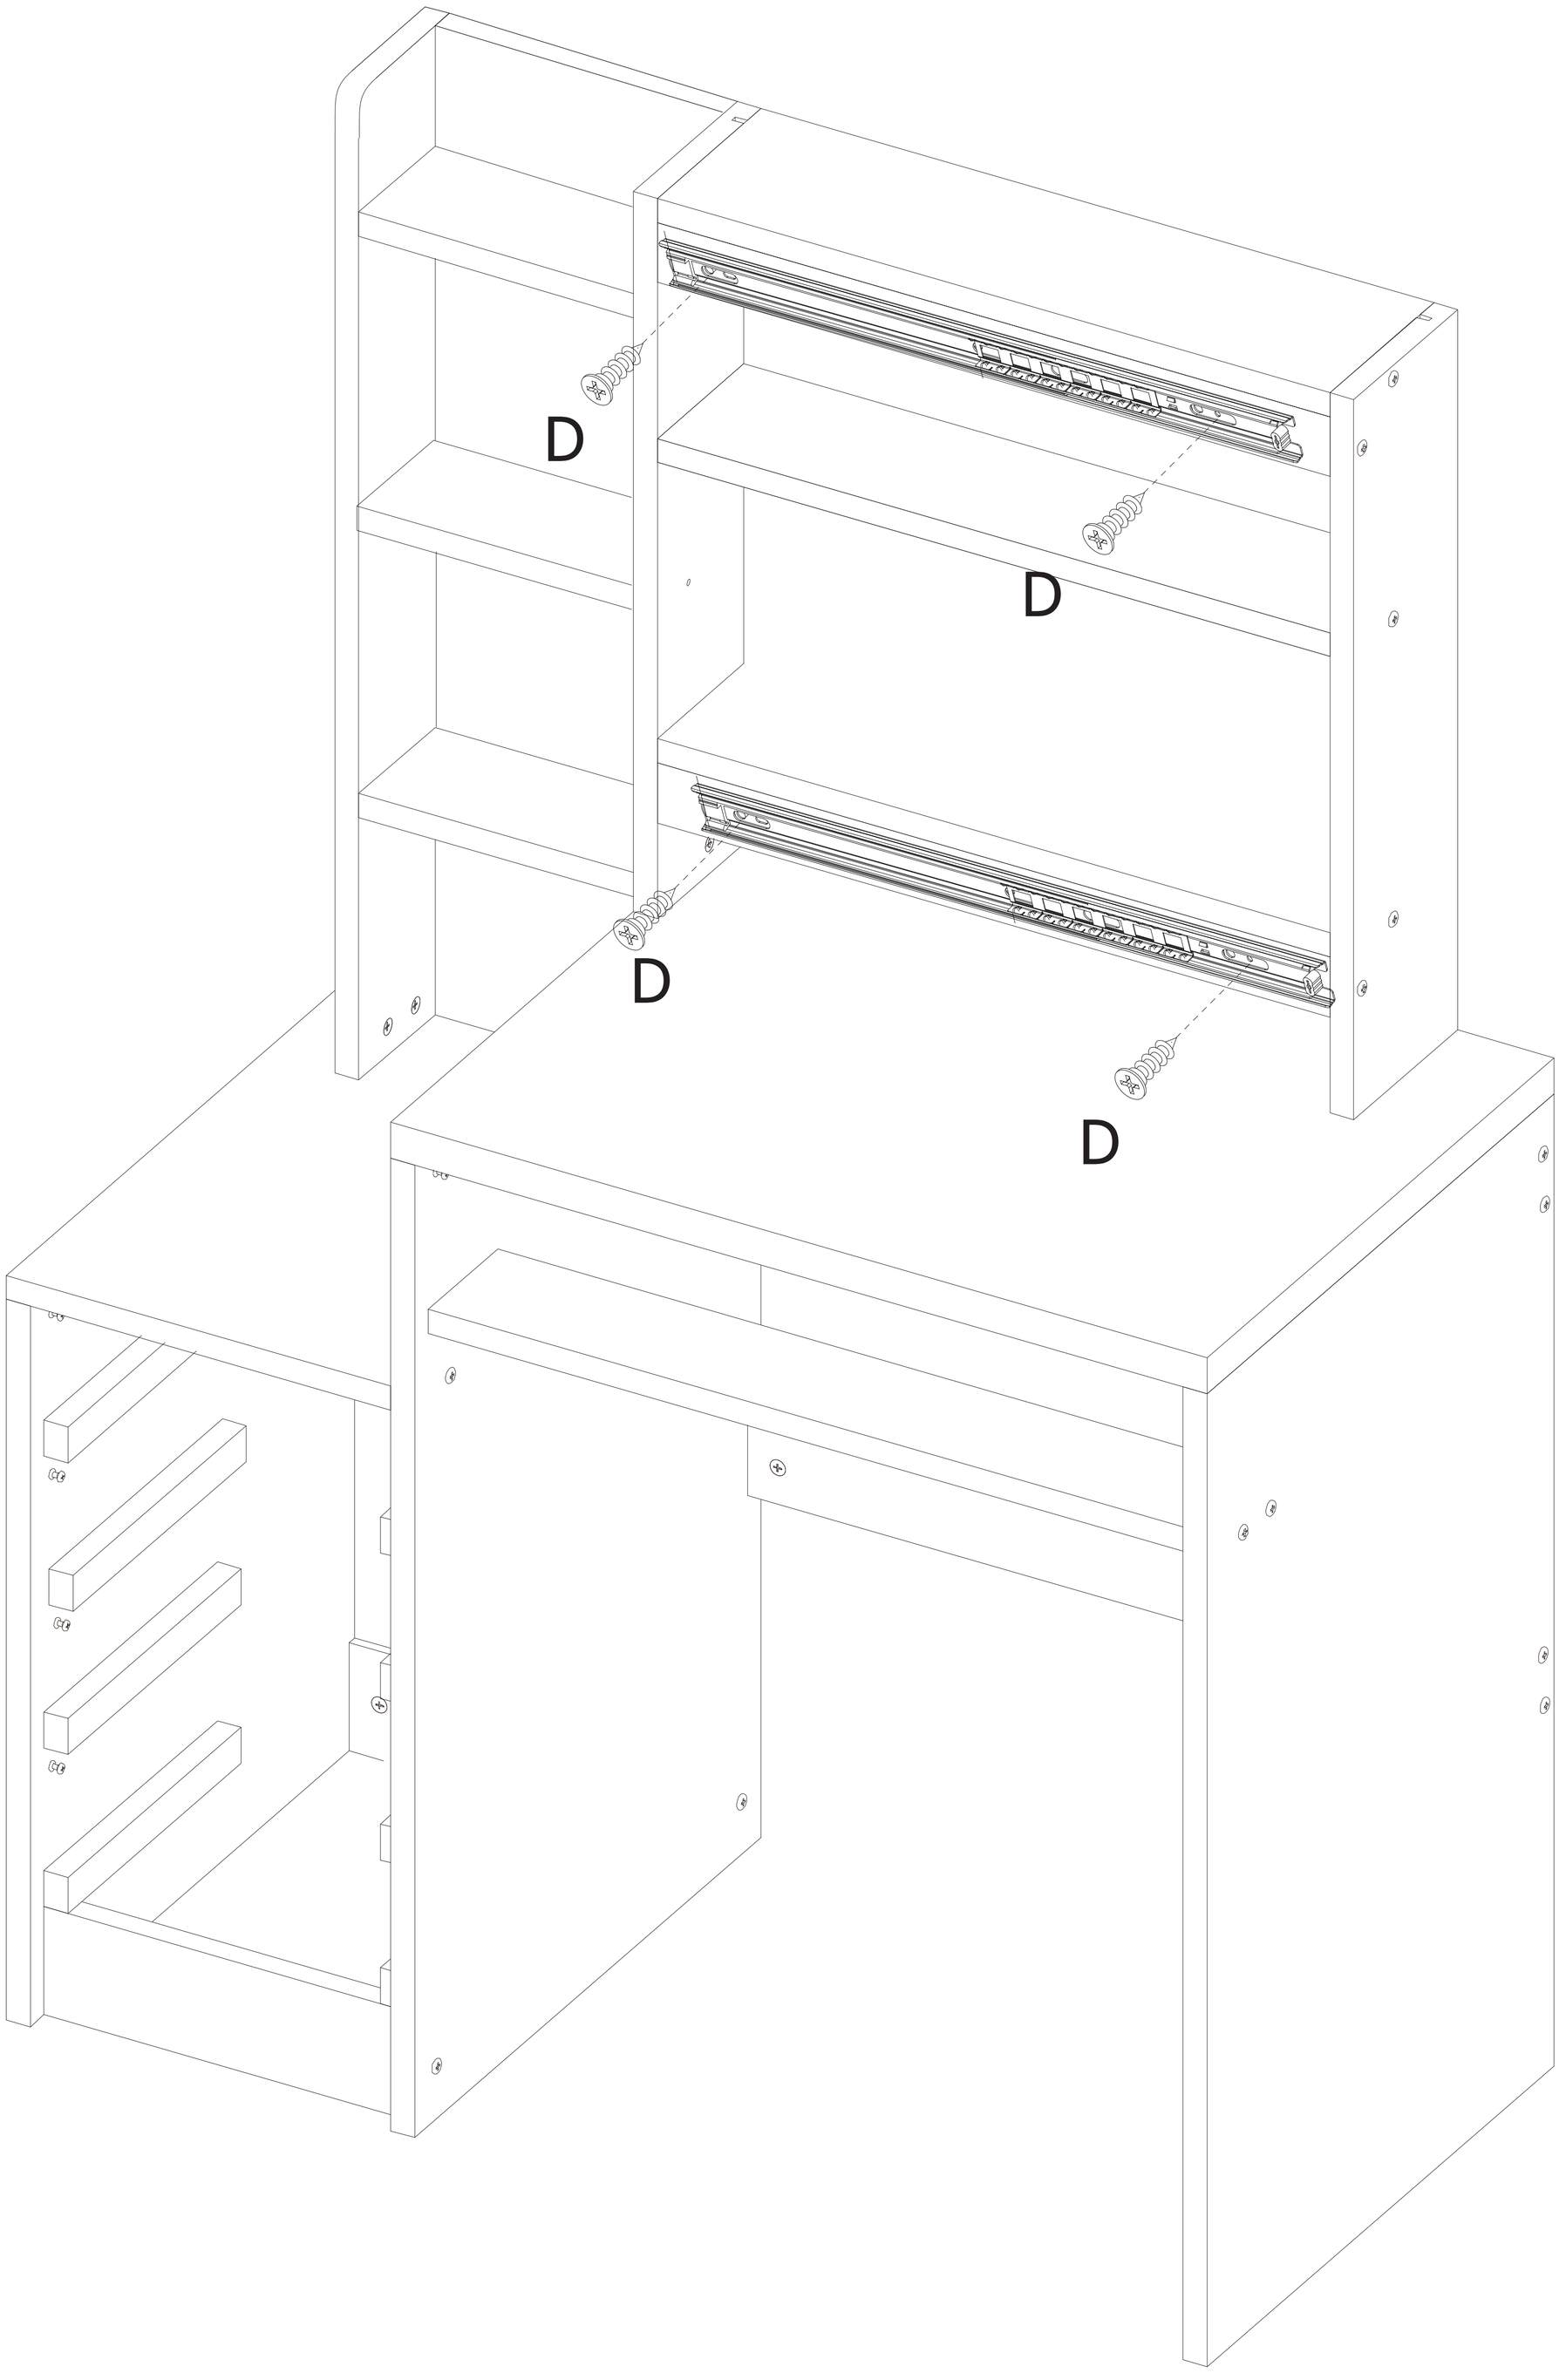


D
D
D
D











Step 33

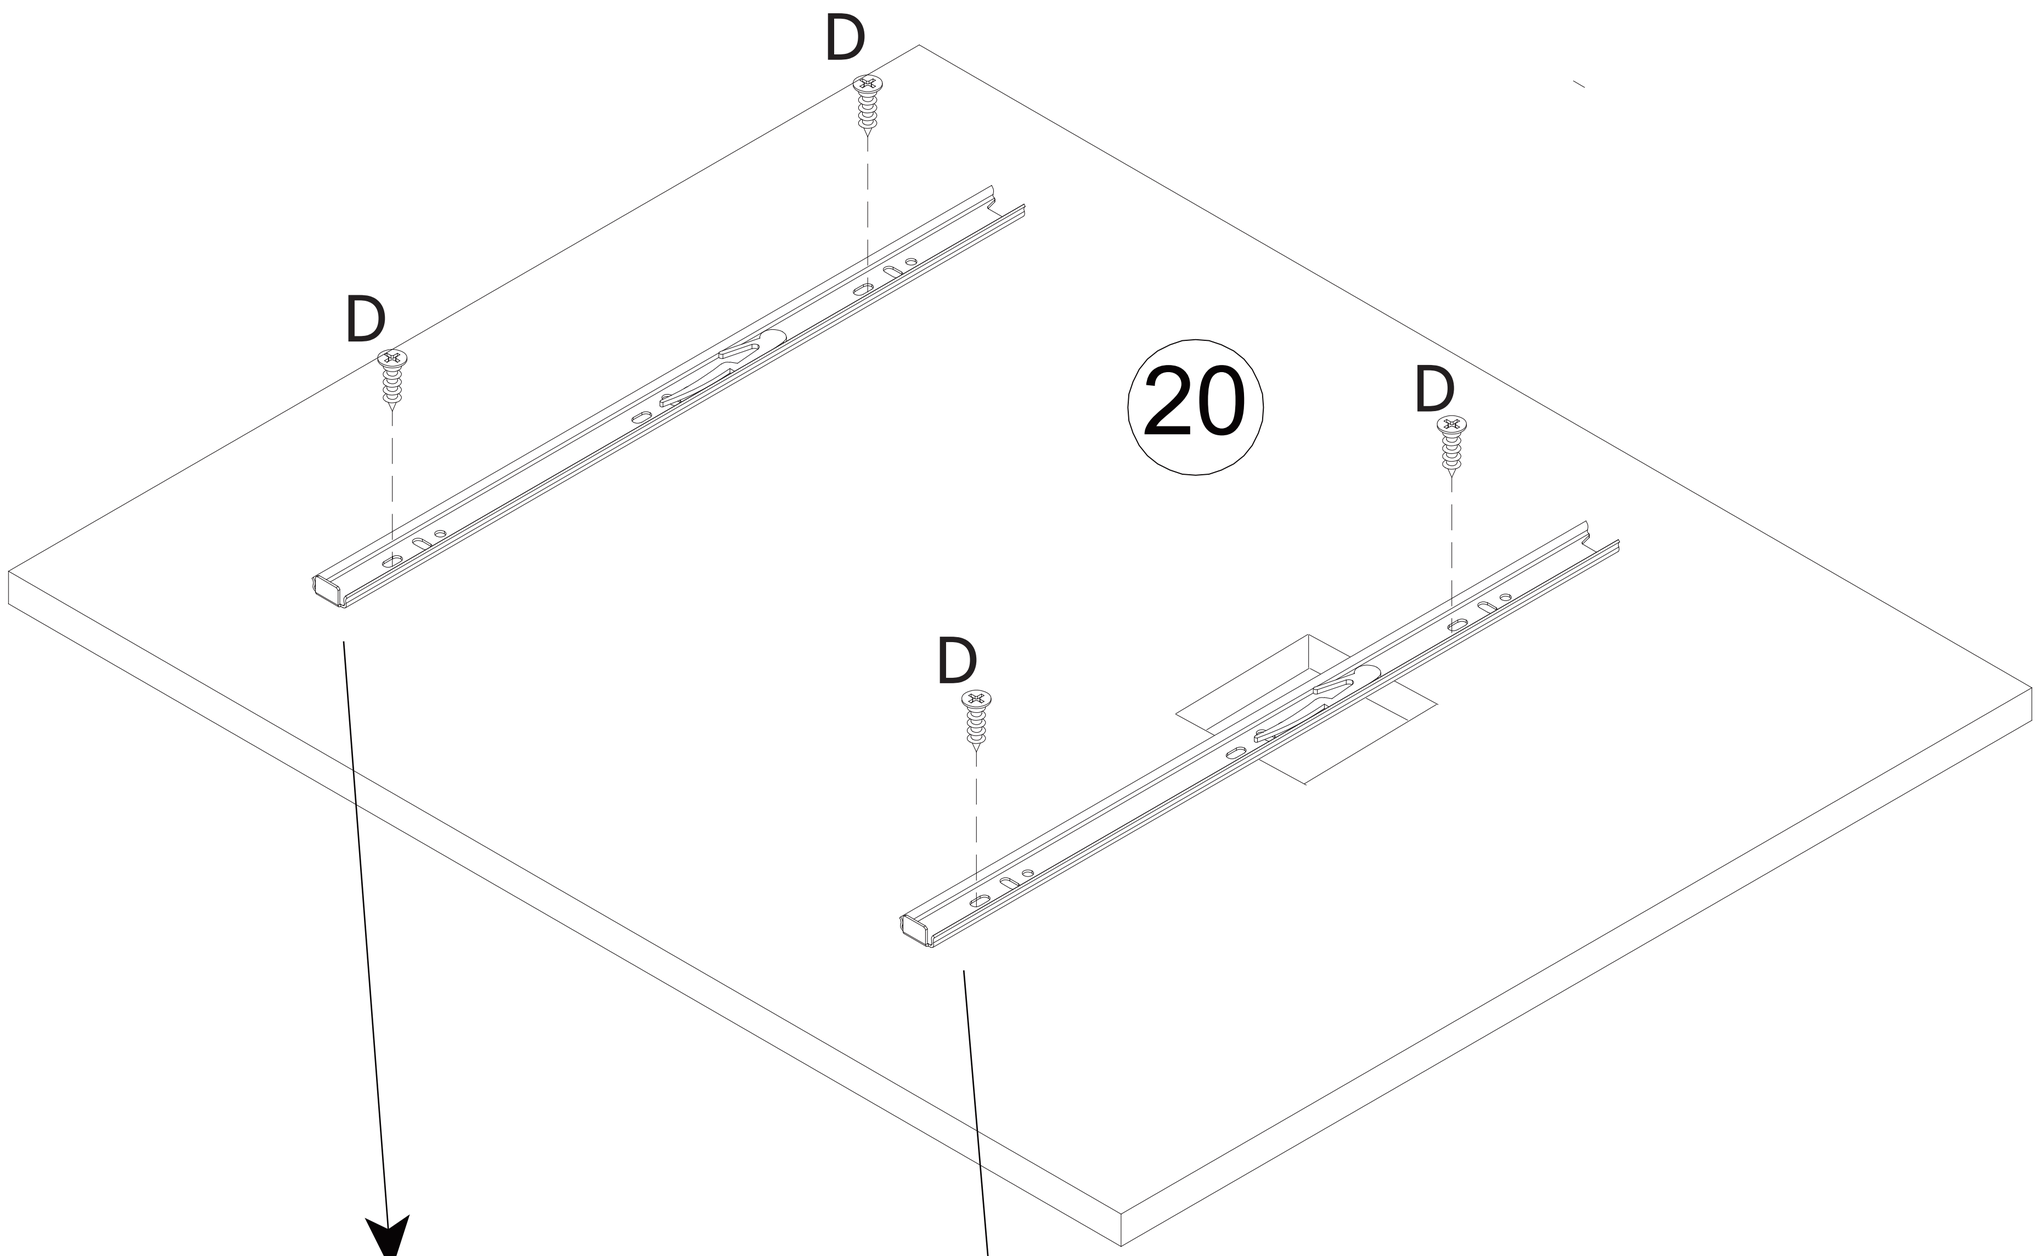




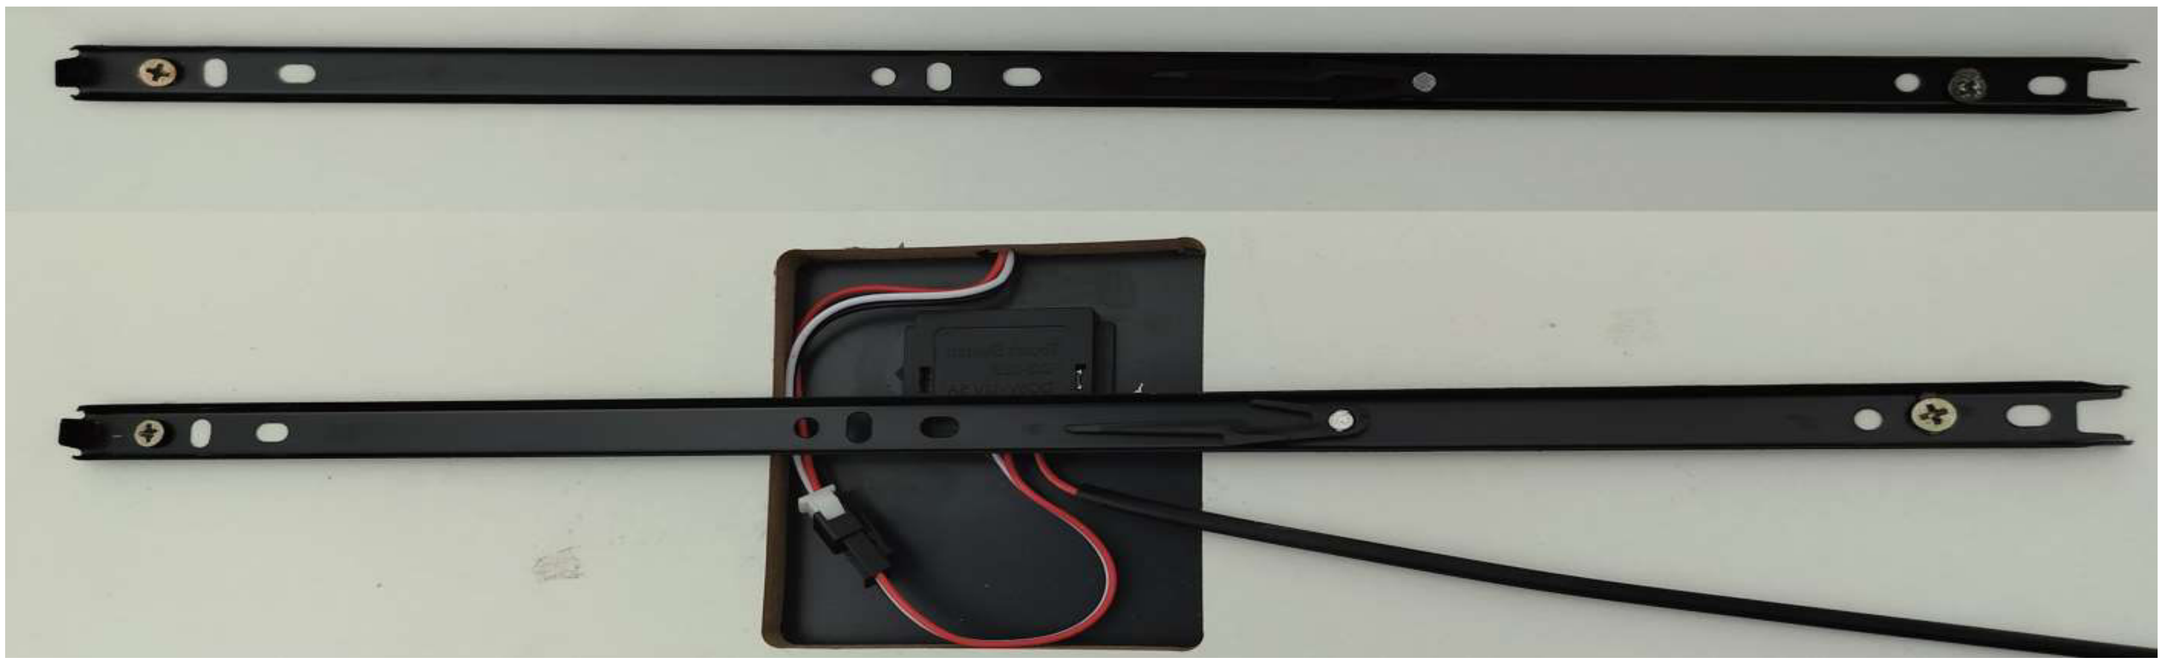

Simple version without touch switch and power cord


Step 34 K， L for luxury version

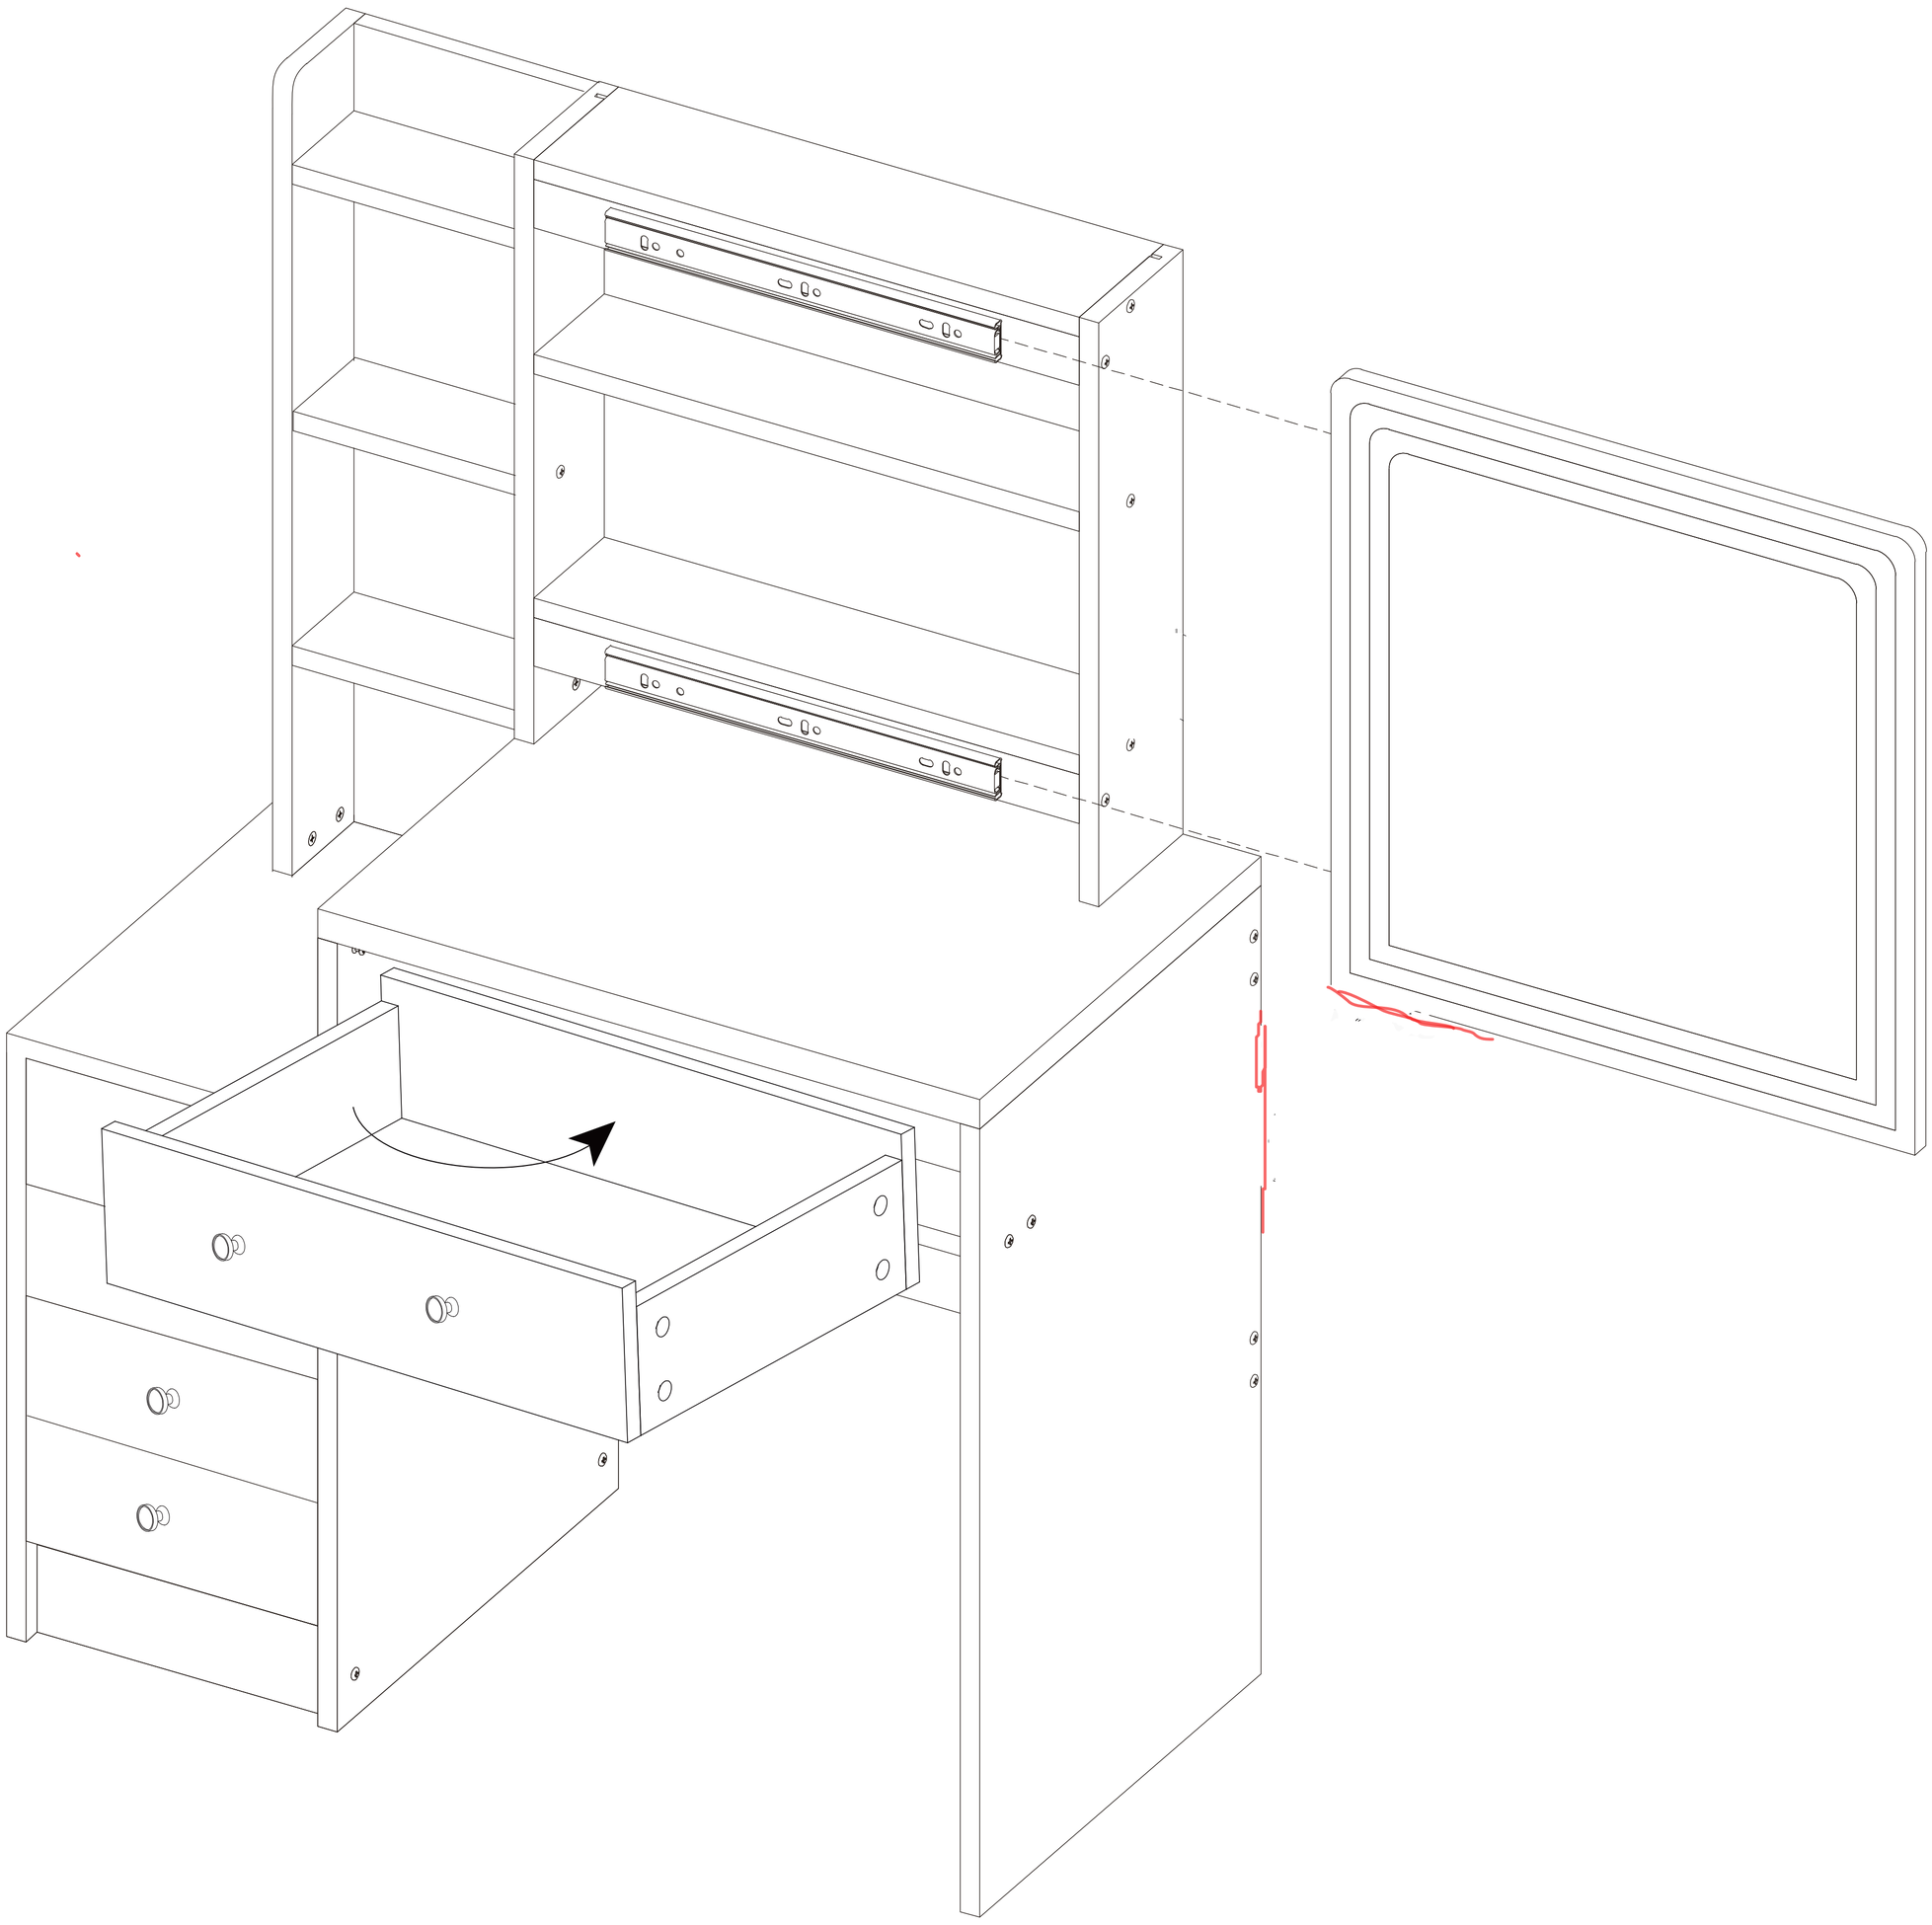

Please note that when placing the drawer in, the drawer positioning pin will block the drawer. Therefore, please follow the diagram to first insert the inner edge of the drawer using a concave method, and then push the drawer flat.

Step 35



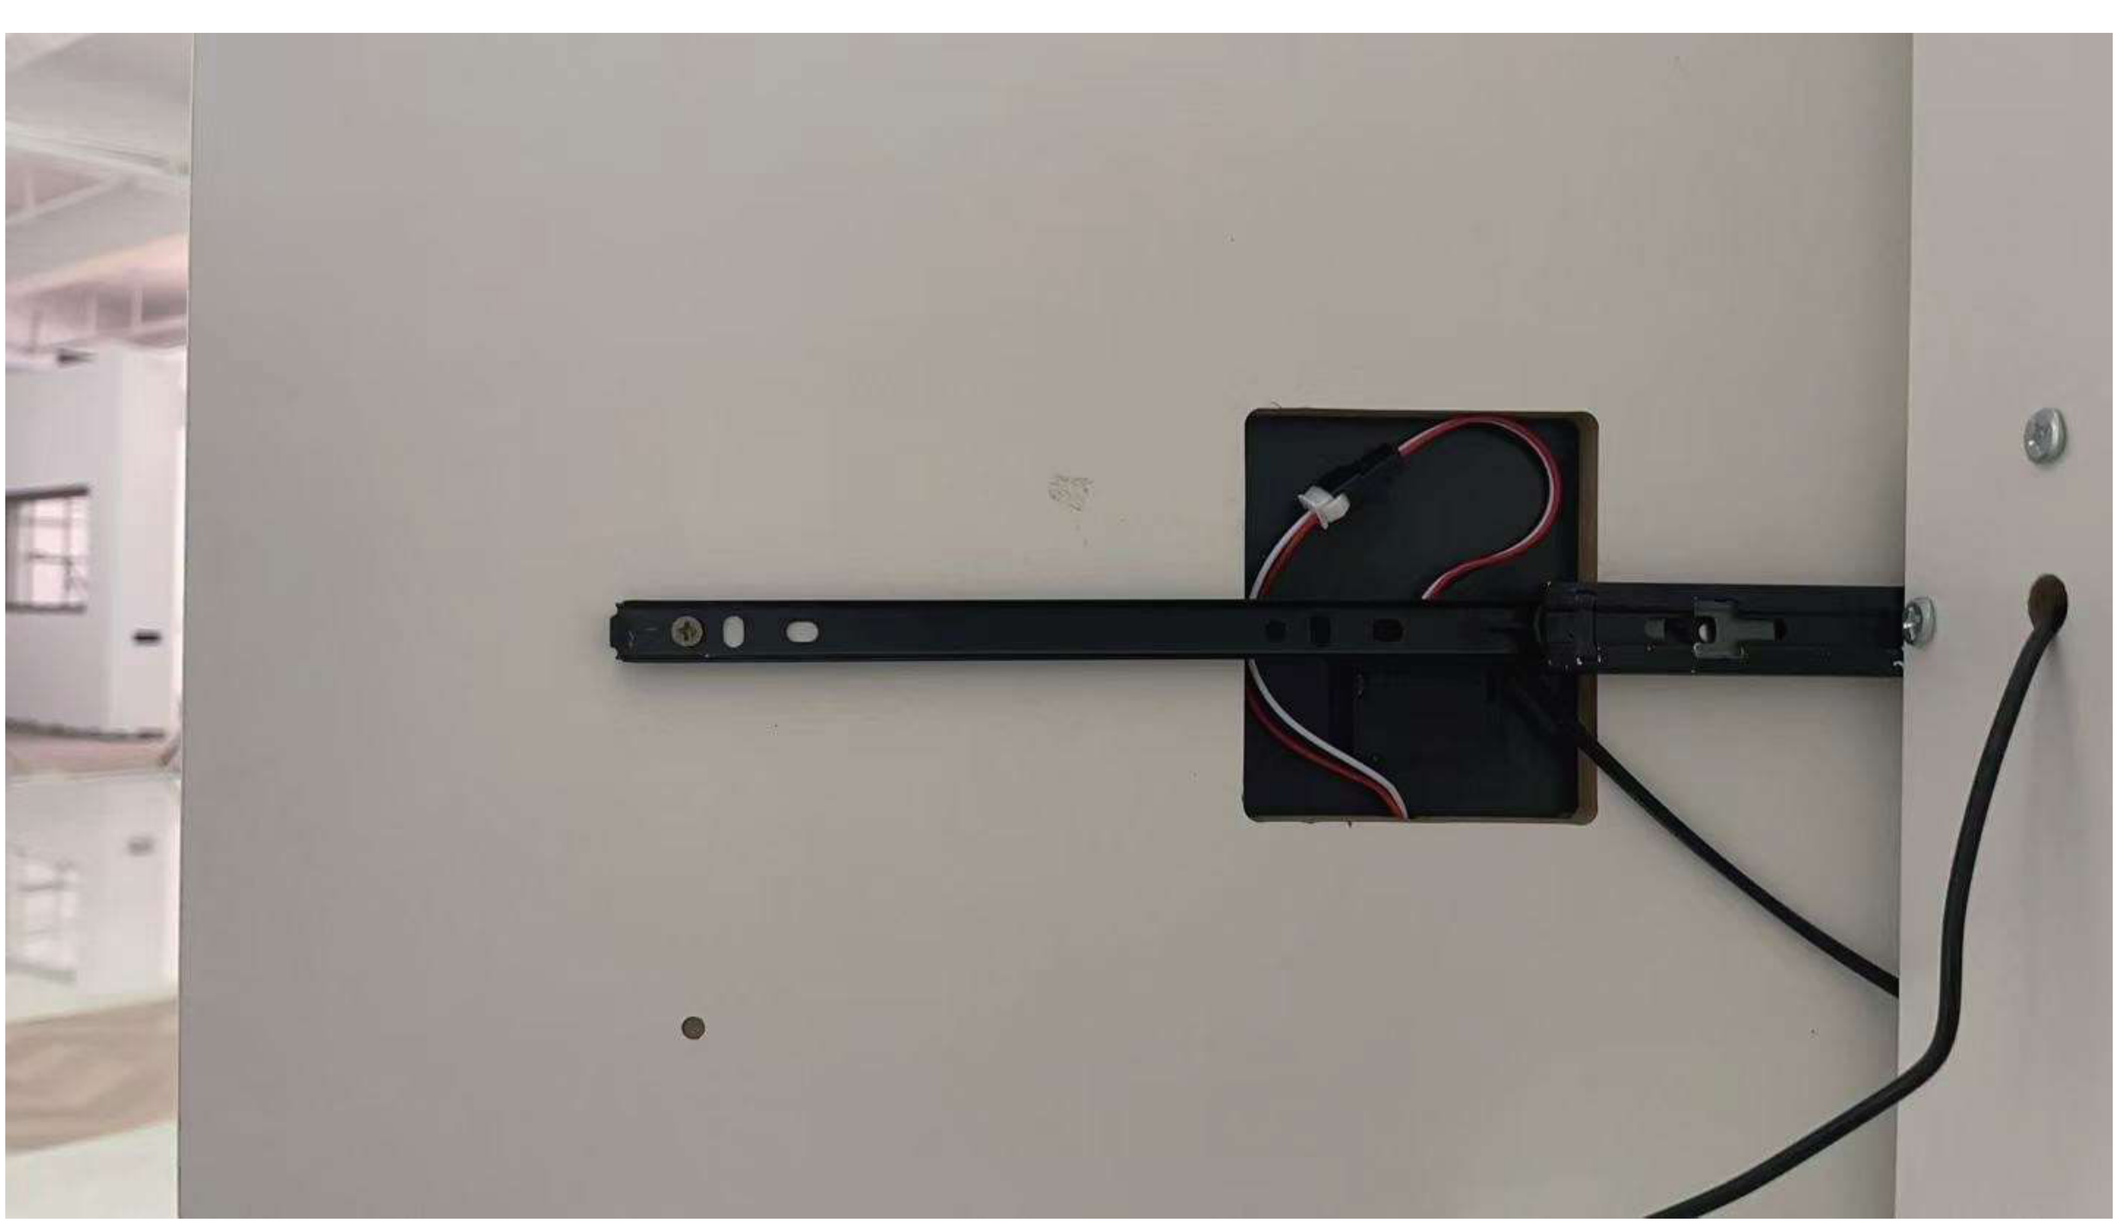


Simple version without touch switch and power cord









Step 36

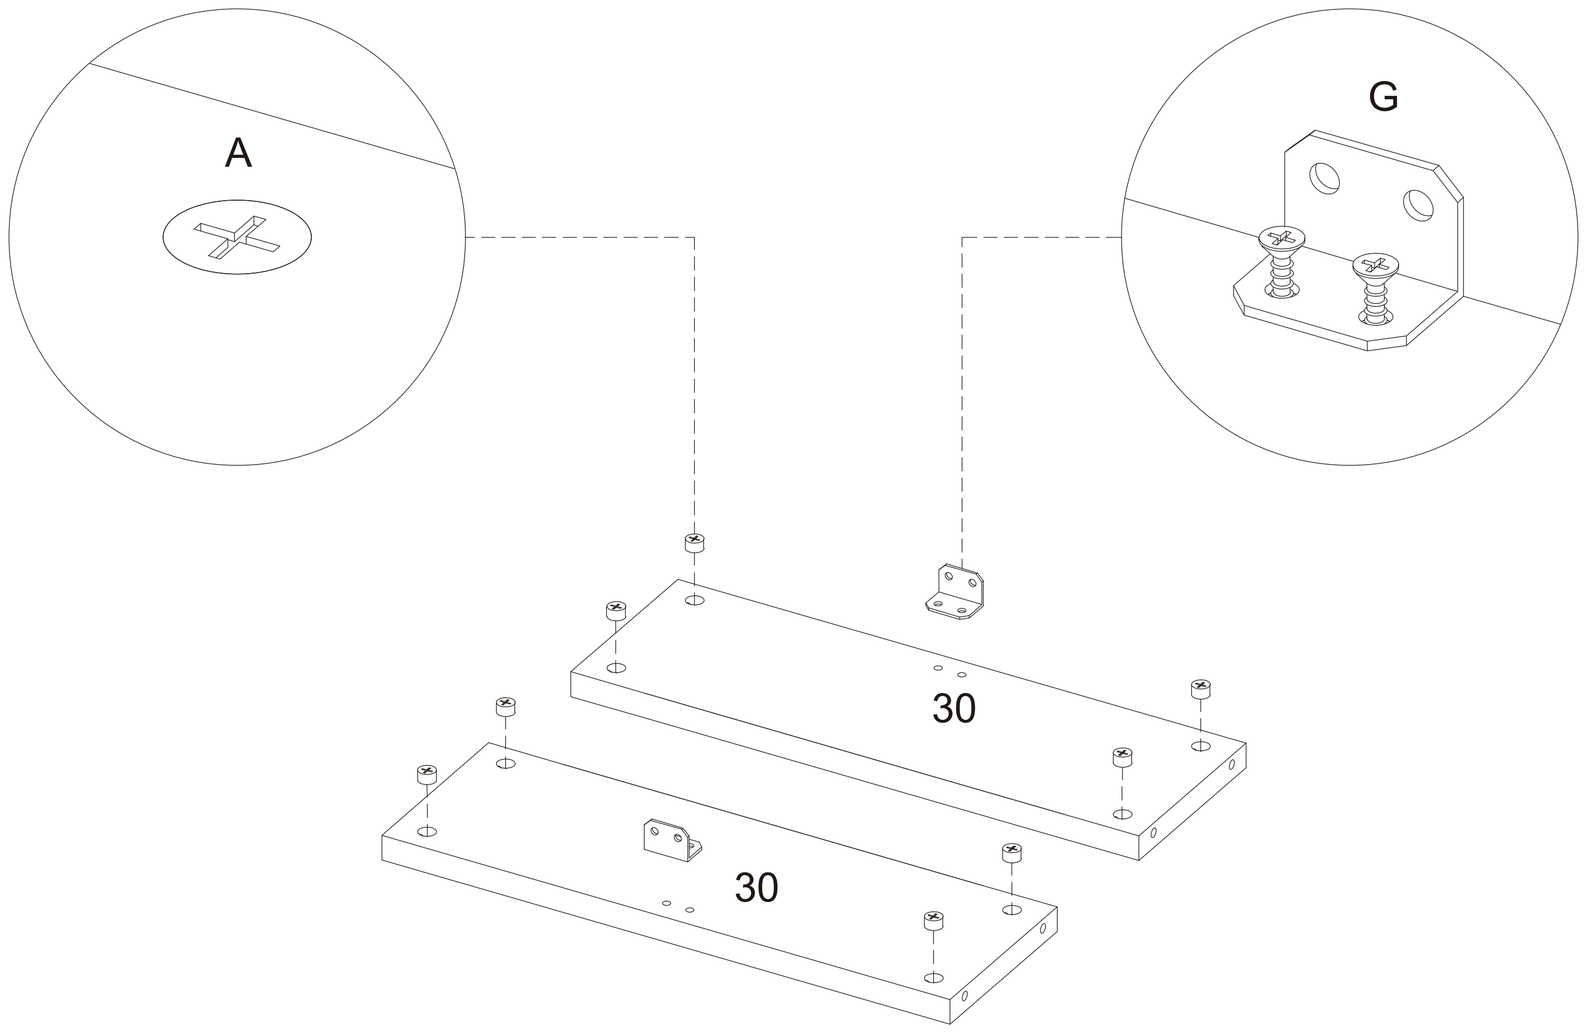


Step 37

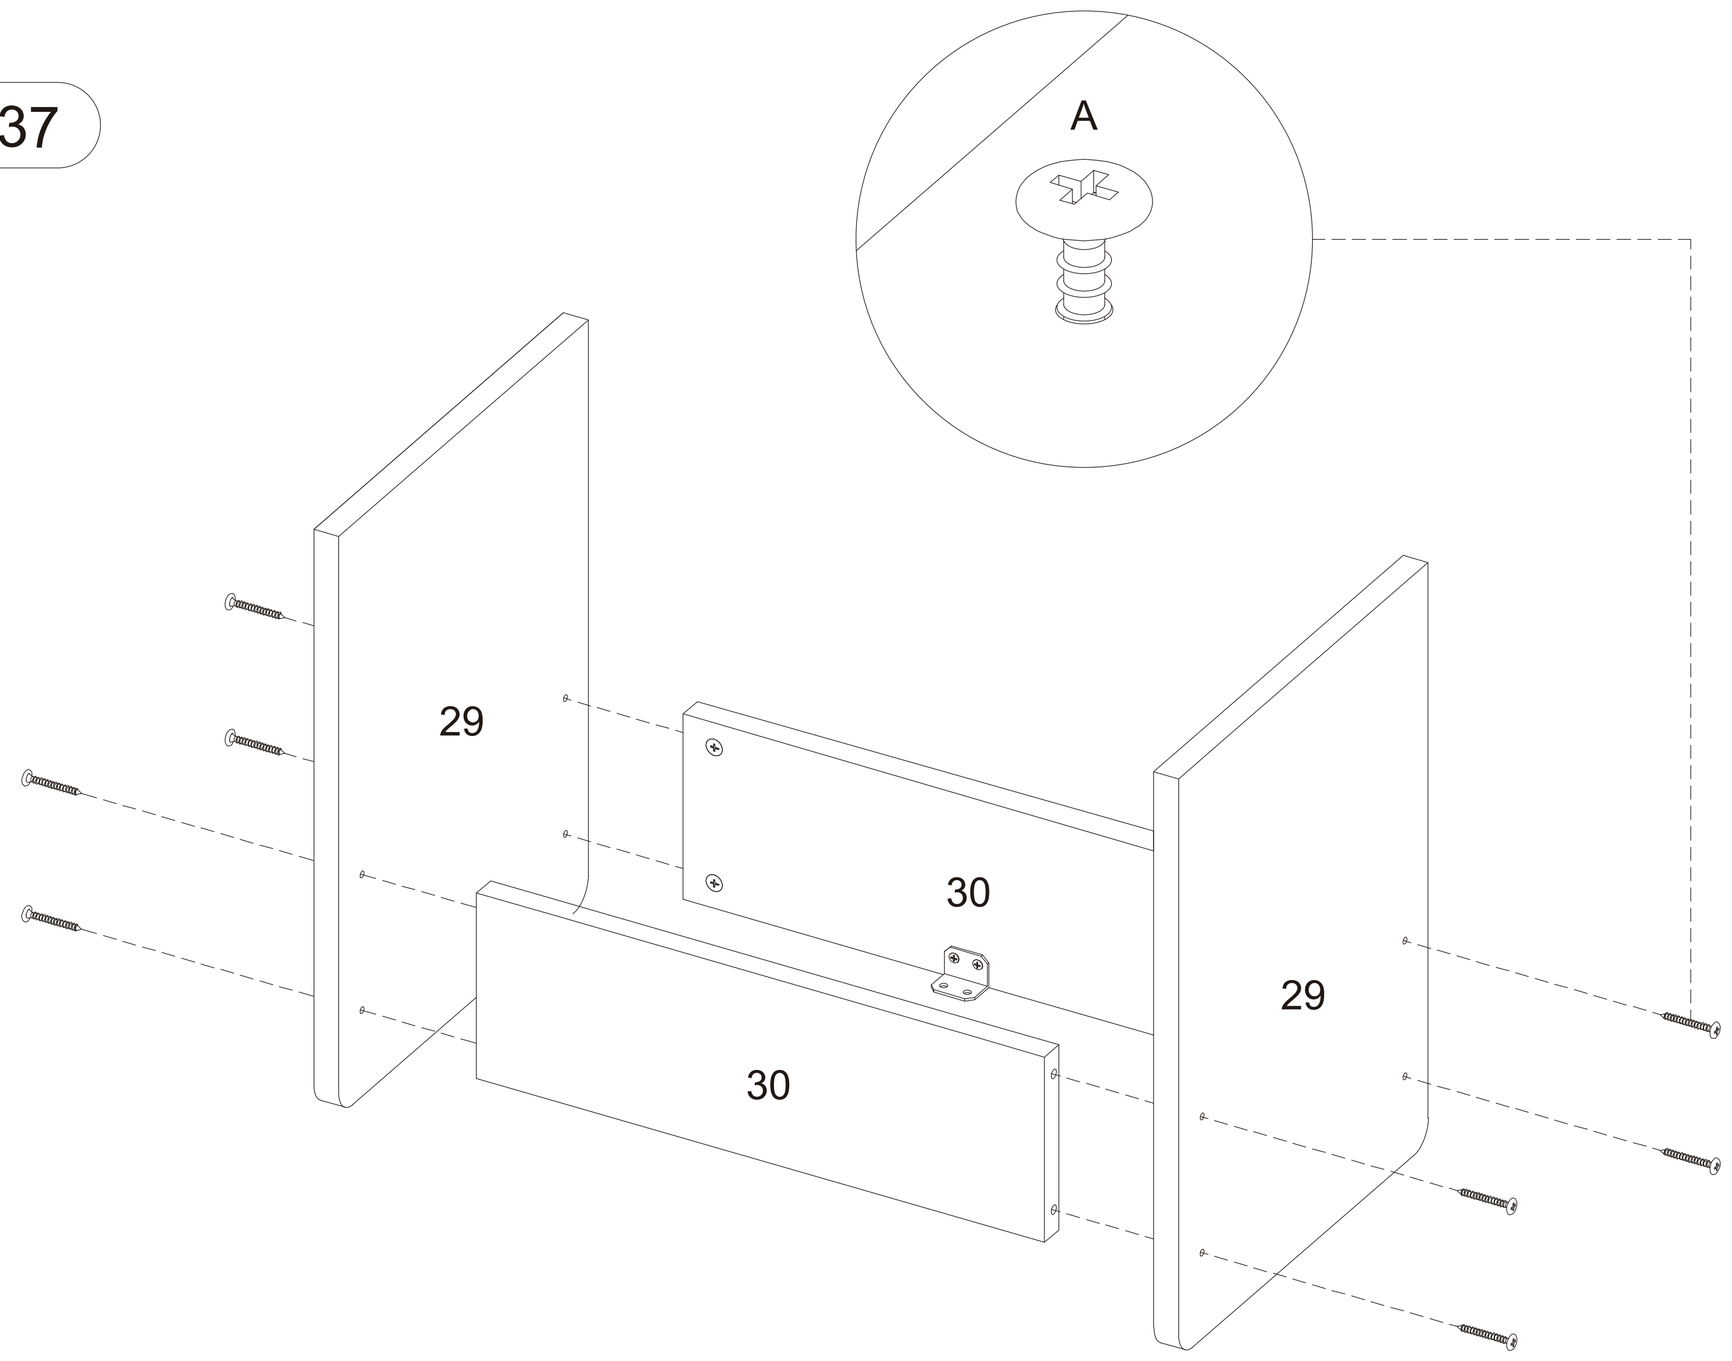

Step 38

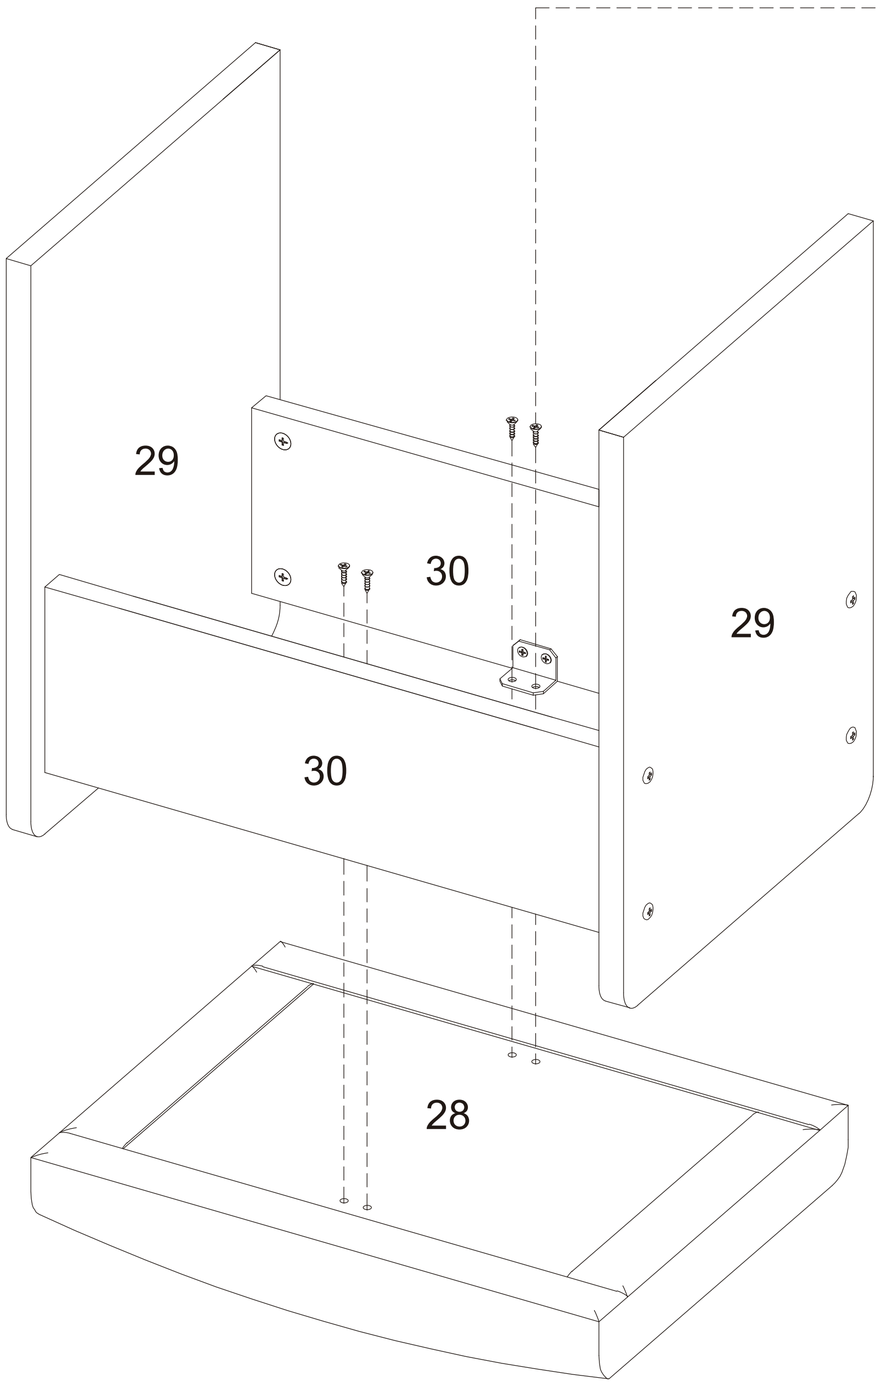

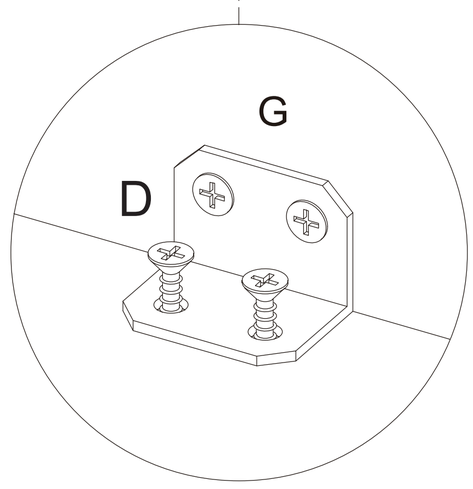

Step 39

