
3-DRAWER MOBILE FILE CABINET

Installation Video

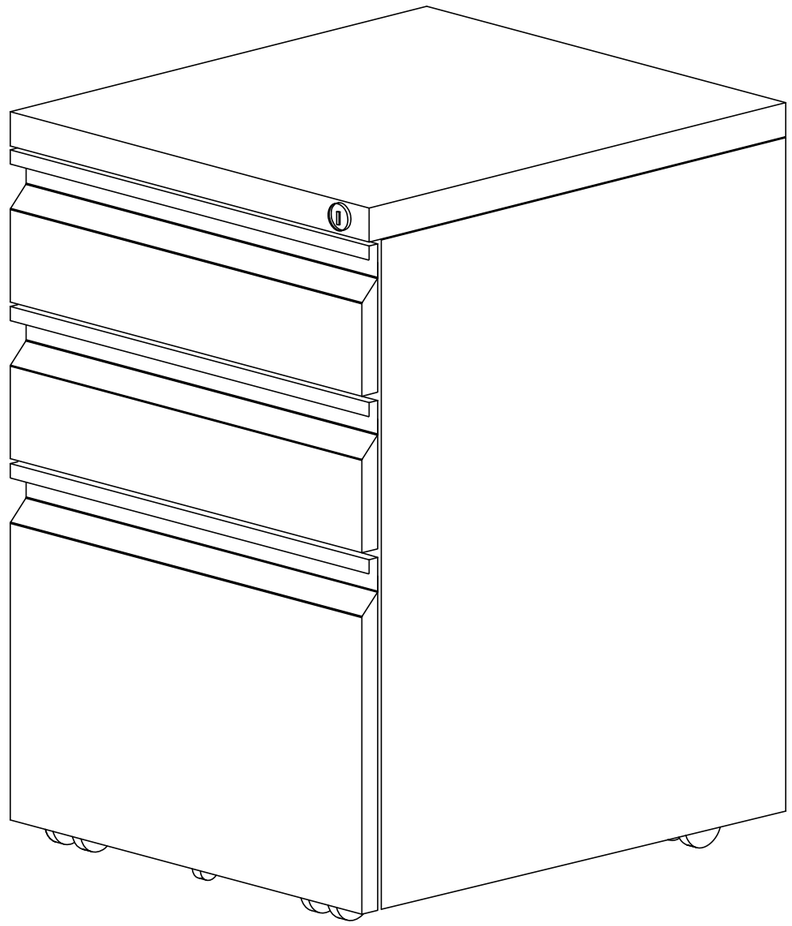



⚠ **Attention:If you notice any fingerprints on the surface please know that they were left there during manual lifting. Simply clean the surface using a cloth and rubbing alcohol.**






1. Gather and organize all required parts before assembling.




1. Gather and organize all required parts before assembling.

Tools Required For Assembly

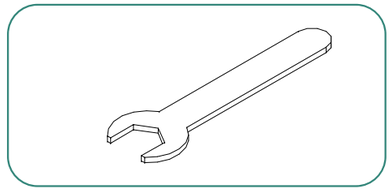

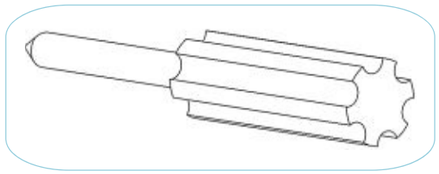

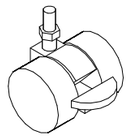
Item NO.	Reference Image	Qty.
a		X4
b		X4
c		X1
d middle wheel		X1
e front wheel		X2

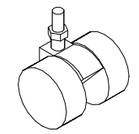Item NO.	Reference Image	Qty.
f rear wheel		X2
g		X1
h		X1
i		X2
j		X1

1




ⓙ1pc

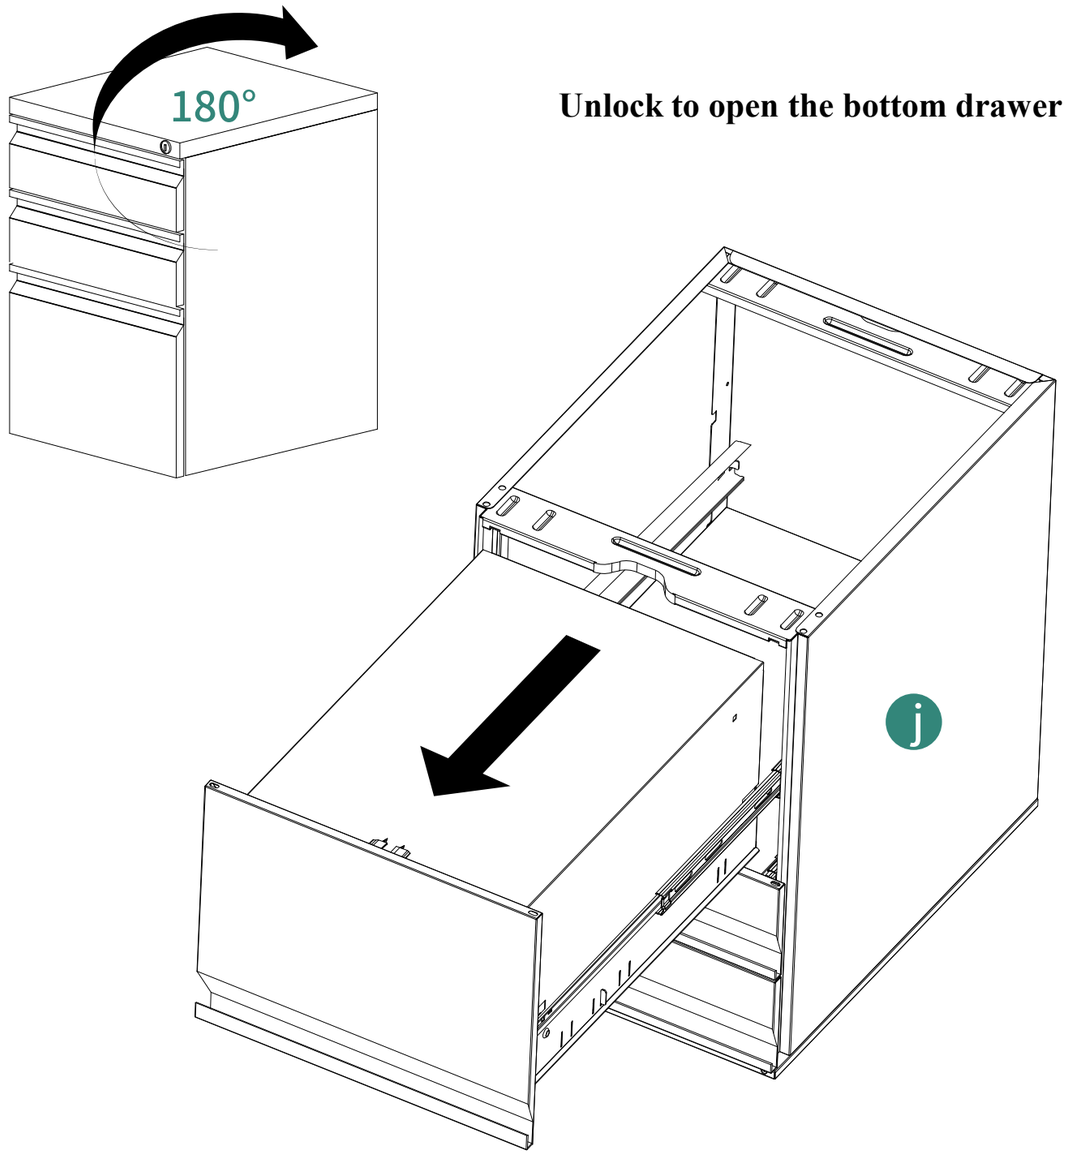


Unlock to open the bottom drawer

3

2

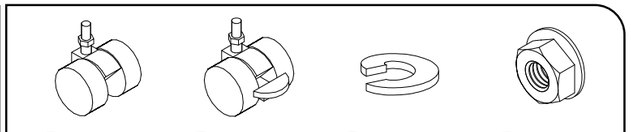


ⓕ2pcs ⓔ2pcs ⓐ4pcs ⓑ4pcs

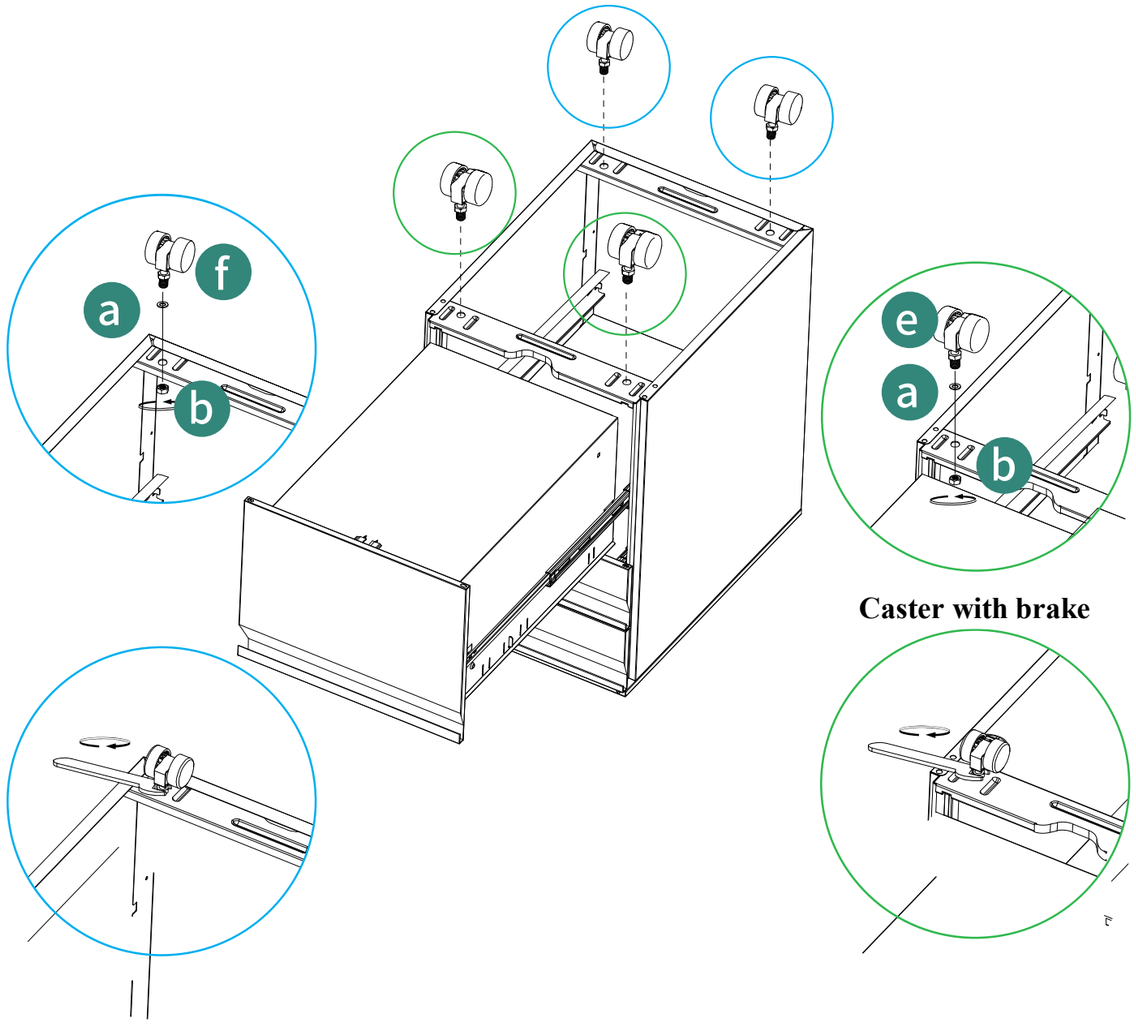

Caster with brake


4


3

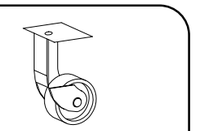



ⓓ1pc

4

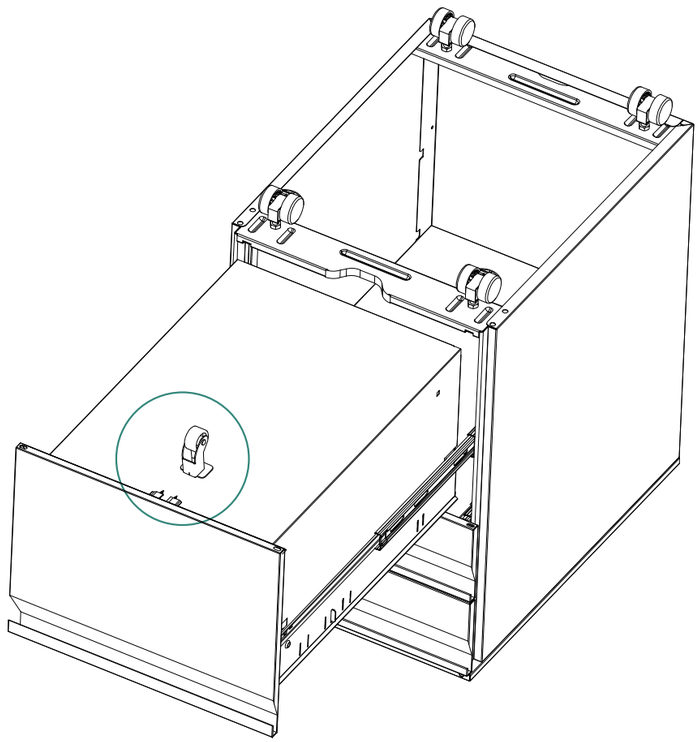

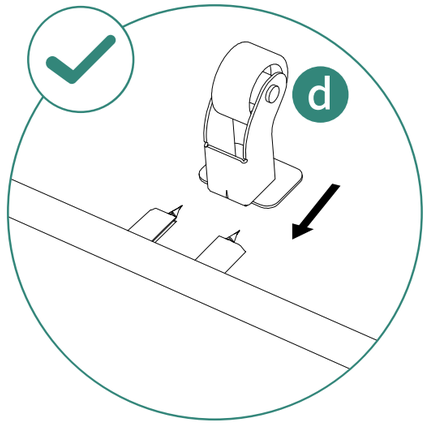

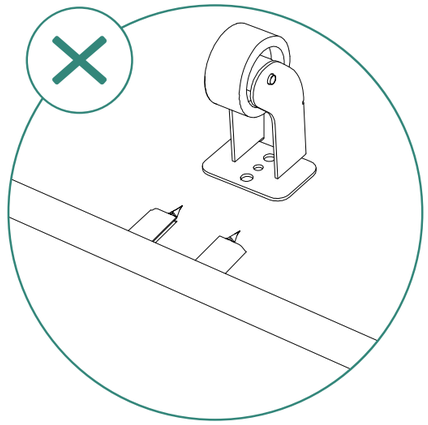

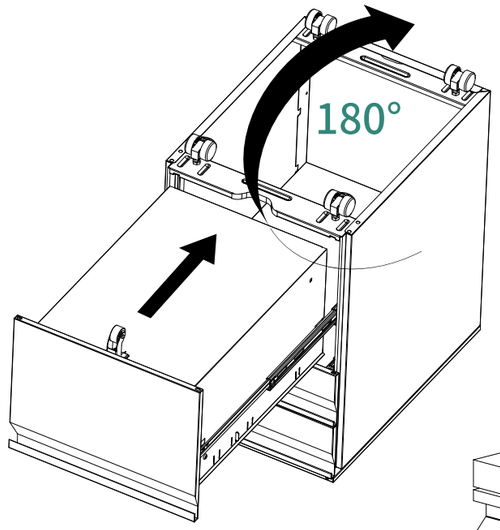



5


6


5



ⓒ1pc


Open the bottom drawer, install the screw, and fix the anti-tip wheel (d) in place.

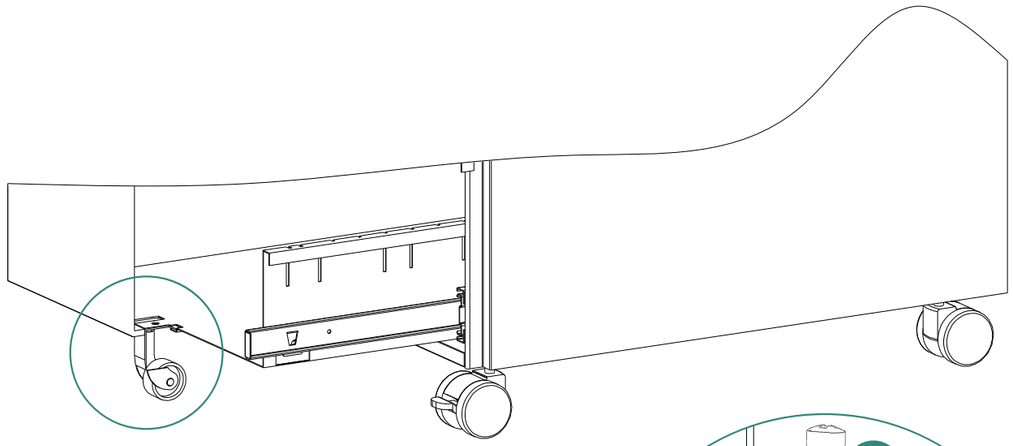

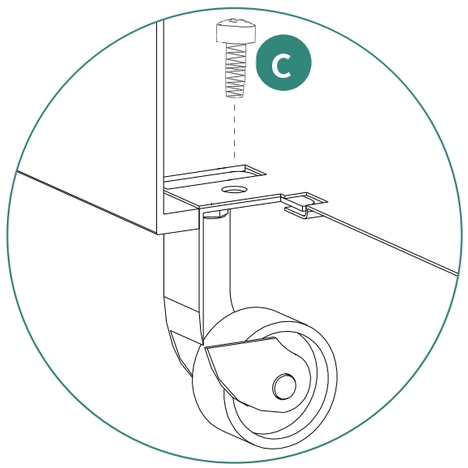



7

6




ⓖ1pc

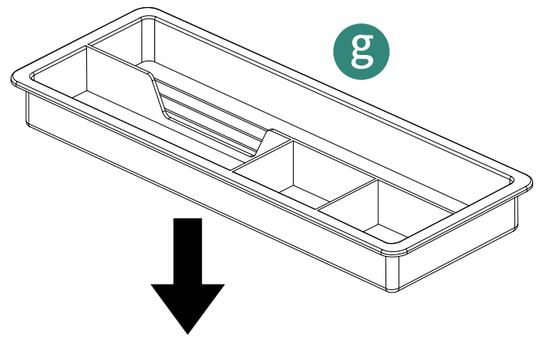


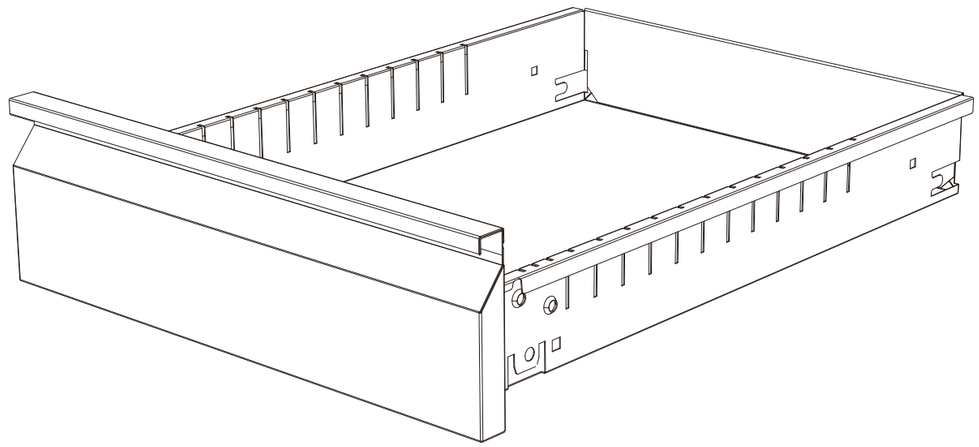



8

7

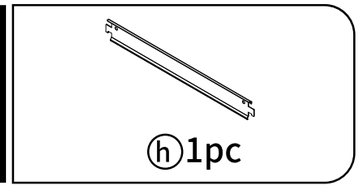

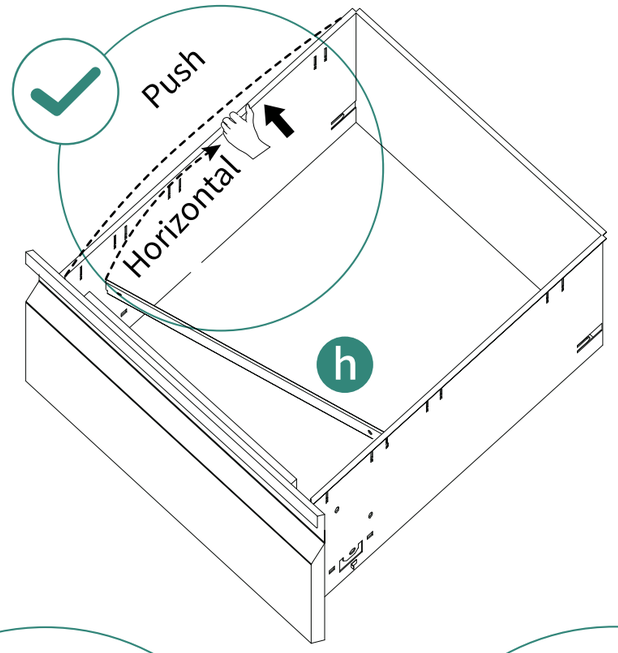


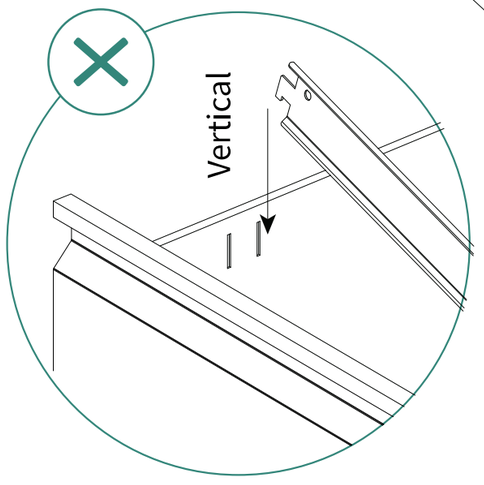


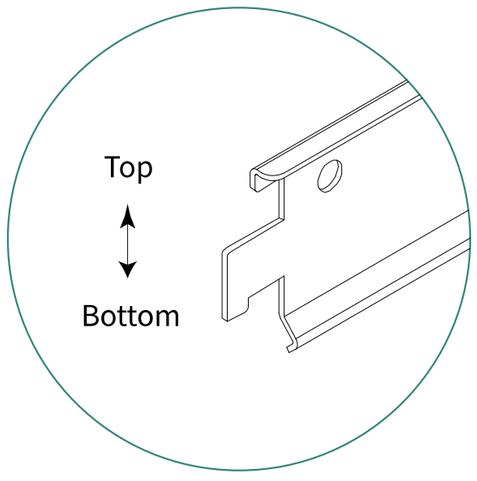

8


Lifting the hanging file bar slightly prior to removal makes removing or replacement easier.

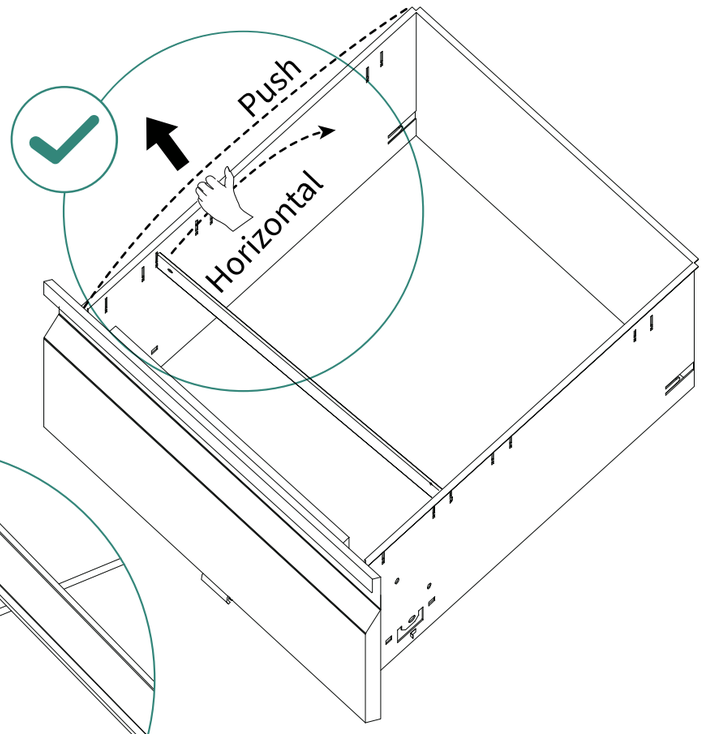


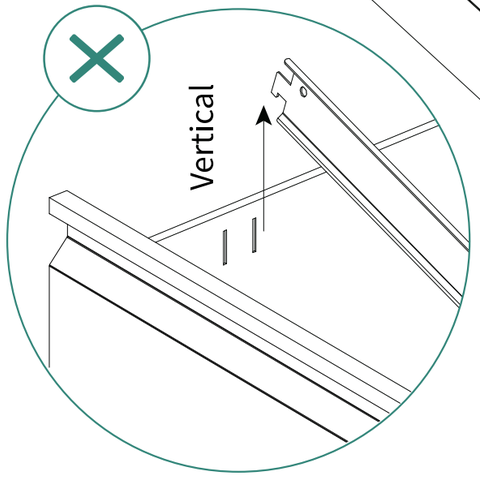


Tips: 3 options available（Letter size, Legal size, A4 size）


Hanging file bar position 1 – for Letter size file folders.

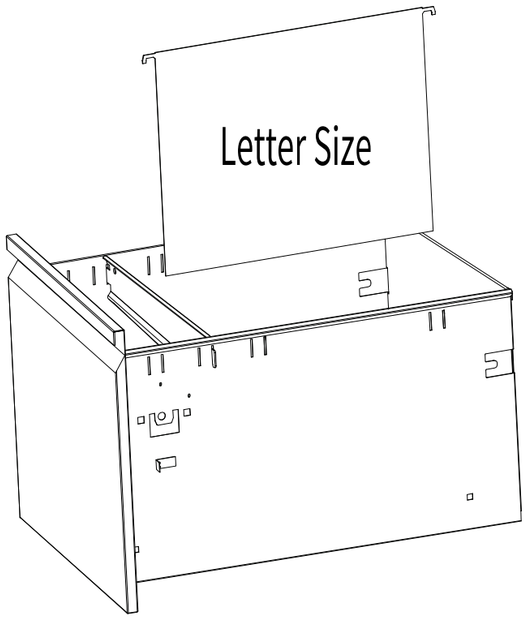

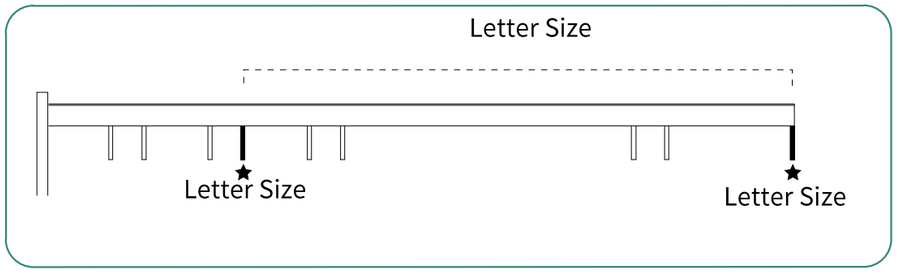



Hanging file bar position 2 – for A4 size file folders.

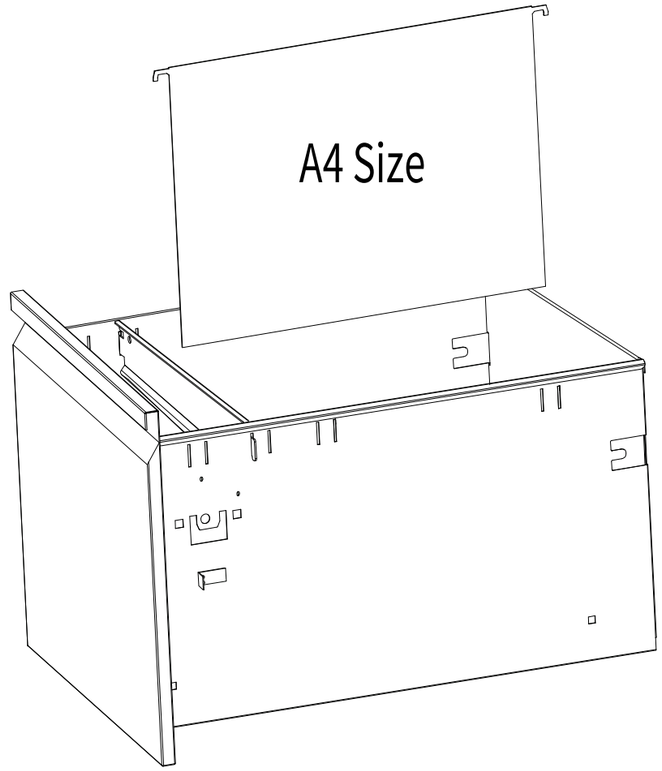

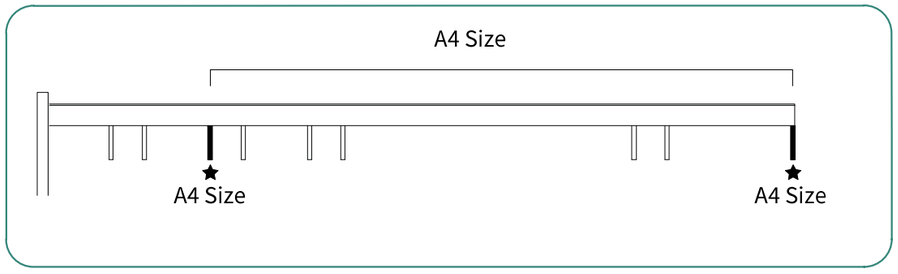


Hanging file bar position 3 – for Legal size file folders.

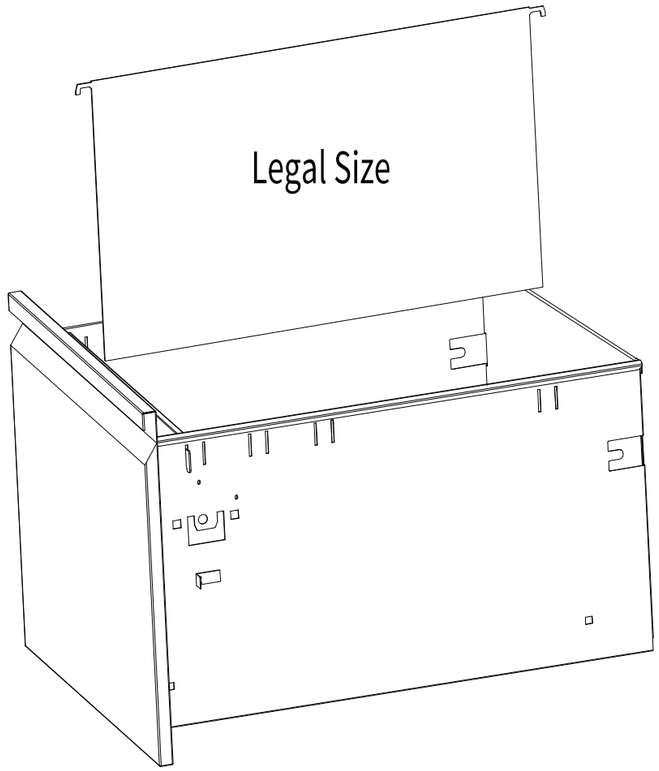

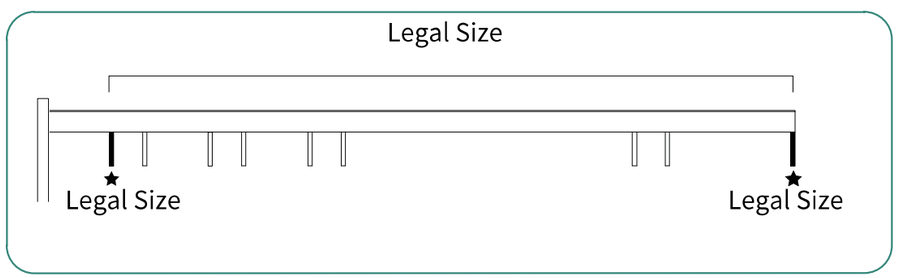

Does not include hanging file bar - for A4 size file folders.

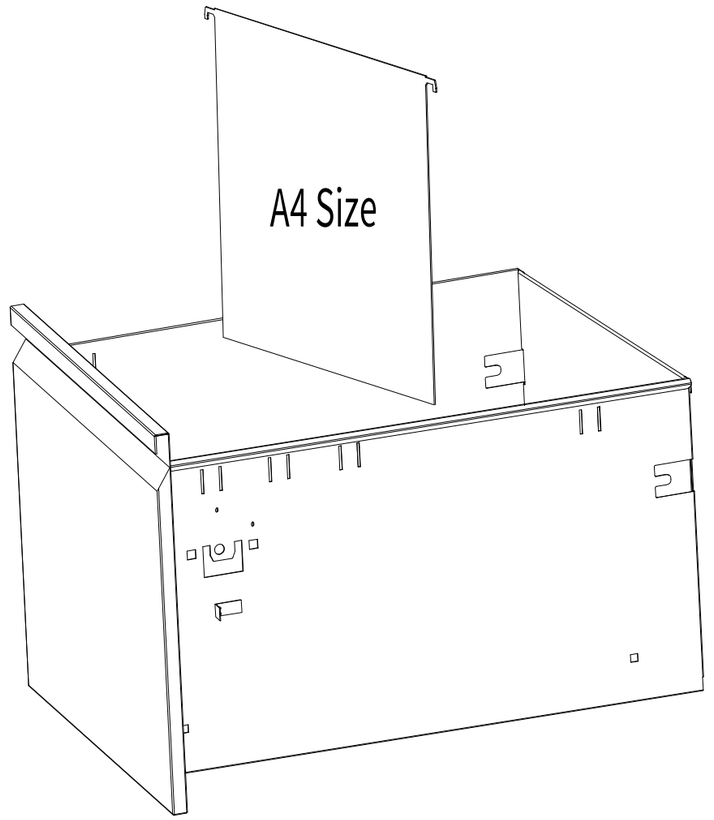

Installation Completed