
BATHROOM VANITY ASSEMBLY INSTRUCTIONS

Open Shelf on the Right

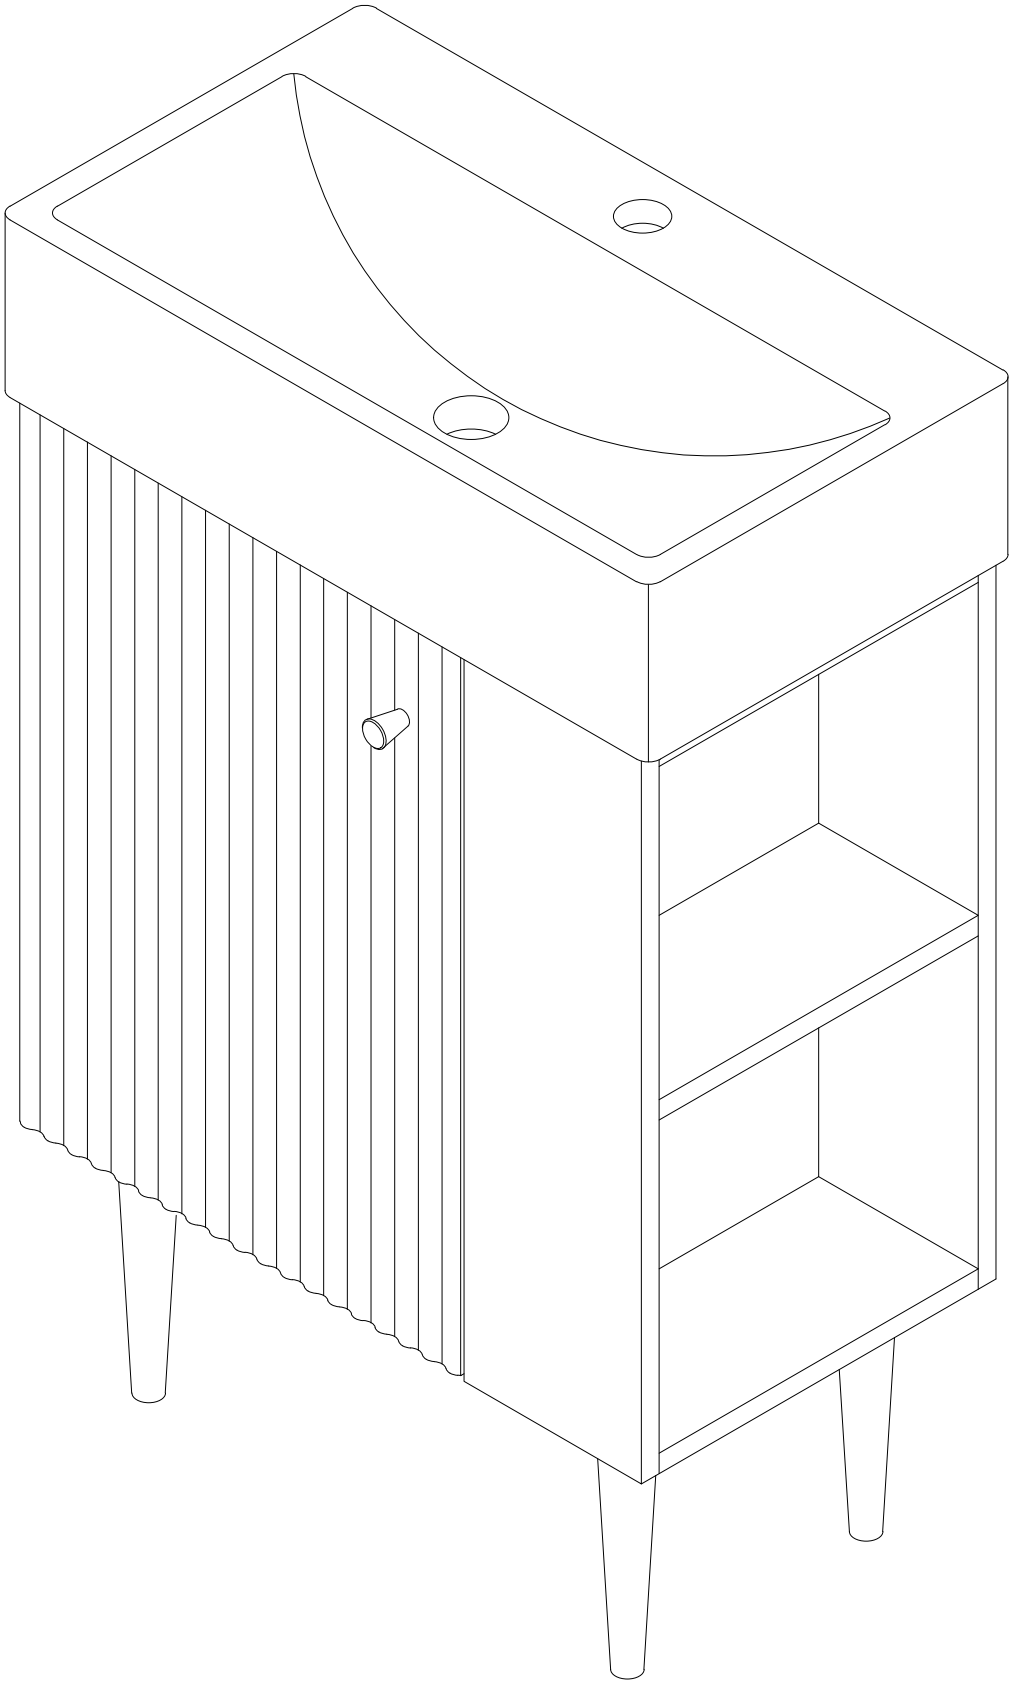

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints


• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightend properly.


Tools Required (Not Supplied)

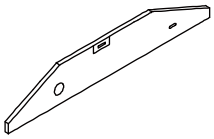


Spirit level




Tape measure

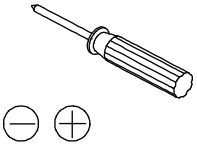

Screwdriver

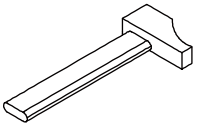

Hammer

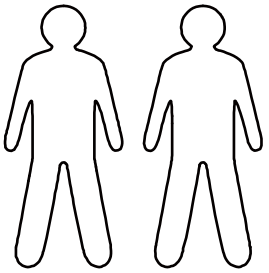




Drill



Drill bit
(Ø8)



Pencil

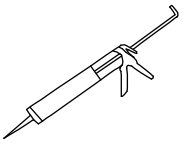

Silicone


Part List

H1




23x

H2

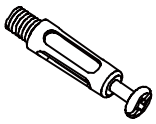


23x

H3




23x

H4



8xΦ8x30

H5




48xM4x16

H6




2x

H7



2x

H8



2x

H9



1x

H10



4x

H11



4xM4x70


H12



4xΦ8x40


STAND-BY SPAREPARTS

H1

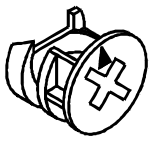


2X

H2

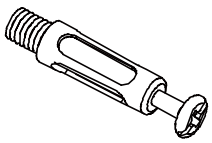



2X


H5

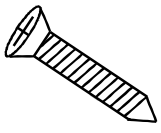


2X

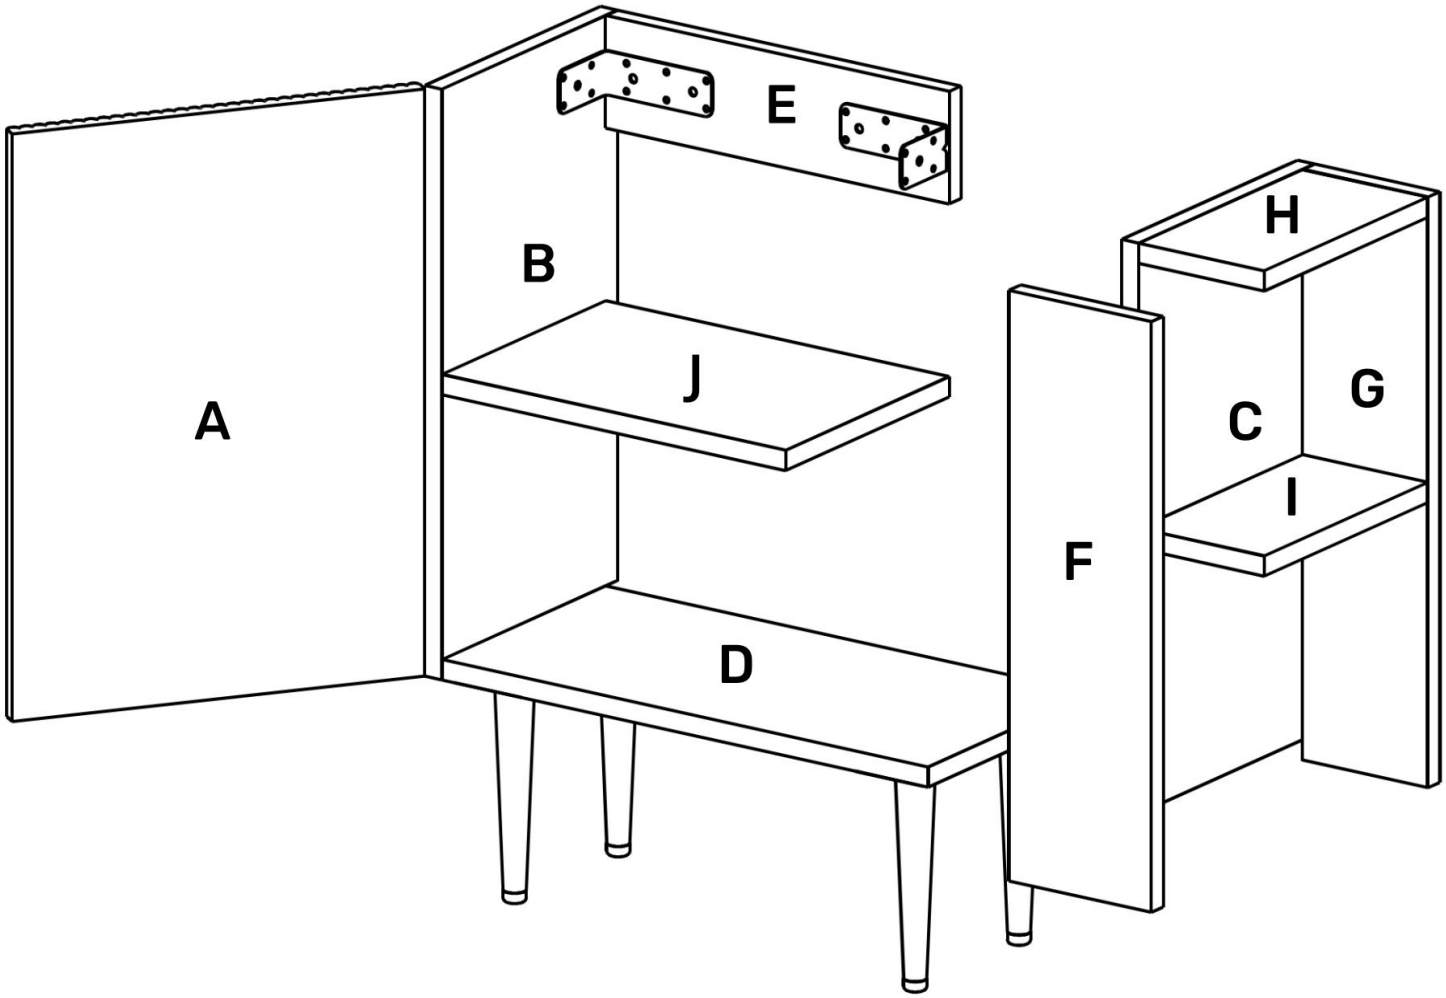

A
B
E
J
D
F
H
C
G
I

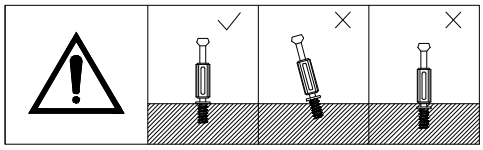

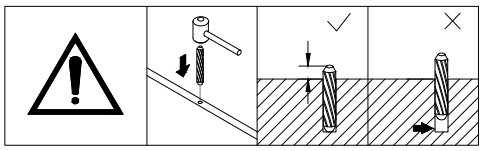



H4x8
H2x23
Outer Side
C
B
C
Inner Side
G
F
H
I
E
J
D

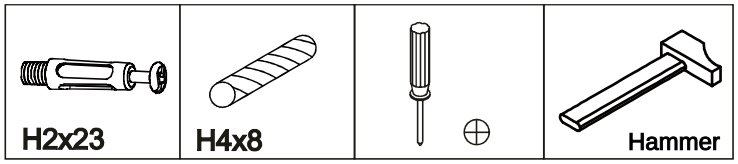

H2x23
H4x8
Hammer

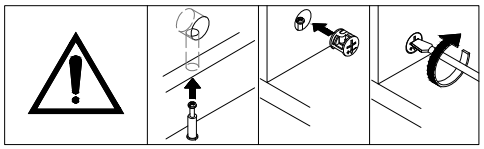



C
E
J
B
Step: 1
Step: 3
Step: 2
H3x8
H1x8

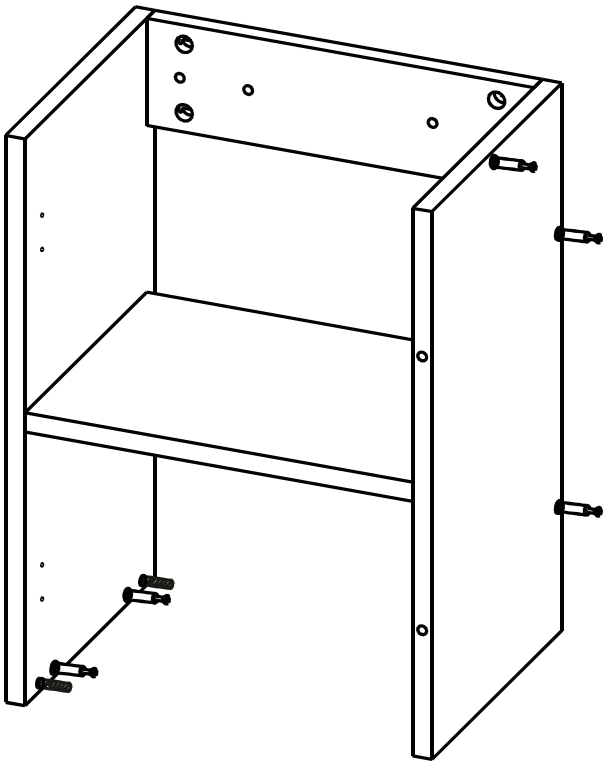



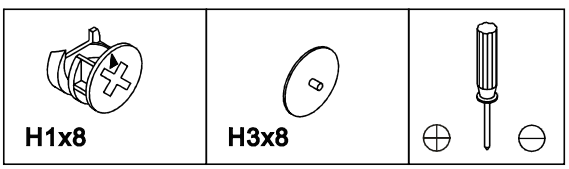

H1x8
H3x8

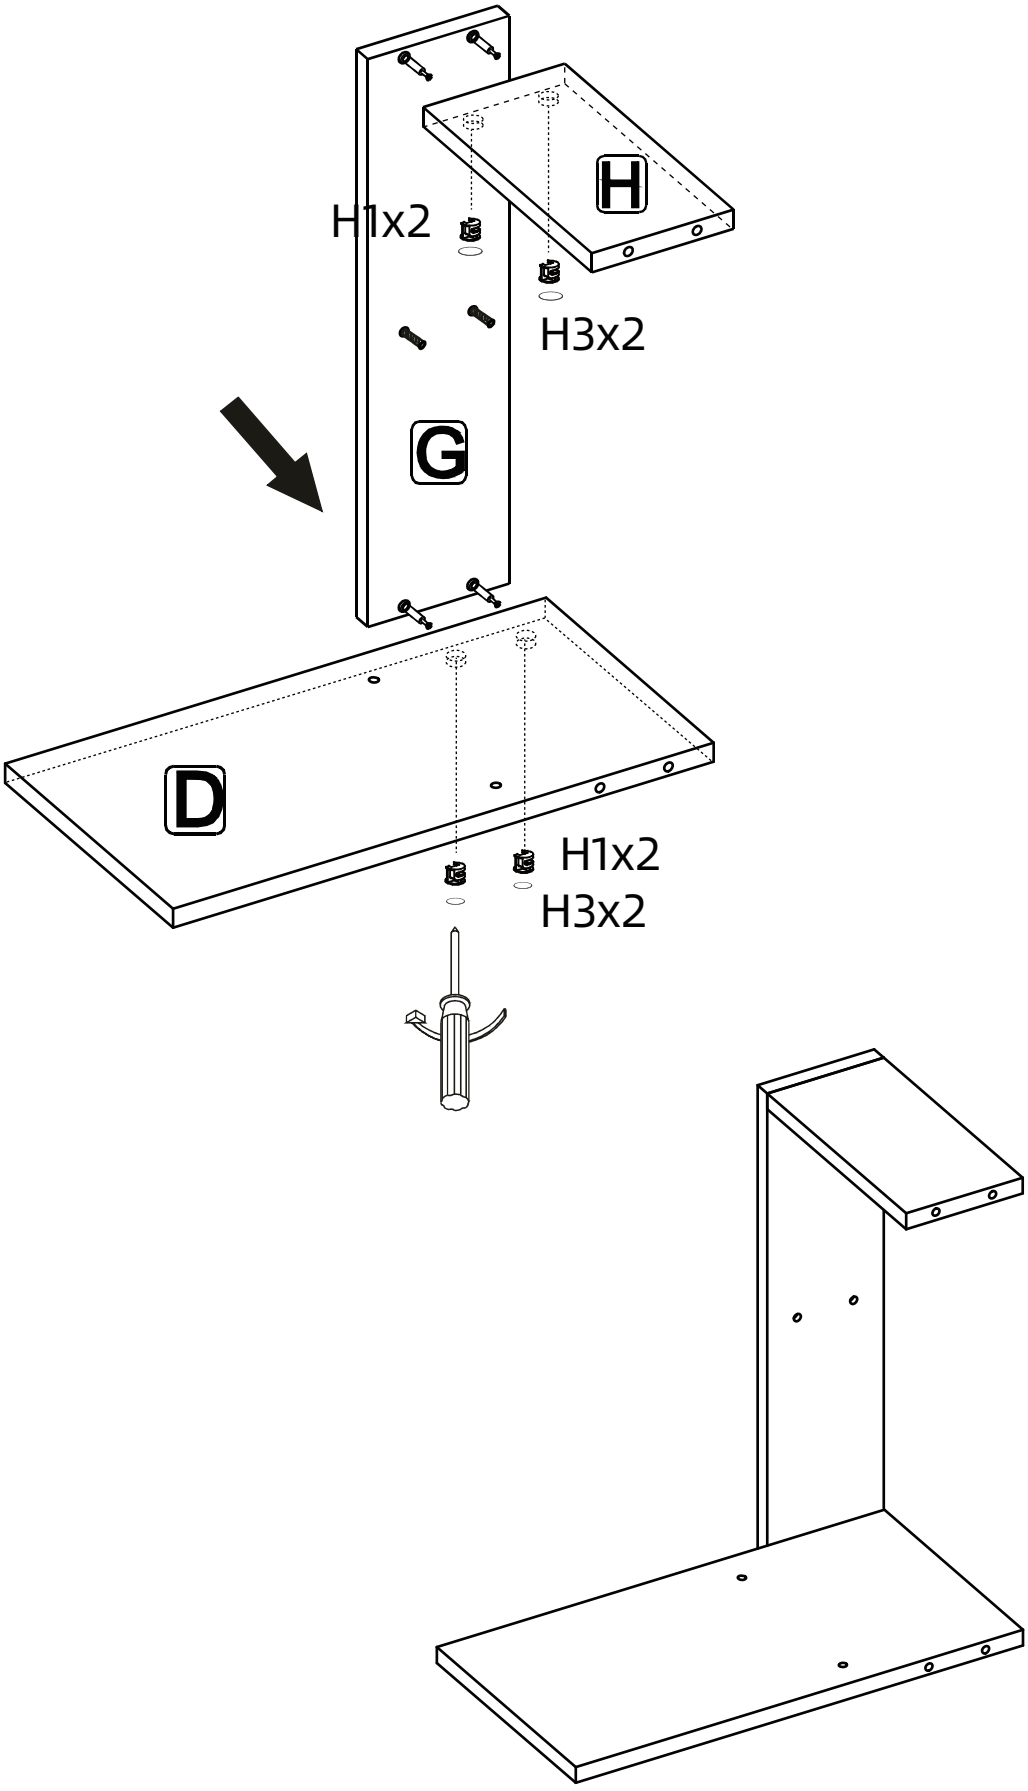

H1x2
H
H3x2
G
D
H1x2
H3x2

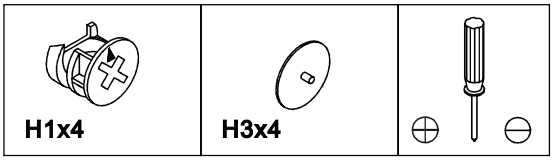

H1x4
H3x4


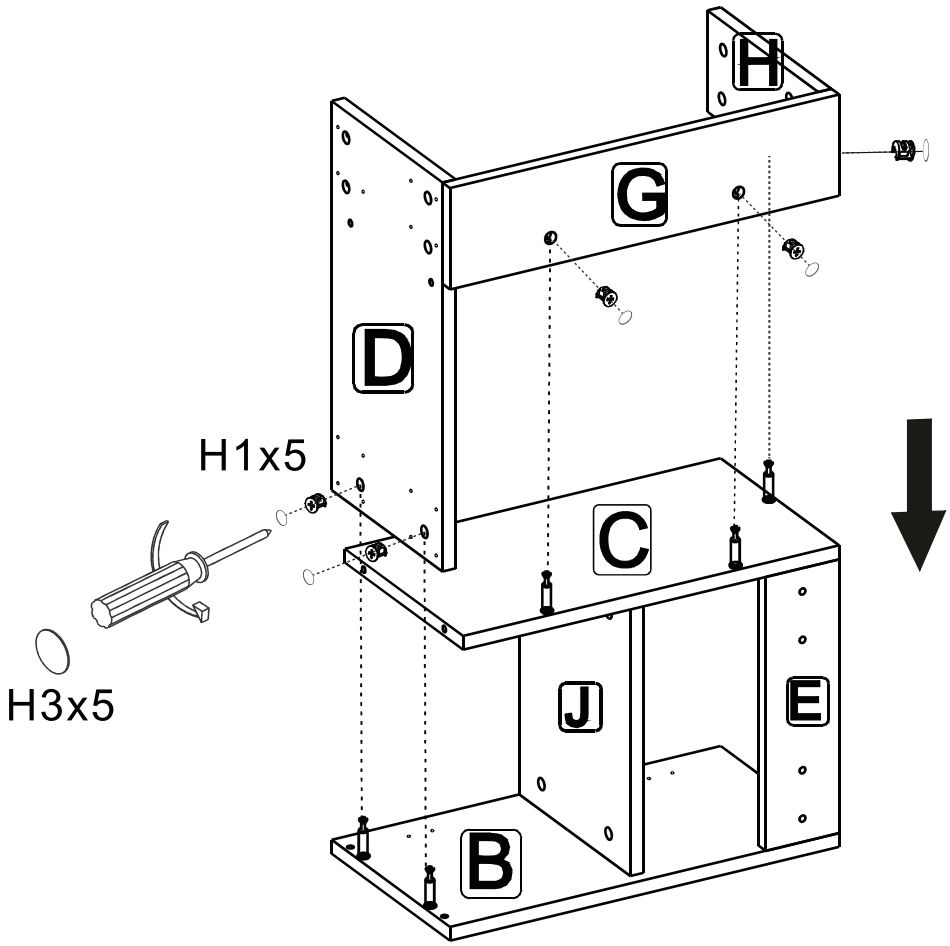


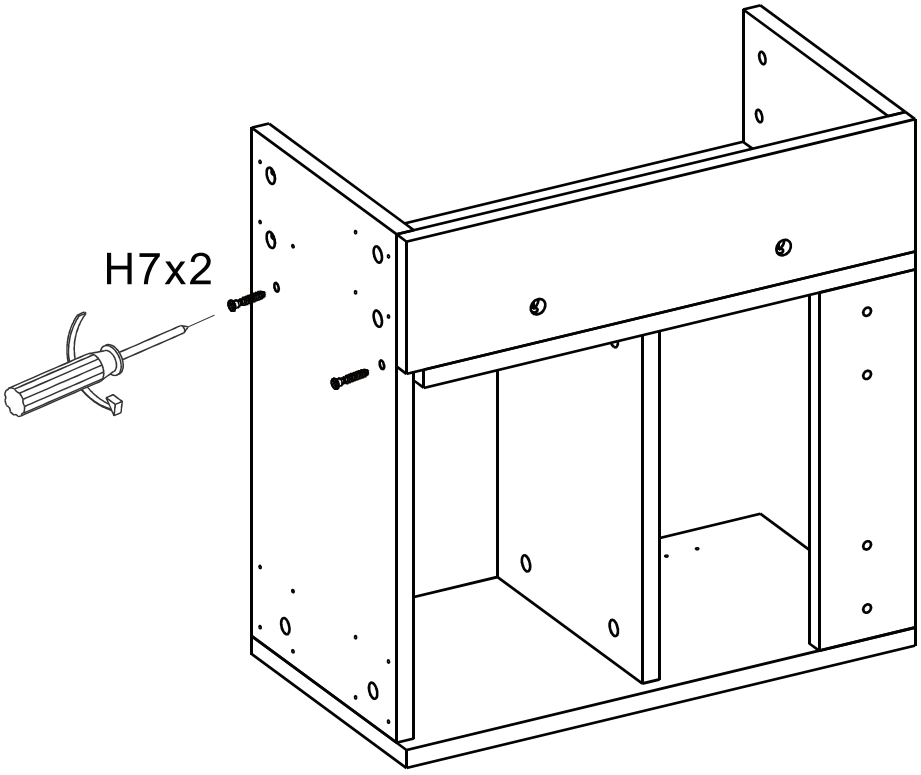


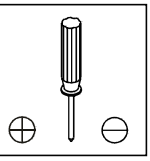
 H1x5	 H3x5	 H7x2	

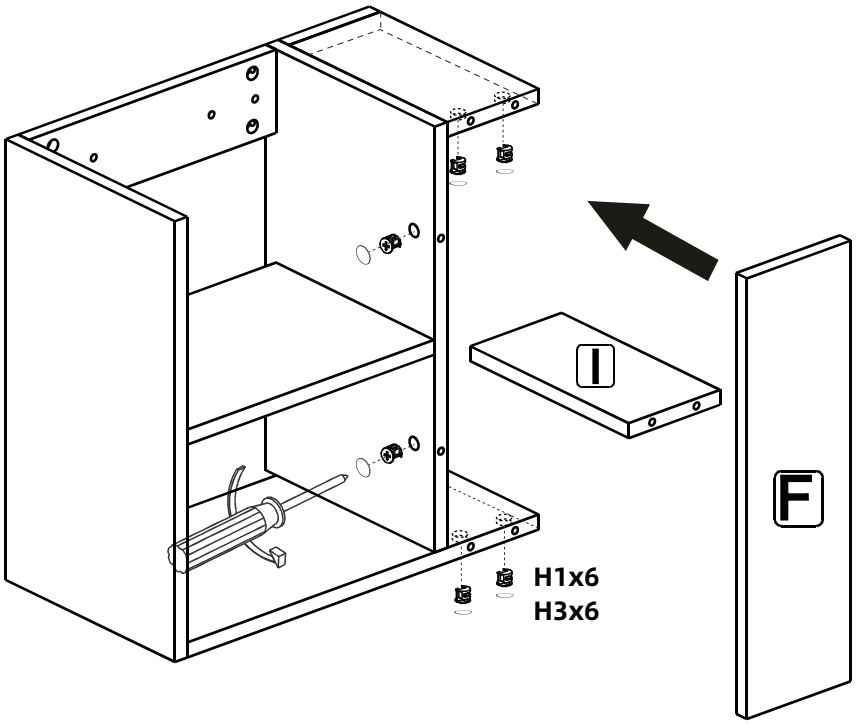

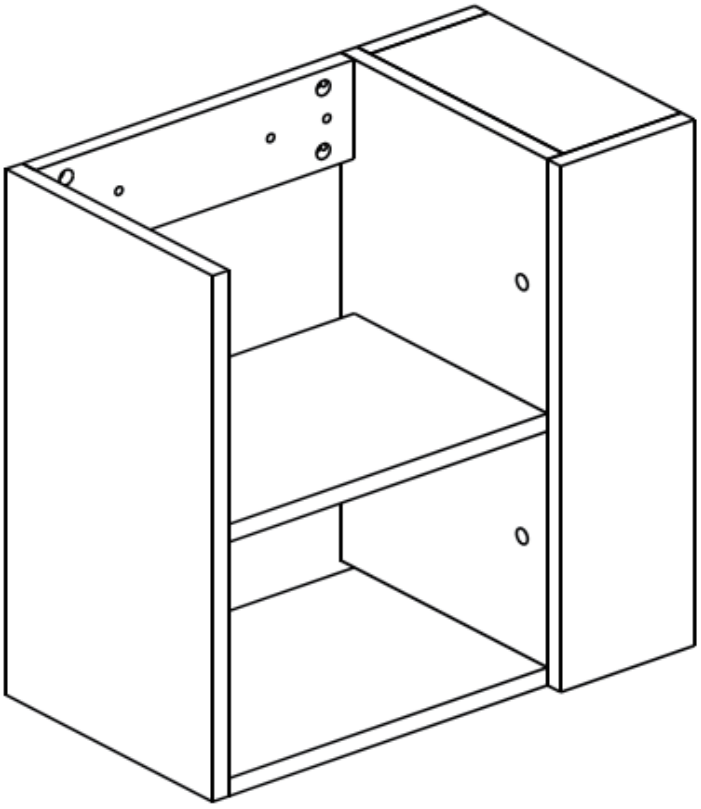


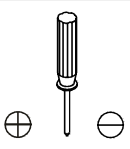
 H1x6	 H3x6	

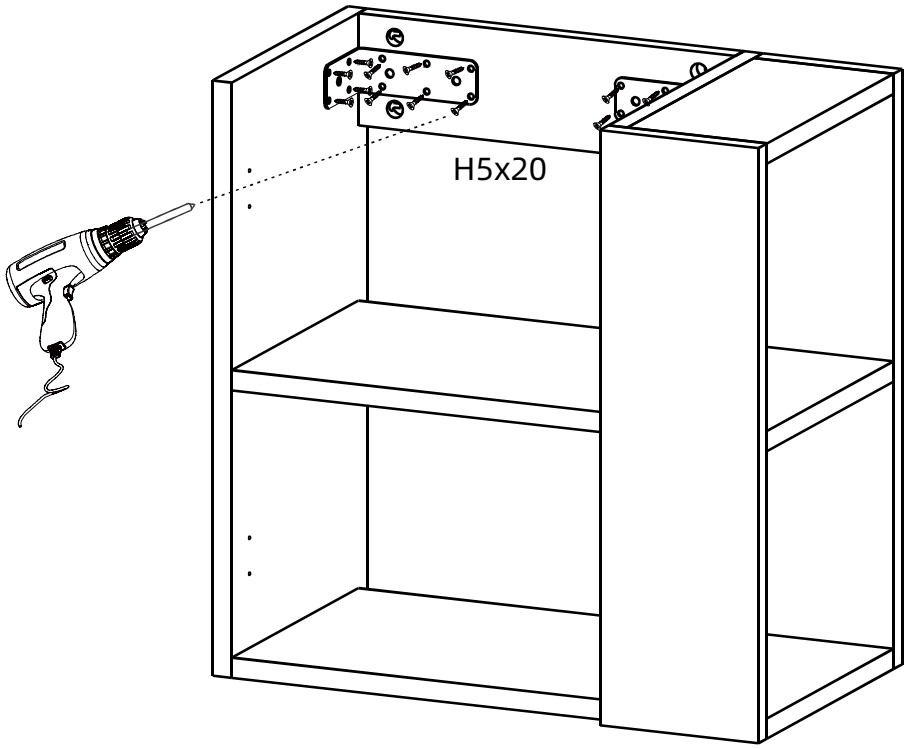


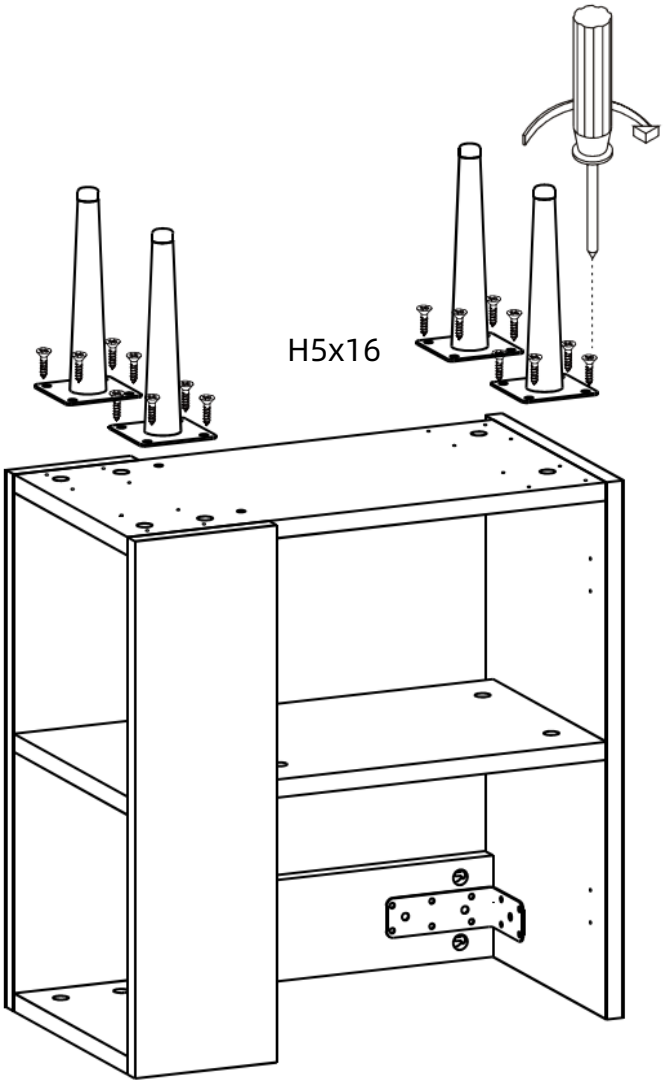


***This is a freestanding bathroom cabinet. The cabinet legs (H10) are optional and may be removed if the customer chooses to install the unit as a wall-hung cabinet.

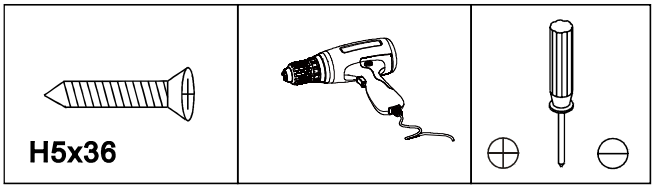


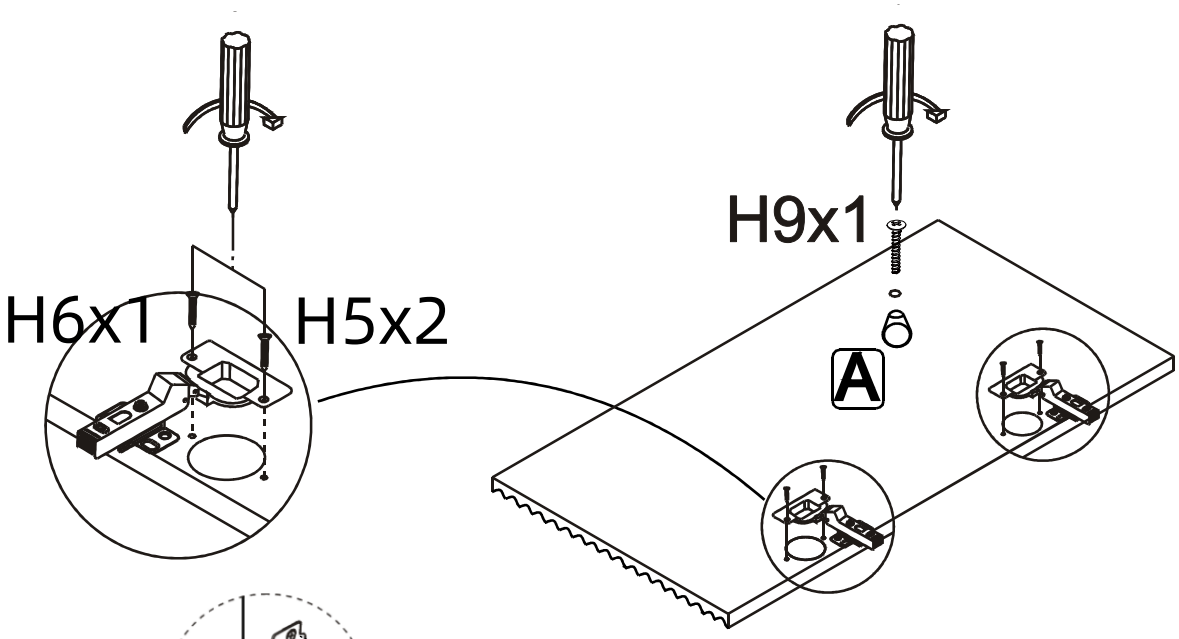

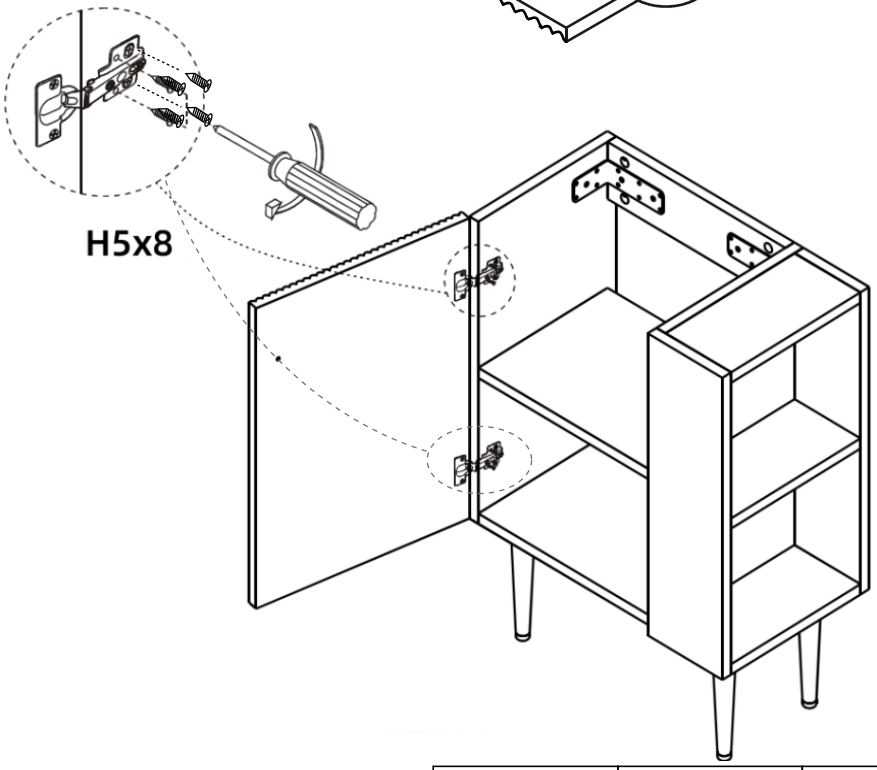


 H5x12	 H6x2	 H9x1	


Adjust the door up and down to match the cabinet.

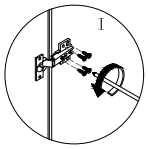

I:loosen the screw.

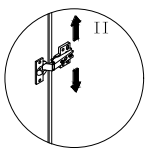


II:Adjust the upper and lower position.

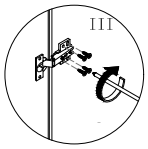


III:tighten the screw.

Adjust the door left and right to match the cabinet for suitable crack of the door

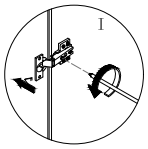


I:loosen the screw to keep hinge apply force toward the direction of arrow.

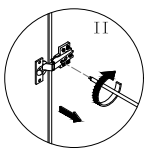


II:tighten the screw to keep hinge apply force toward the direction of arrow.


Adjust the door backwards and forwards to match the cabinet.

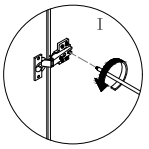



I:loosen the screw.

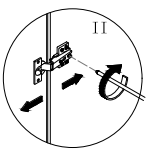



II:Adjust the distance between frontand back.

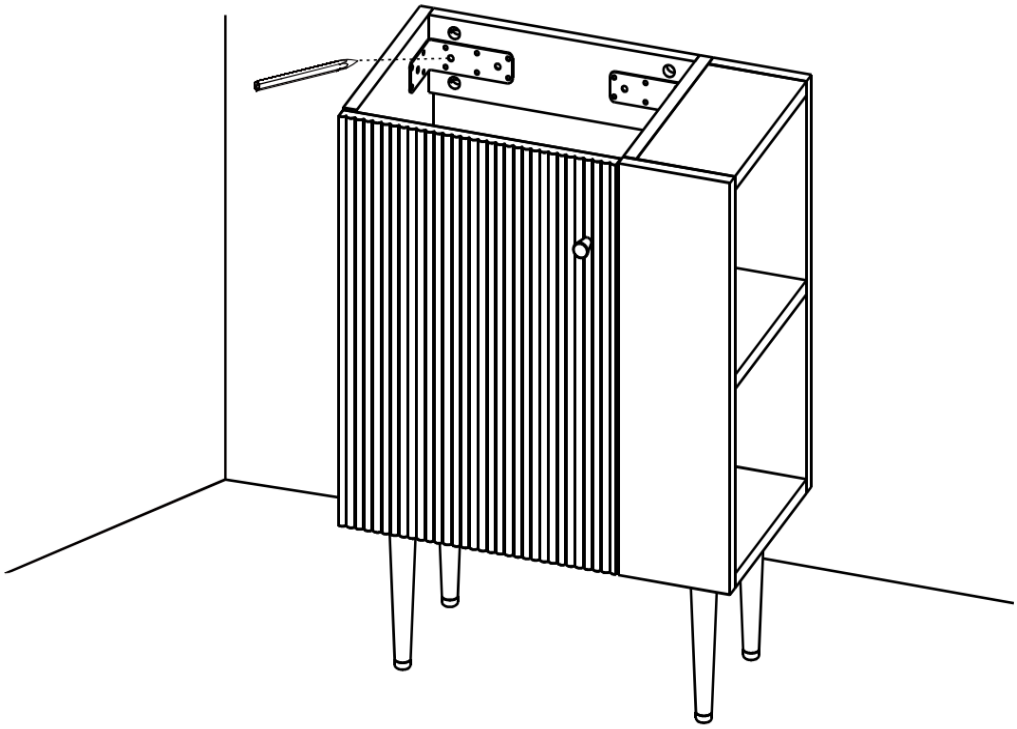

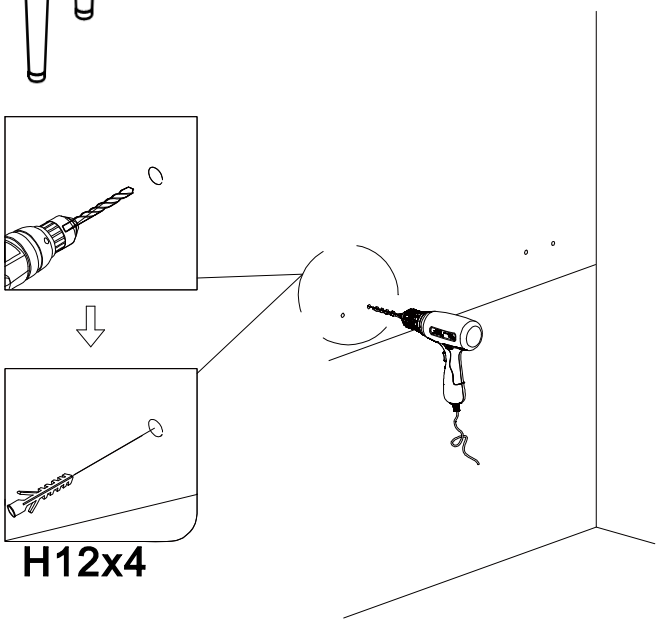
H12x4

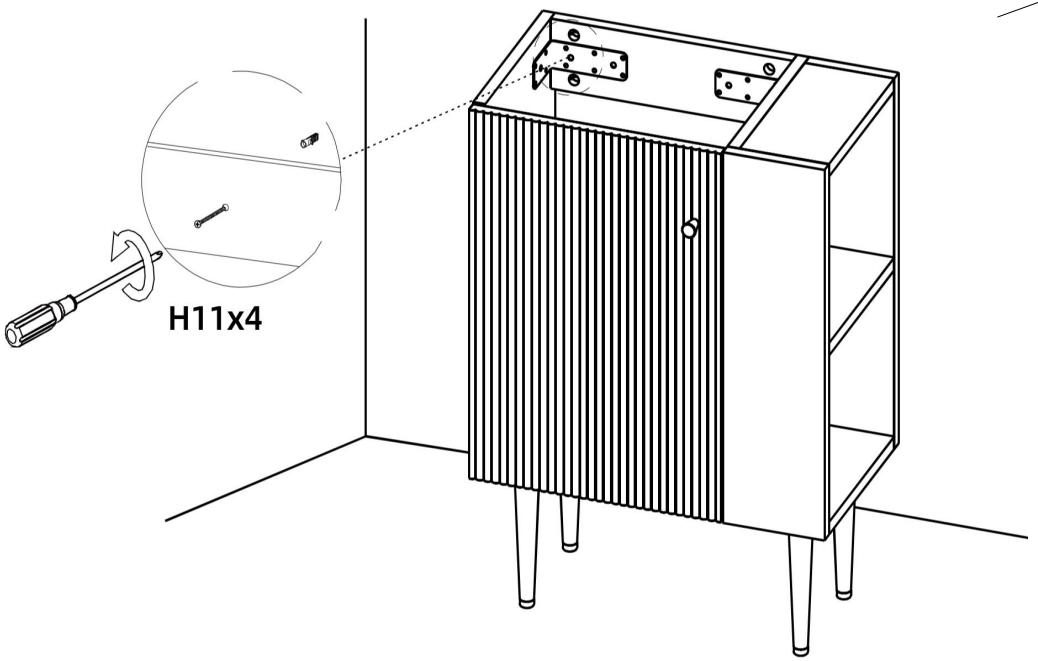
H11x4

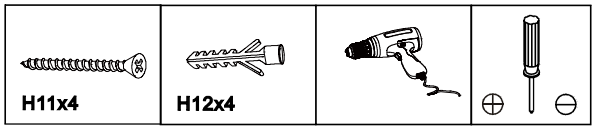
H11x4
H12x4

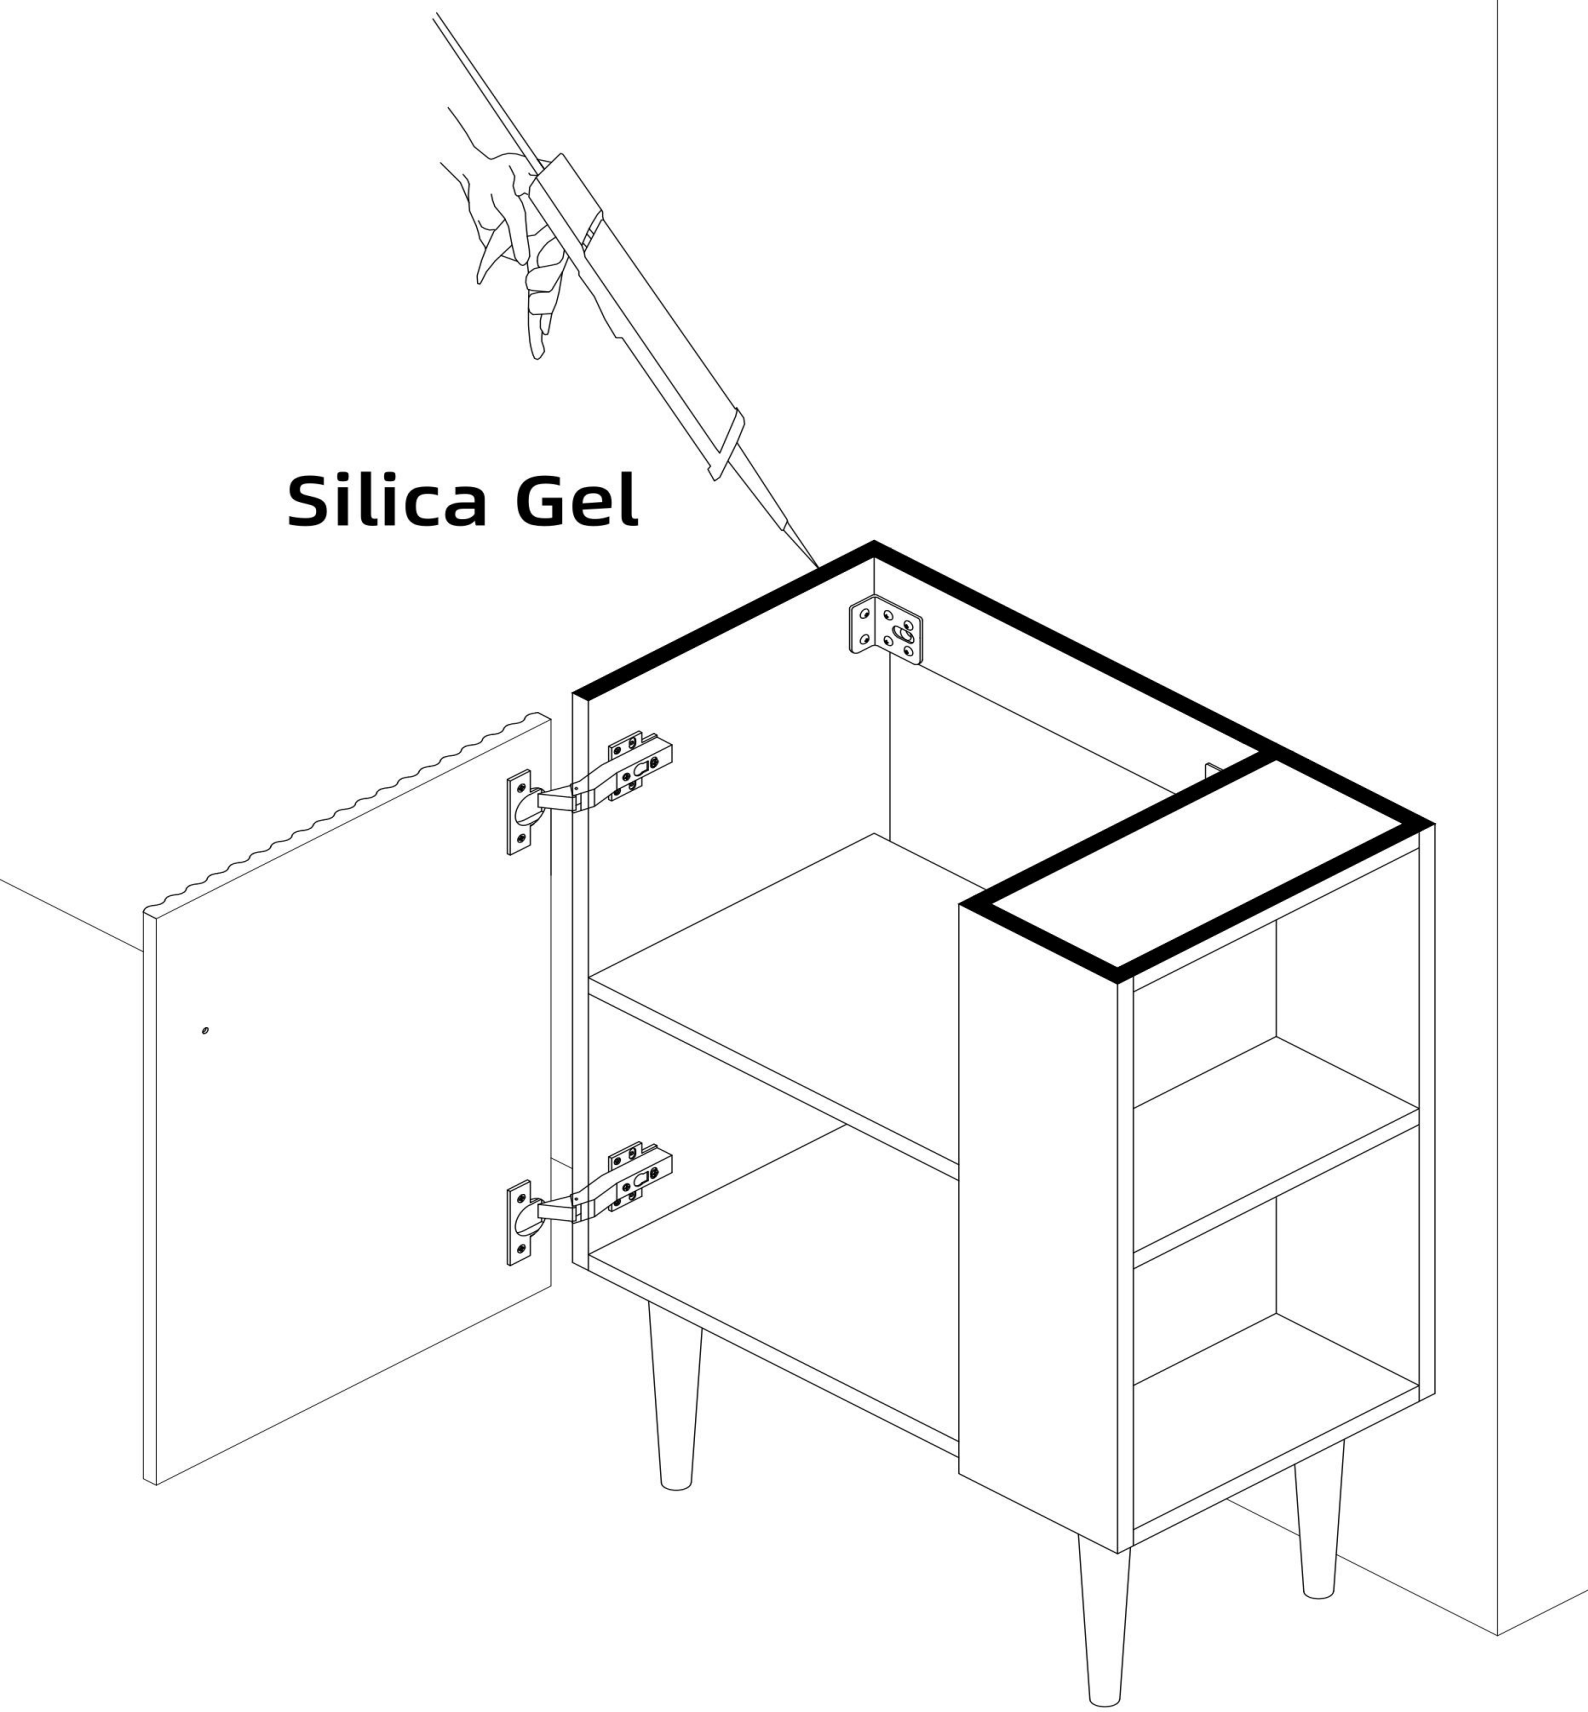
Silica Gel

Wall

