



BED FRAME

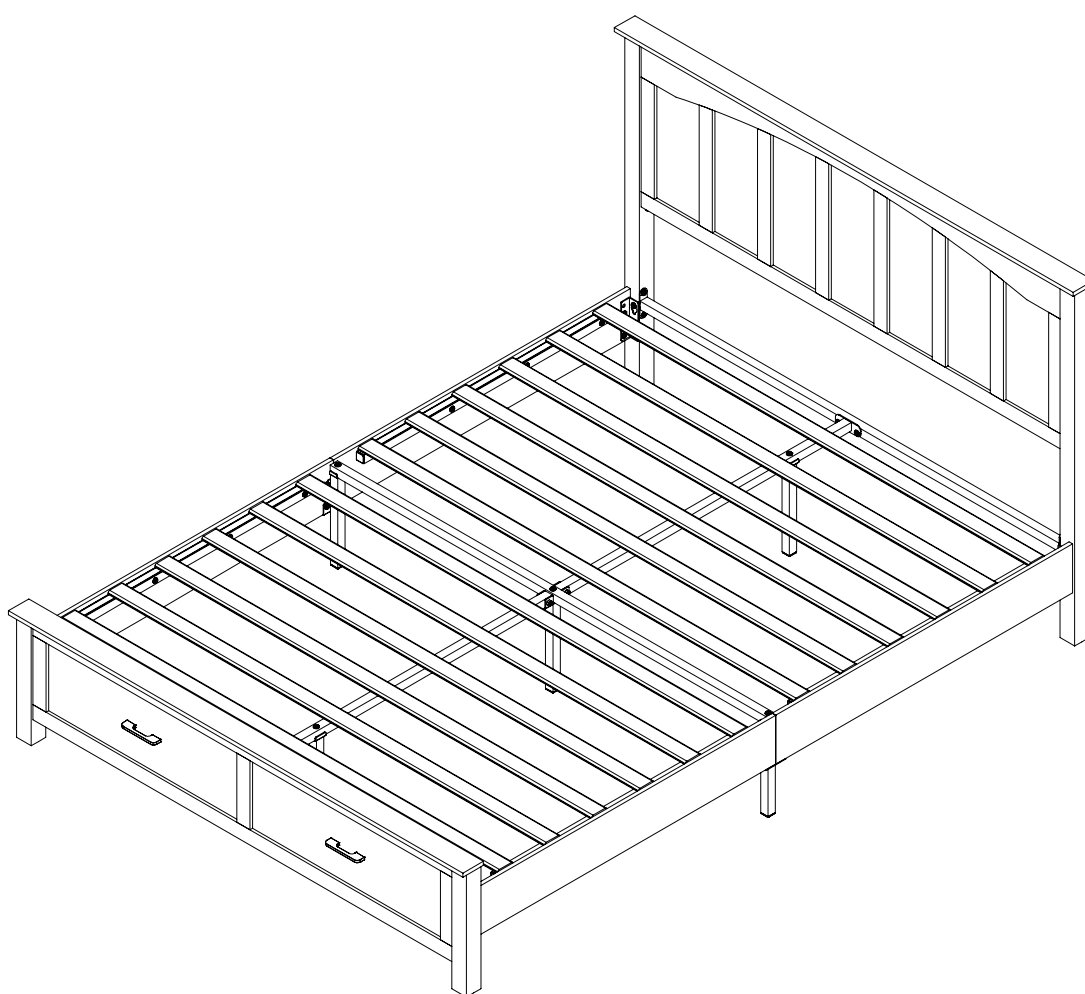

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction

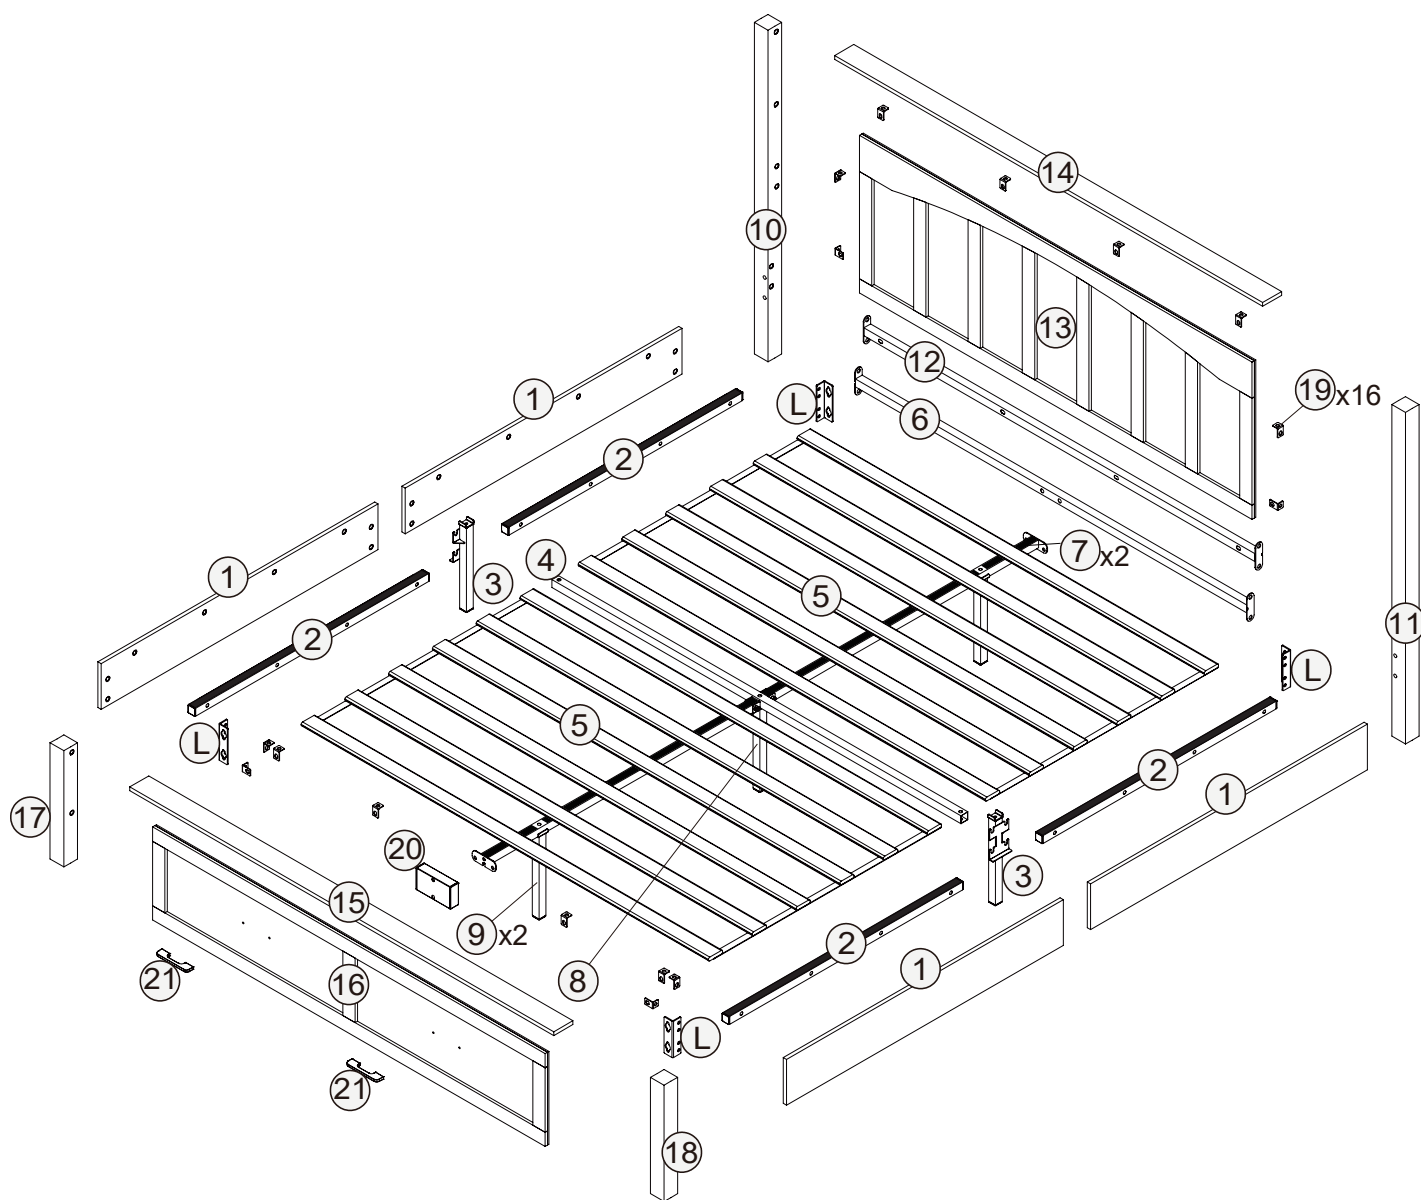





B624-F/Q

Important Note

HARDWARE NOTE :


1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

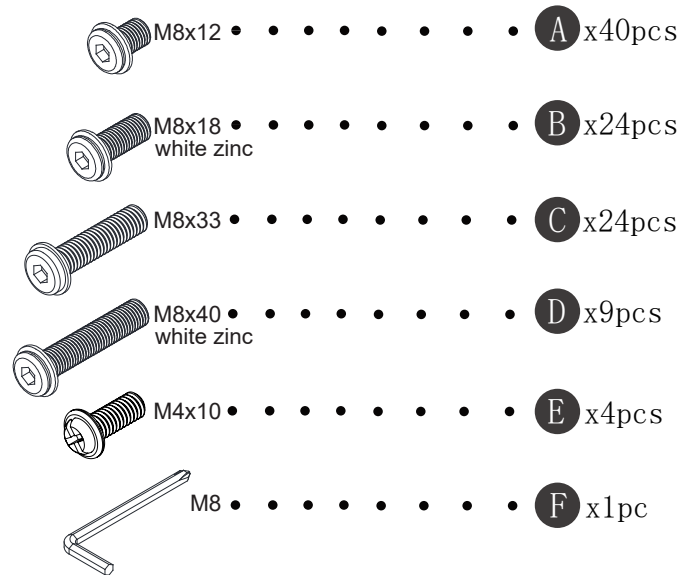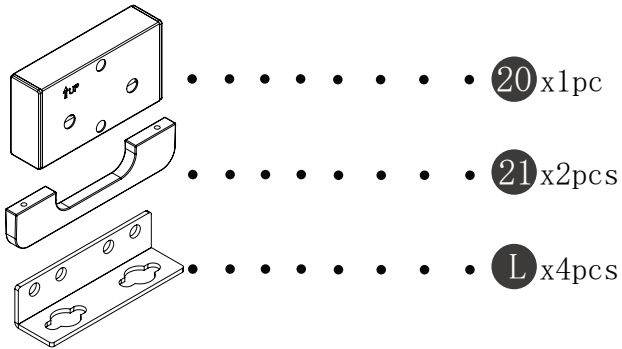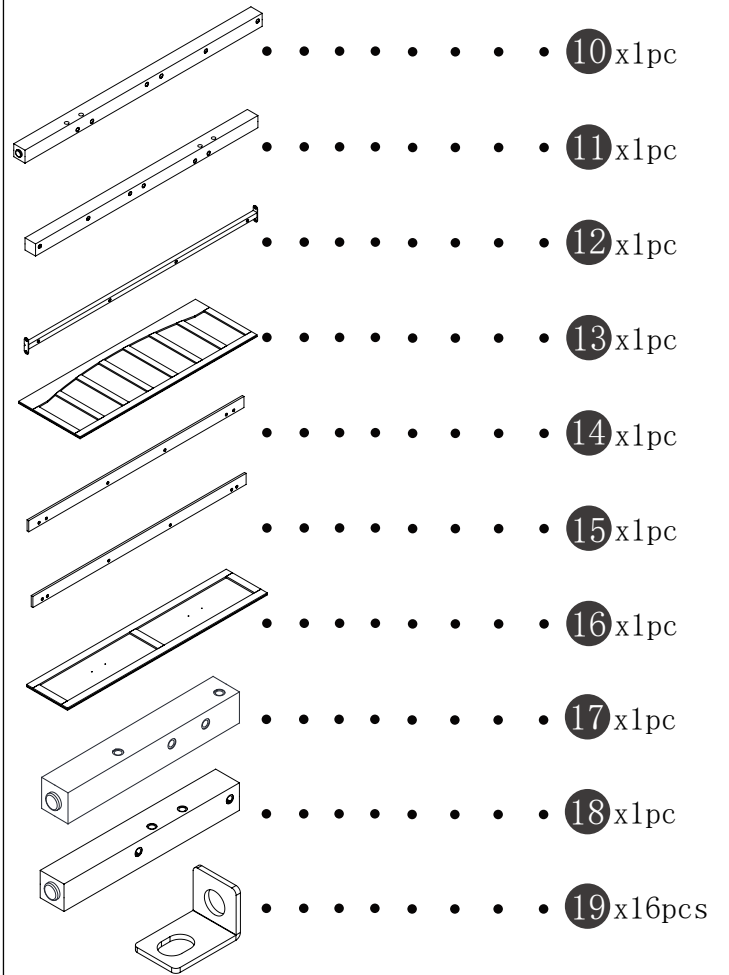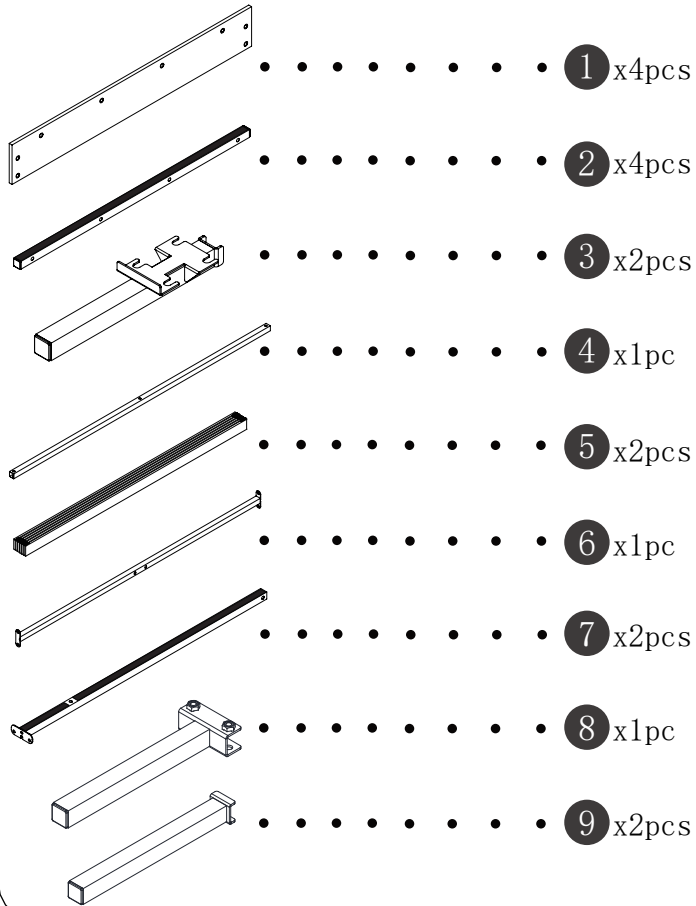

1


⚠ Do not fully tighten the screws yet.

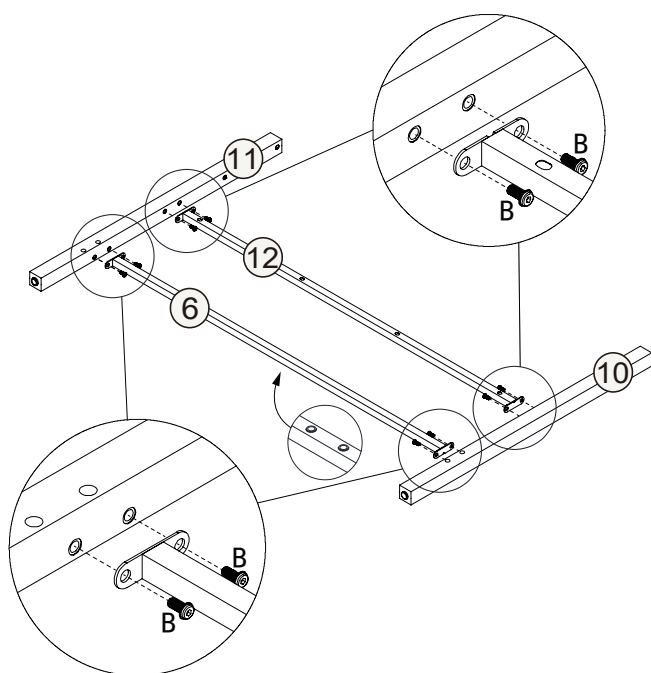

B		8pcs	white zinc
M8x18			

2


⚠ Do not fully tighten the screws yet.

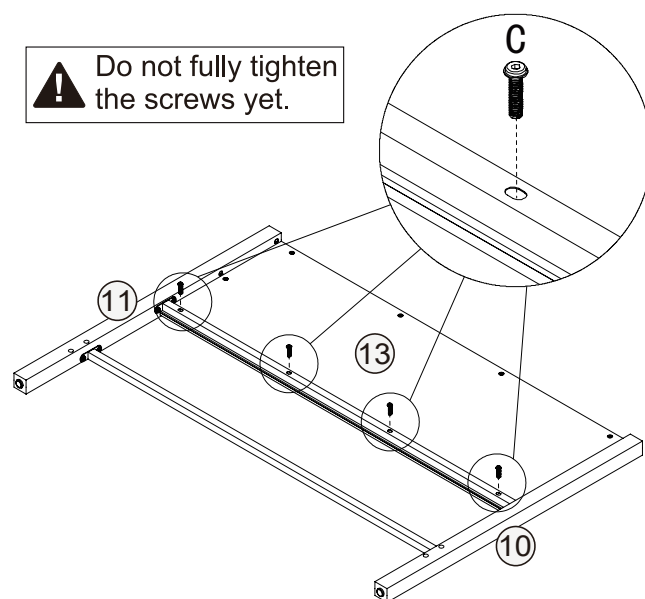

C		4pcs	
M8x33			

3


⚠ Do not fully tighten the screws yet.

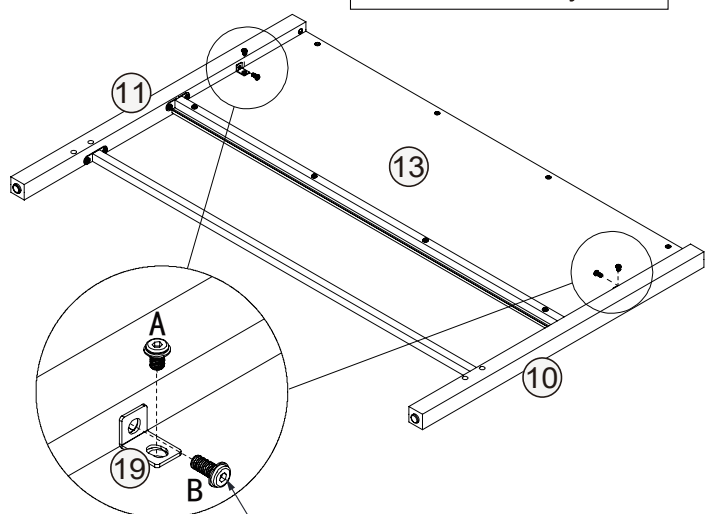

A		2pcs	
M8x12			
B		2pcs	white zinc
M8x18			

4


⚠ Do not fully tighten the screws yet.

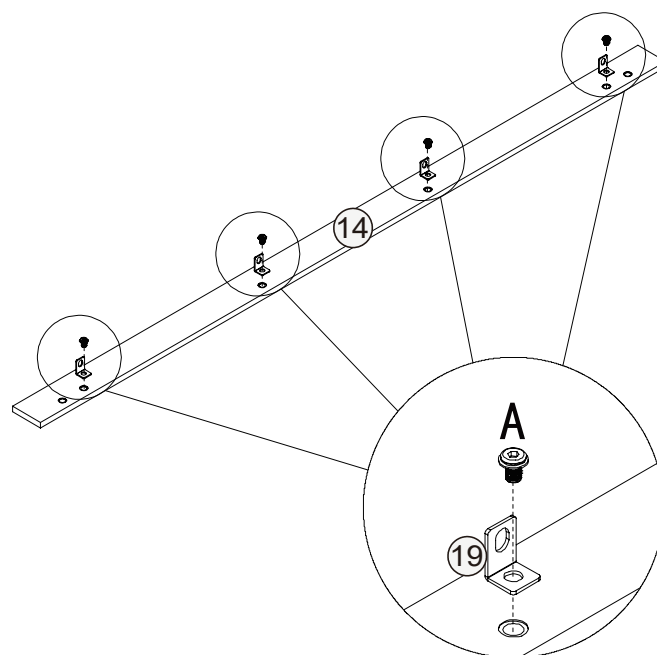

A		4pcs	
M8x12			

5

⚠ Do not fully tighten the screws yet.

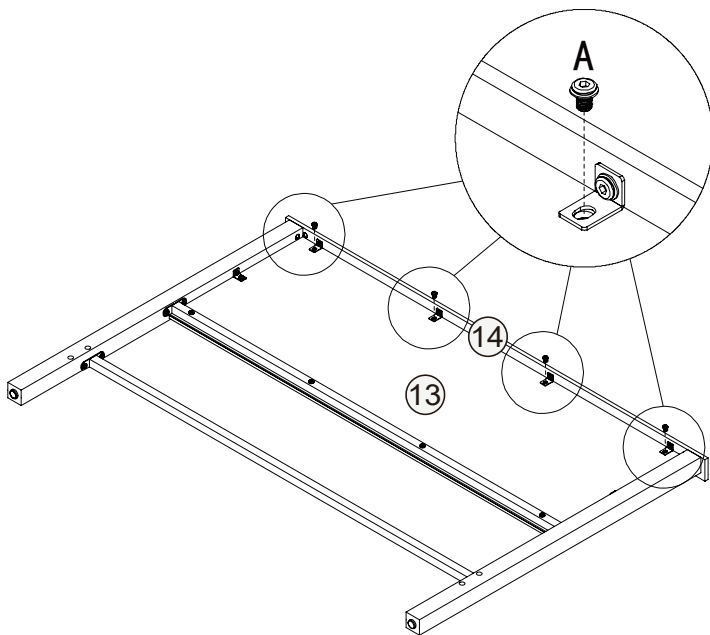


A		4pcs
M8x12		

6

⚠ Fully tighten all the screws.


to Assemble first

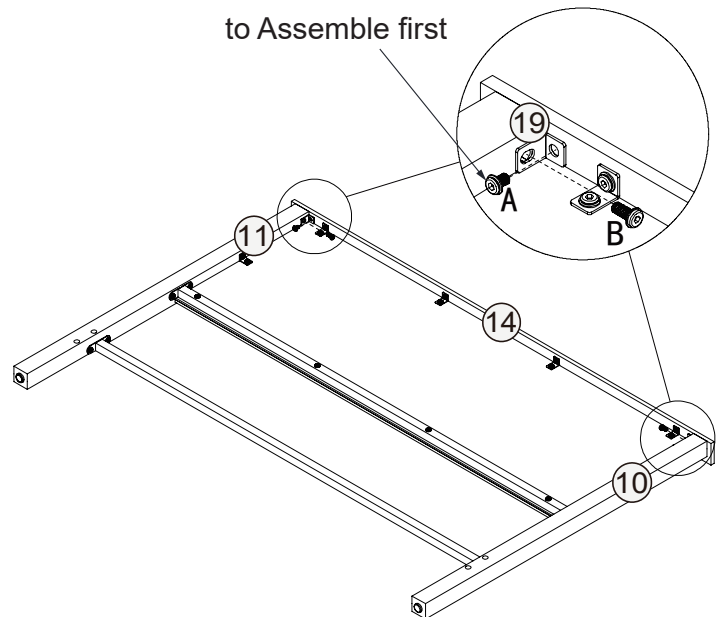

A		2pcs
M8x12		
B		2pcs
M8x18 white zinc		

7


x2

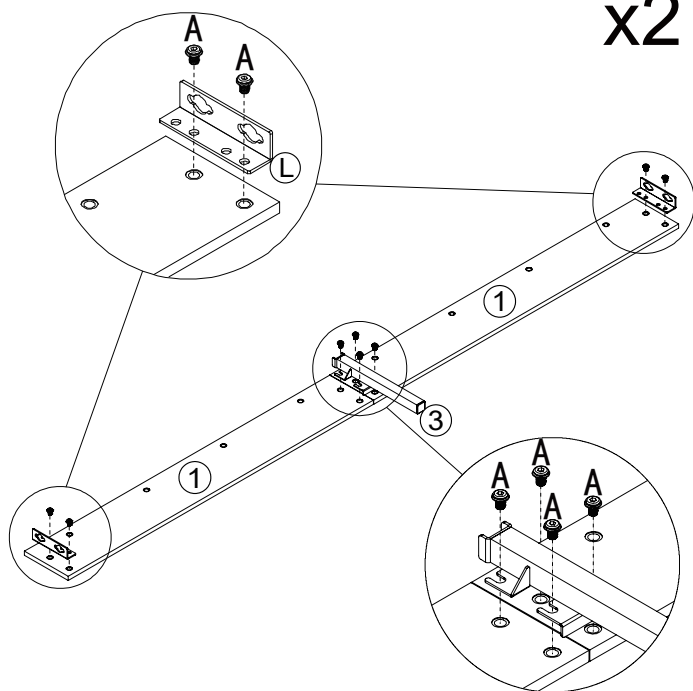

A		16pcs
M8x12		

8


x2

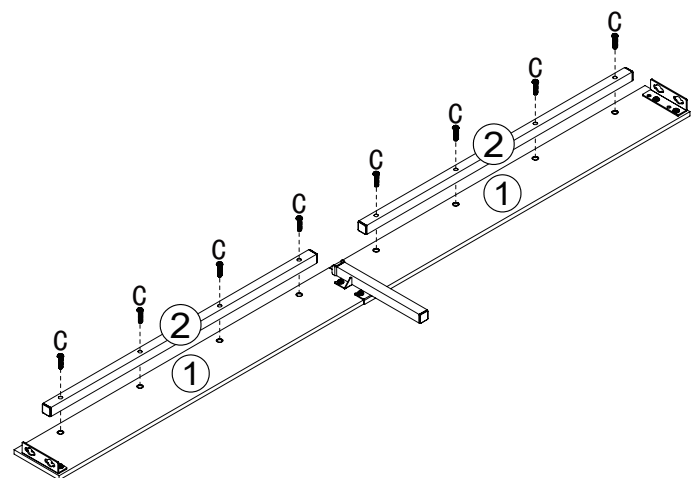

C		16pcs
M8x33		

9


to Assemble first

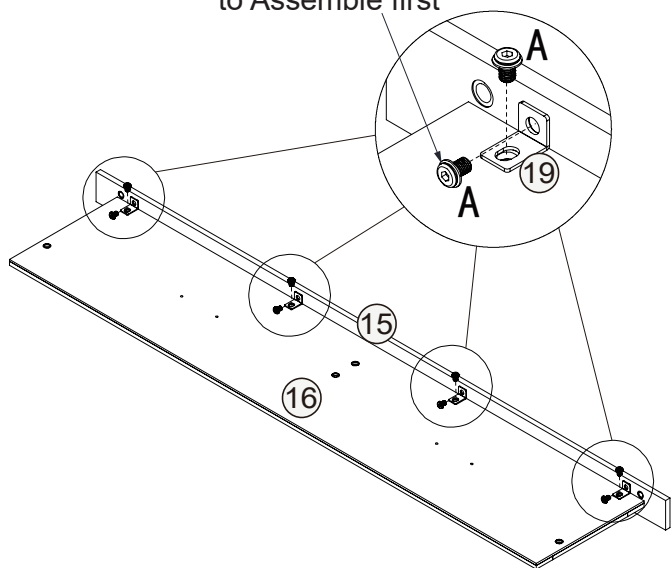

A		8pcs
M8x12		

10

to Assemble first

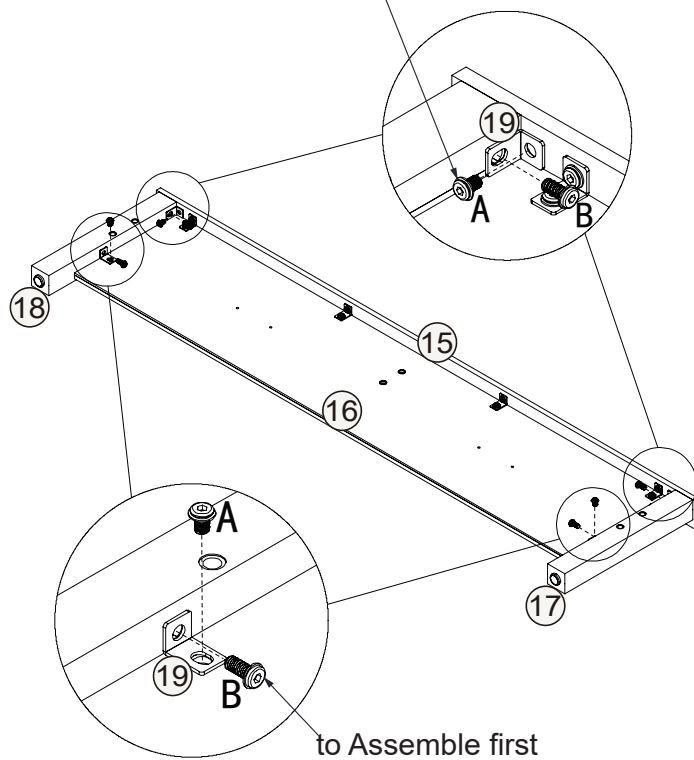


A		4pcs
M8x12		
B		4pcs
M8x18		
white zinc		

to Assemble first


11

! The arrow points upwards.

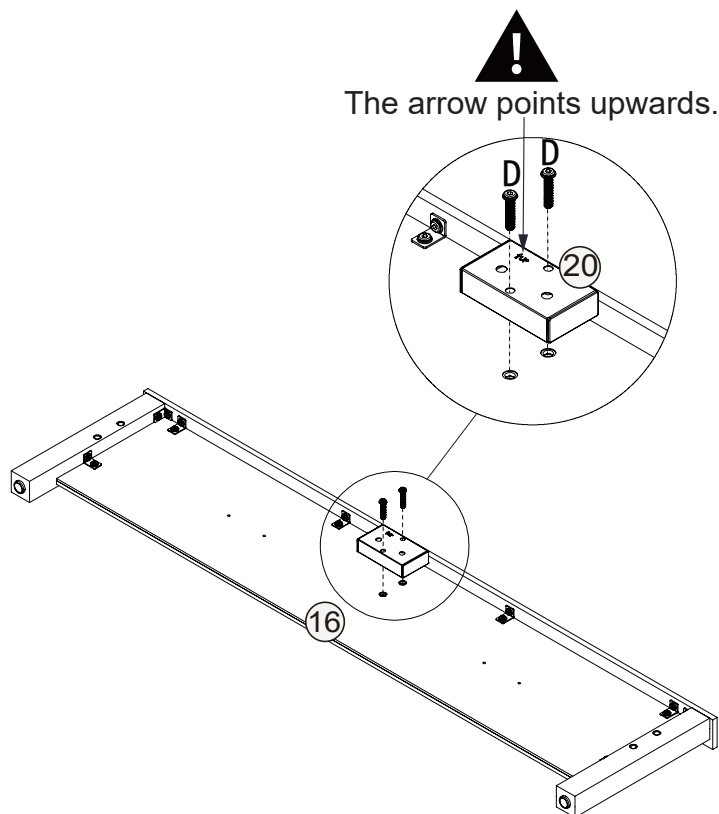


D		2pcs
M8x40		
white zinc		

12

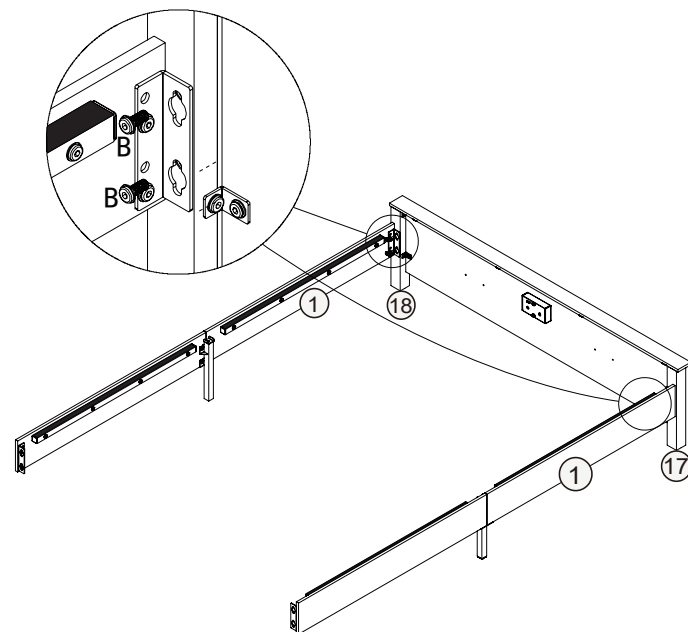


B		4pcs
M8x18		
white zinc		

13

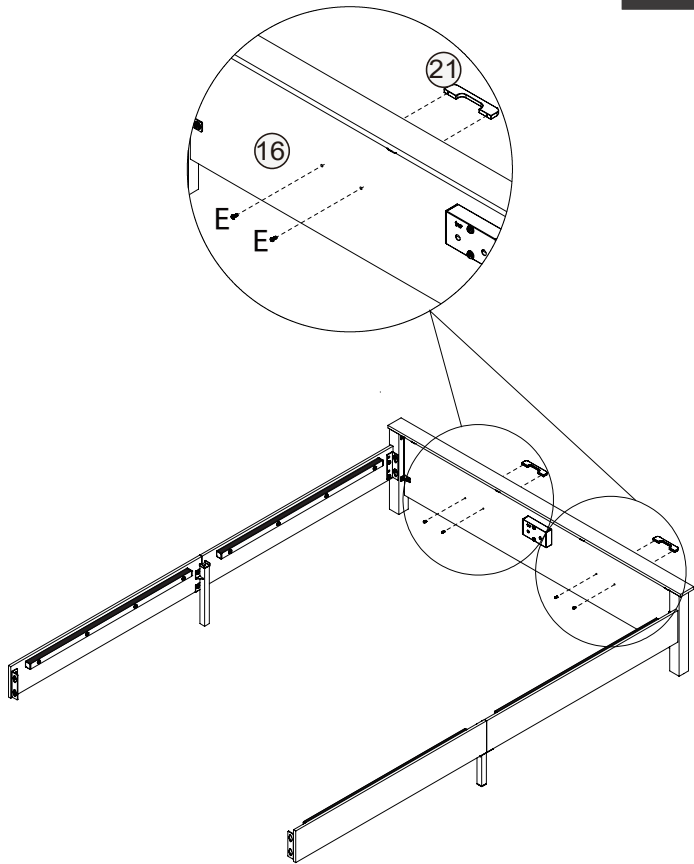

E		4pcs
	M4x10	


14

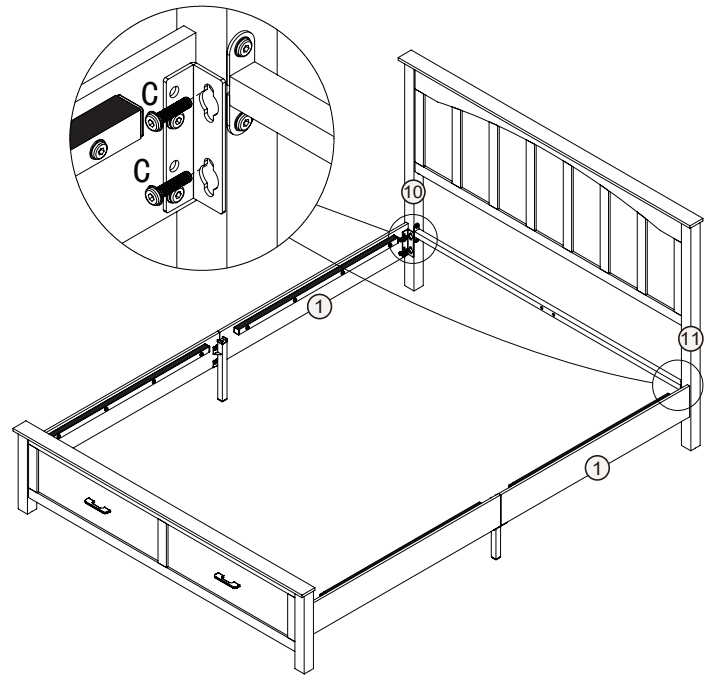

C		4pcs
	M8x33	


15

! Do not fully tighten the screws yet.

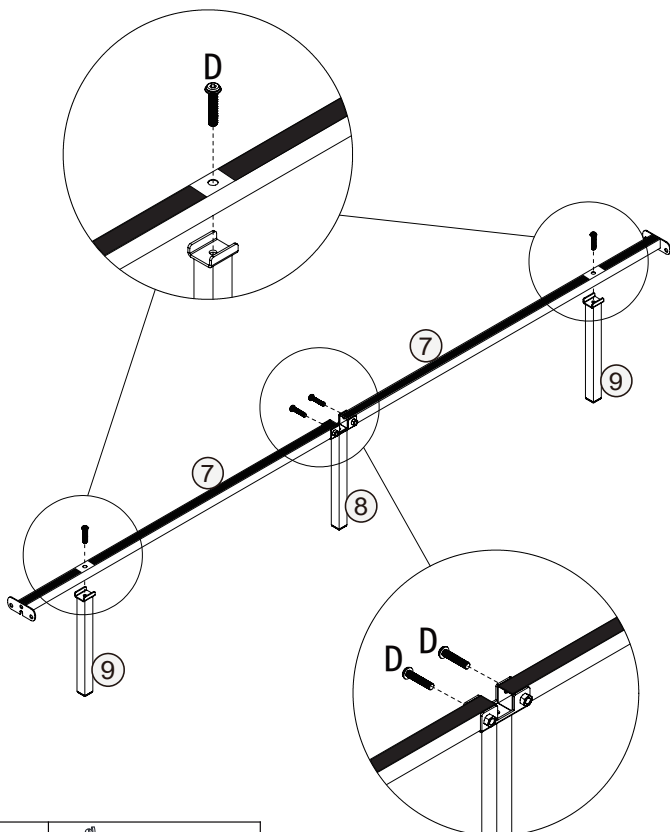


D		4pcs	white zinc
	M8x40		

16

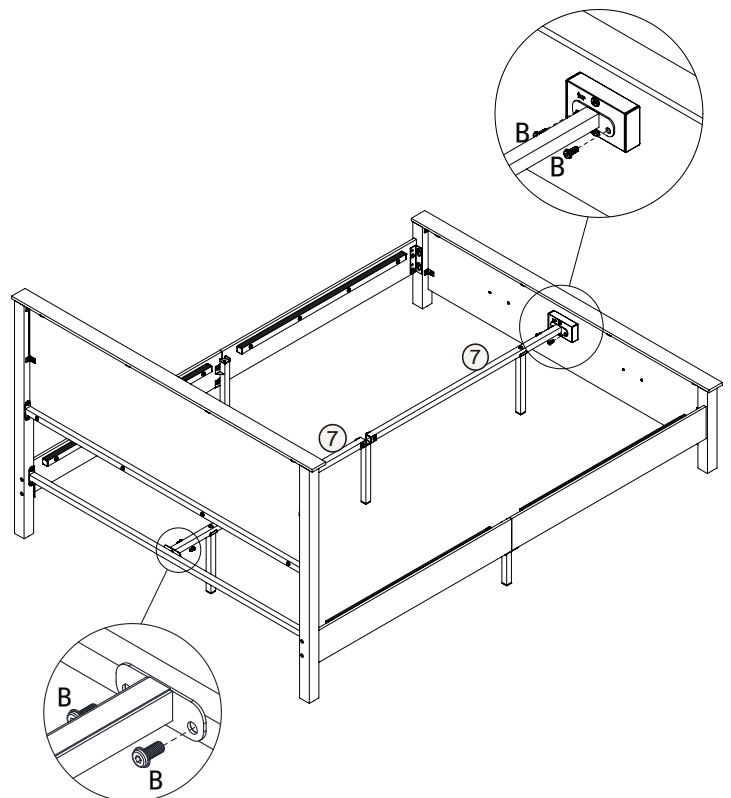


B		4pcs	white zinc
	M8x18		


17

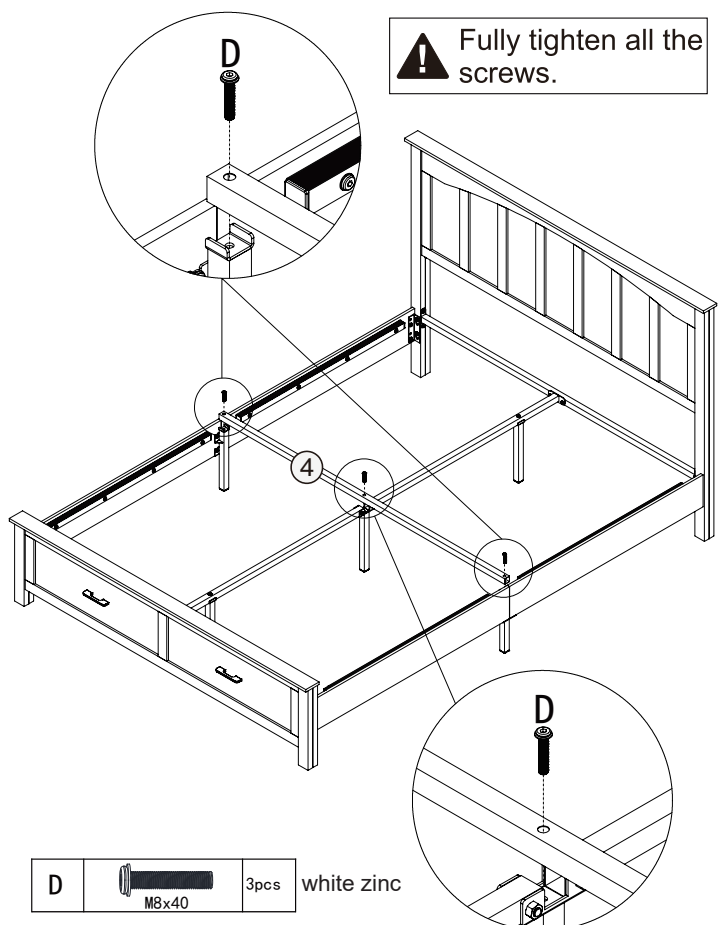

18

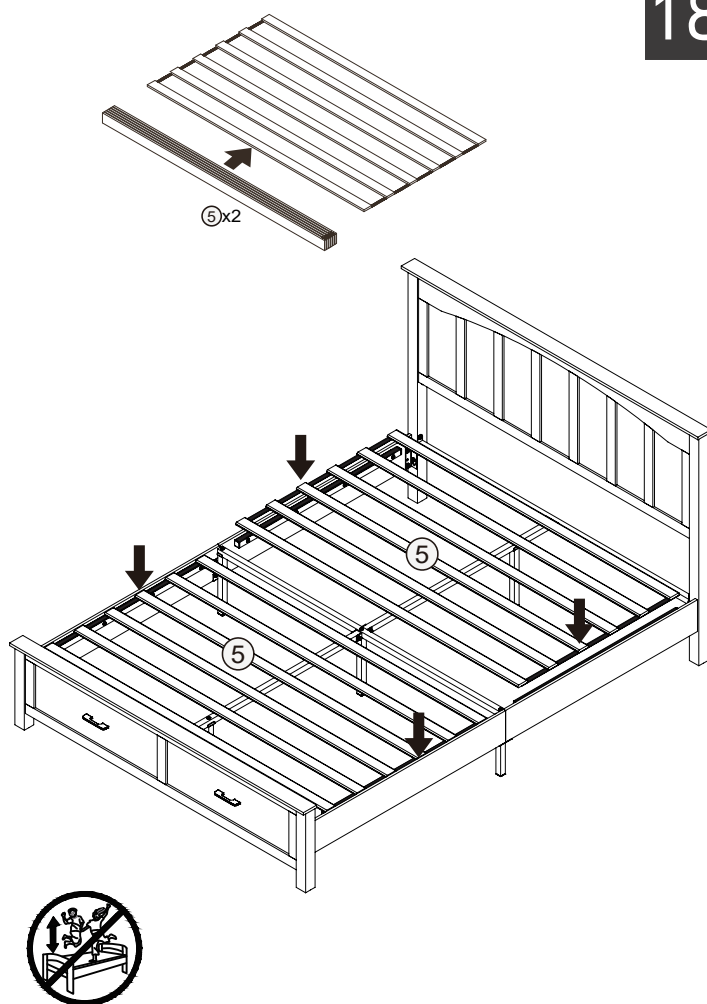

19

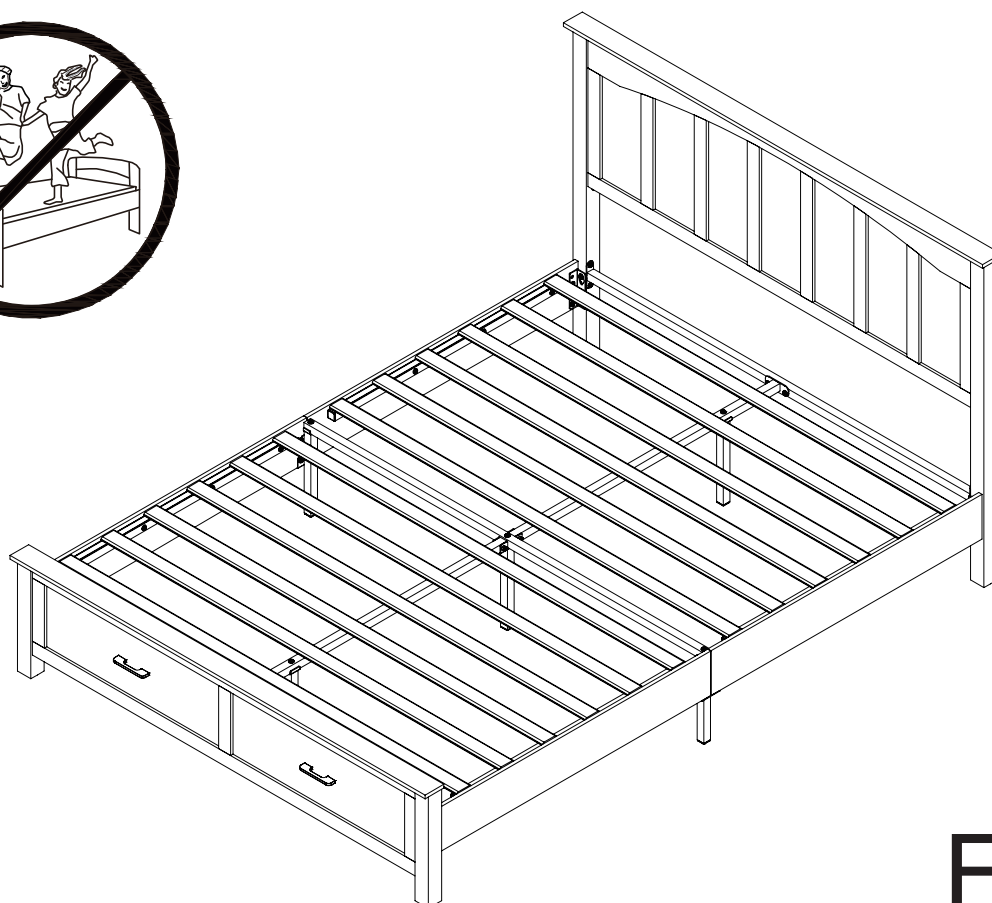

Finish