
Lockers

Assembly Instructions - Please keep for future reference

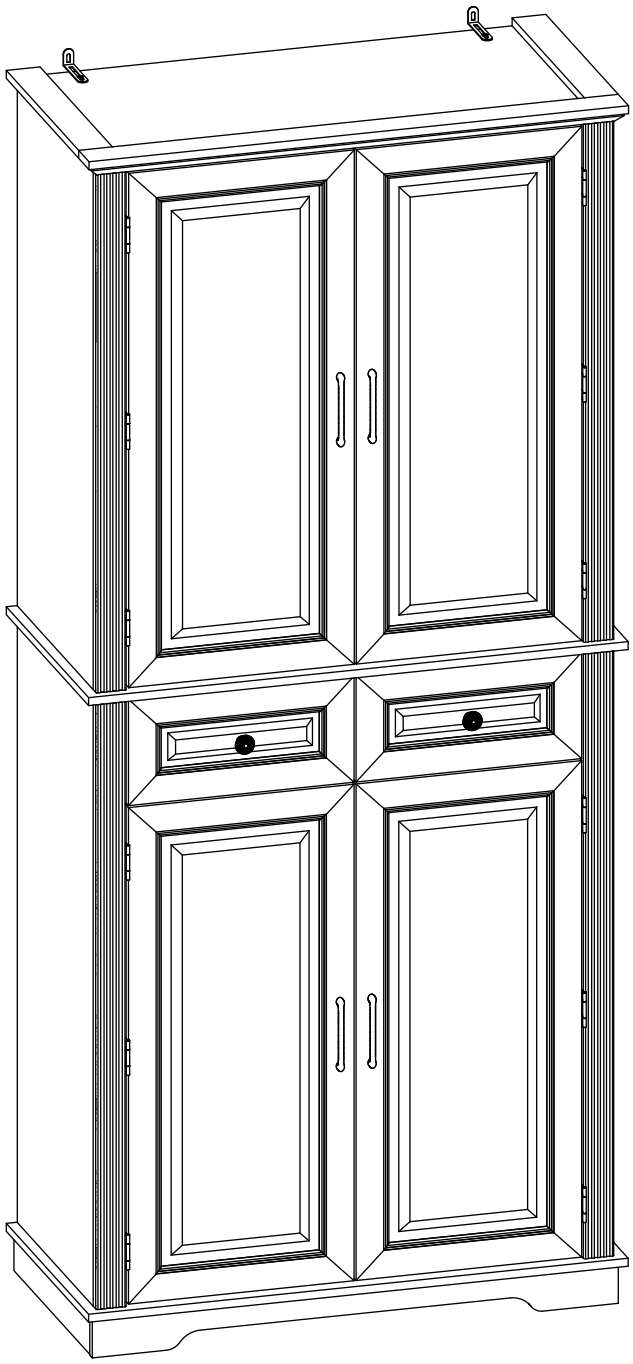

Dimensions


Width-31.5inch
Depth-15.74inch
Height-71.22inch

Important - please read thess instructions fully before starting assembly

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

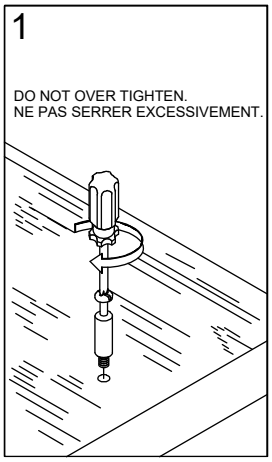

Step 2


Push the male camlock into the entry hole.

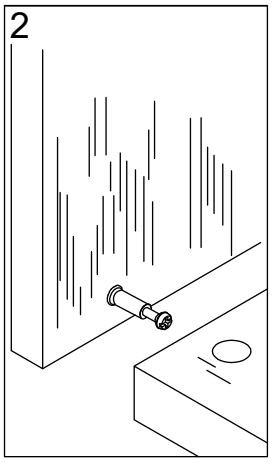

Step 3

Insert the female camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

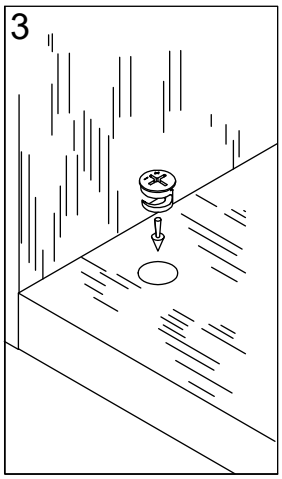



Step 4


Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.


The joint is now secure.

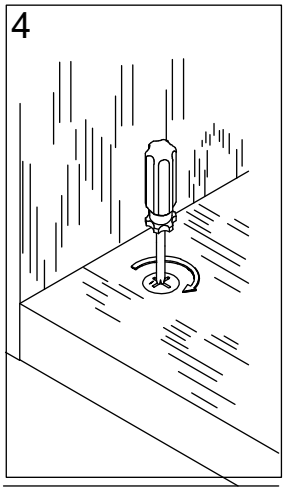


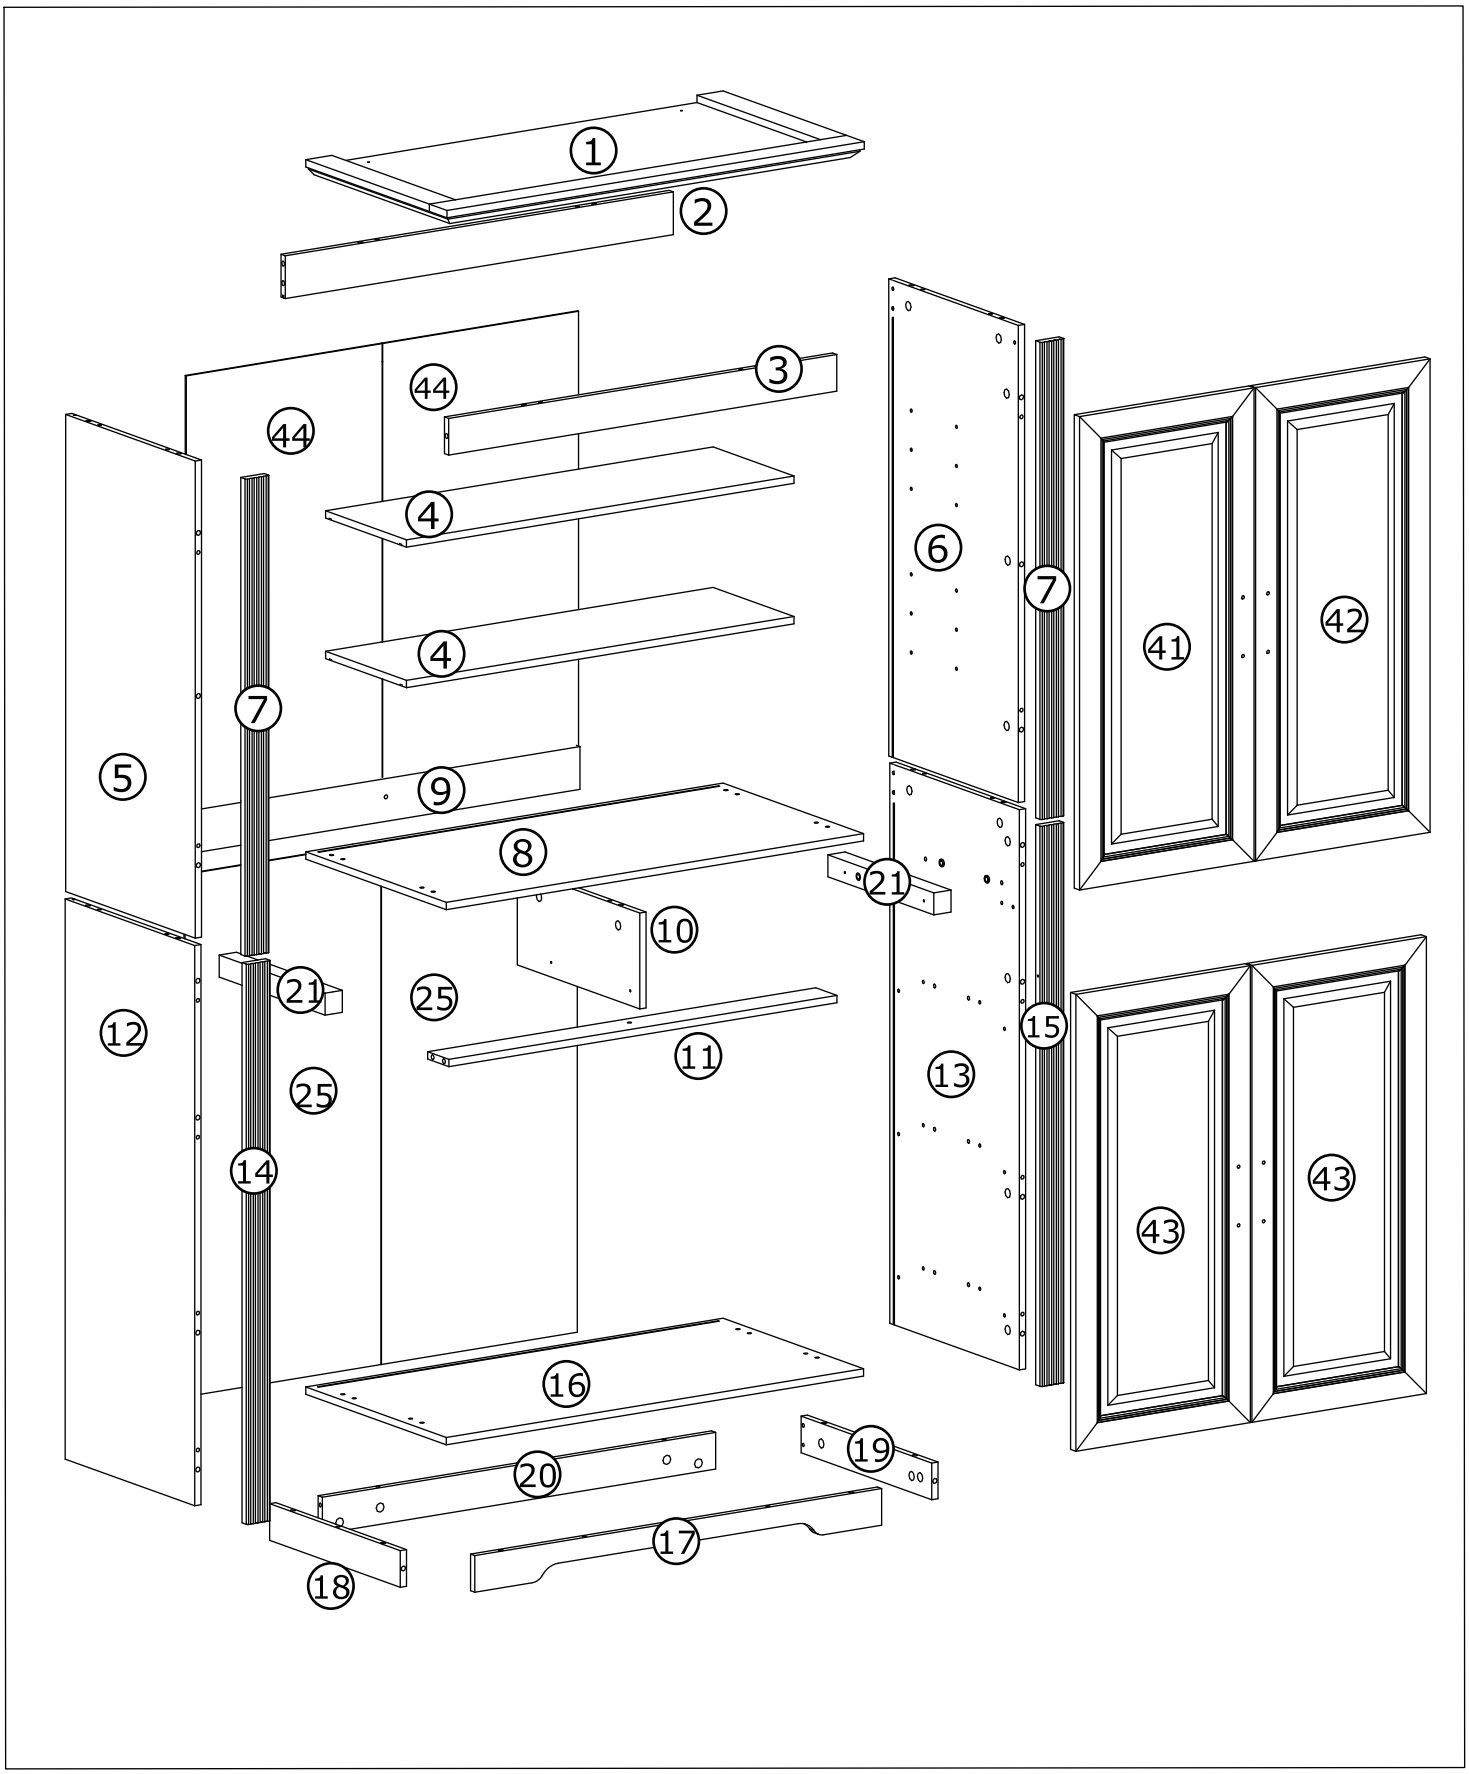
1
2
44
44
3
4
4
7
5
9
8
21
10
21
25
12
11
25
14
6
7
41
42
15
13
43
43
16
19
20
17
18







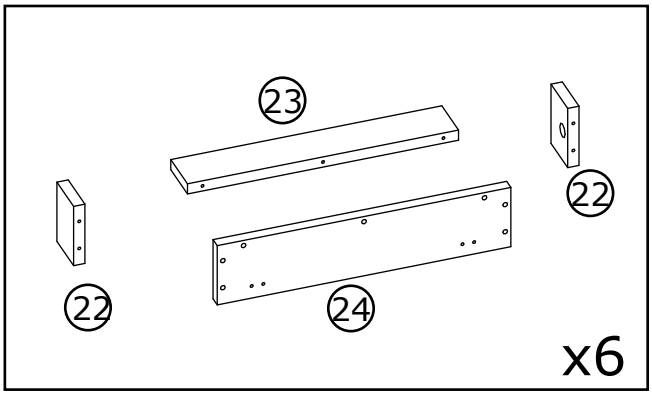

23
22
22
24
x6






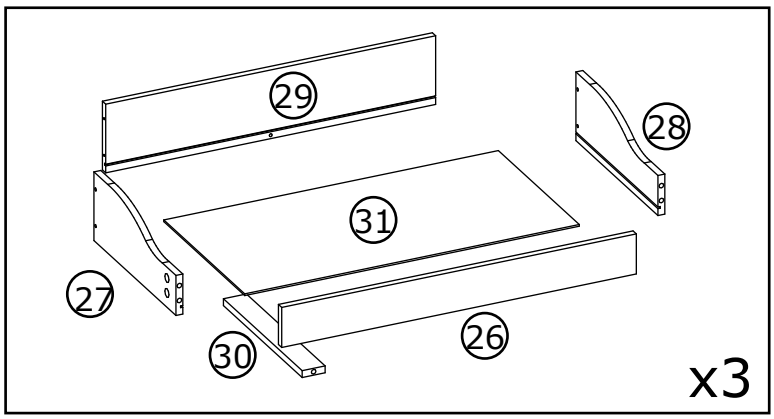

29
28
31
27
30
26
x3

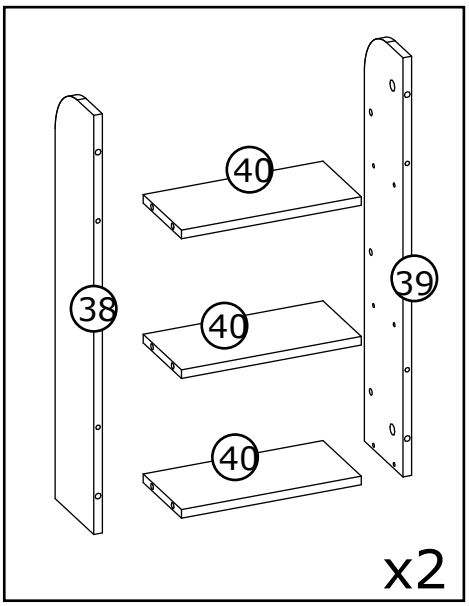
40
38
39
40
40
x2







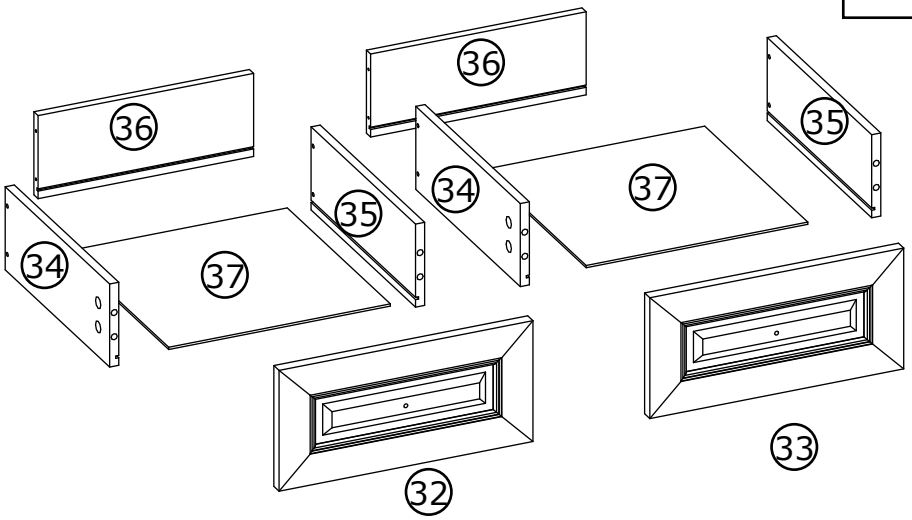

36
36
35
34
37
35
34
37
33
32




BOX:N707P451372

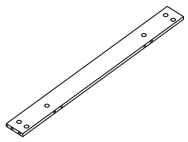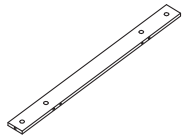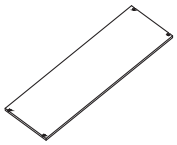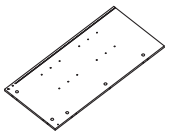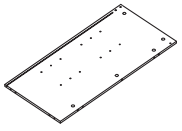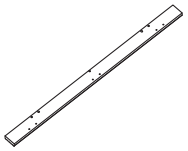NO.	PARTS	QTY
1		x1
NO.	PARTS	QTY
2		x1
NO.	PARTS	QTY
3		x1
NO.	PARTS	QTY
4		x2
NO.	PARTS	QTY
5		x1
NO.	PARTS	QTY
6		x1
NO.	PARTS	QTY
7		x2


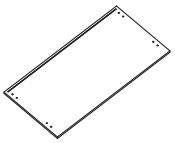
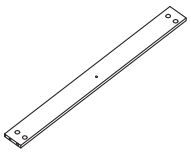
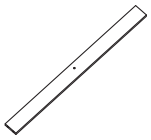
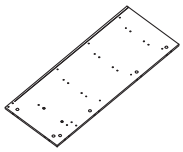
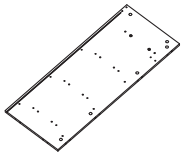
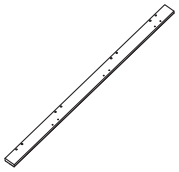
NO.	PARTS	QTY
8		x1
NO.	PARTS	QTY
9		x1
NO.	PARTS	QTY
11		x1
NO.	PARTS	QTY
12		x1
NO.	PARTS	QTY
13		x1
NO.	PARTS	QTY
14		x1
NO.	PARTS	QTY
15		x1








BOX:N707P451372

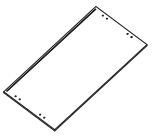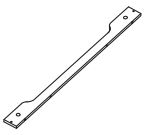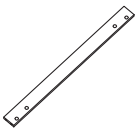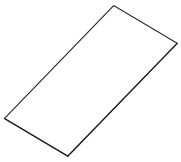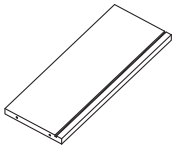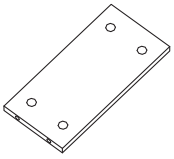NO.	PARTS	QTY
16		x1
NO.	PARTS	QTY
17		x1
NO.	PARTS	QTY
20		x1
NO.	PARTS	QTY
22		x12
NO.	PARTS	QTY
25		x2
NO.	PARTS	QTY
36		x1
NO.	PARTS	QTY
40		x6





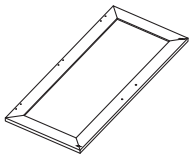
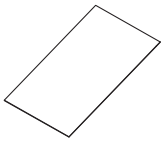
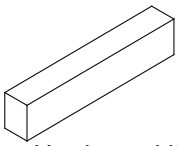
NO.	PARTS	QTY
43		x2
NO.	PARTS	QTY
44		x2
NO.	PARTS	QTY
R		x1
NO.	PARTS	QTY
S		x1
NO.	PARTS	QTY
	 Hardware kit	x1


BOX:N707P451373








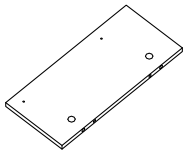
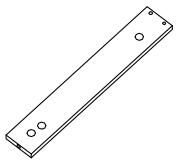
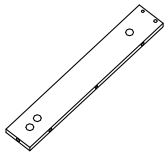
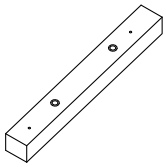
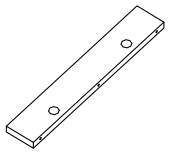
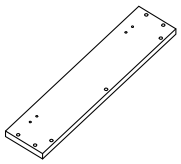
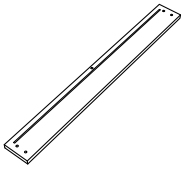
NO.	PARTS	QTY
10		x1
NO.	PARTS	QTY
18		x1
NO.	PARTS	QTY
19		x1
NO.	PARTS	QTY
21		x2
NO.	PARTS	QTY
23		x6
NO.	PARTS	QTY
24		x6
NO.	PARTS	QTY
26		x3

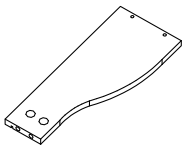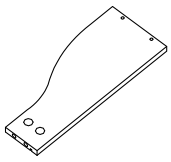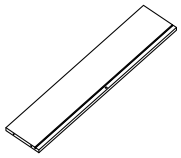
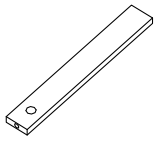
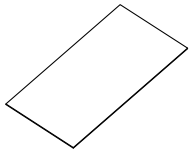
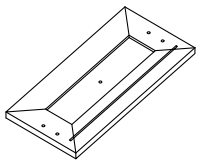
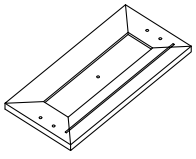
NO.	PARTS	QTY
27		x3
NO.	PARTS	QTY
28		x3
NO.	PARTS	QTY
29		x3
NO.	PARTS	QTY
30		x3
NO.	PARTS	QTY
31		x3
NO.	PARTS	QTY
32		x1
NO.	PARTS	QTY
33		x1

BOX:N707P451373

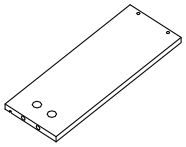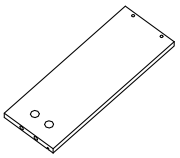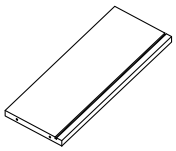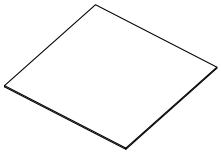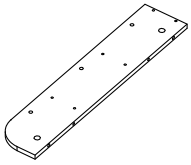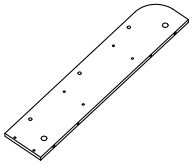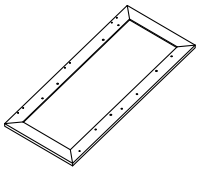
NO.	PARTS	QTY
34		x2
NO.	PARTS	QTY
35		x2
NO.	PARTS	QTY
36		x1
NO.	PARTS	QTY
37		x2
NO.	PARTS	QTY
38		x2
NO.	PARTS	QTY
39		x2
NO.	PARTS	QTY
41		x1

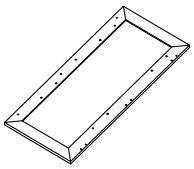NO.	PARTS	QTY
42		x1

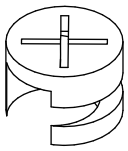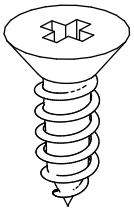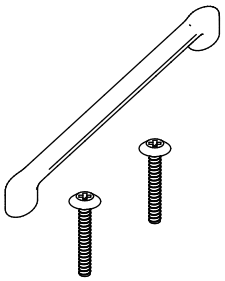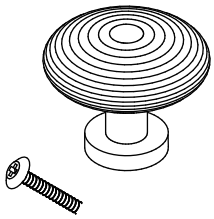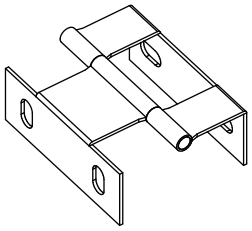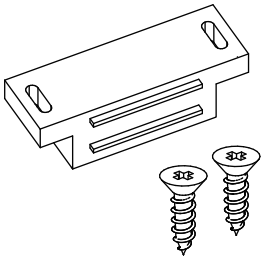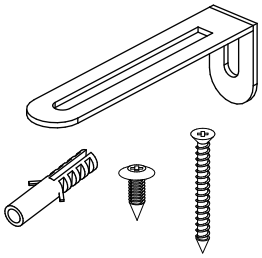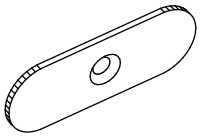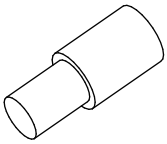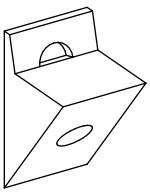
A	B	C	D
			
133PCS	133PCS	M6x30mm 64PCS	M3x12mm 44PCS
E	**F**	**G**	**H**
			
M3.5x16mm 72PCS	M5x40mm 10PCS	4PCS	2PCS
I	**J**	**K**	**L**
			
12PCS	2PCS	2PCS	4PCS
N	**M**	**O**	**P**
			
8PCS	24PCS	8PCS	M6x35mm 4PCS

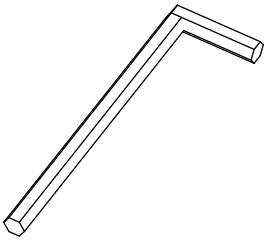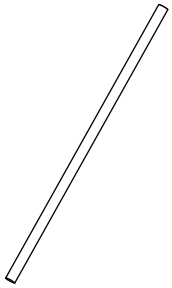
Q  1PCS	T  M4x35mm 65PCS	U  6PCS	V  38PCS
CL  5PCS	CR  5PCS	DL  5PCS	DR  5PCS

"B" Hardware installation example

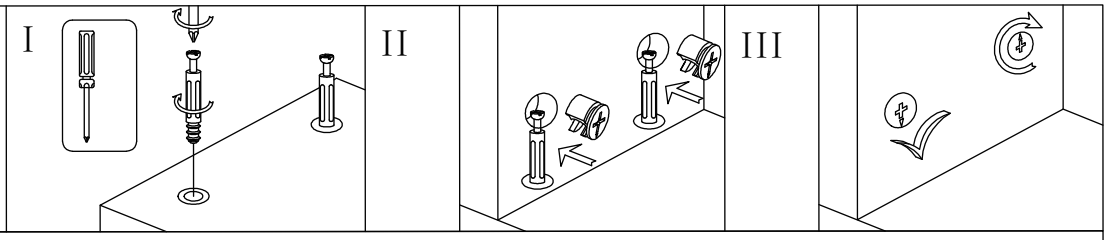

1.

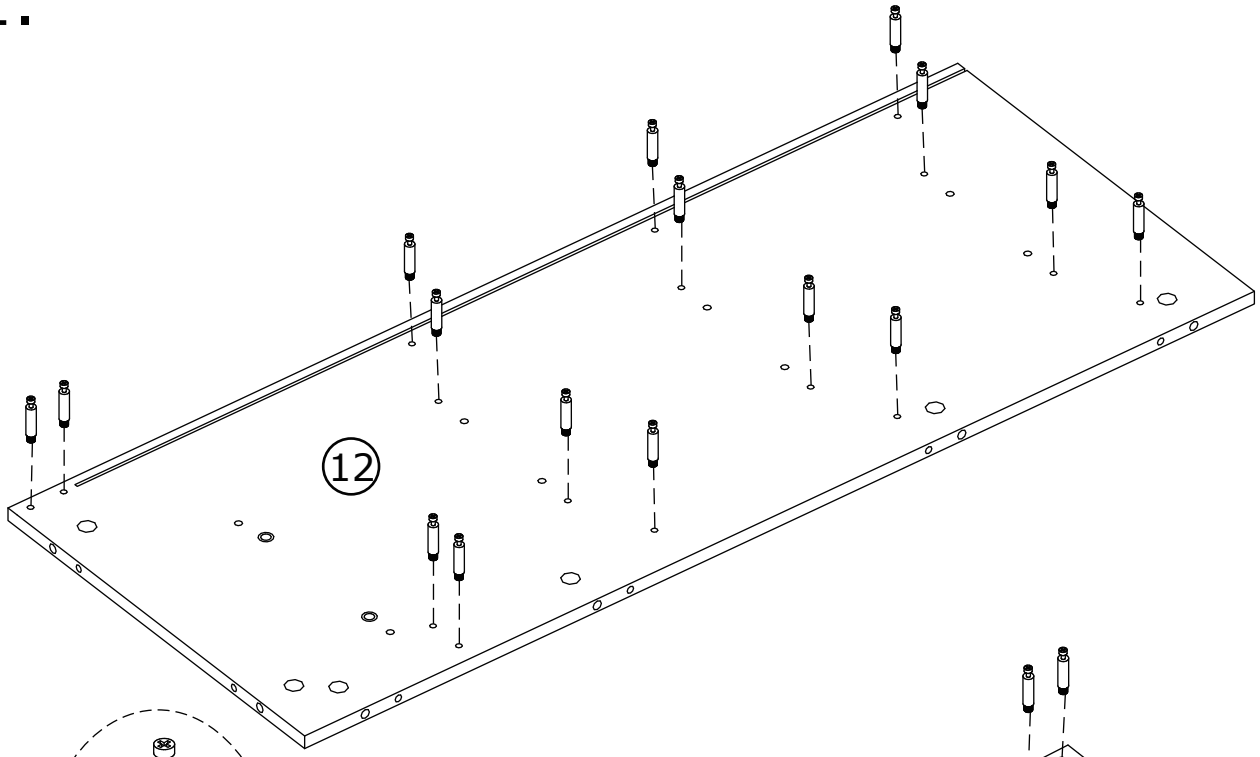

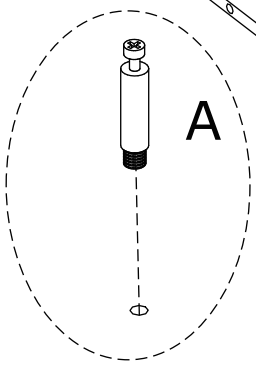


A




32pcs

2.

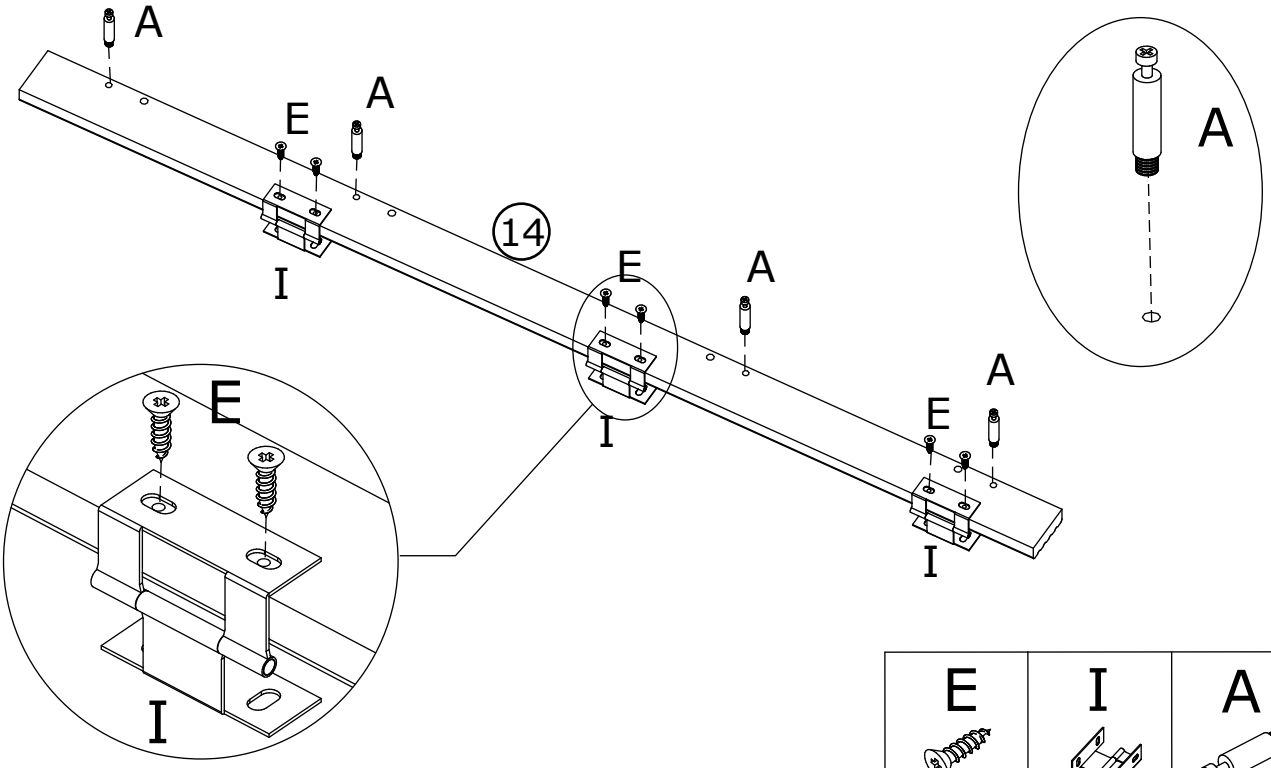


E	I	A
6pcs	3pcs	4pcs


3.

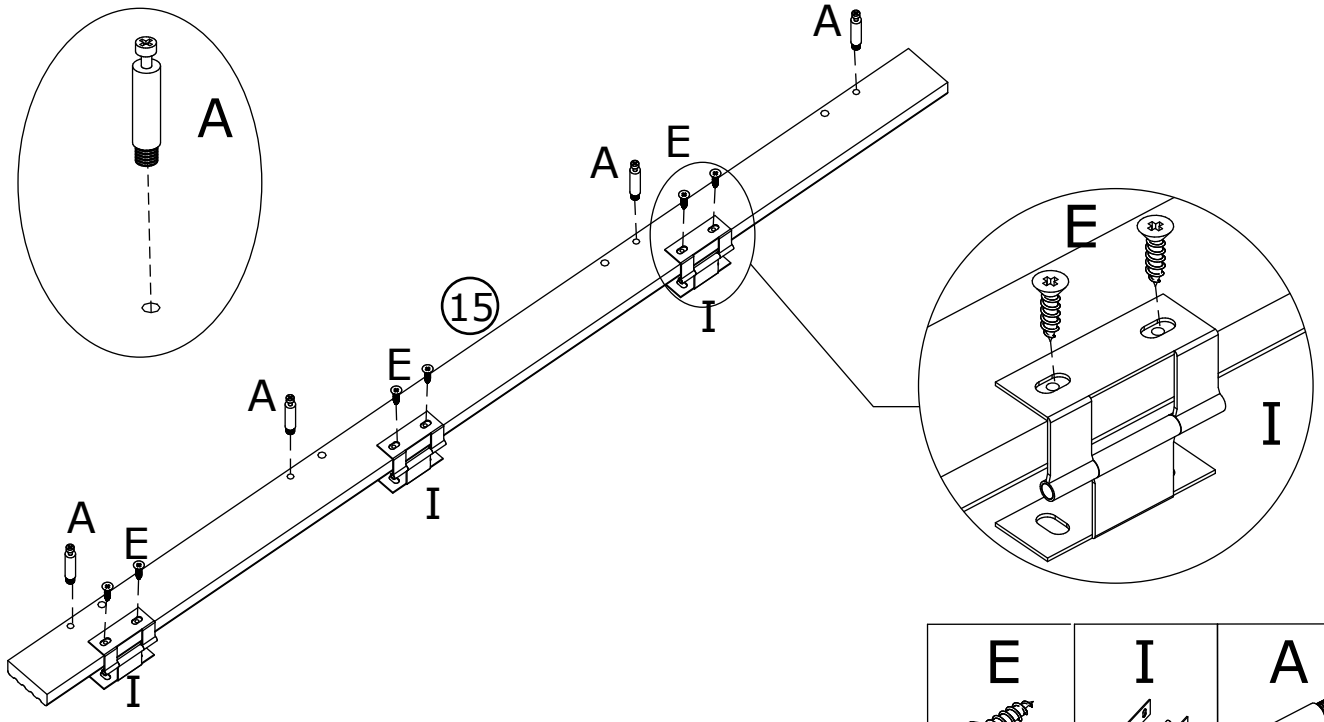

E	I	A
6pcs	3pcs	4pcs


4.

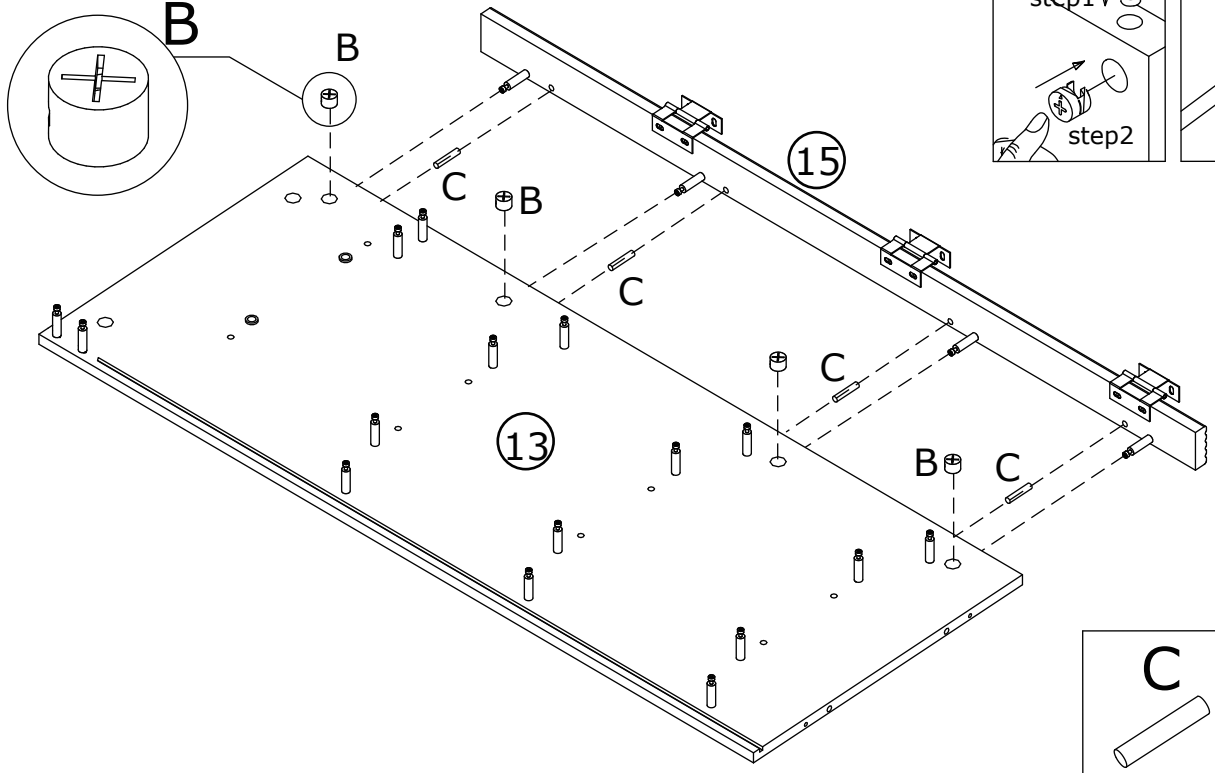

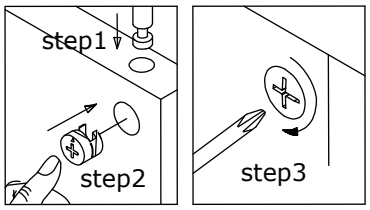


C	B
4pcs	4pcs


5.

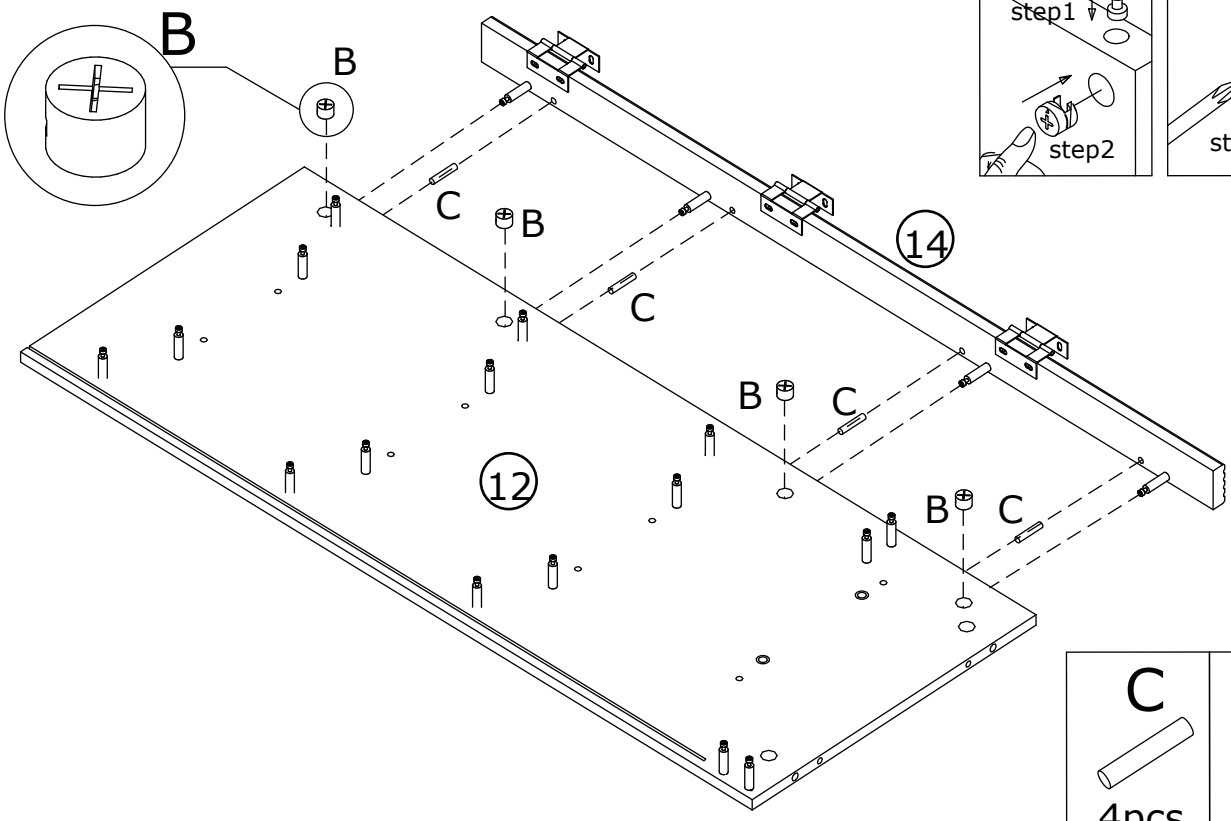

C	B
4pcs	4pcs

6.

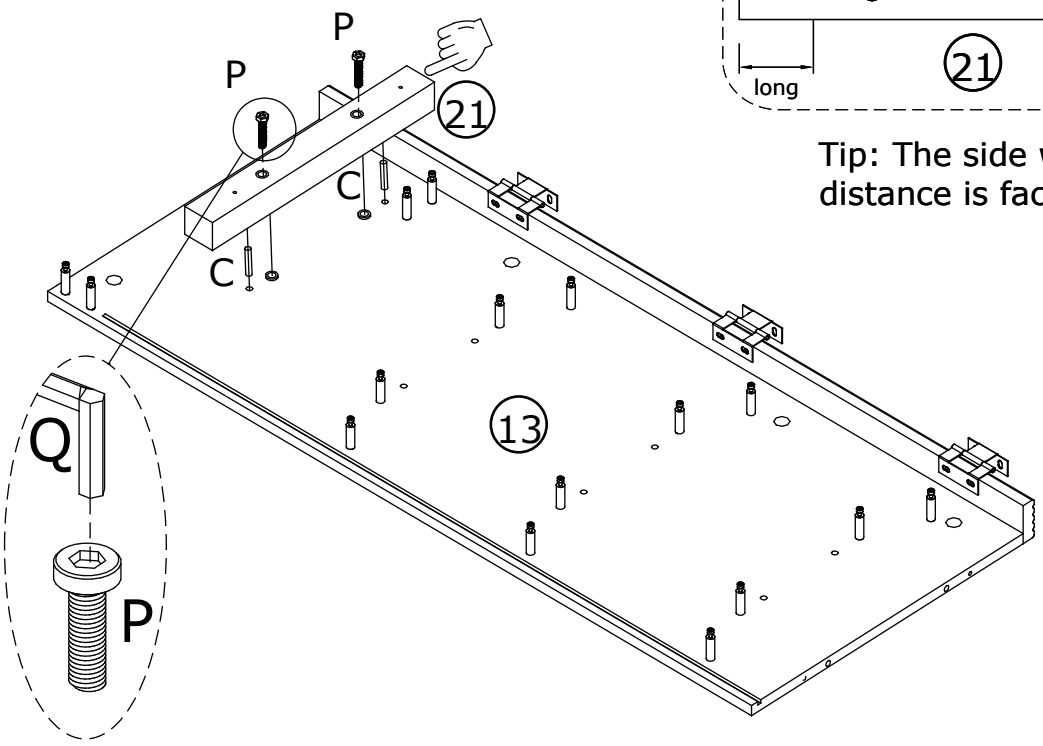


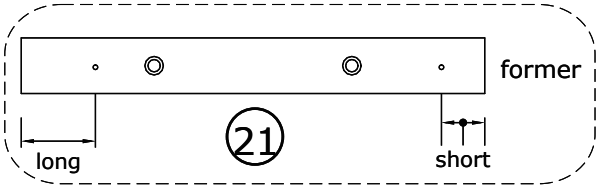

Tip: The side with the short distance is facing forward

C	
2pcs	
Q	P
1pcs	2pcs


7.

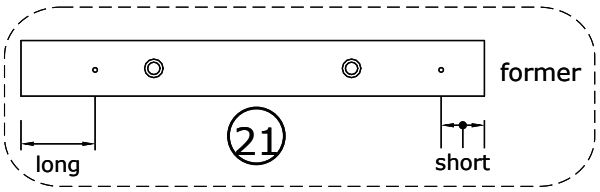


Tip: The side with the short distance is facing forward

C	
2pcs	
Q	P
1pcs	2pcs


8.

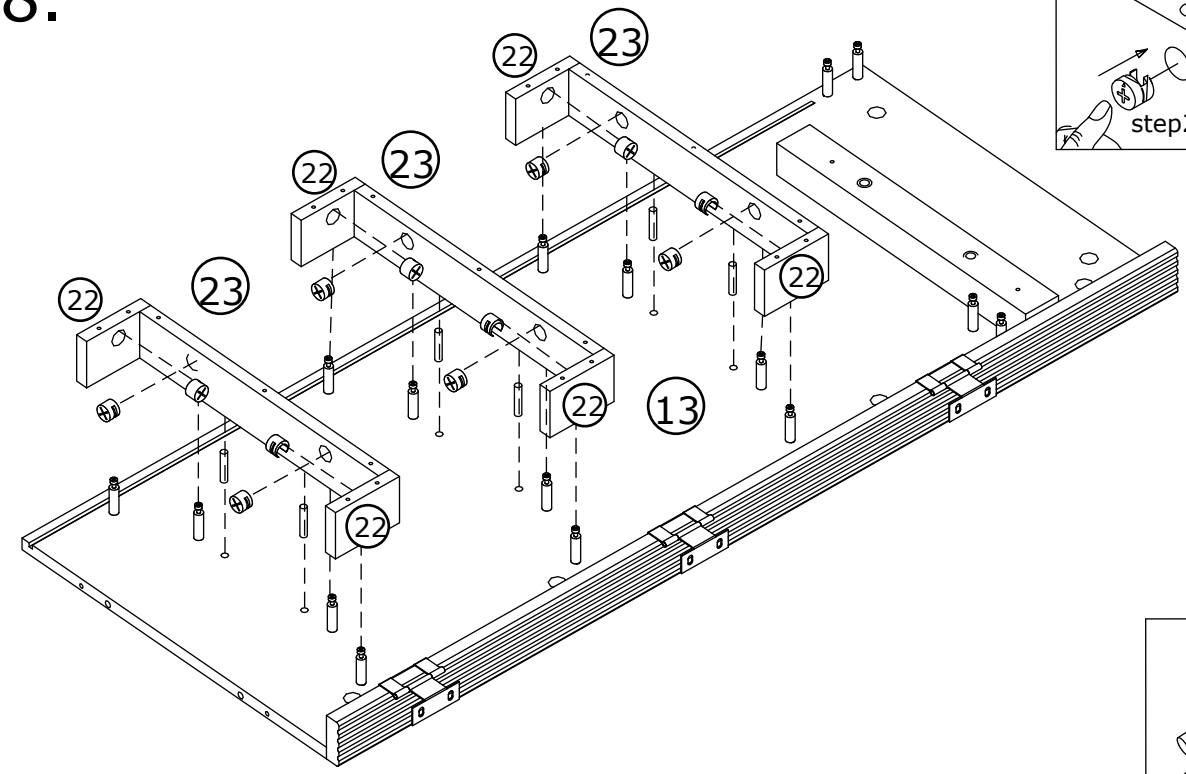


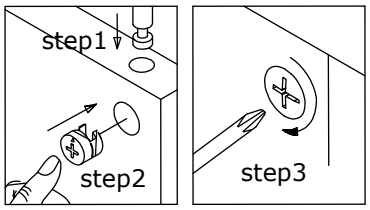

C	B
6pcs	12pcs


9.

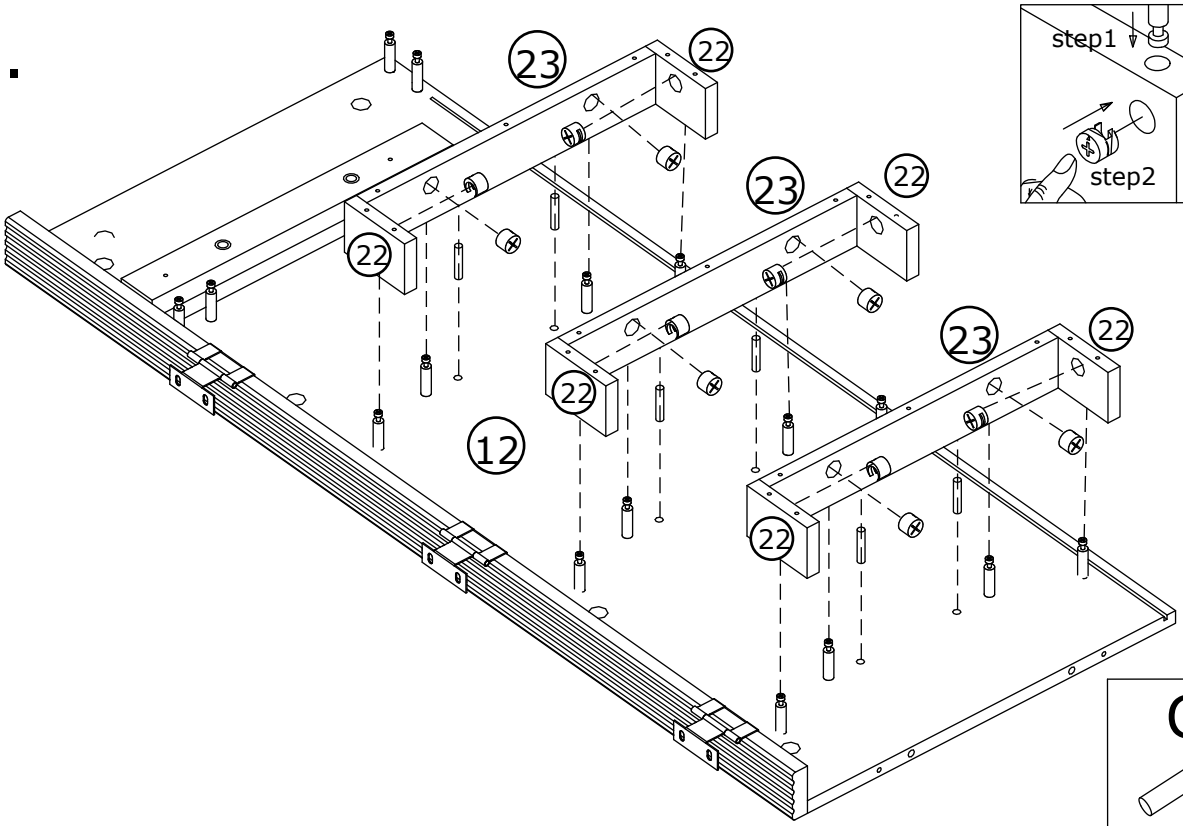

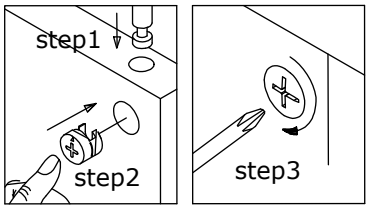

C	B
6pcs	12pcs


10.

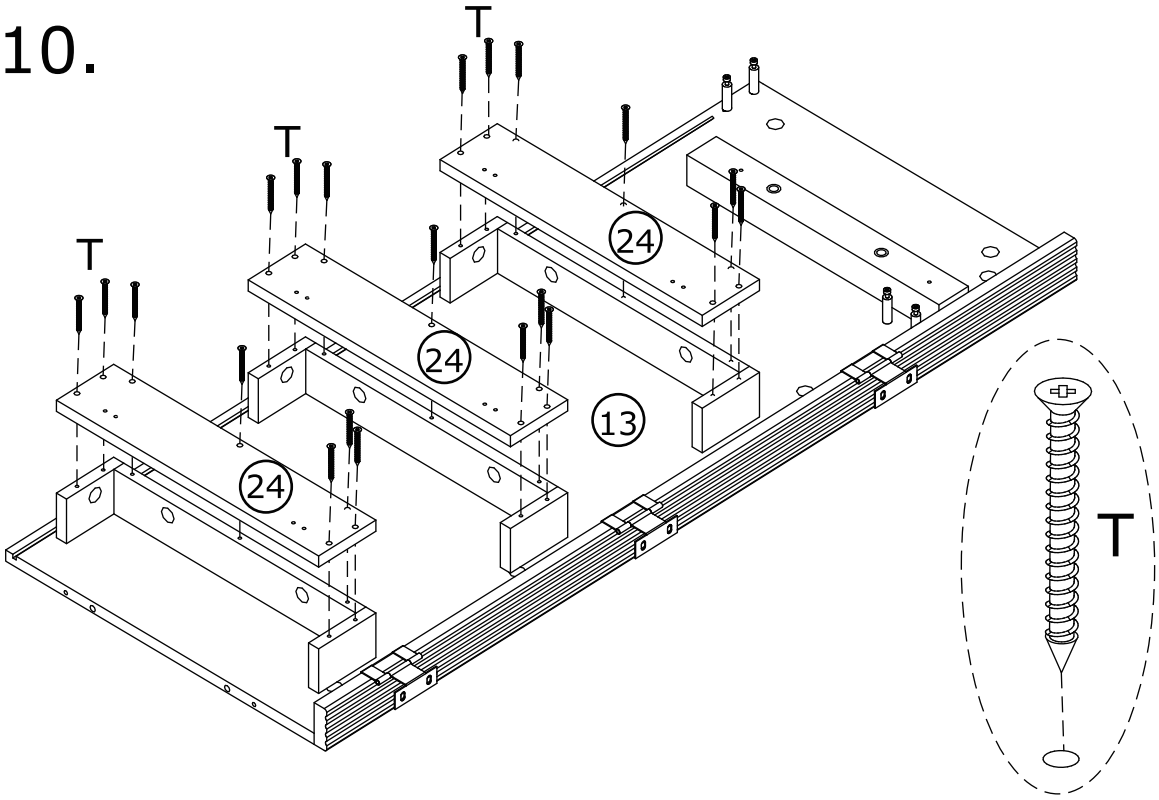

T

21pcs


11.

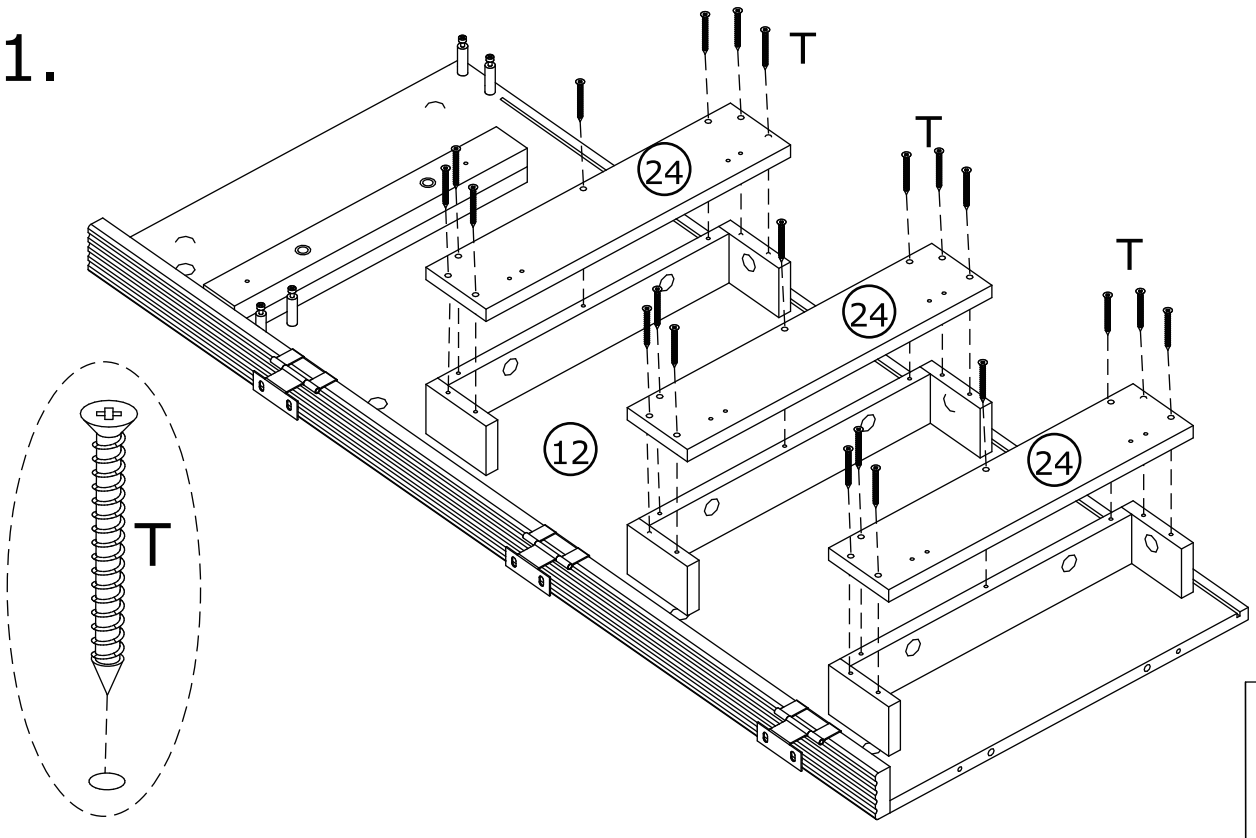


T

21pcs

12.

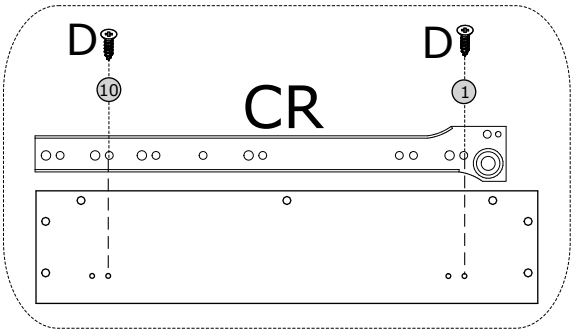


Tip: Check the hole position before locking

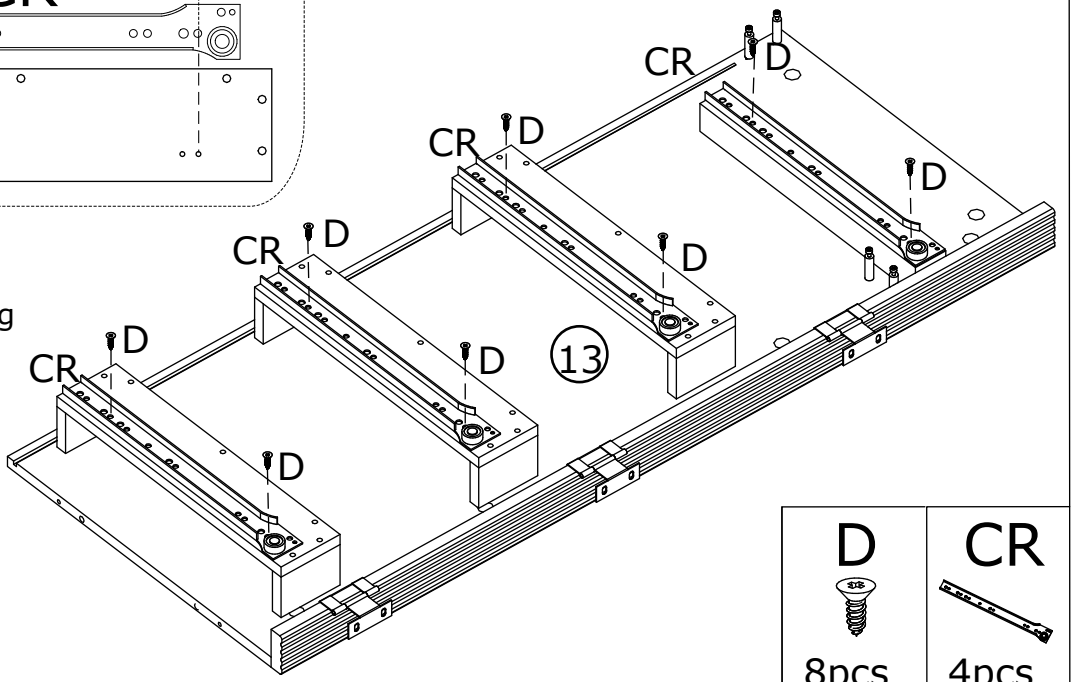


D	CR
8pcs	4pcs

13.

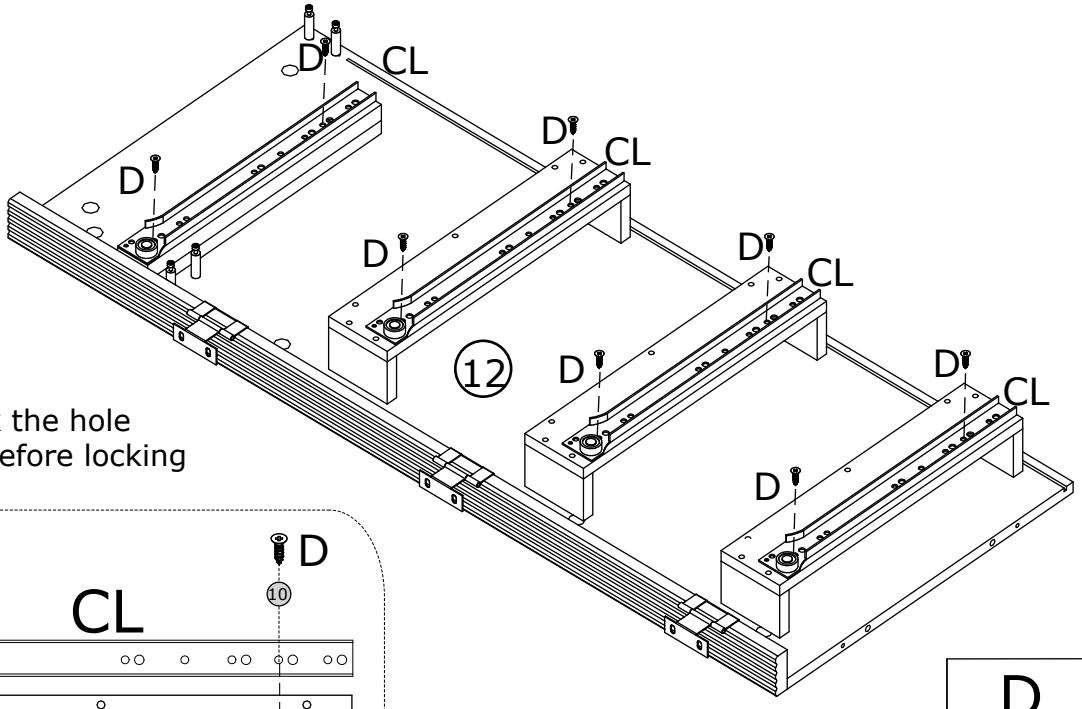



Tip: Check the hole position before locking

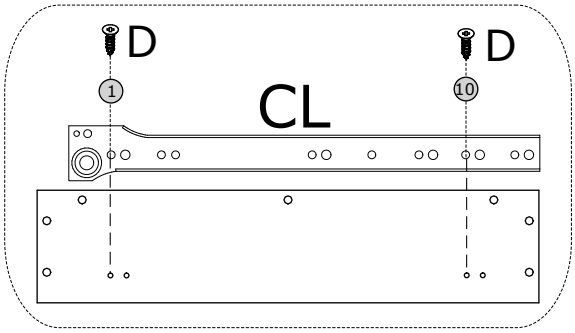



D	CL
8pcs	4pcs

14.

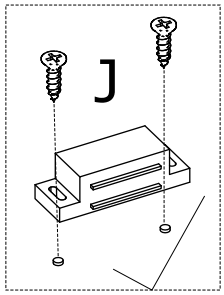


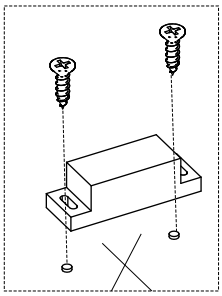


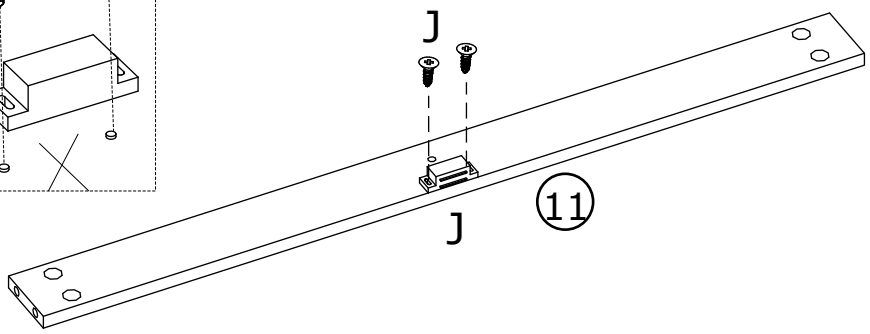


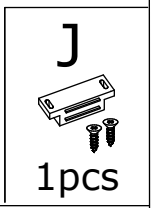


15.

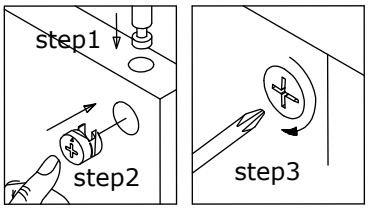


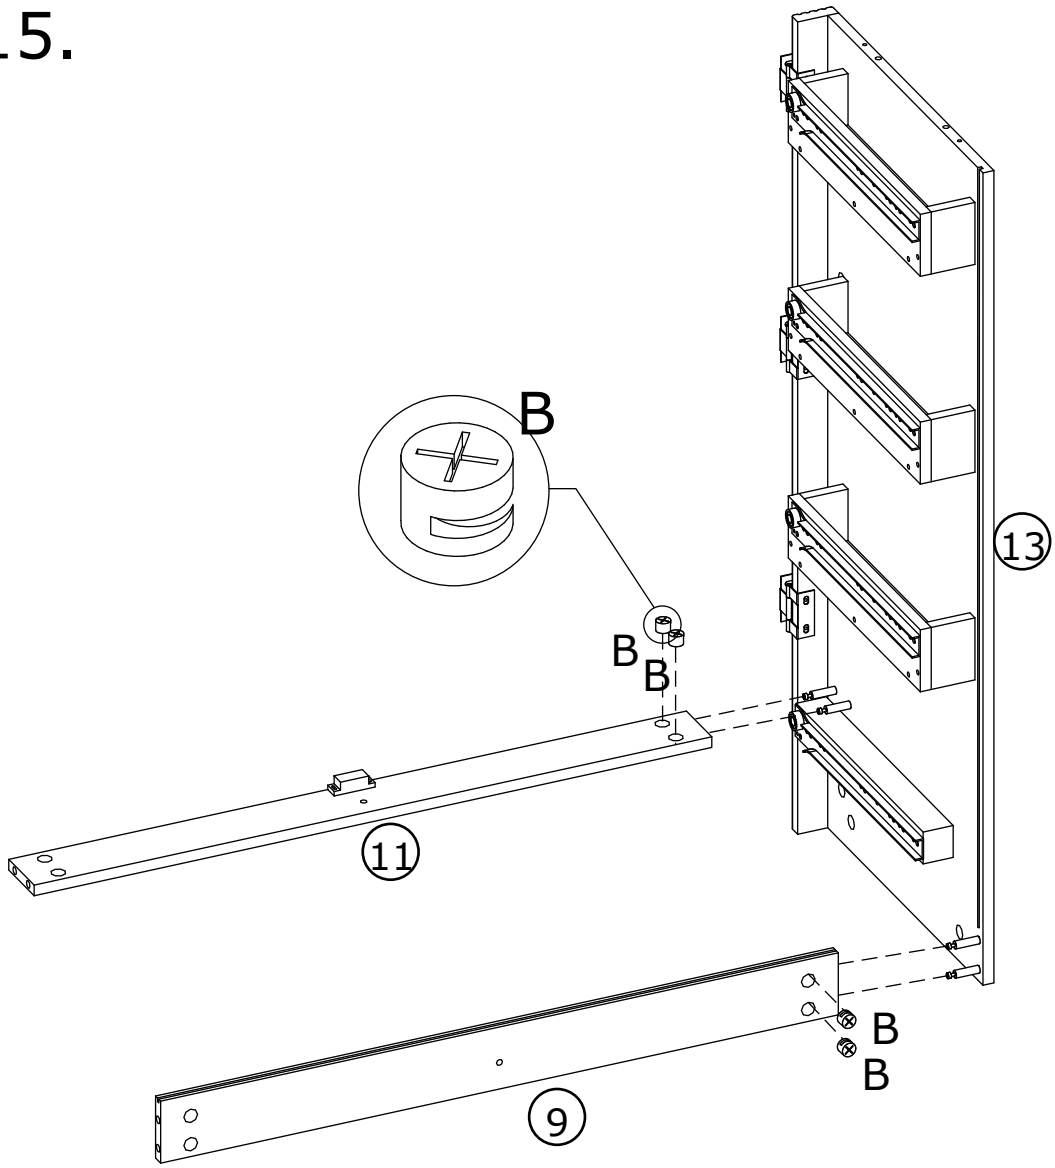

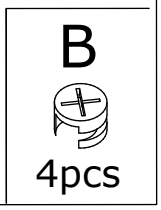

16.

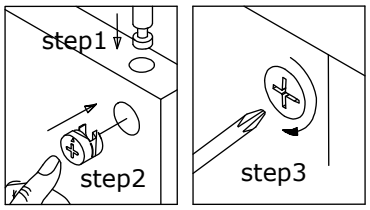


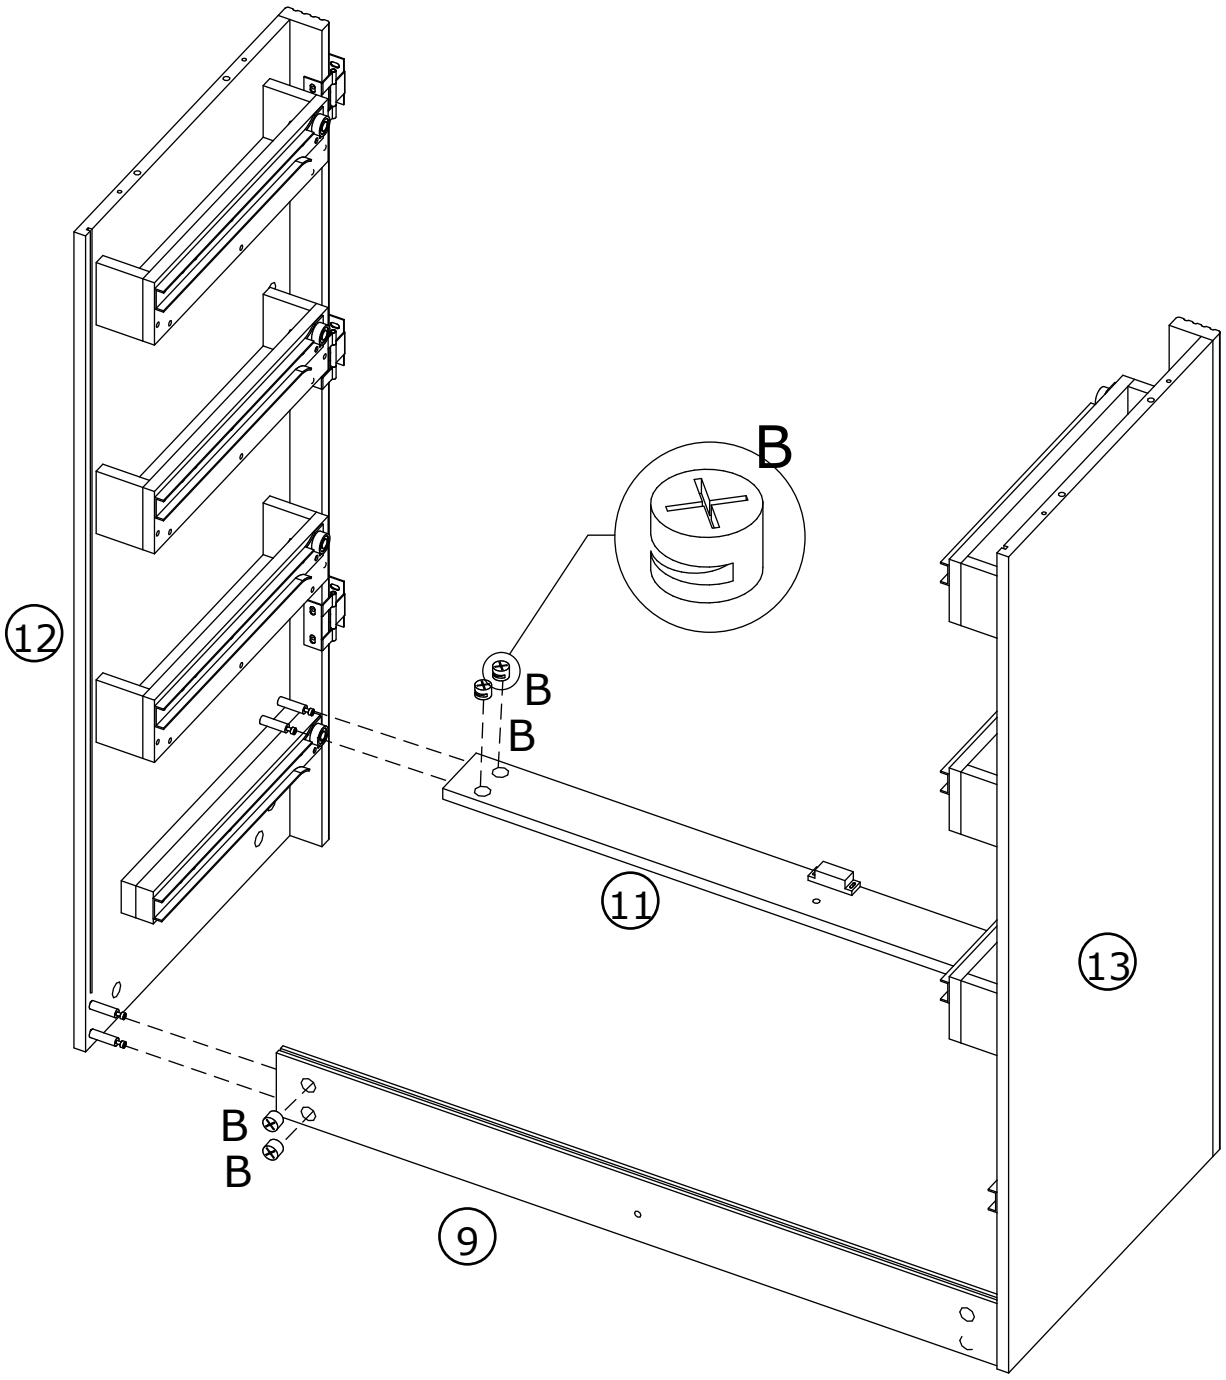

B

4pcs


17.

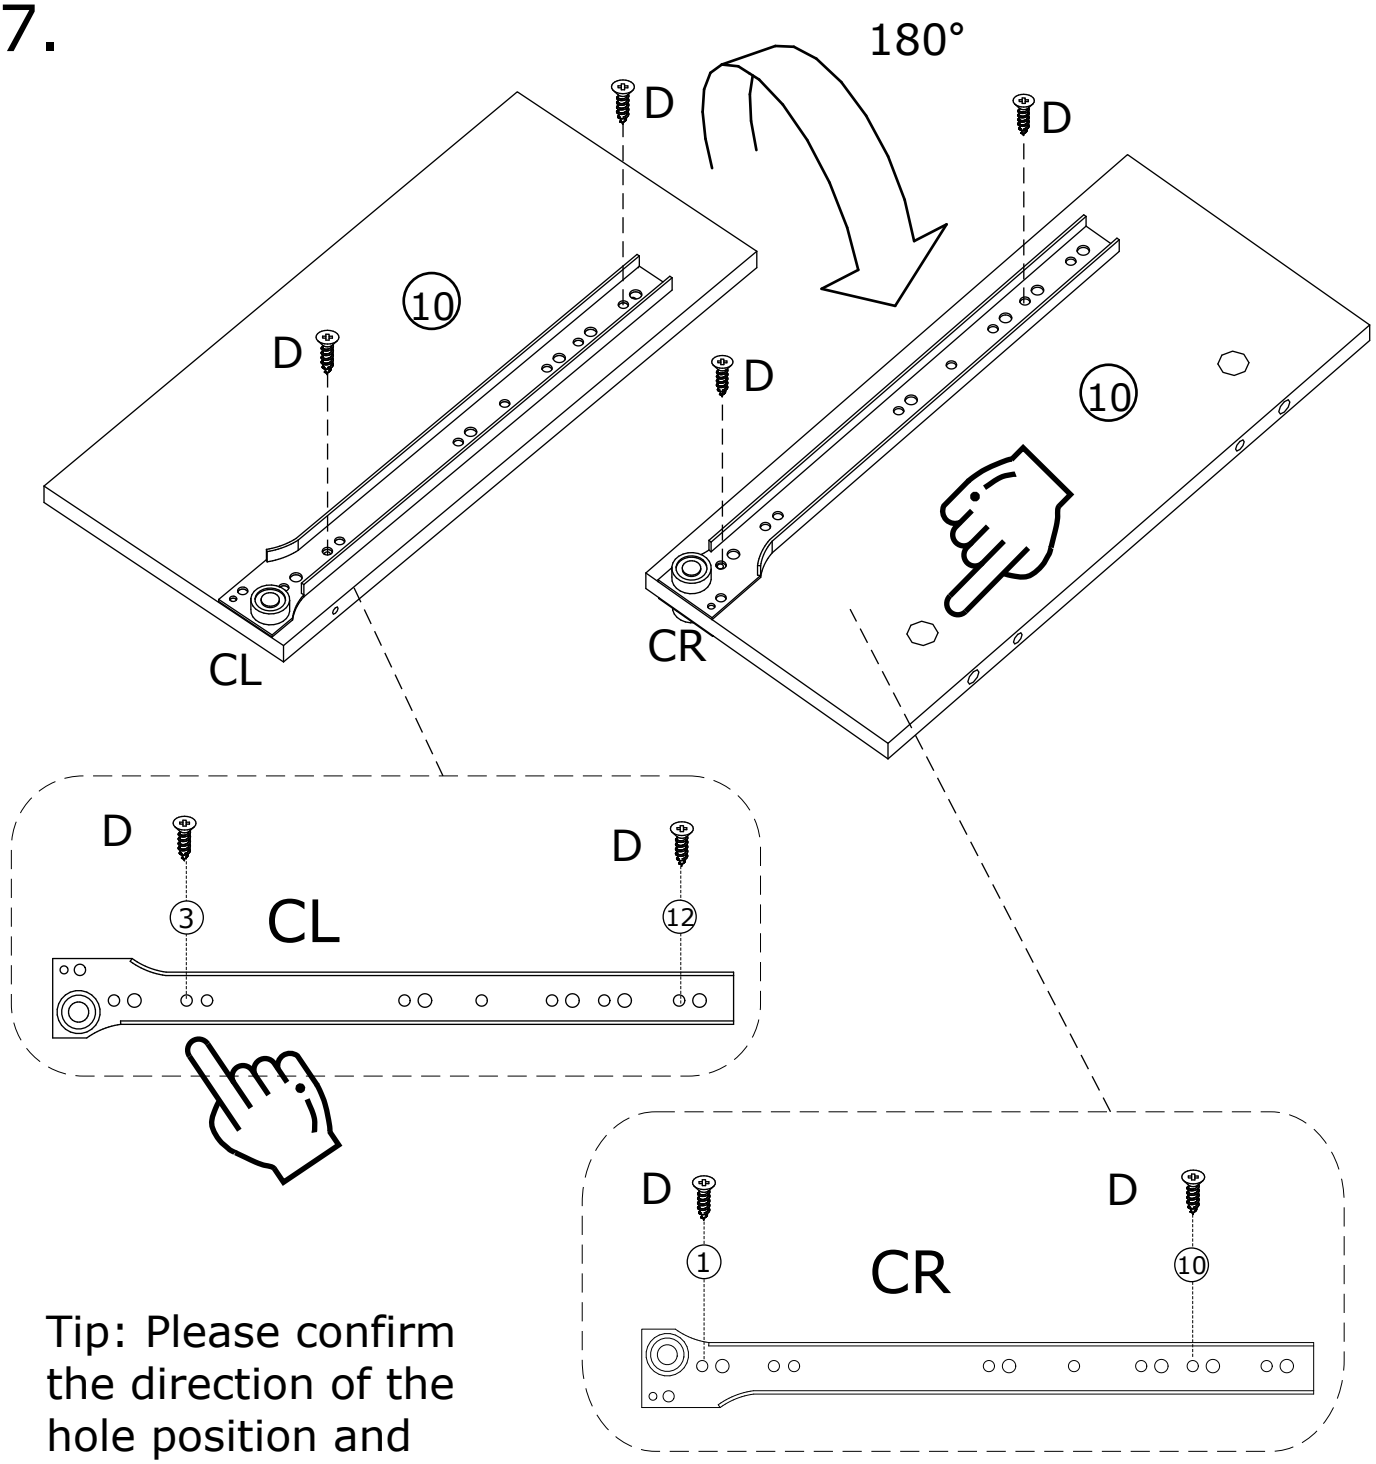

Tip: Please confirm the direction of the hole position and lock it

D	CR	CL
4pcs	1pcs	1pcs


18.

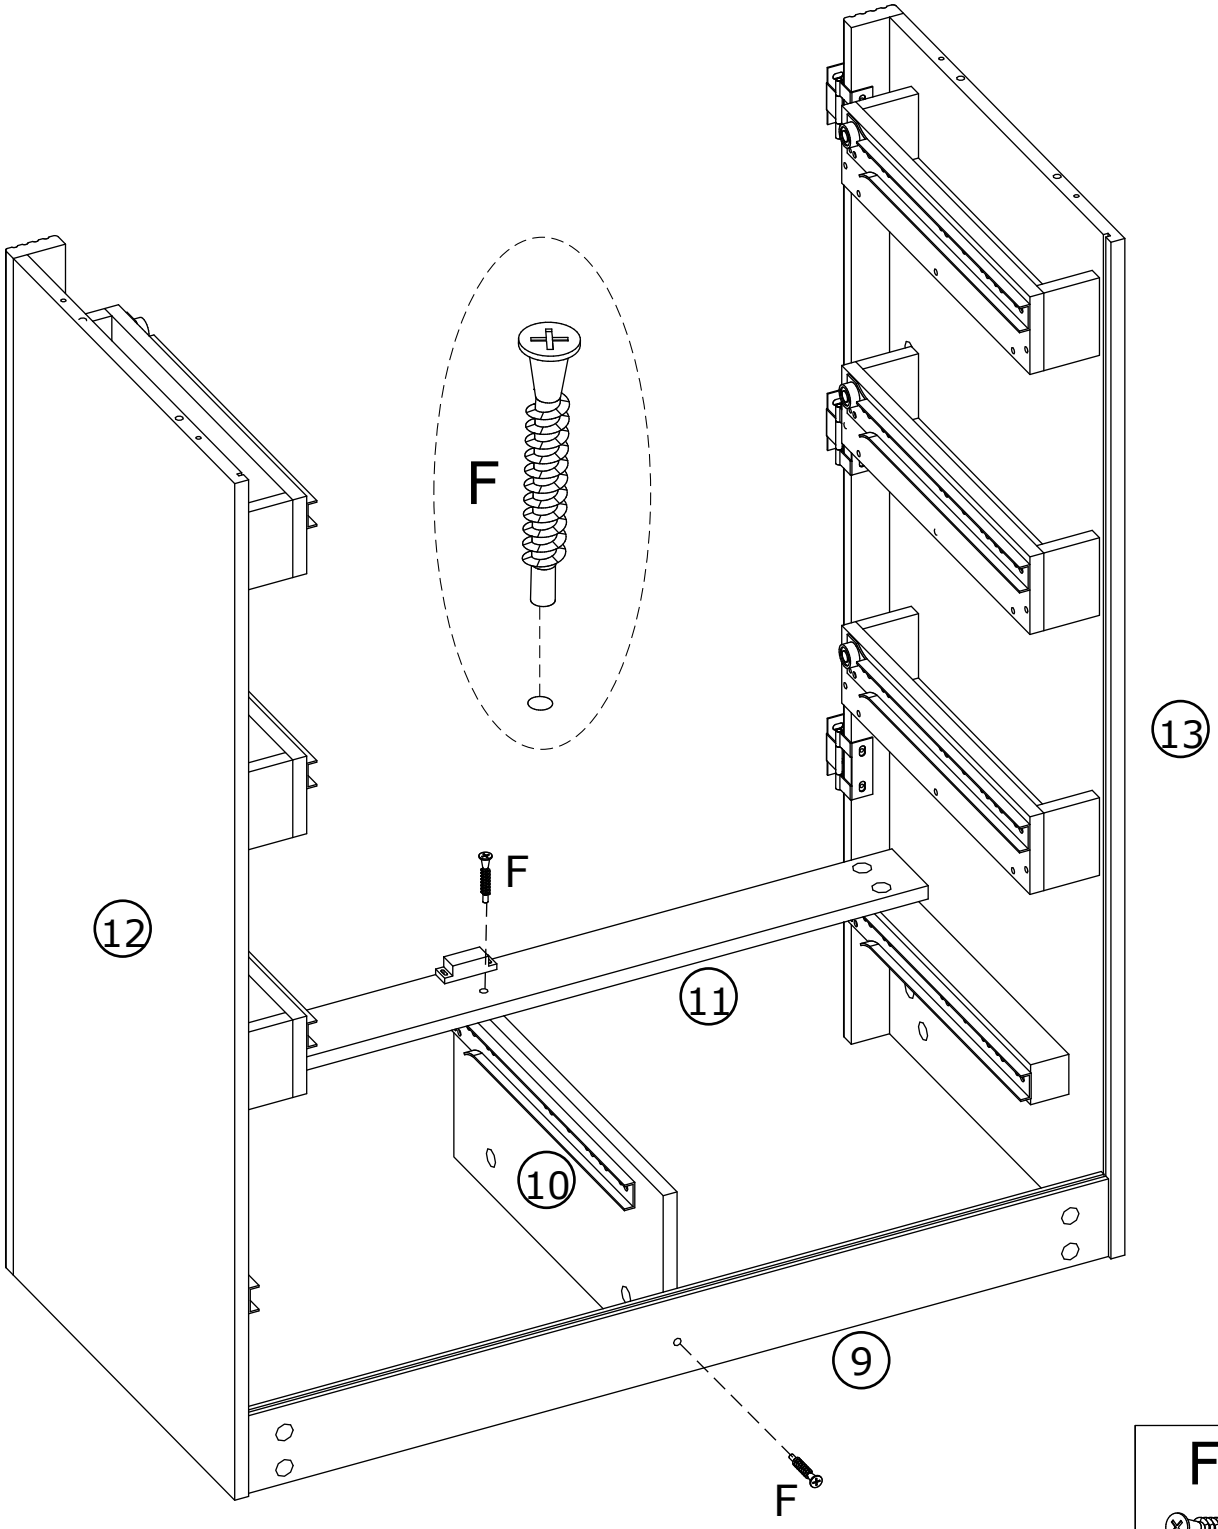

F

2pcs

19.

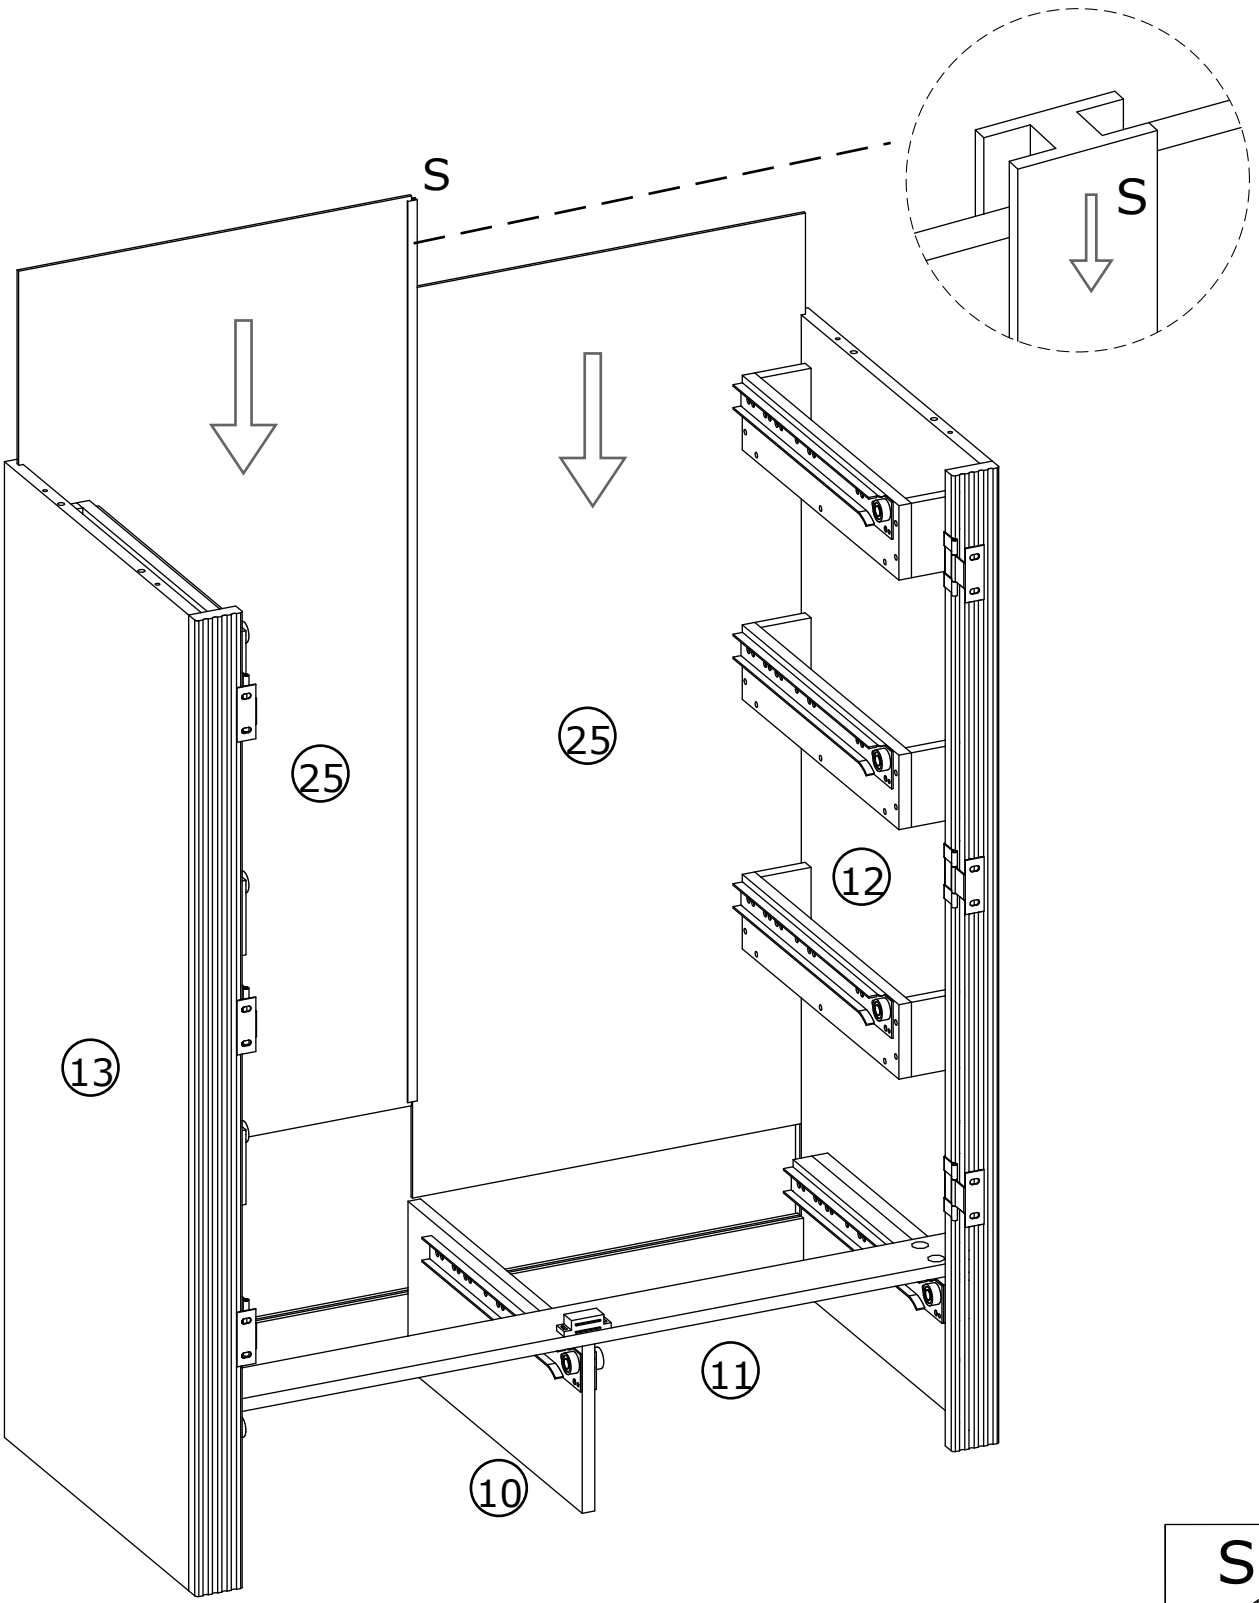


S

1pcs


20.


Tip: Pay attention to the direction of the holes

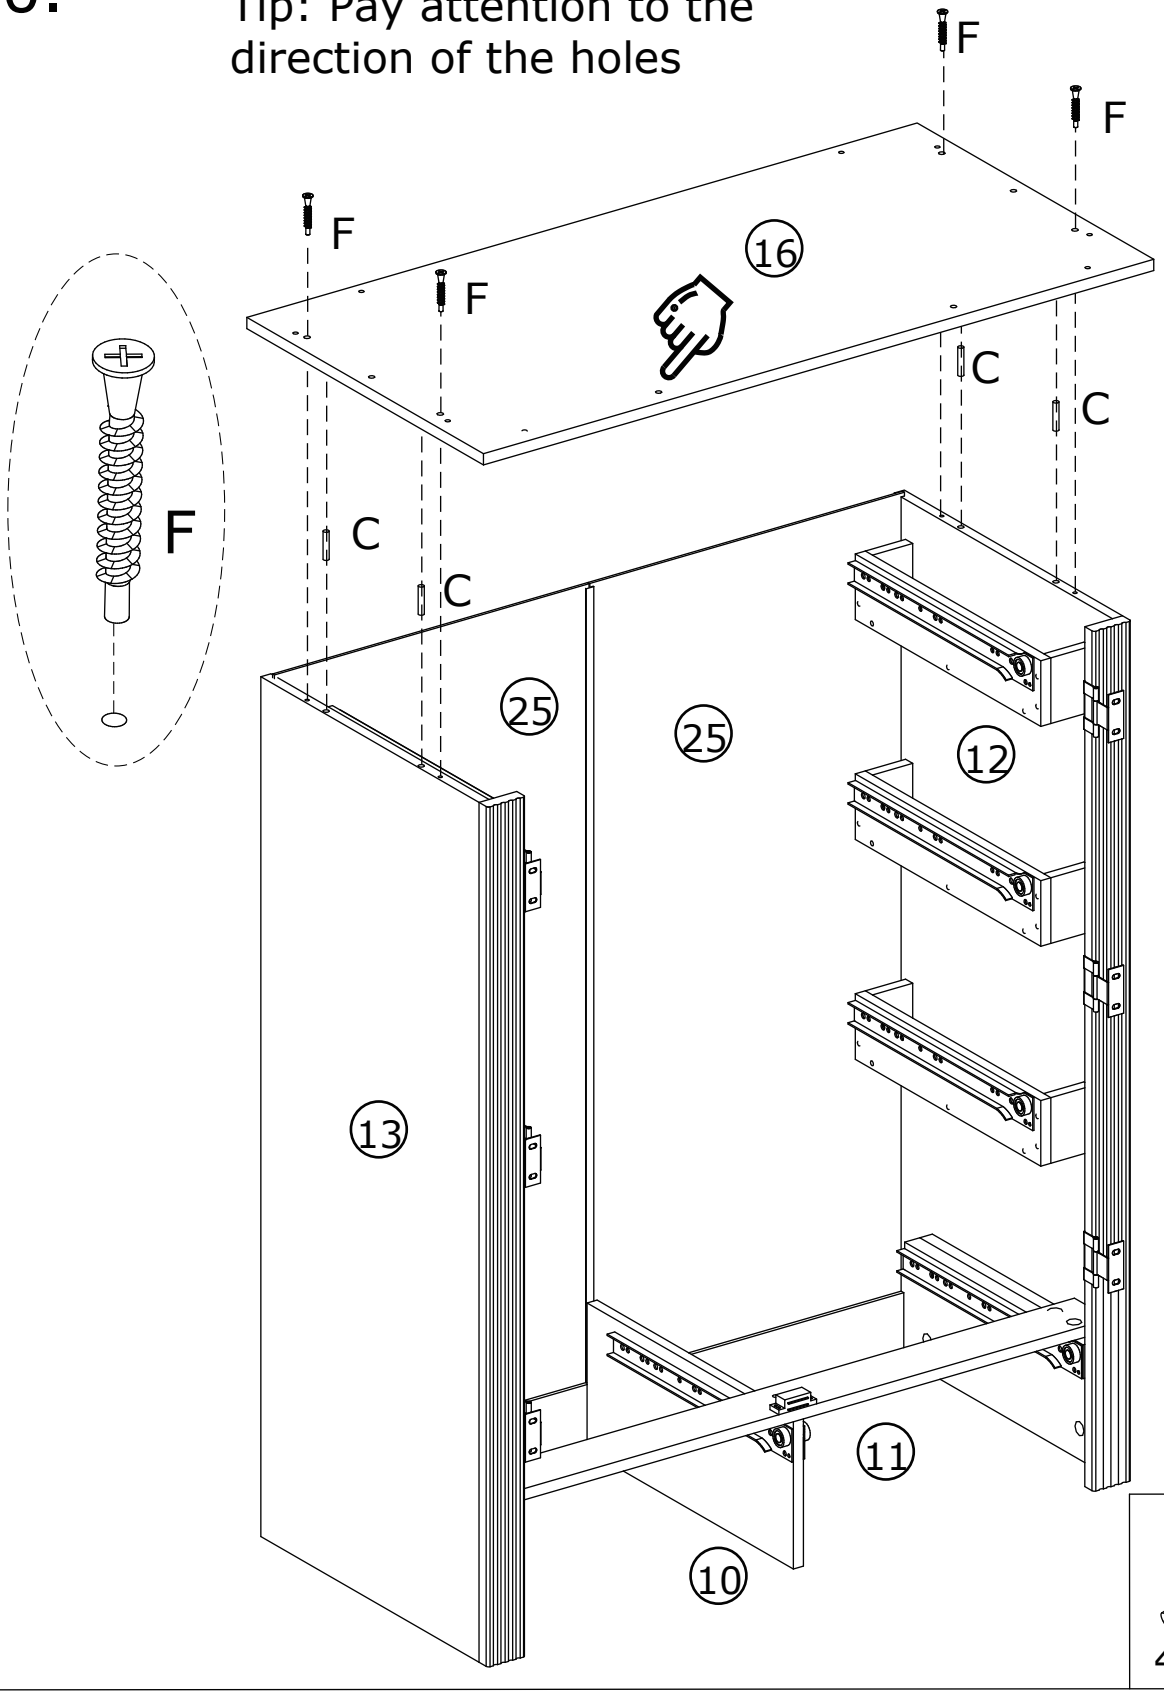


C	F
4pcs	4pcs


21.

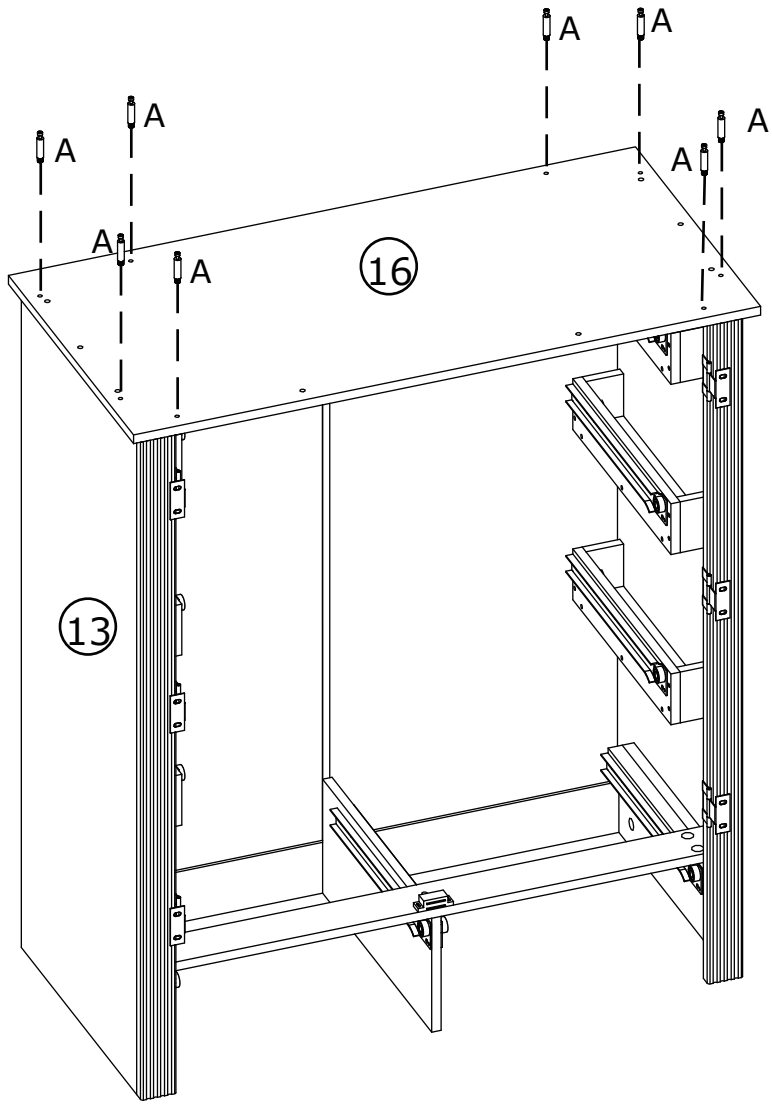


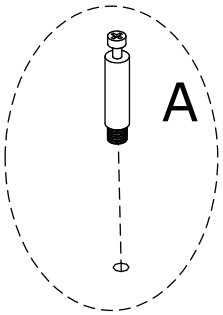


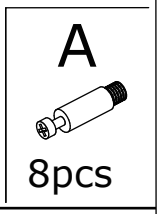


22.

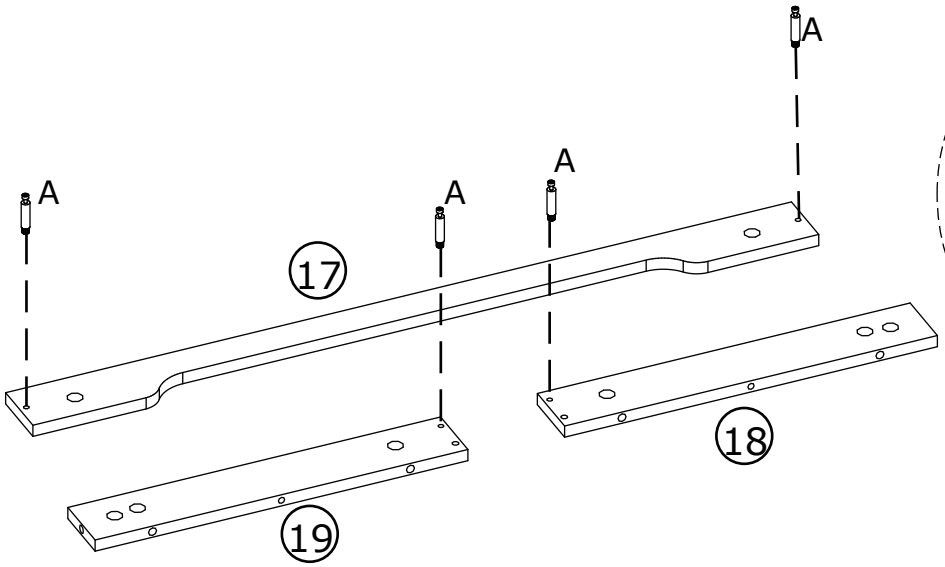

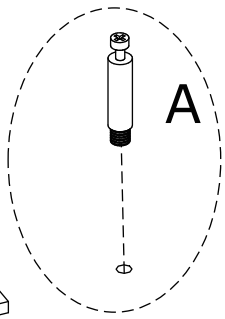

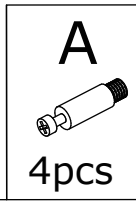


23.

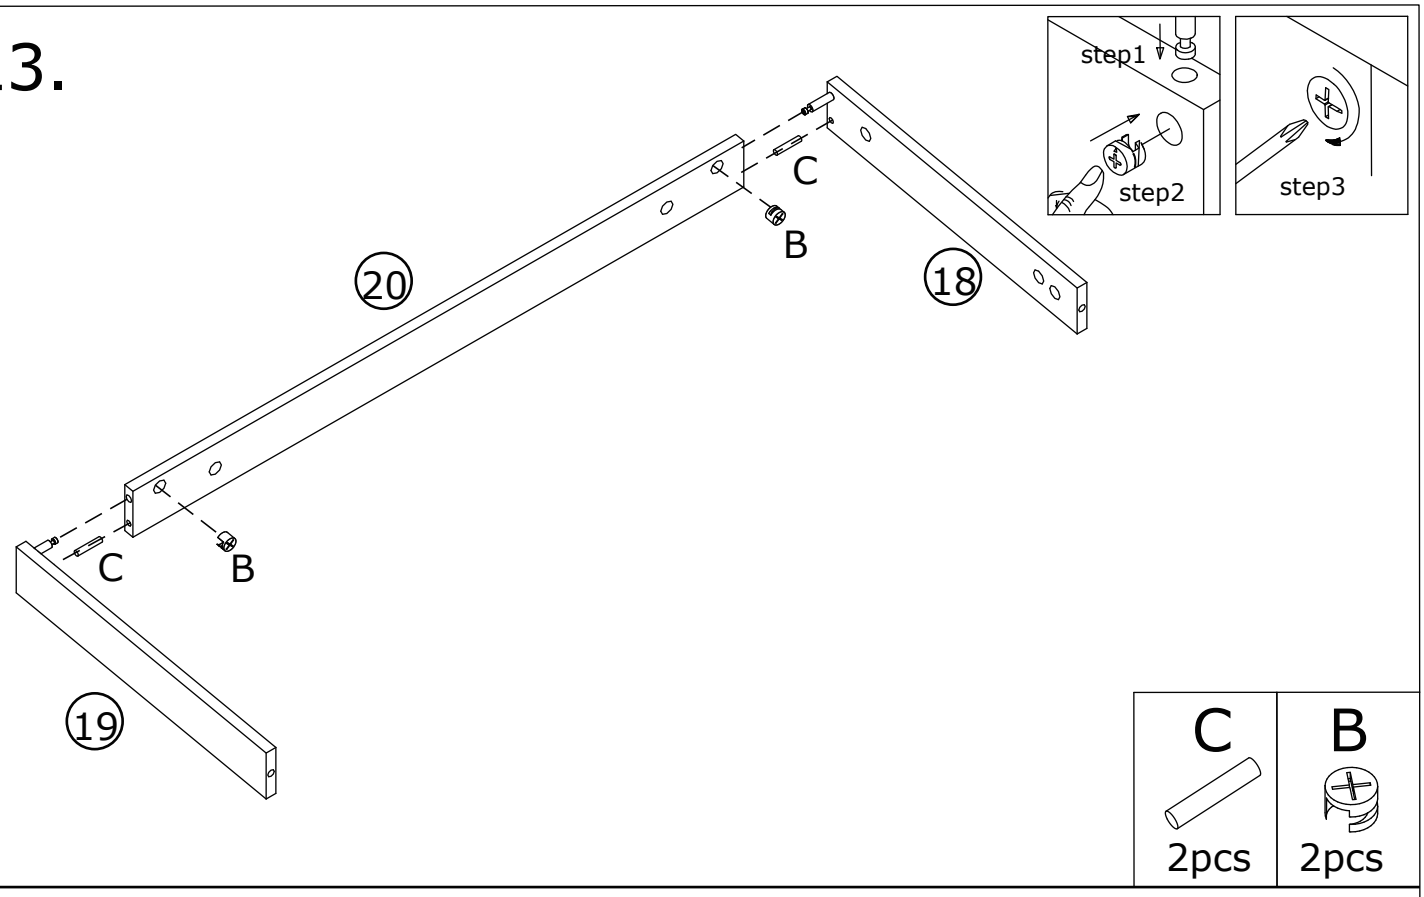


C	B
2pcs	2pcs


24.

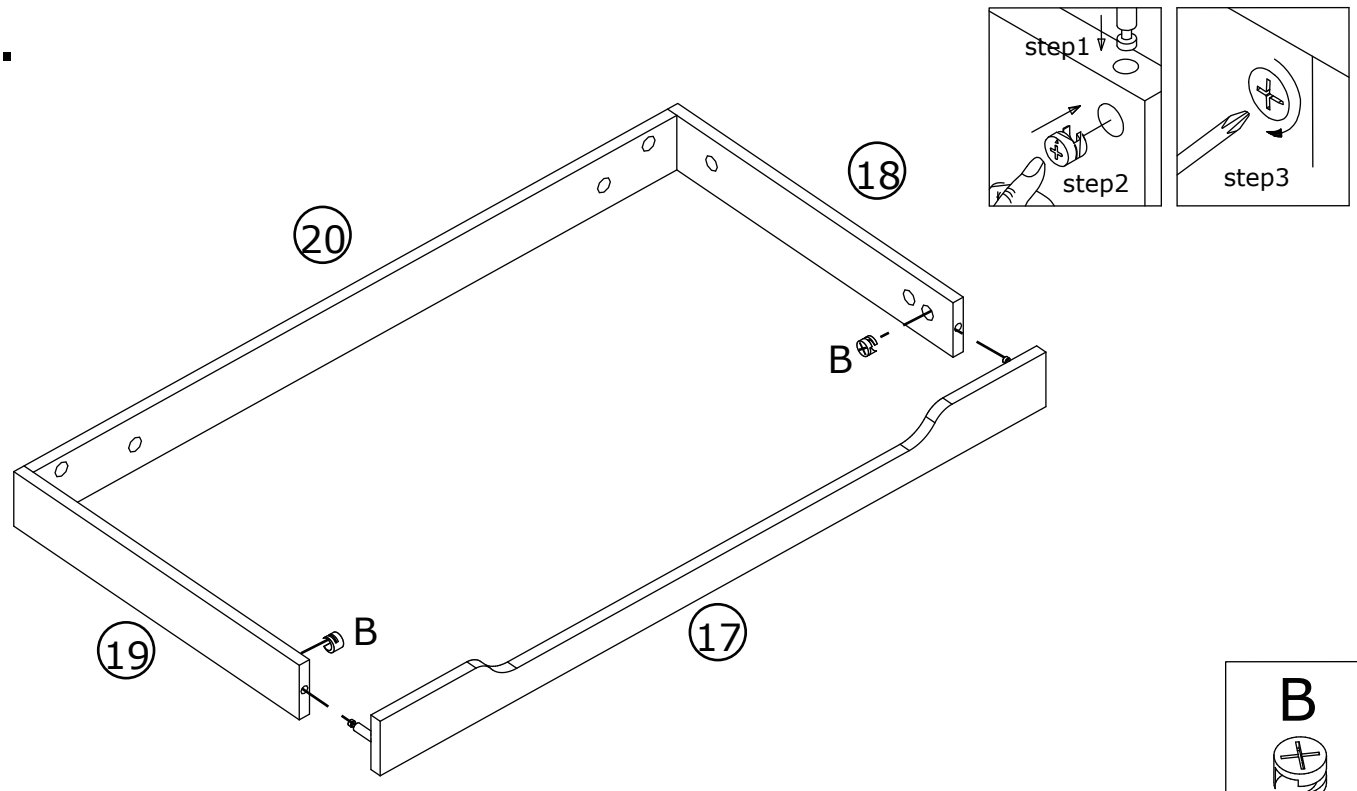

B
2pcs


25.

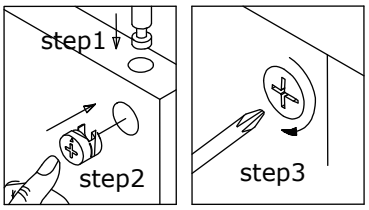

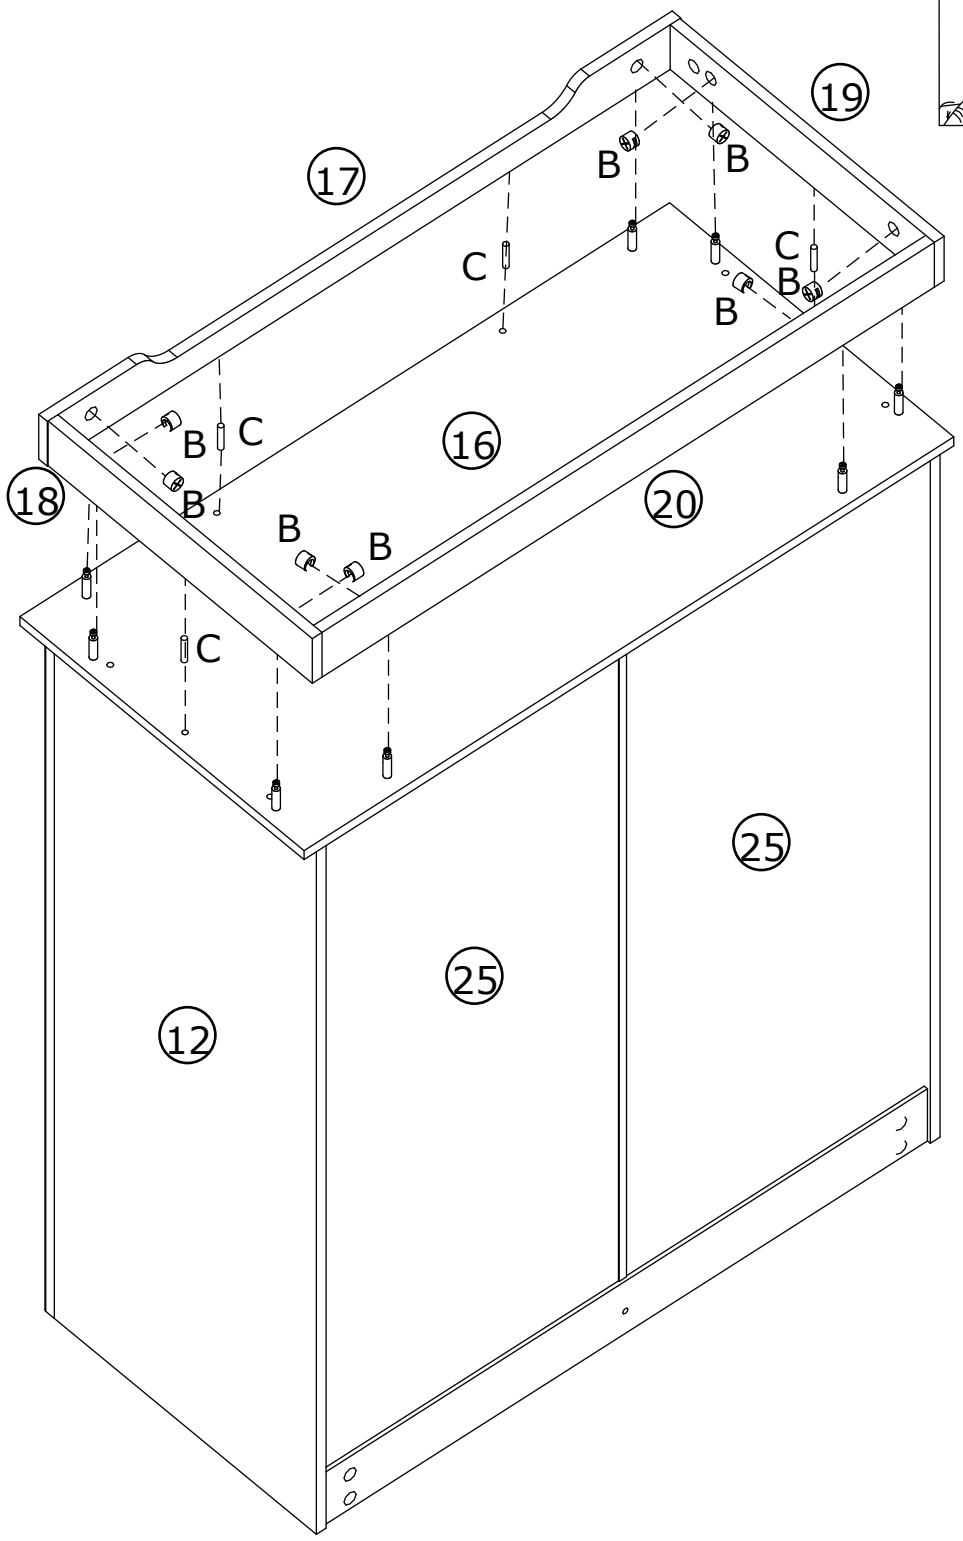

C	B
4pcs	8pcs


26.

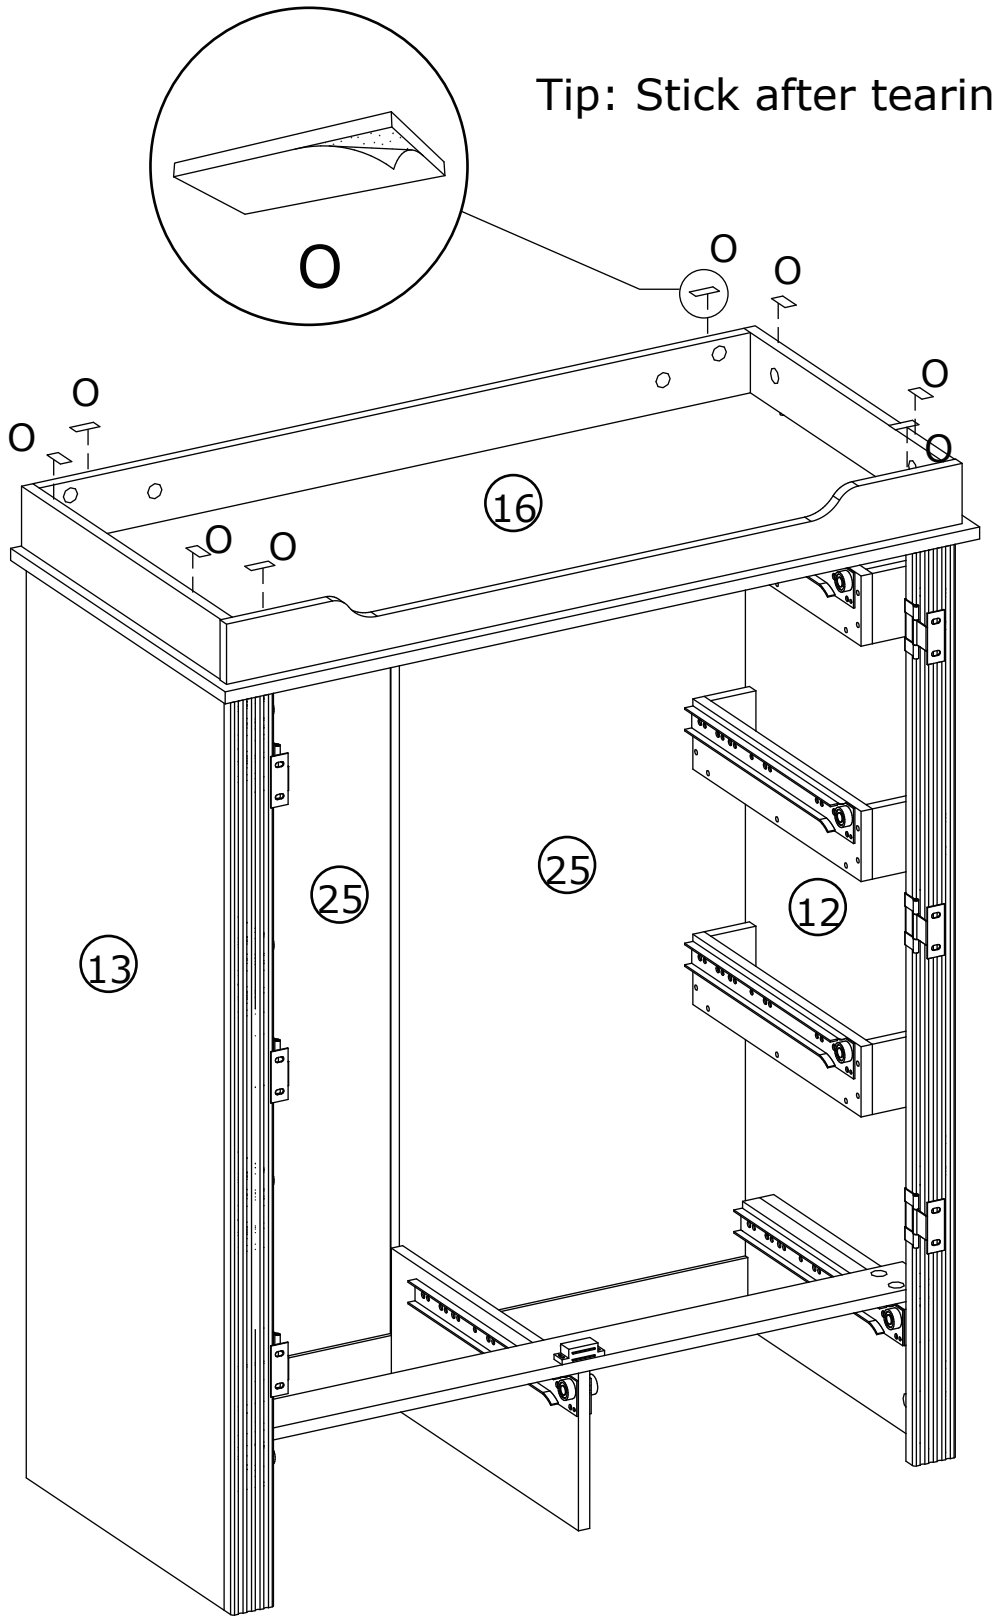

O

8pcs


27.x2

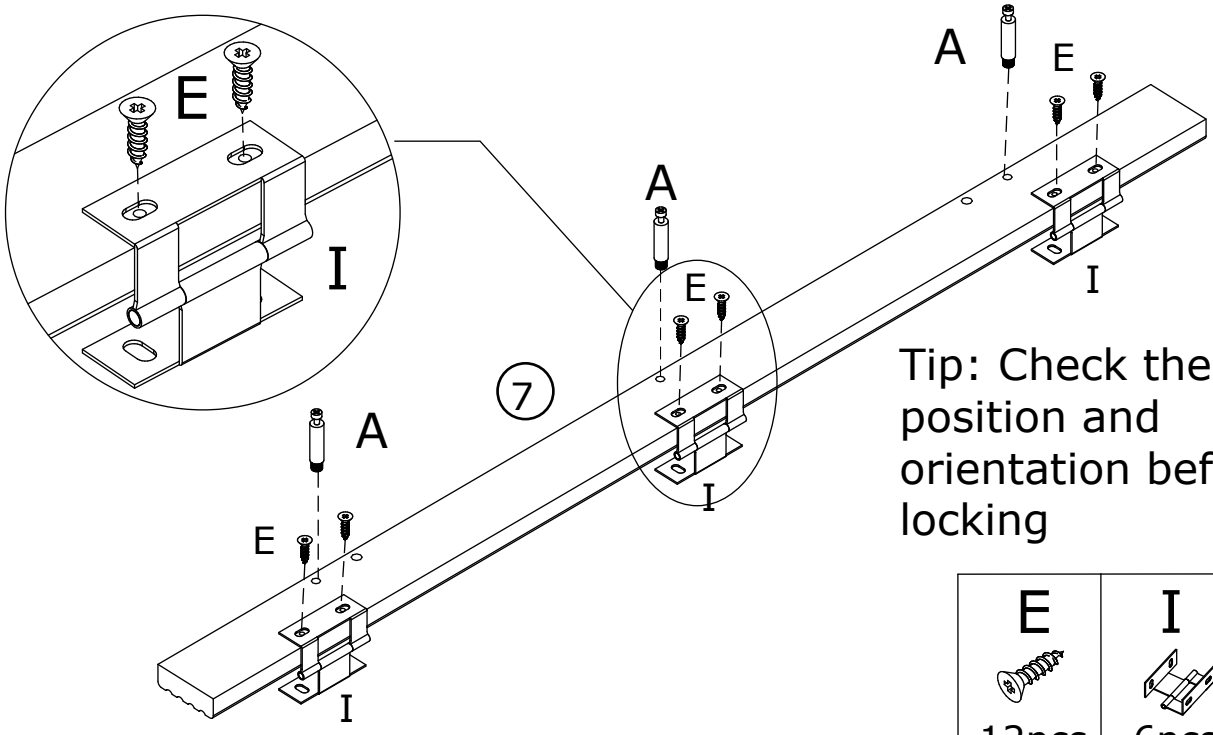

Tip: Check the hinge position and orientation before locking


E	I	A
12pcs	6pcs	6pcs


28.

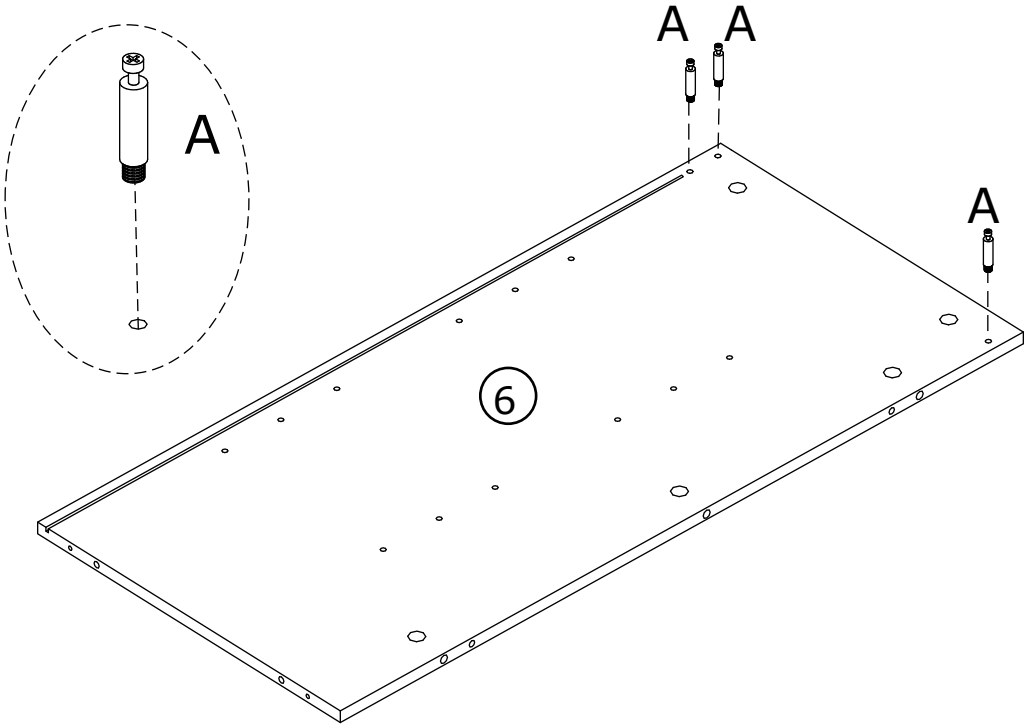


A
3pcs


29.

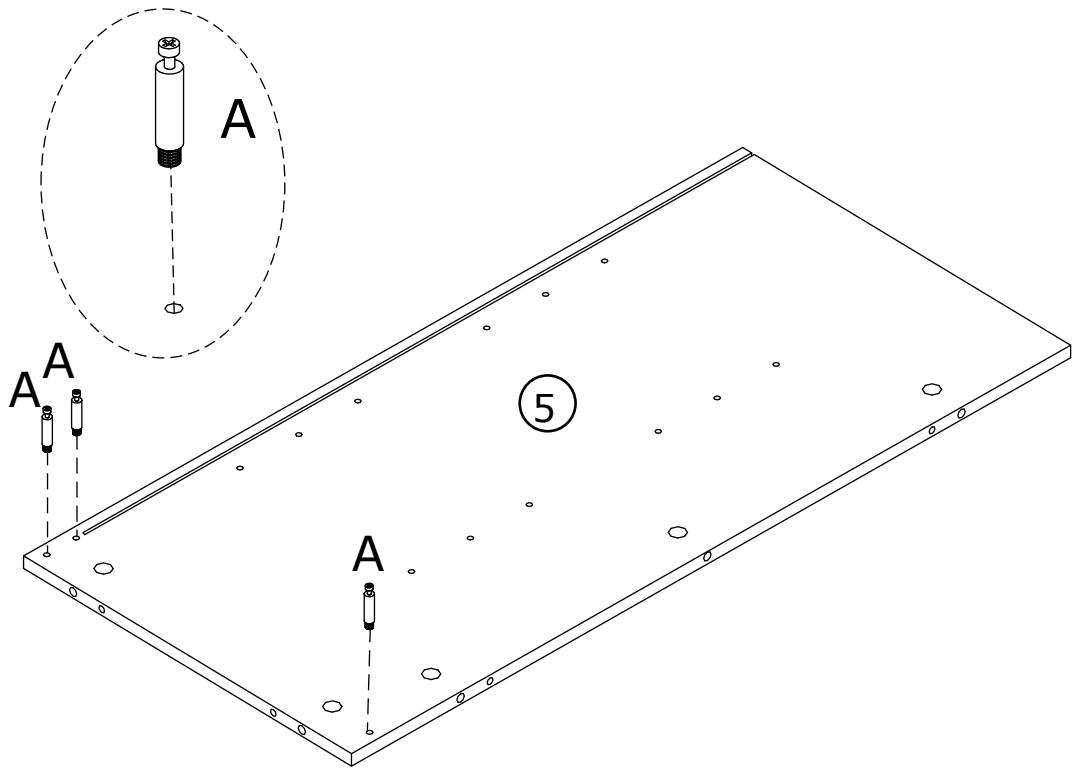


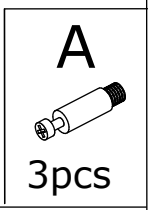


30.

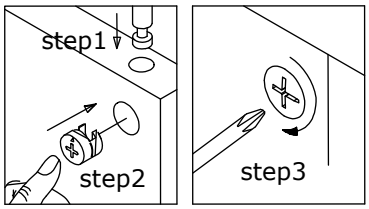

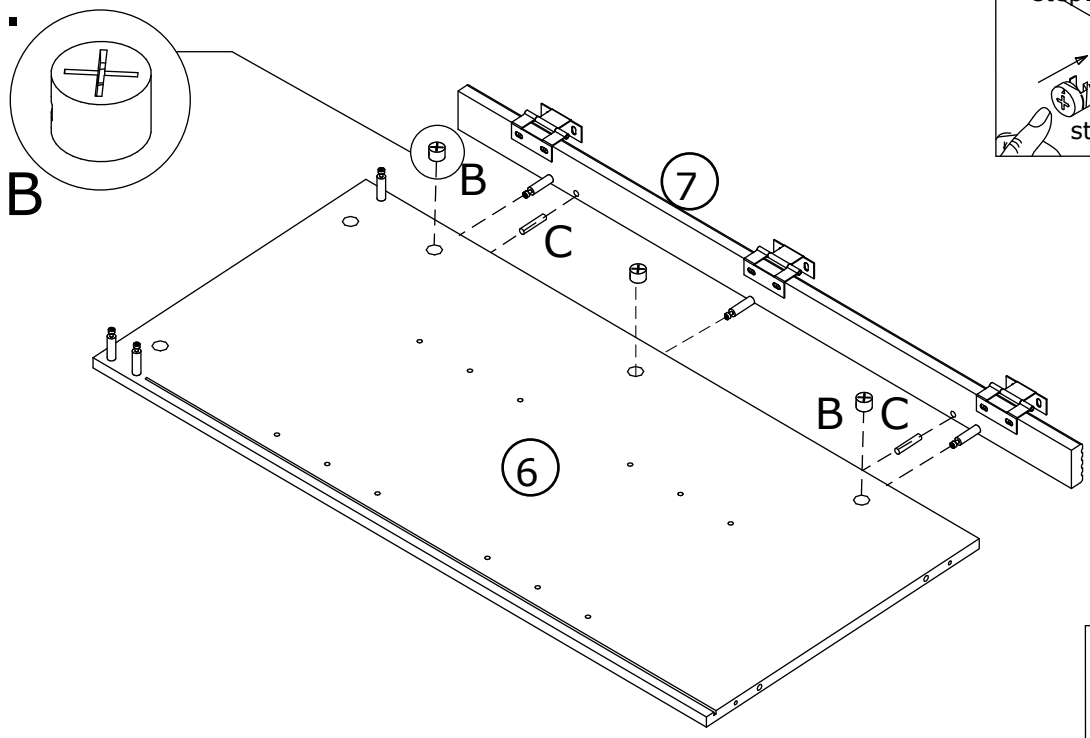


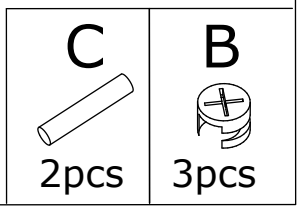


31.

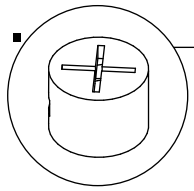


B

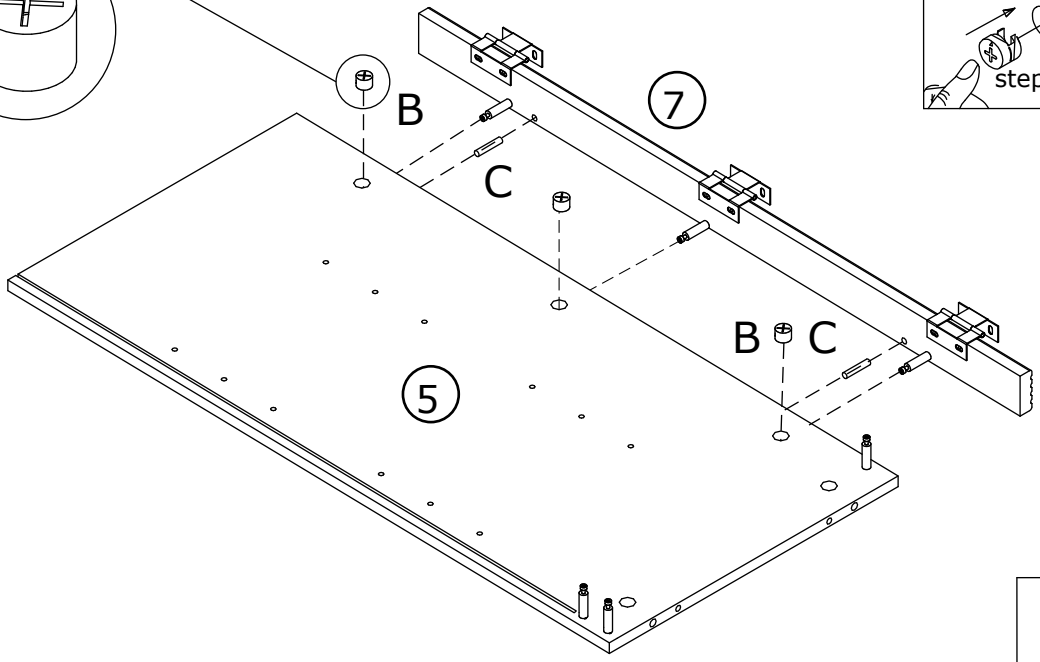


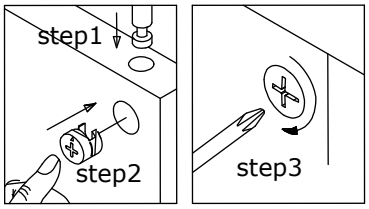


C	B
2pcs	3pcs

32.

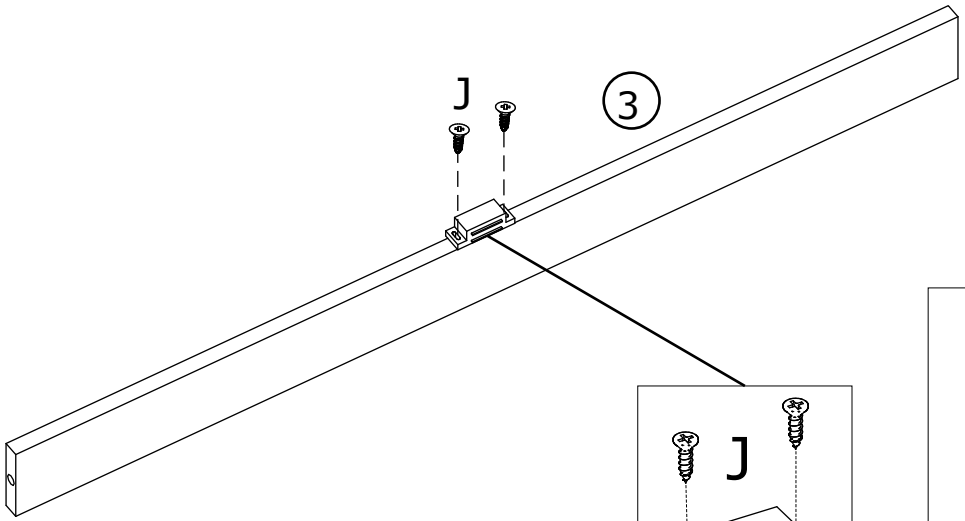


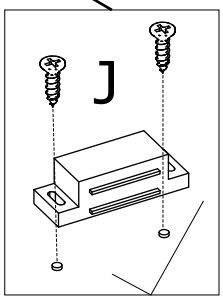


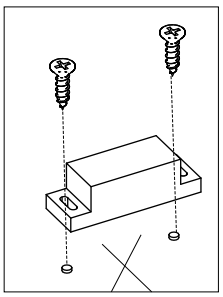

J
1pcs

33.

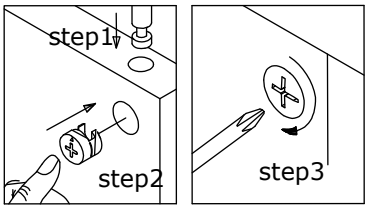


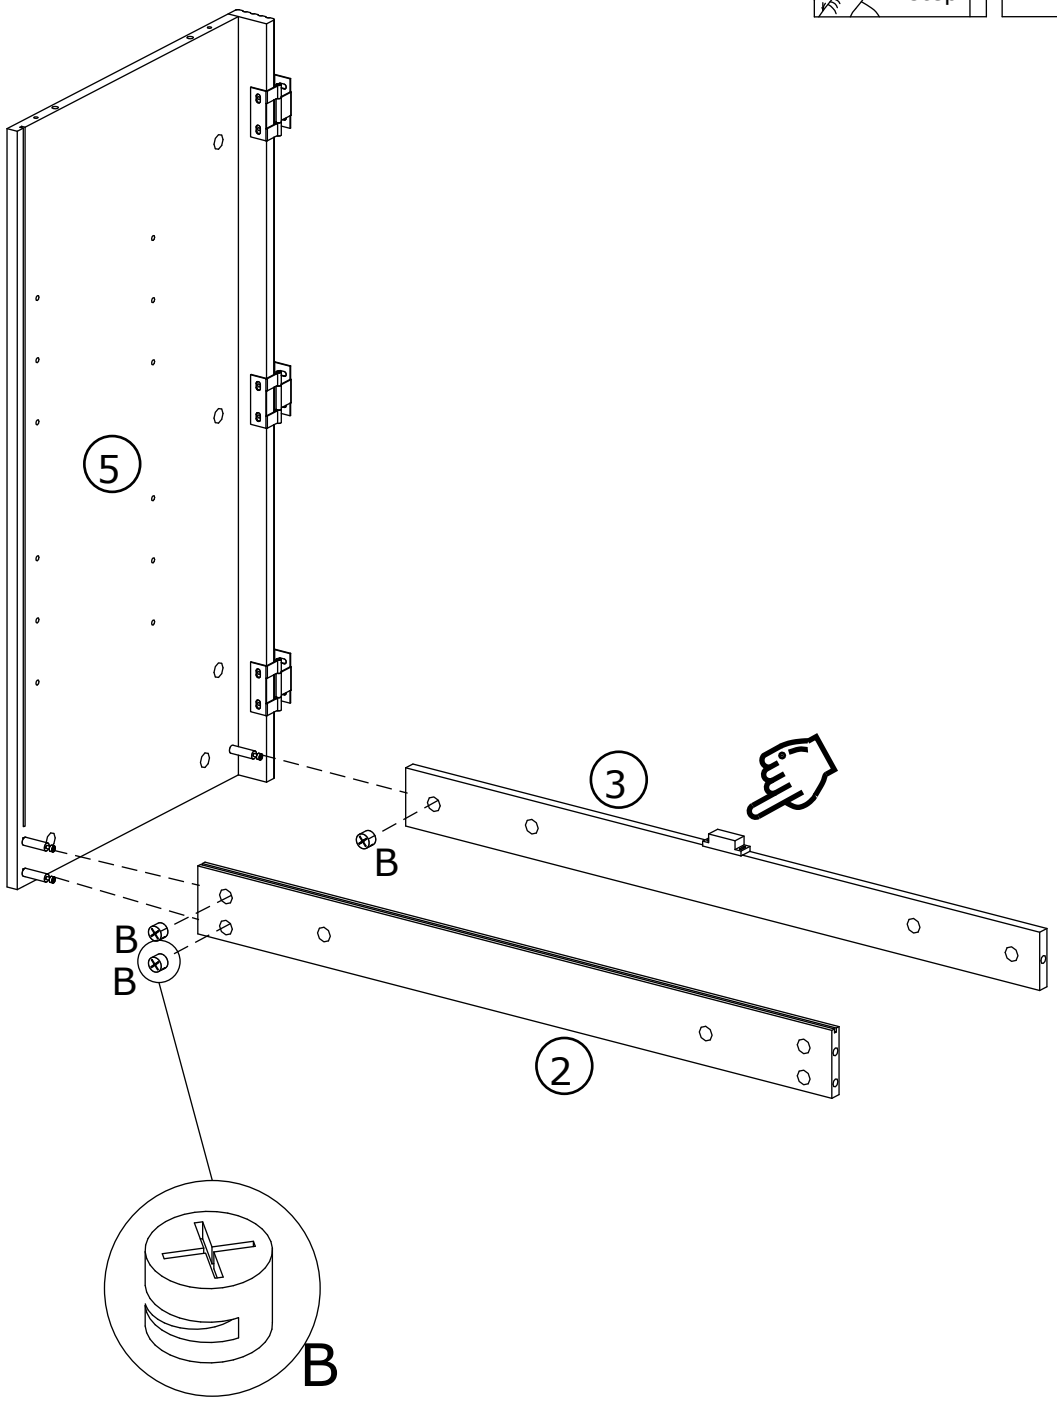


B

3pcs

34.

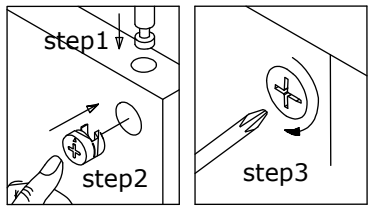


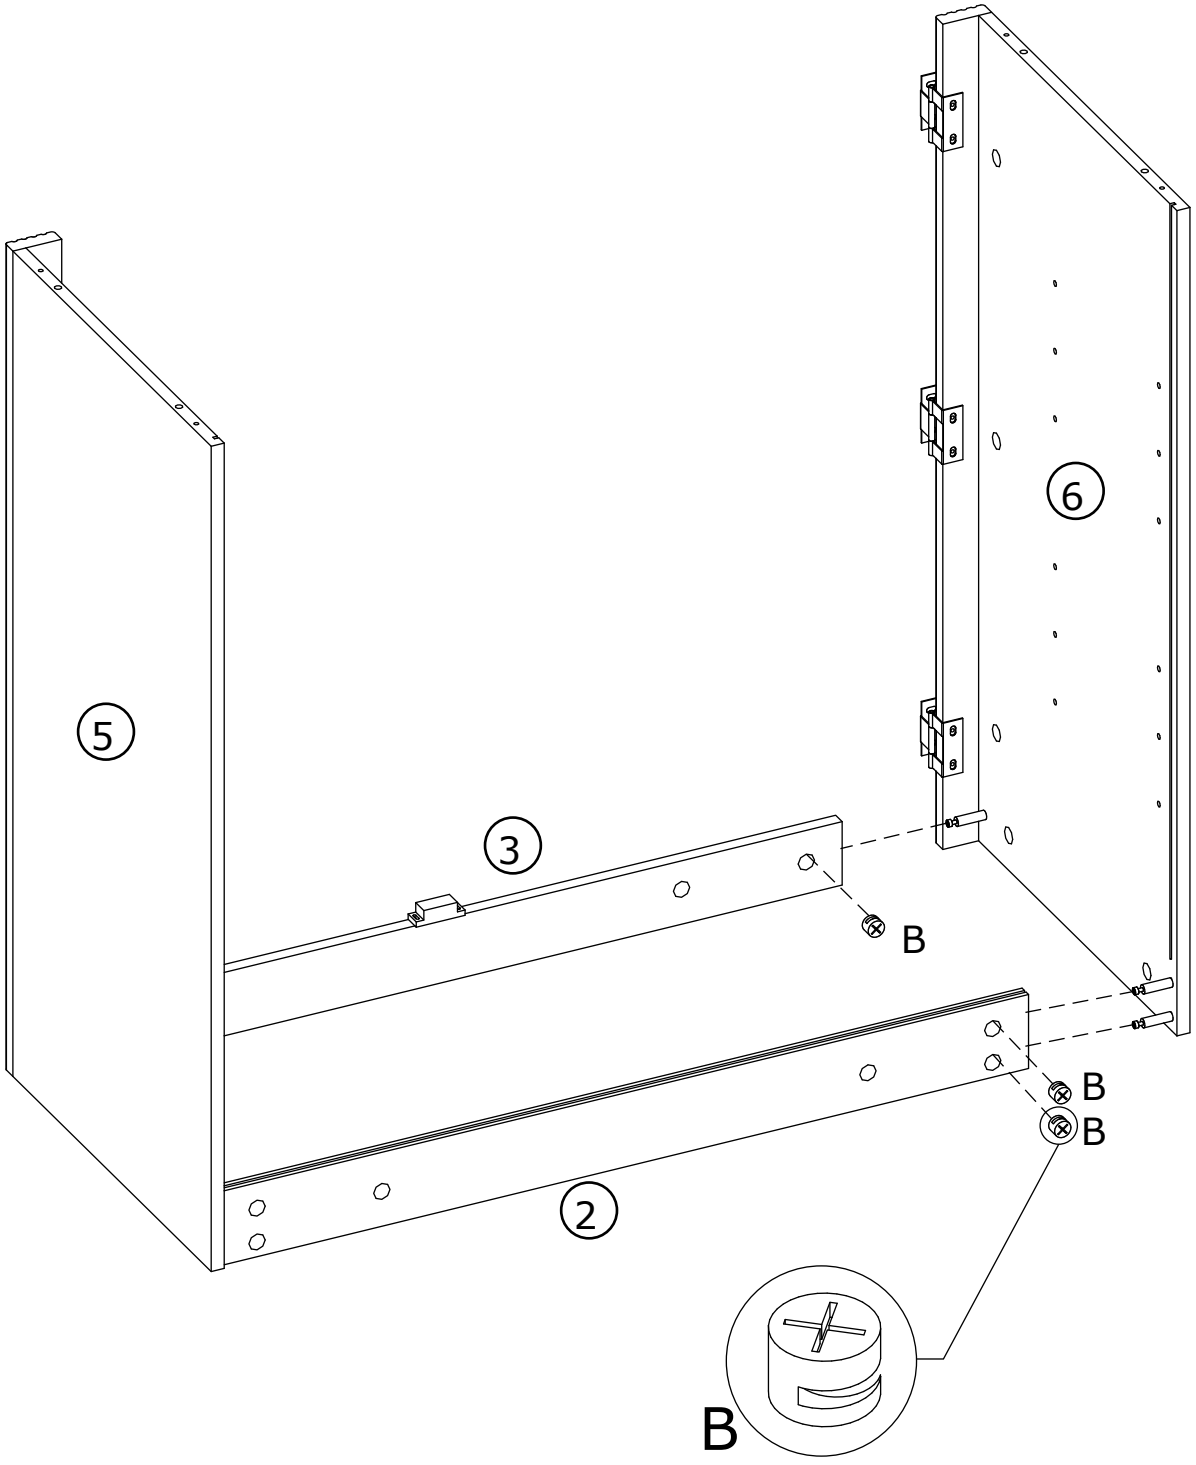

B

3pcs

35.

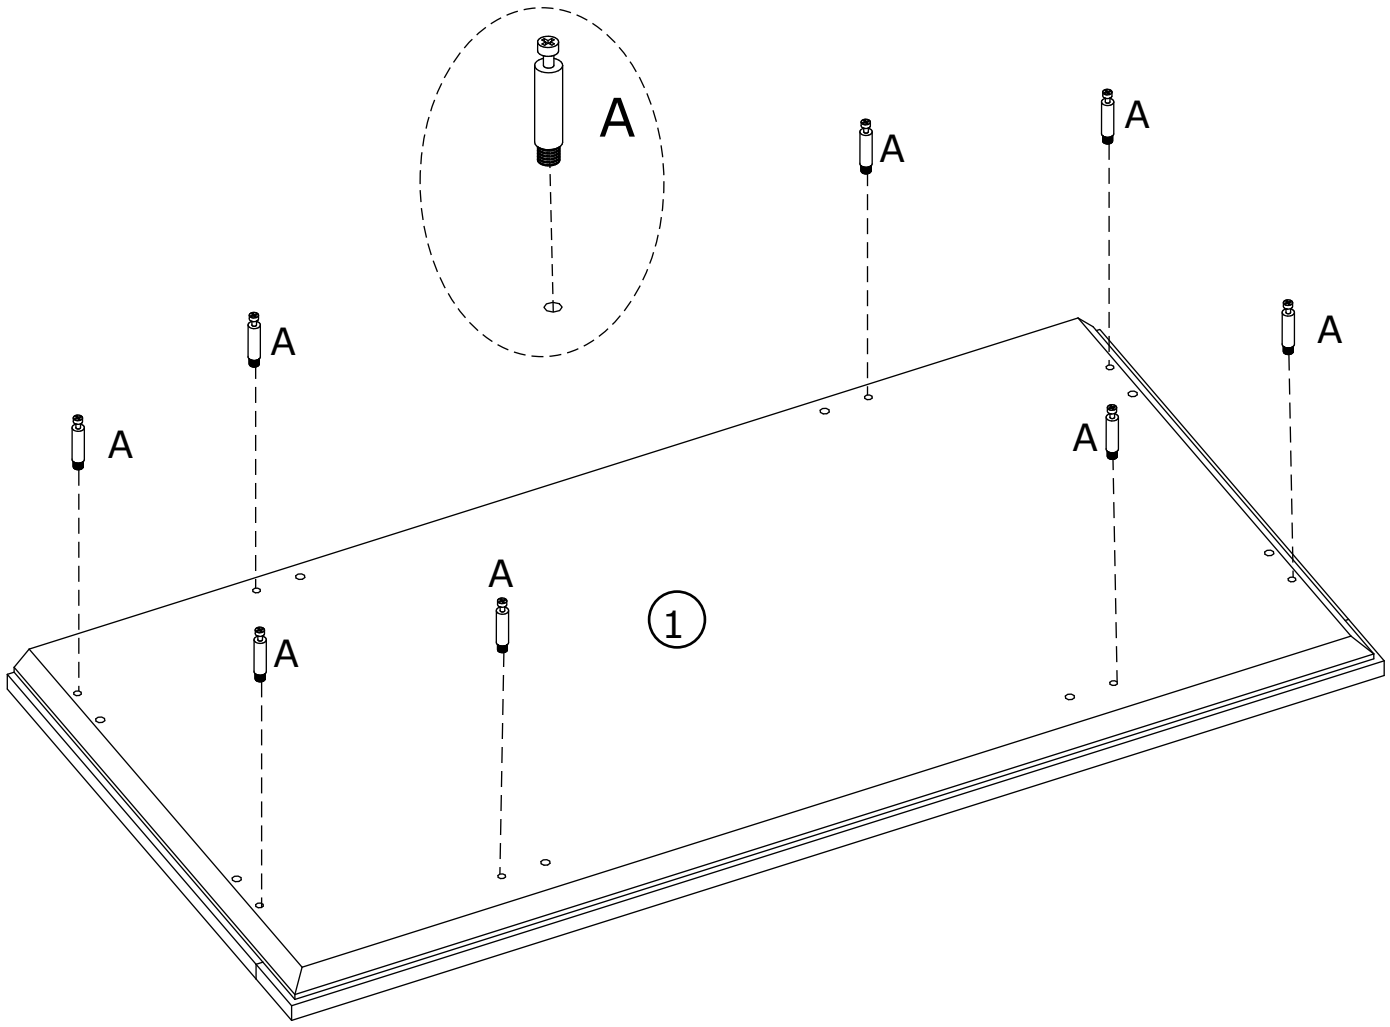



A



8pcs


36.

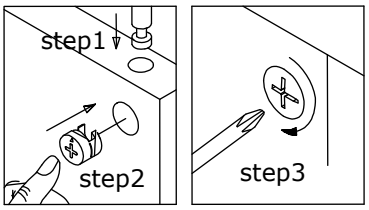

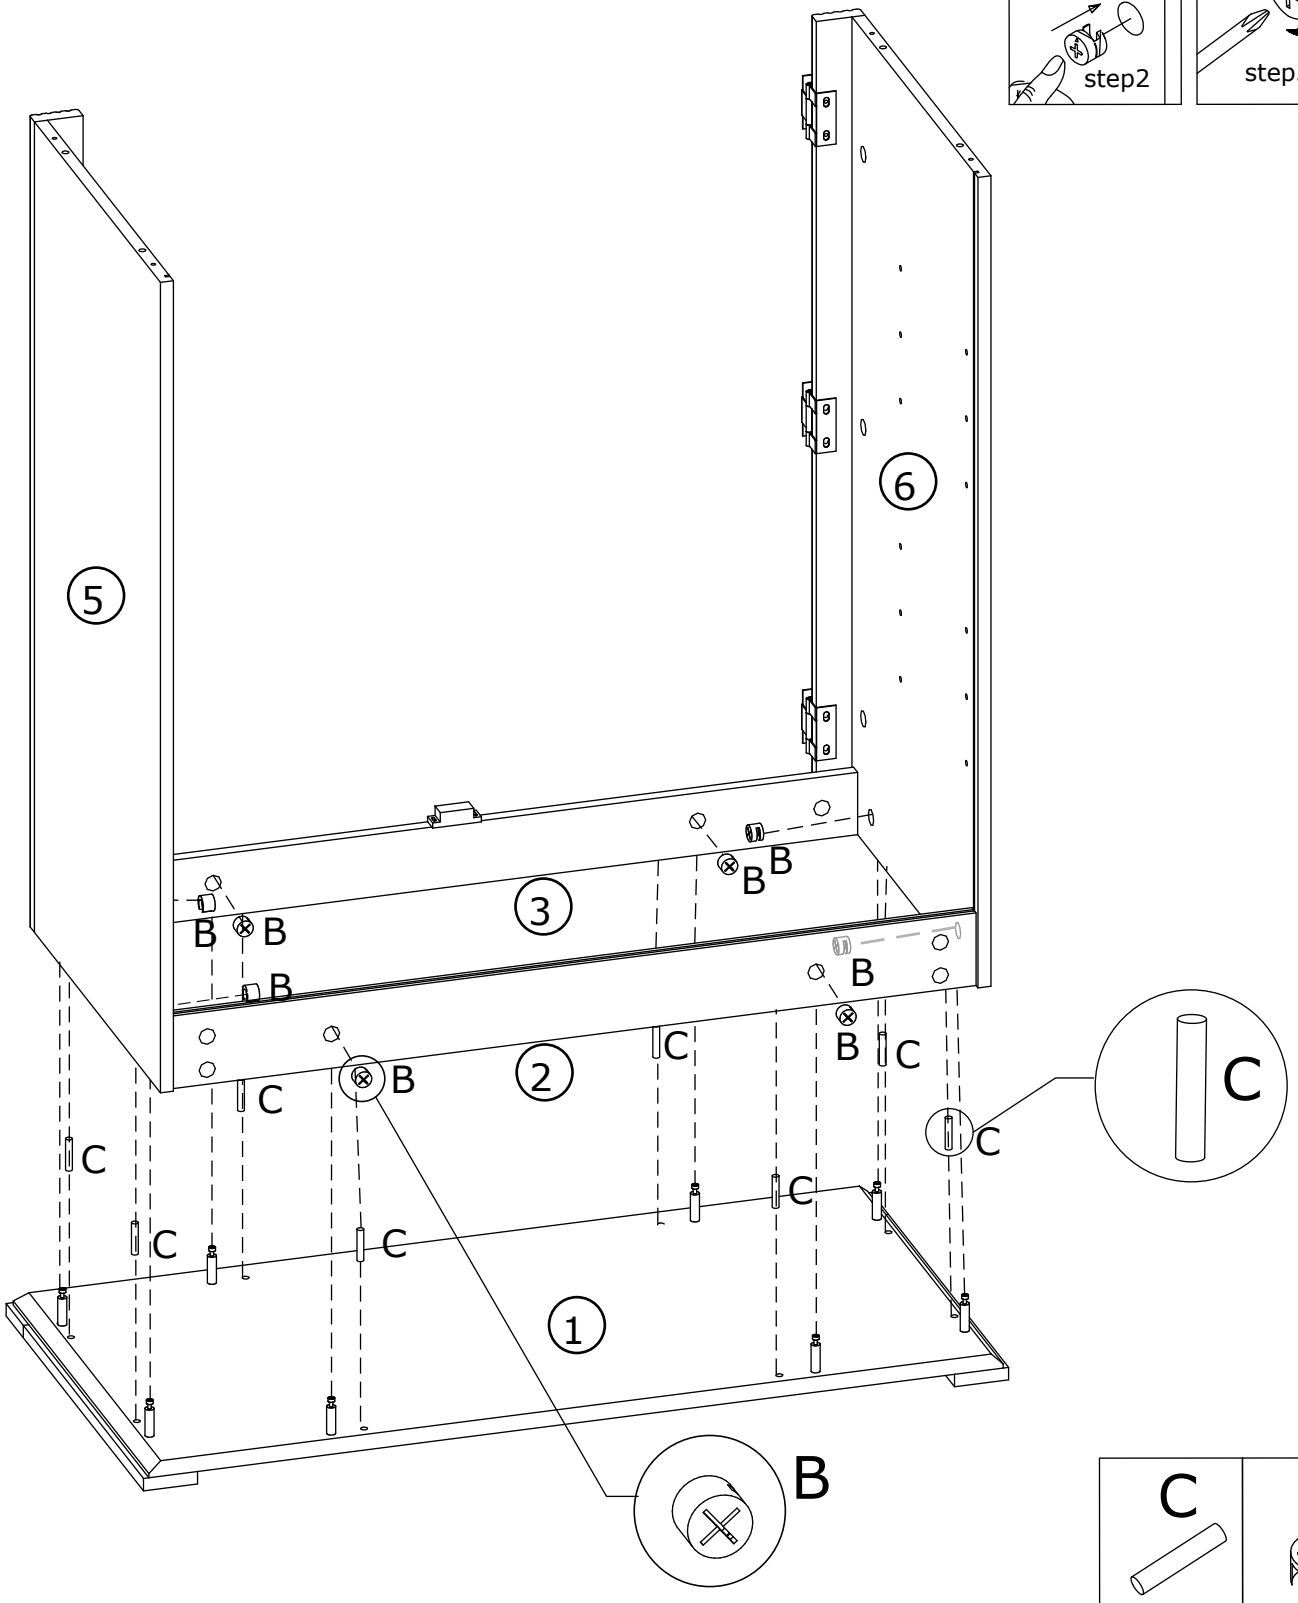

C	B
8pcs	8pcs


37.

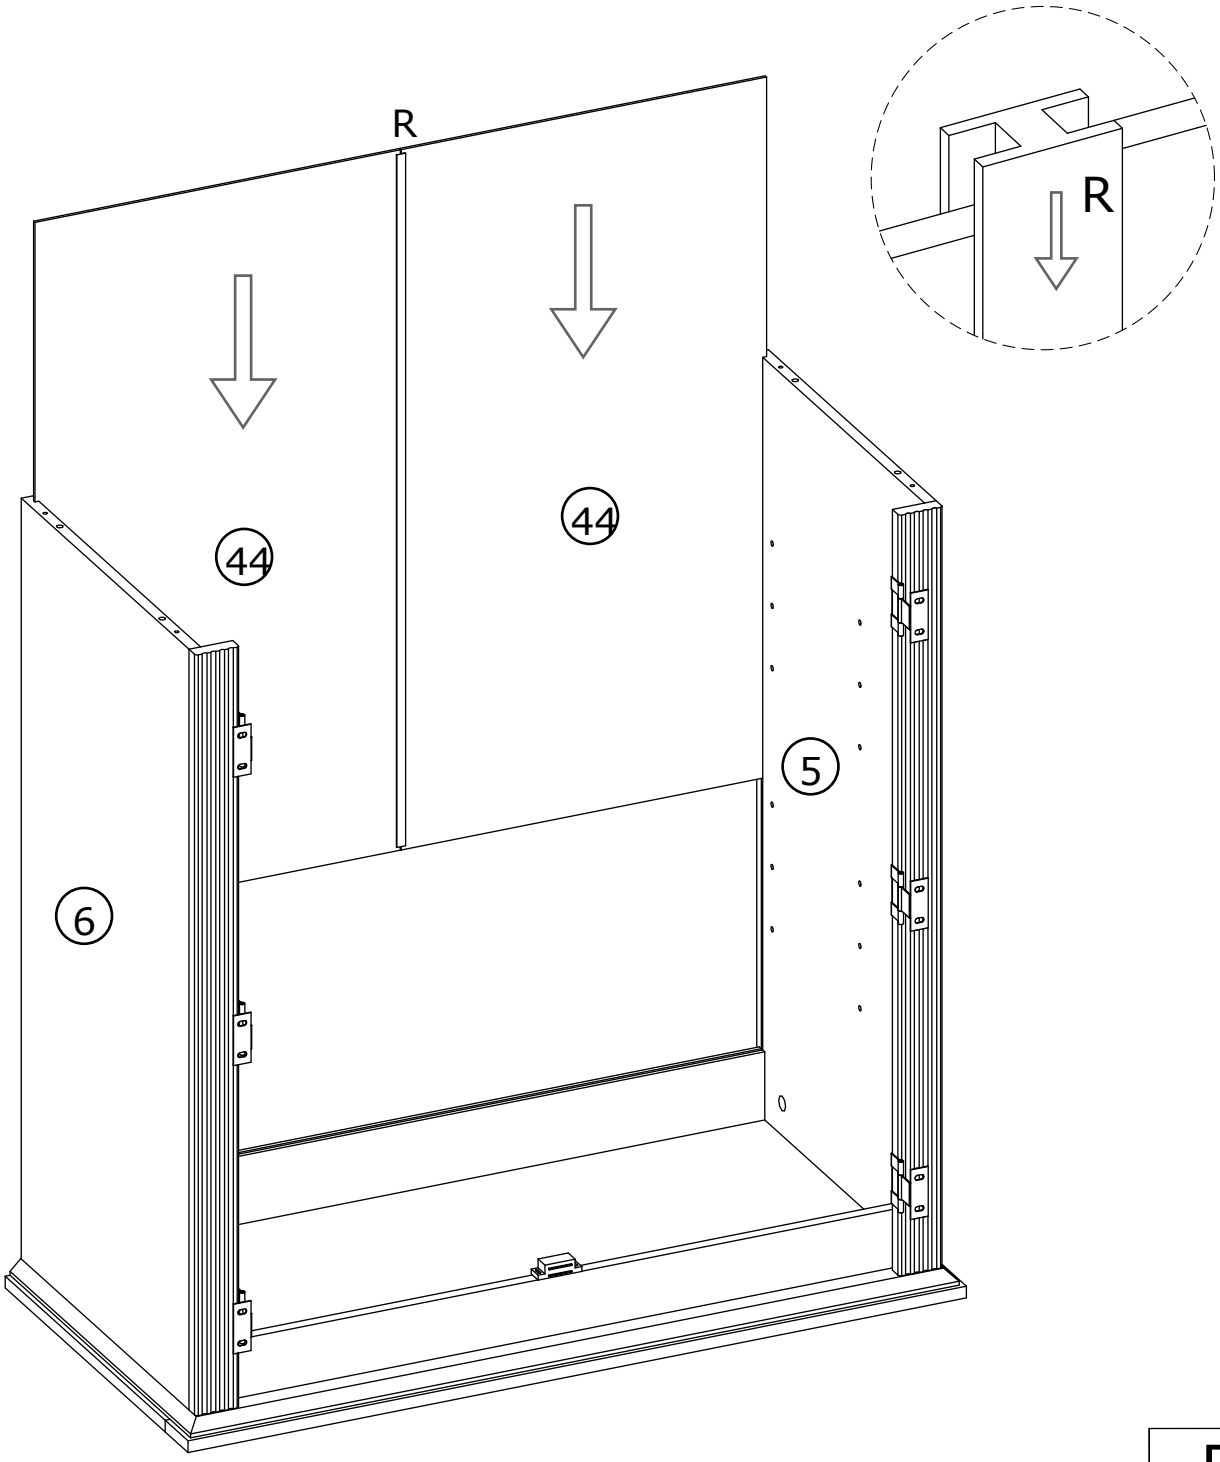

R


1pcs

38.

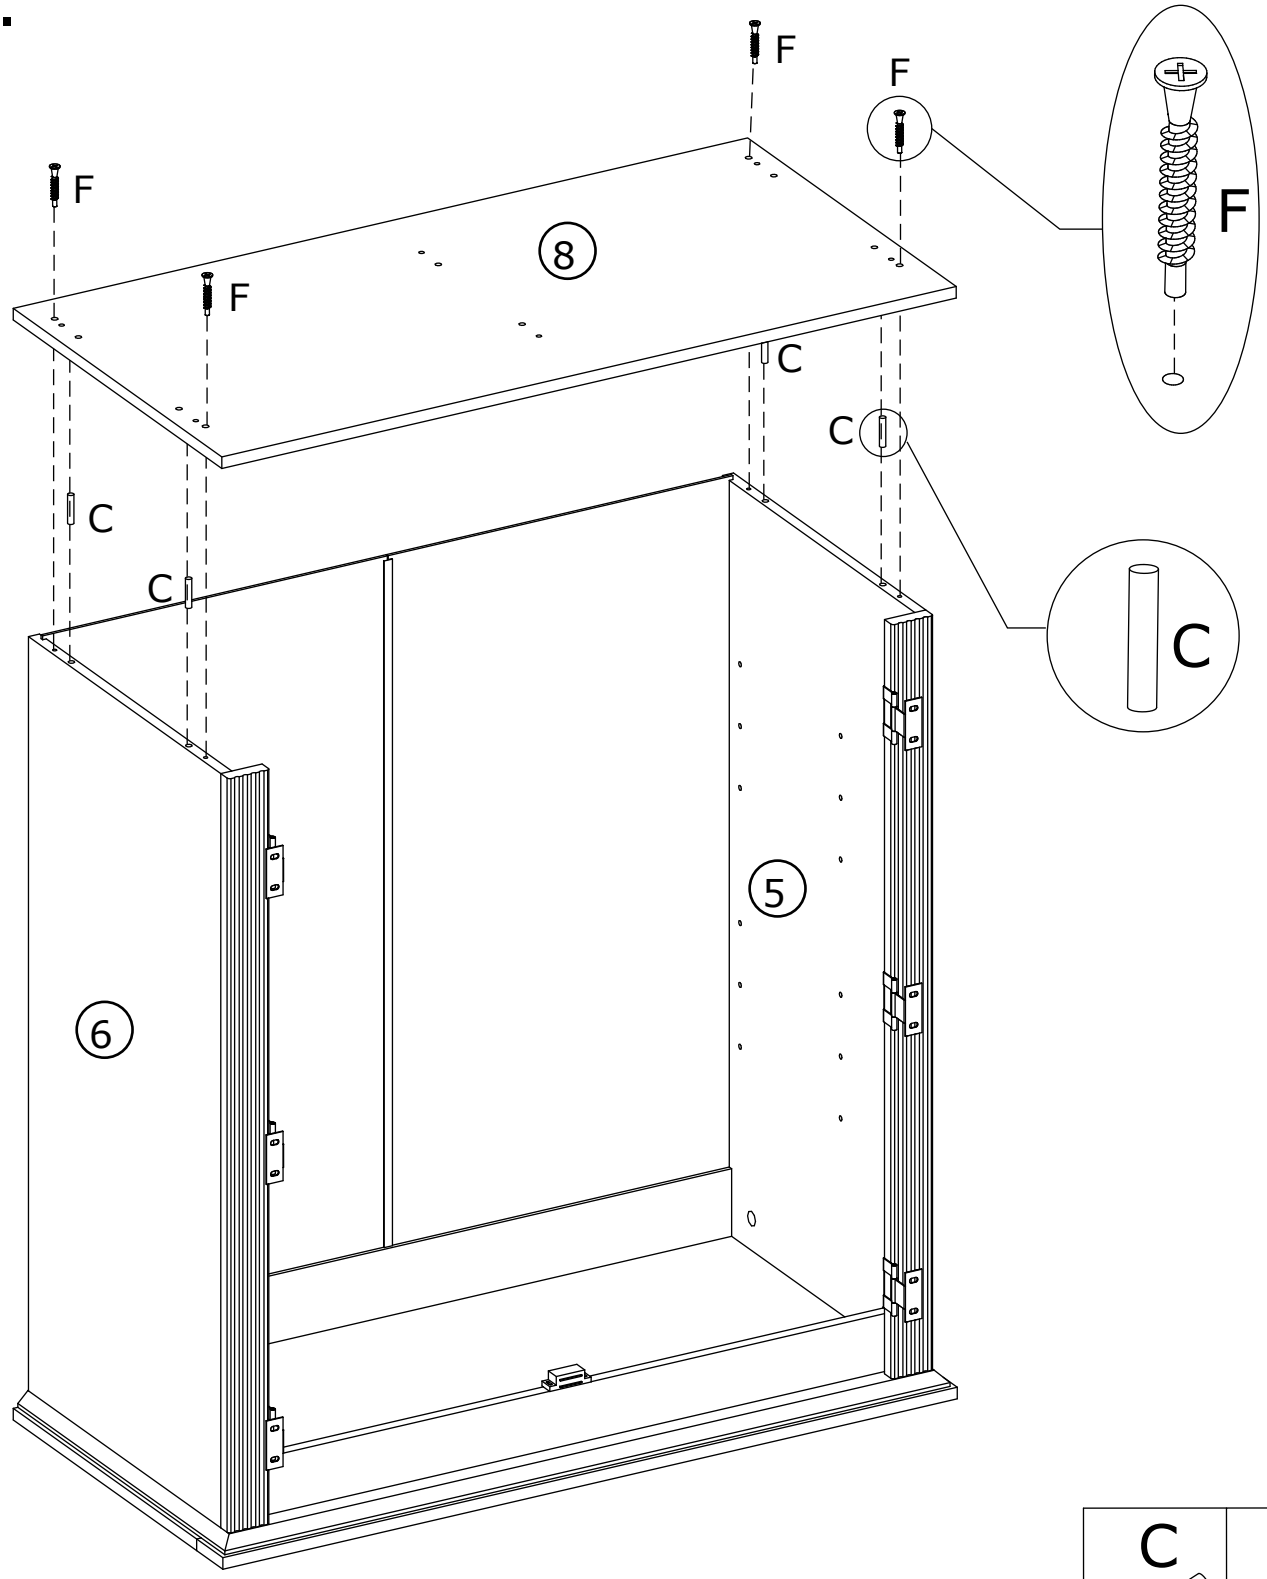

C	F
4pcs	4pcs

39.

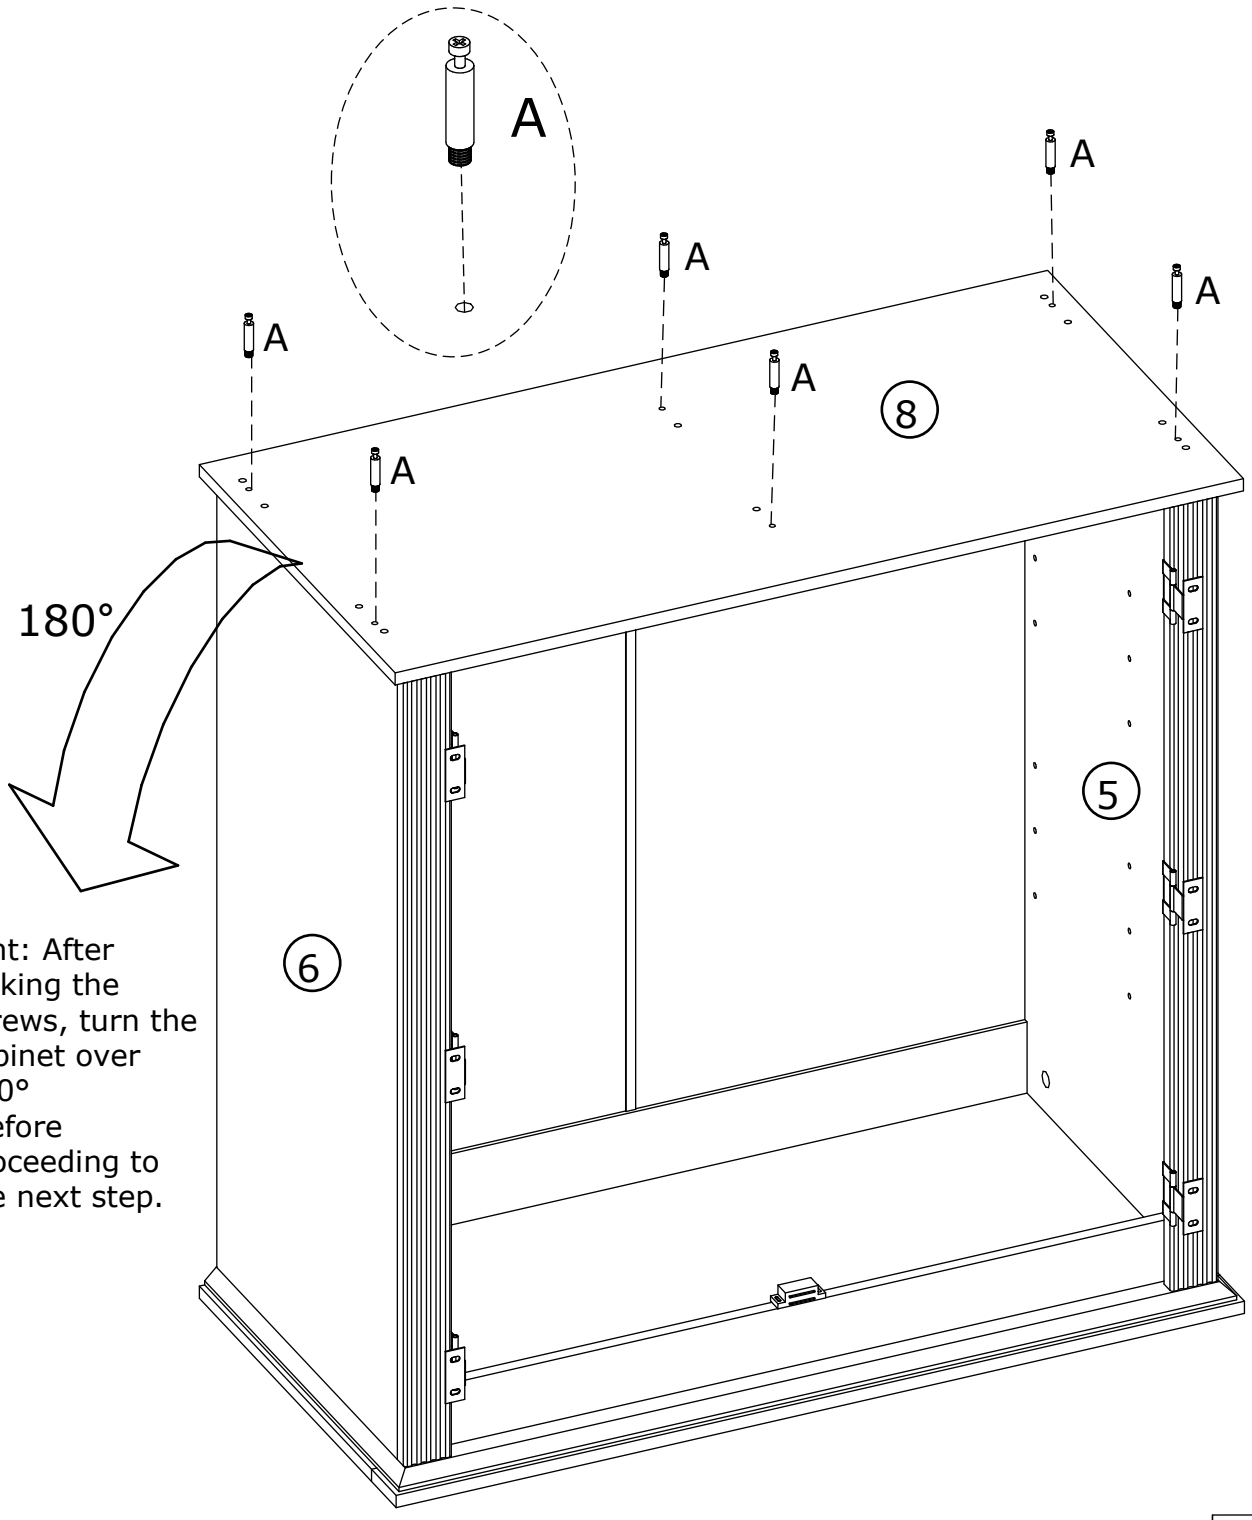


Hint: After locking the screws, turn the cabinet over 180° before proceeding to the next step.

A



6pcs


40.

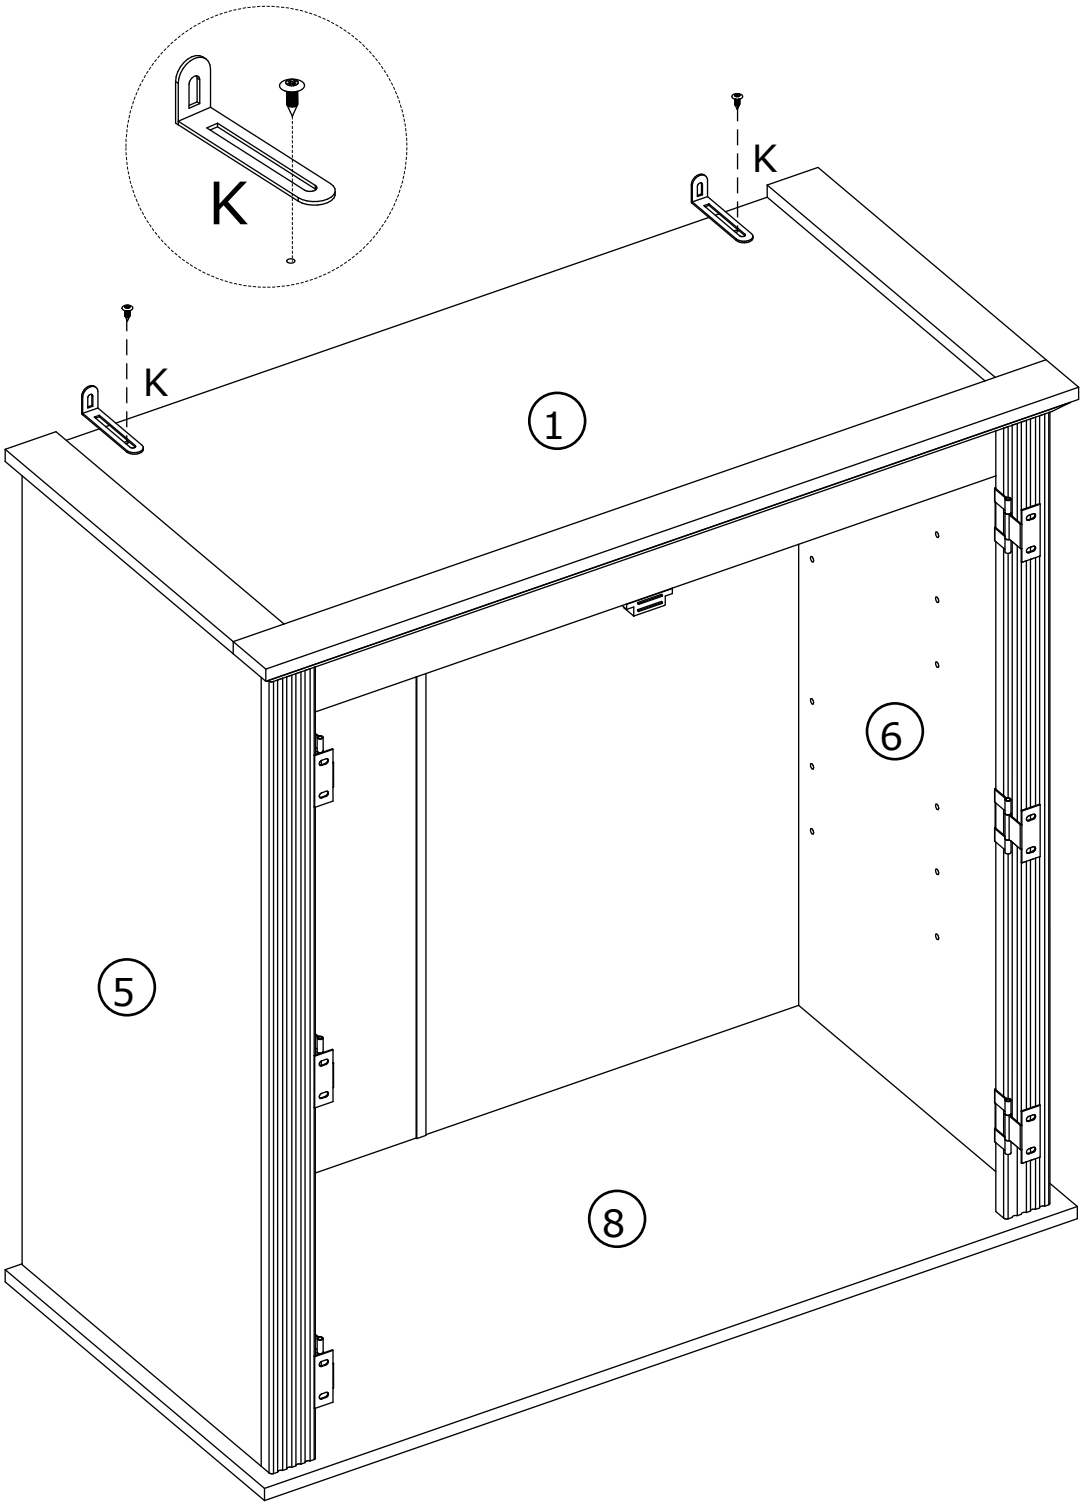


K

2pcs


41.

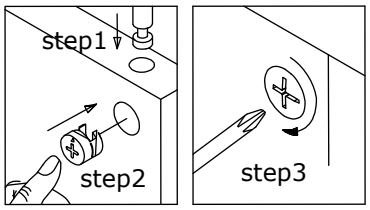

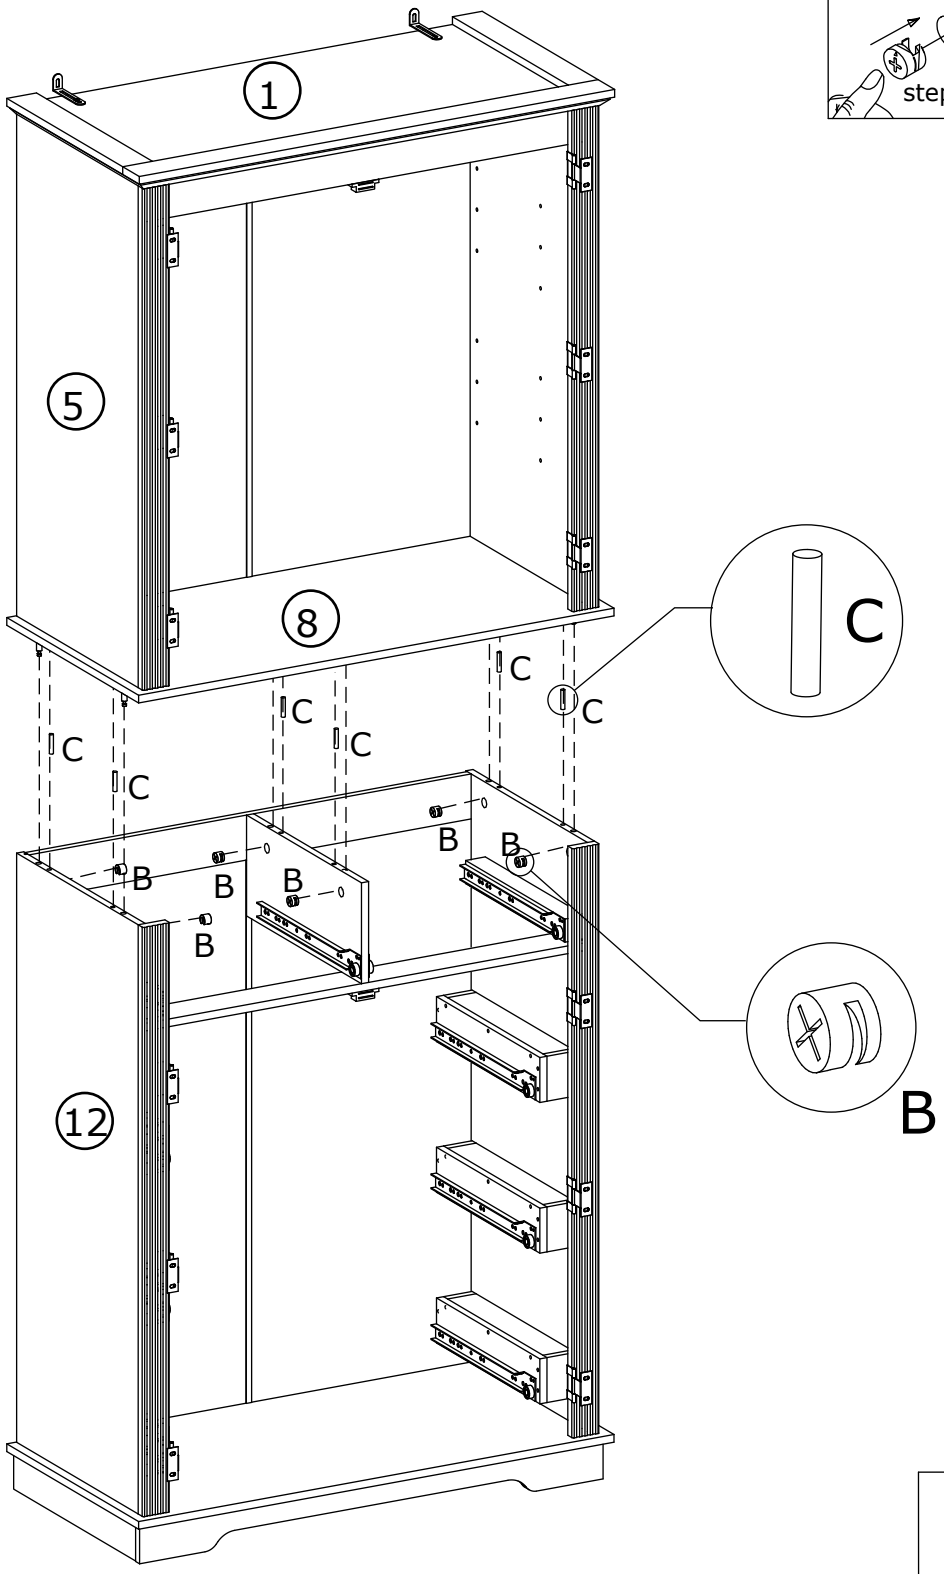

C	B
6pcs	6pcs


42.x2

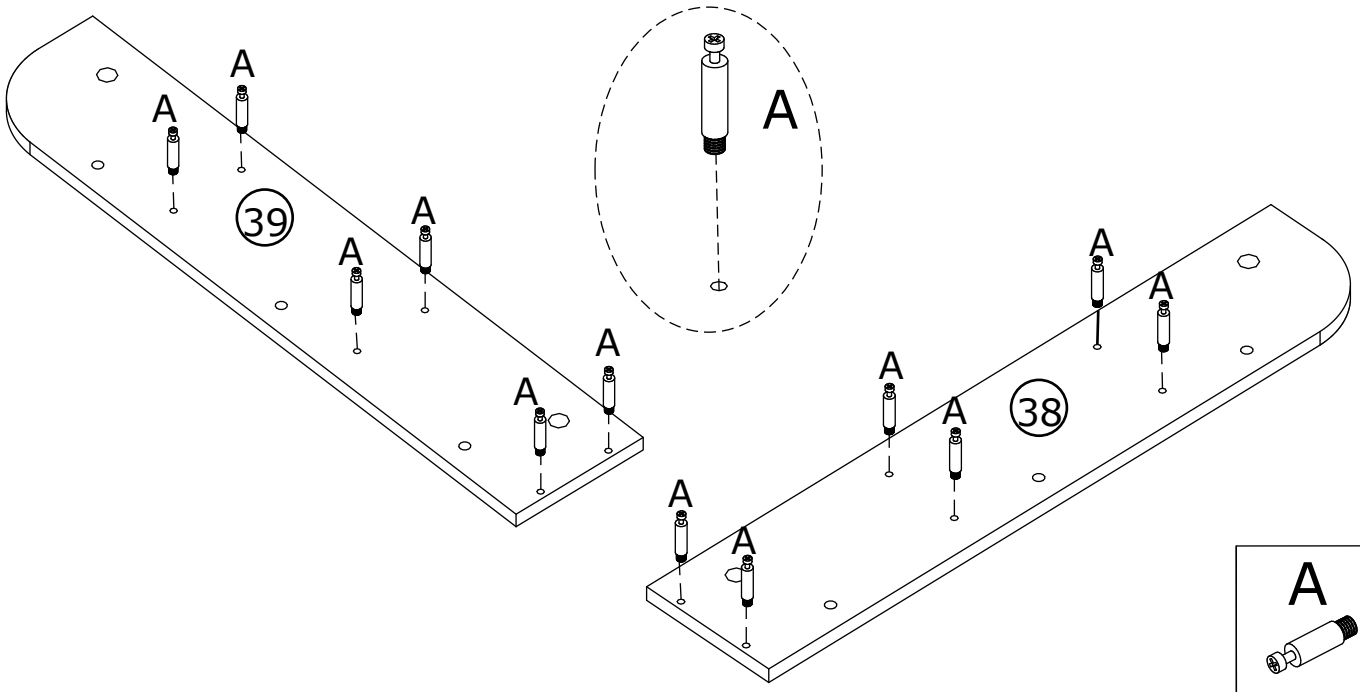

A

24pcs

43.x2

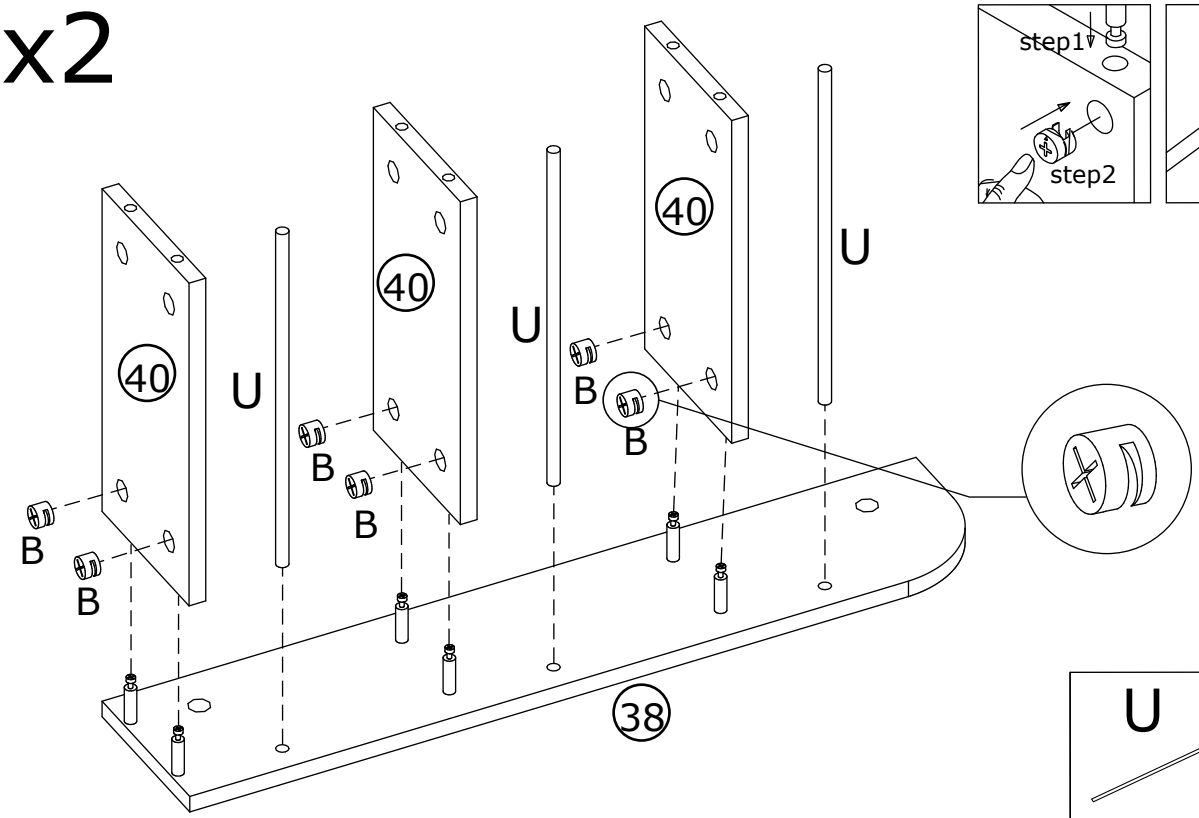


U


6pcs

B

12pcs

44.x2

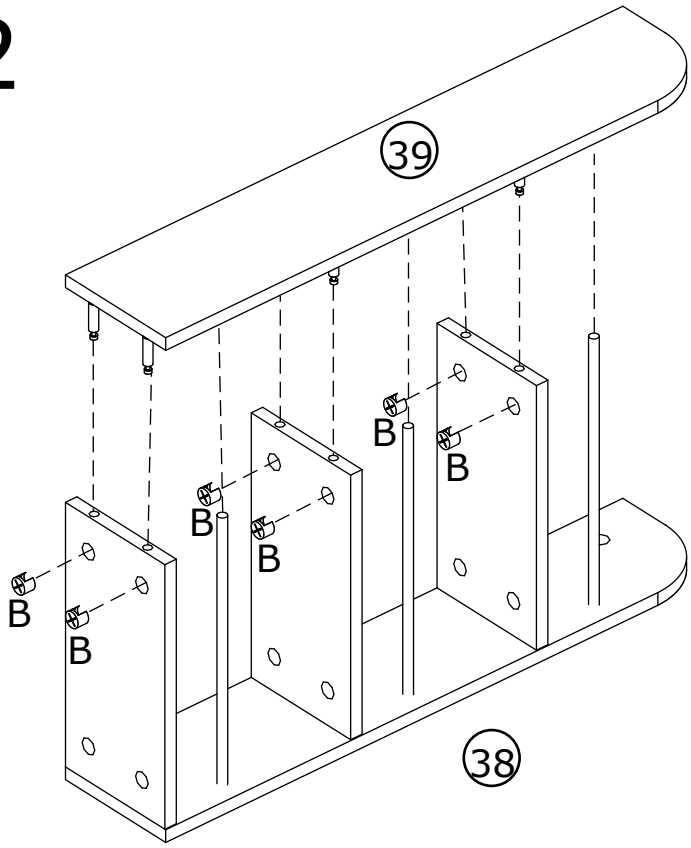

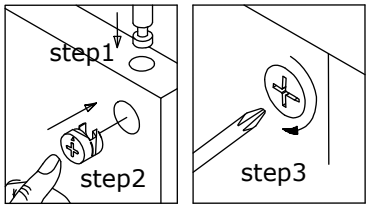



B




12pcs

45.

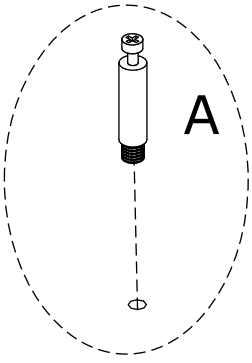

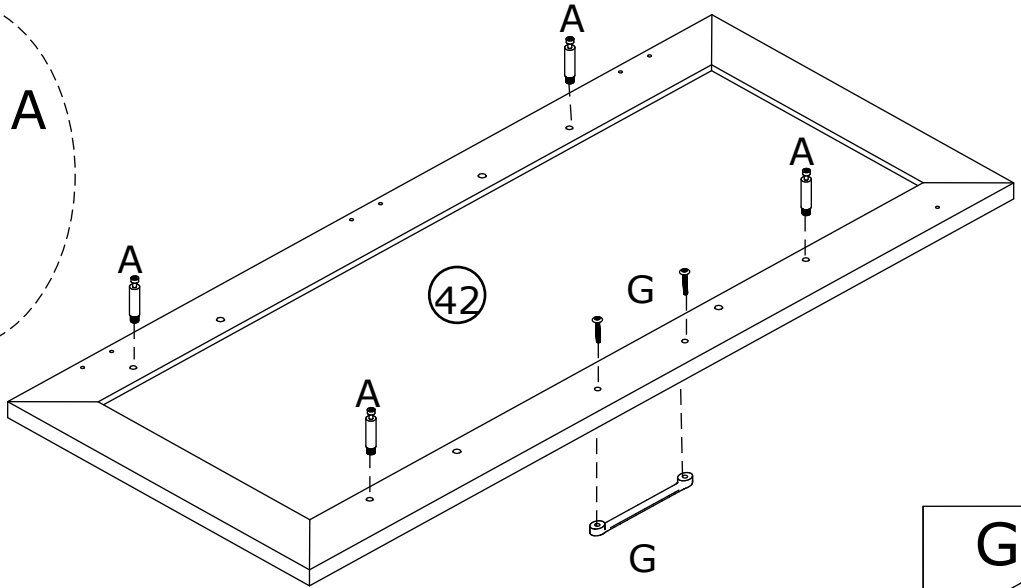

G




1pcs

A




4pcs


46.

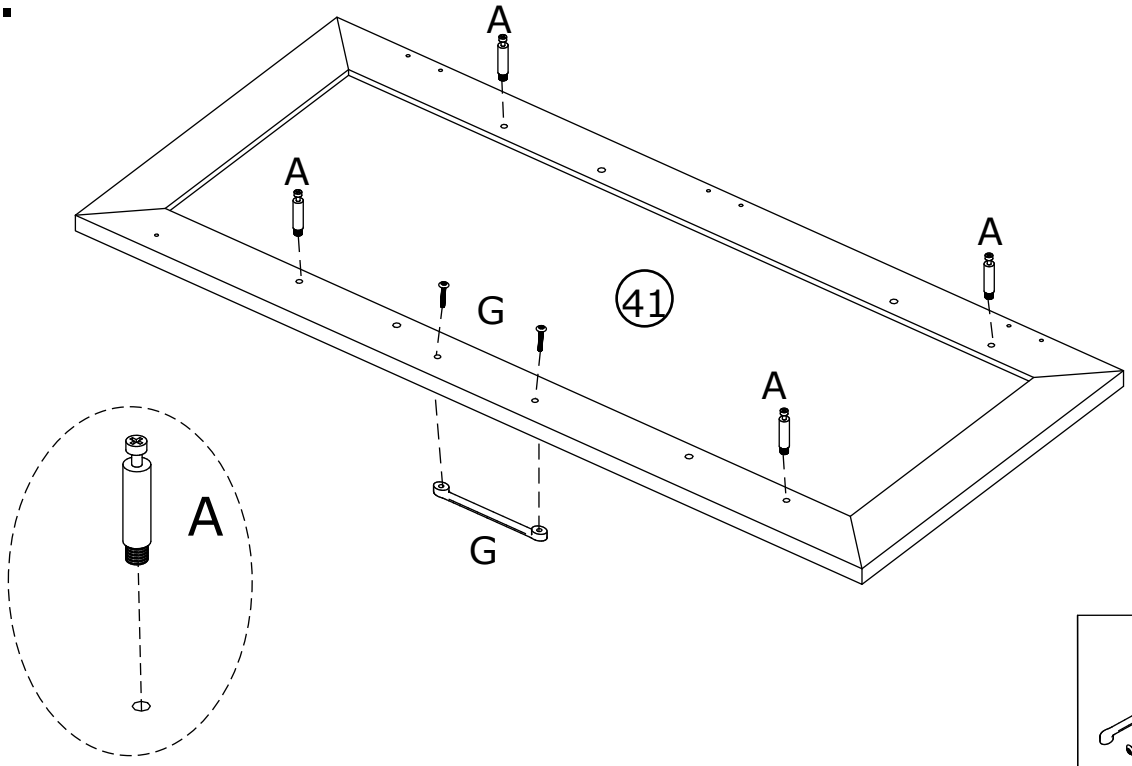

G	A
1pcs	4pcs


47.

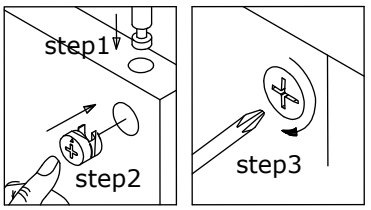


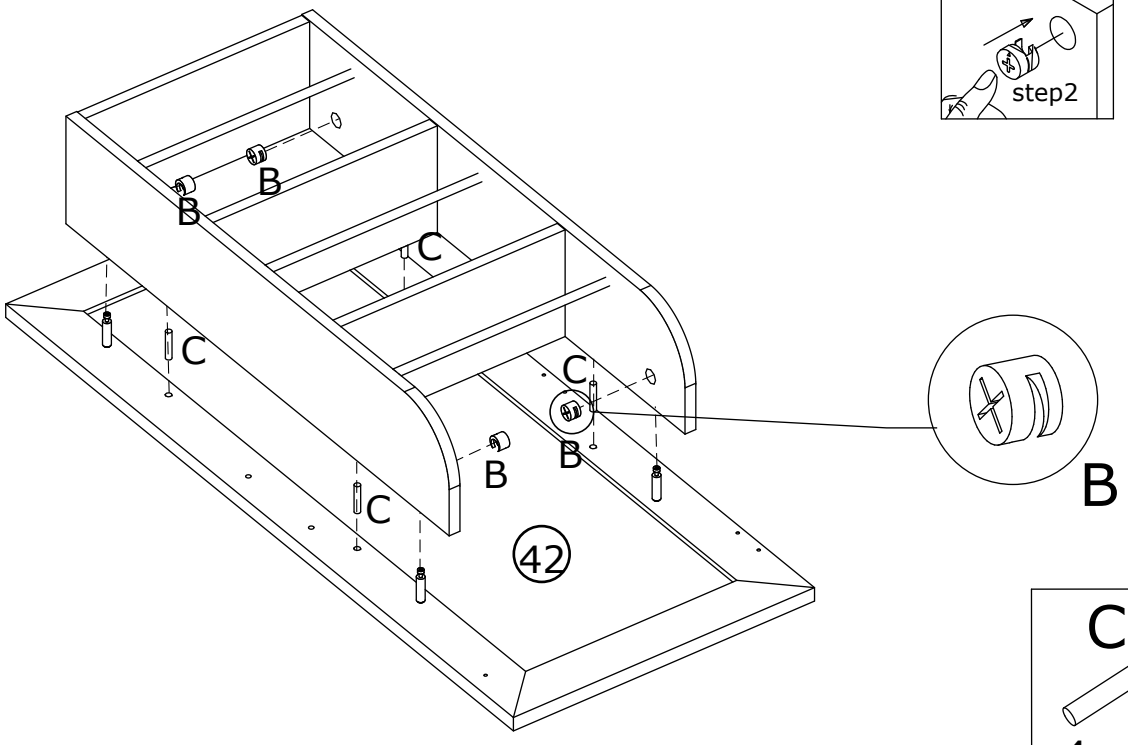



C	B
4pcs	4pcs

48.

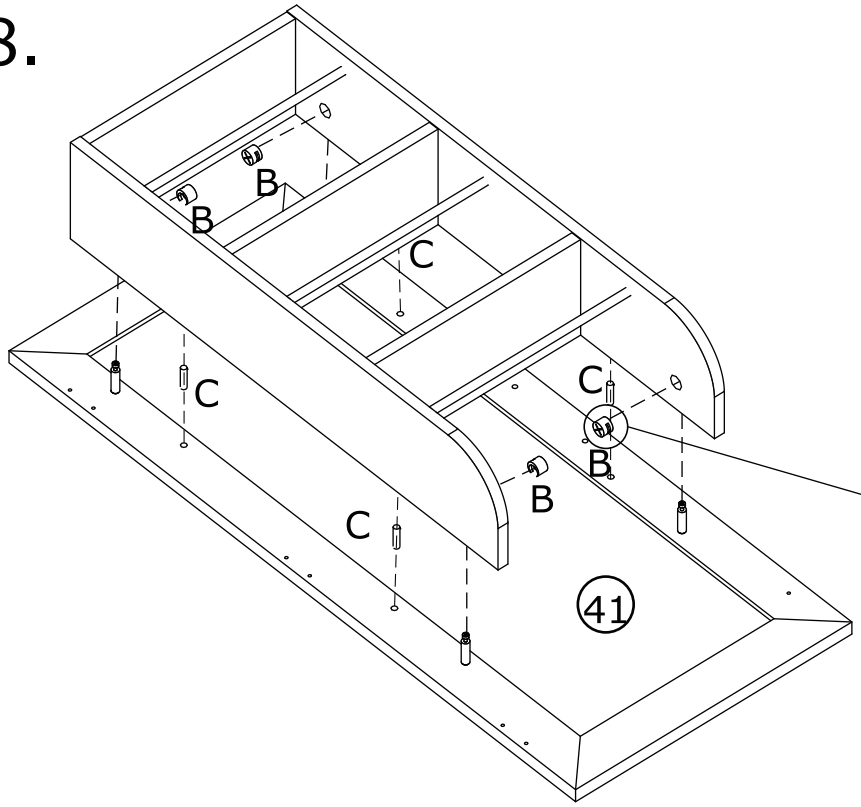


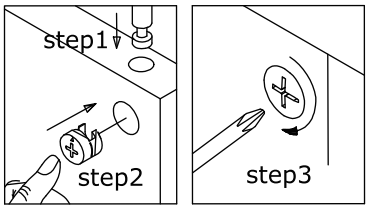


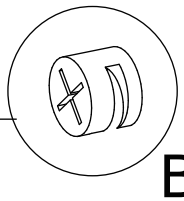


C	B
	
4pcs	4pcs

49. x2

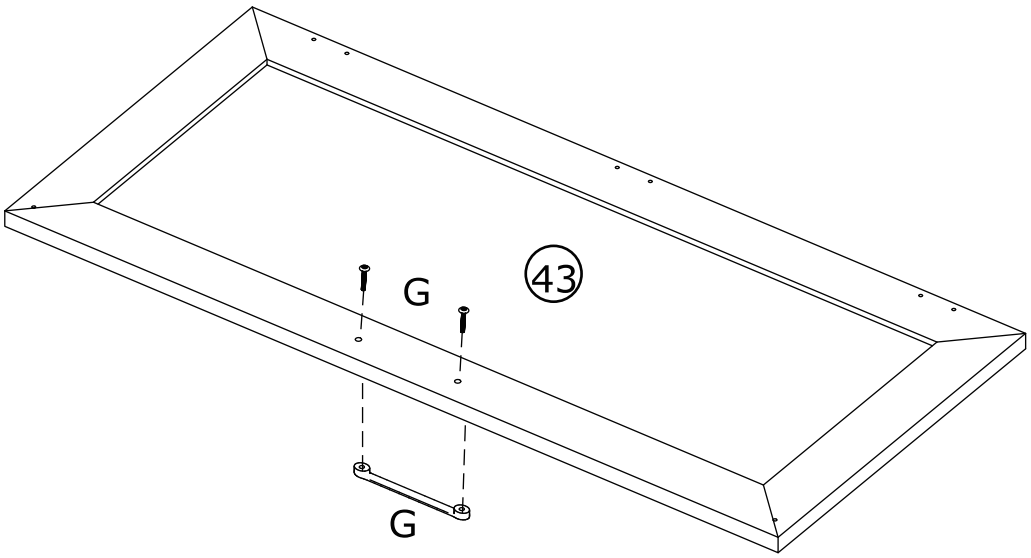


G

2pcs

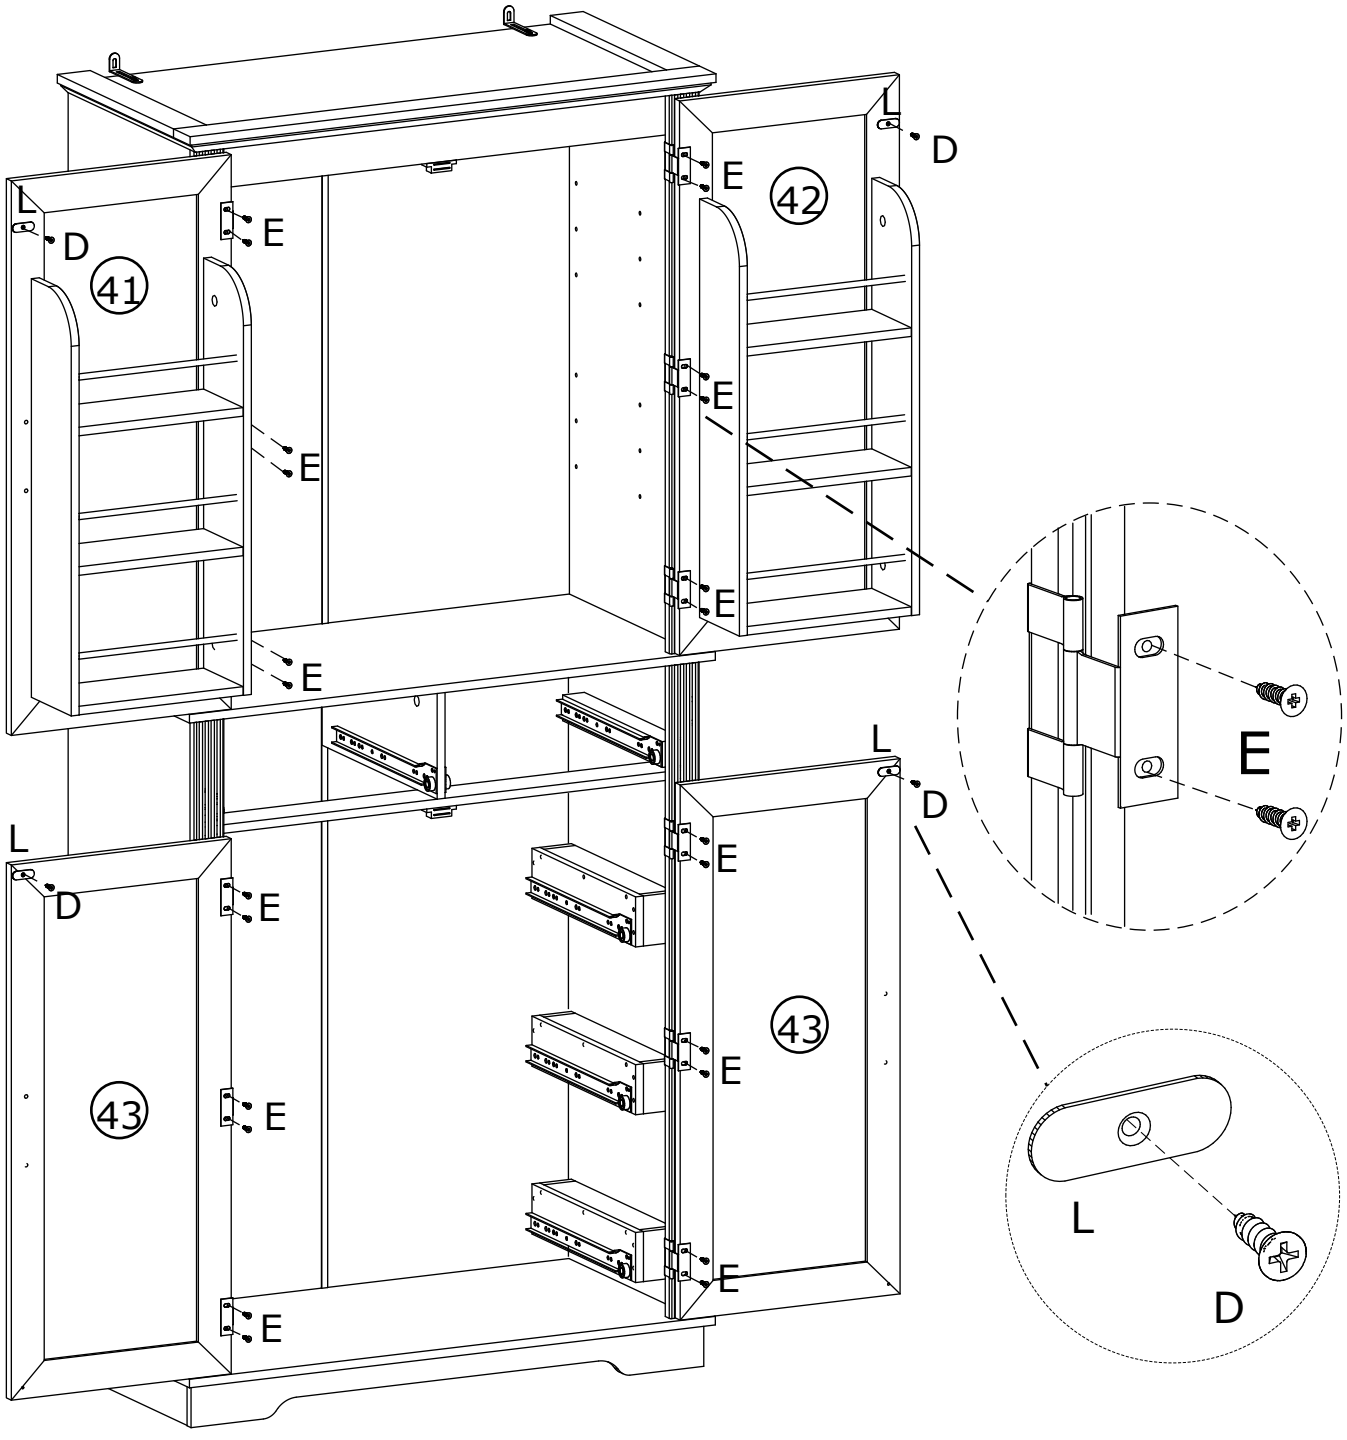
50.


L
D
E
42
41
43
L
D
E
E
E

Tip: Hinges can be adjusted as needed, which can be adjusted as needed to ensure even clearance and smooth switching

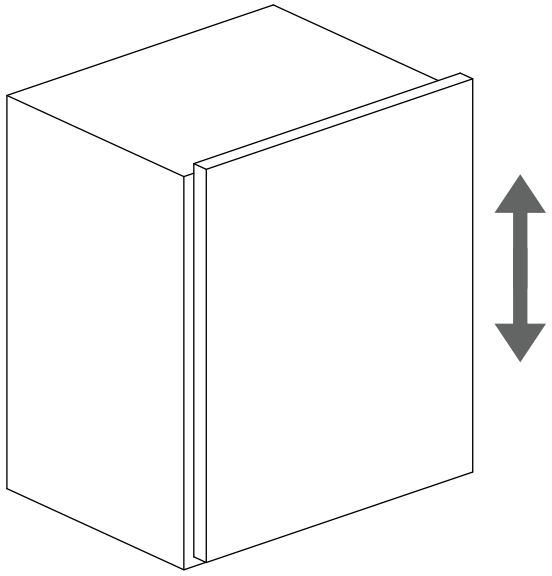
1.Adjust up and down




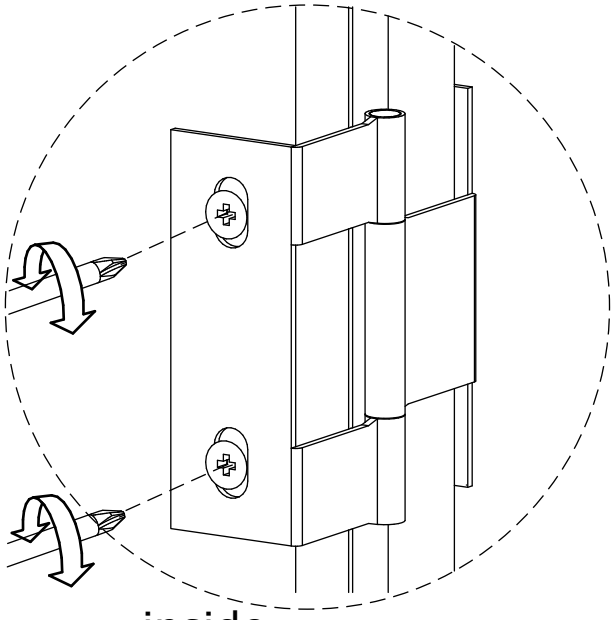


Loosen the nut, adjust the hinge to the appropriate height, and tighten the lock nut


2.Left and right adjustment

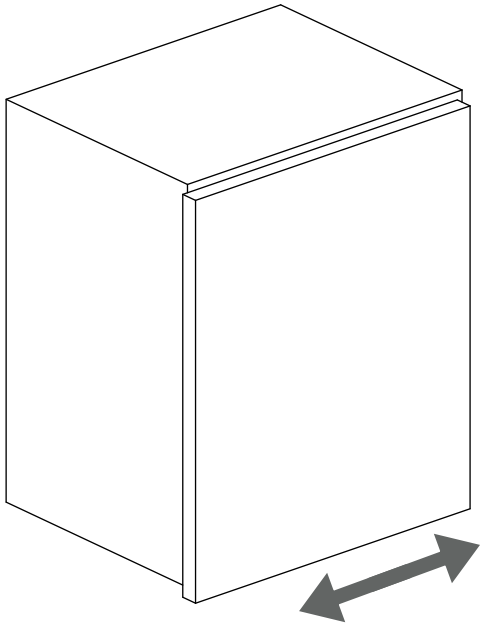

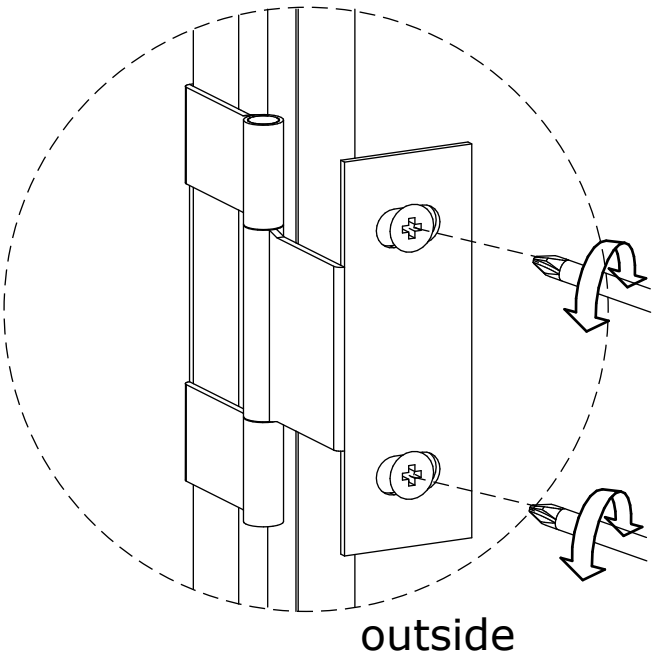


51.

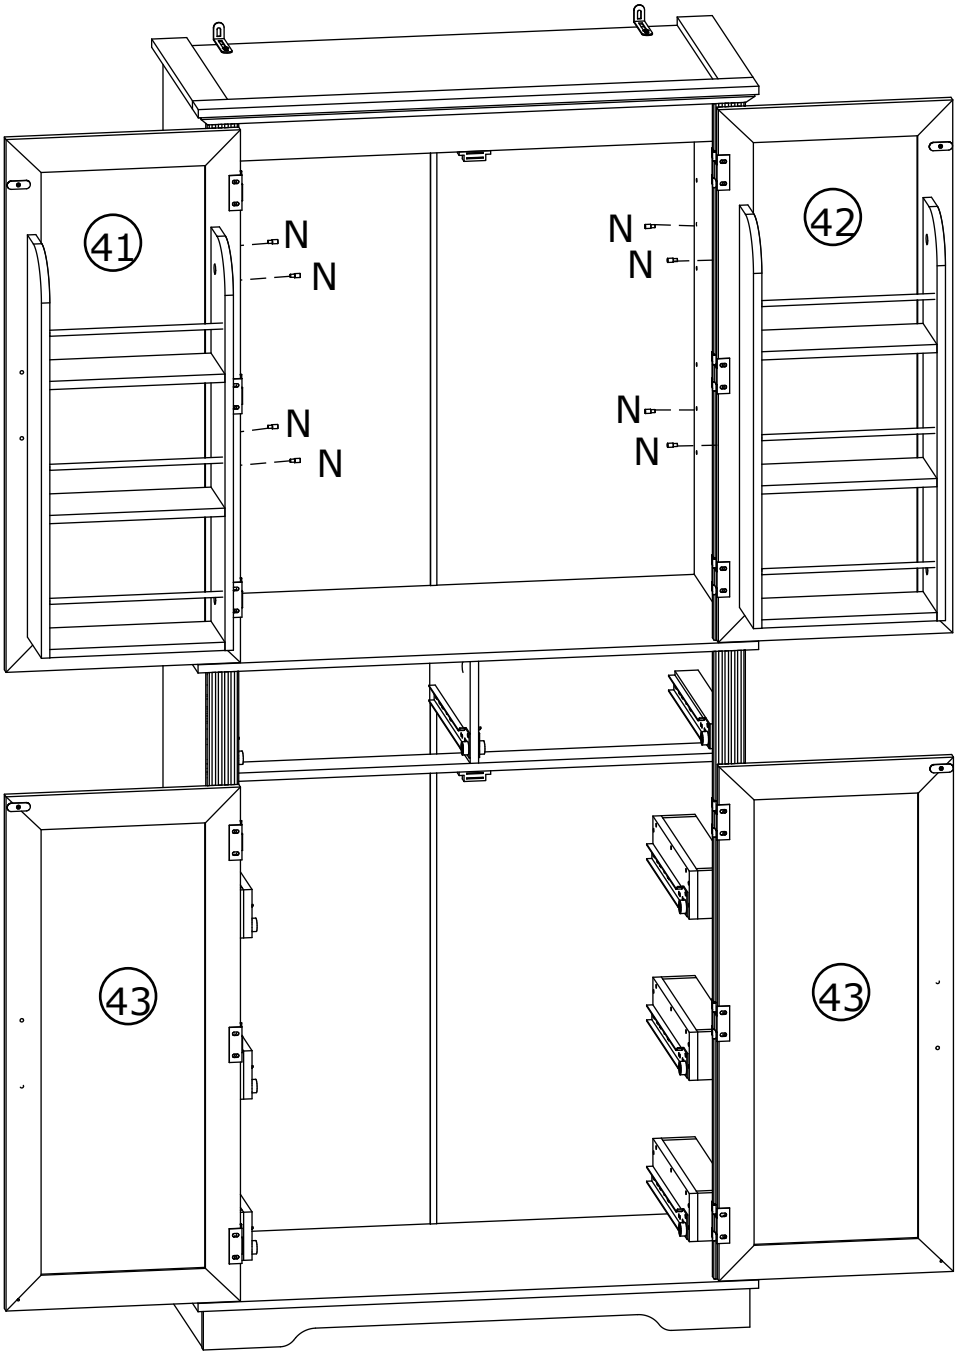


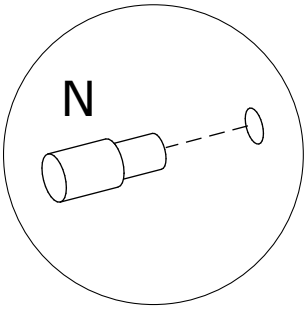


Tip: The nut position can be adjusted by itself according to the height

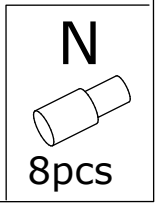

52.

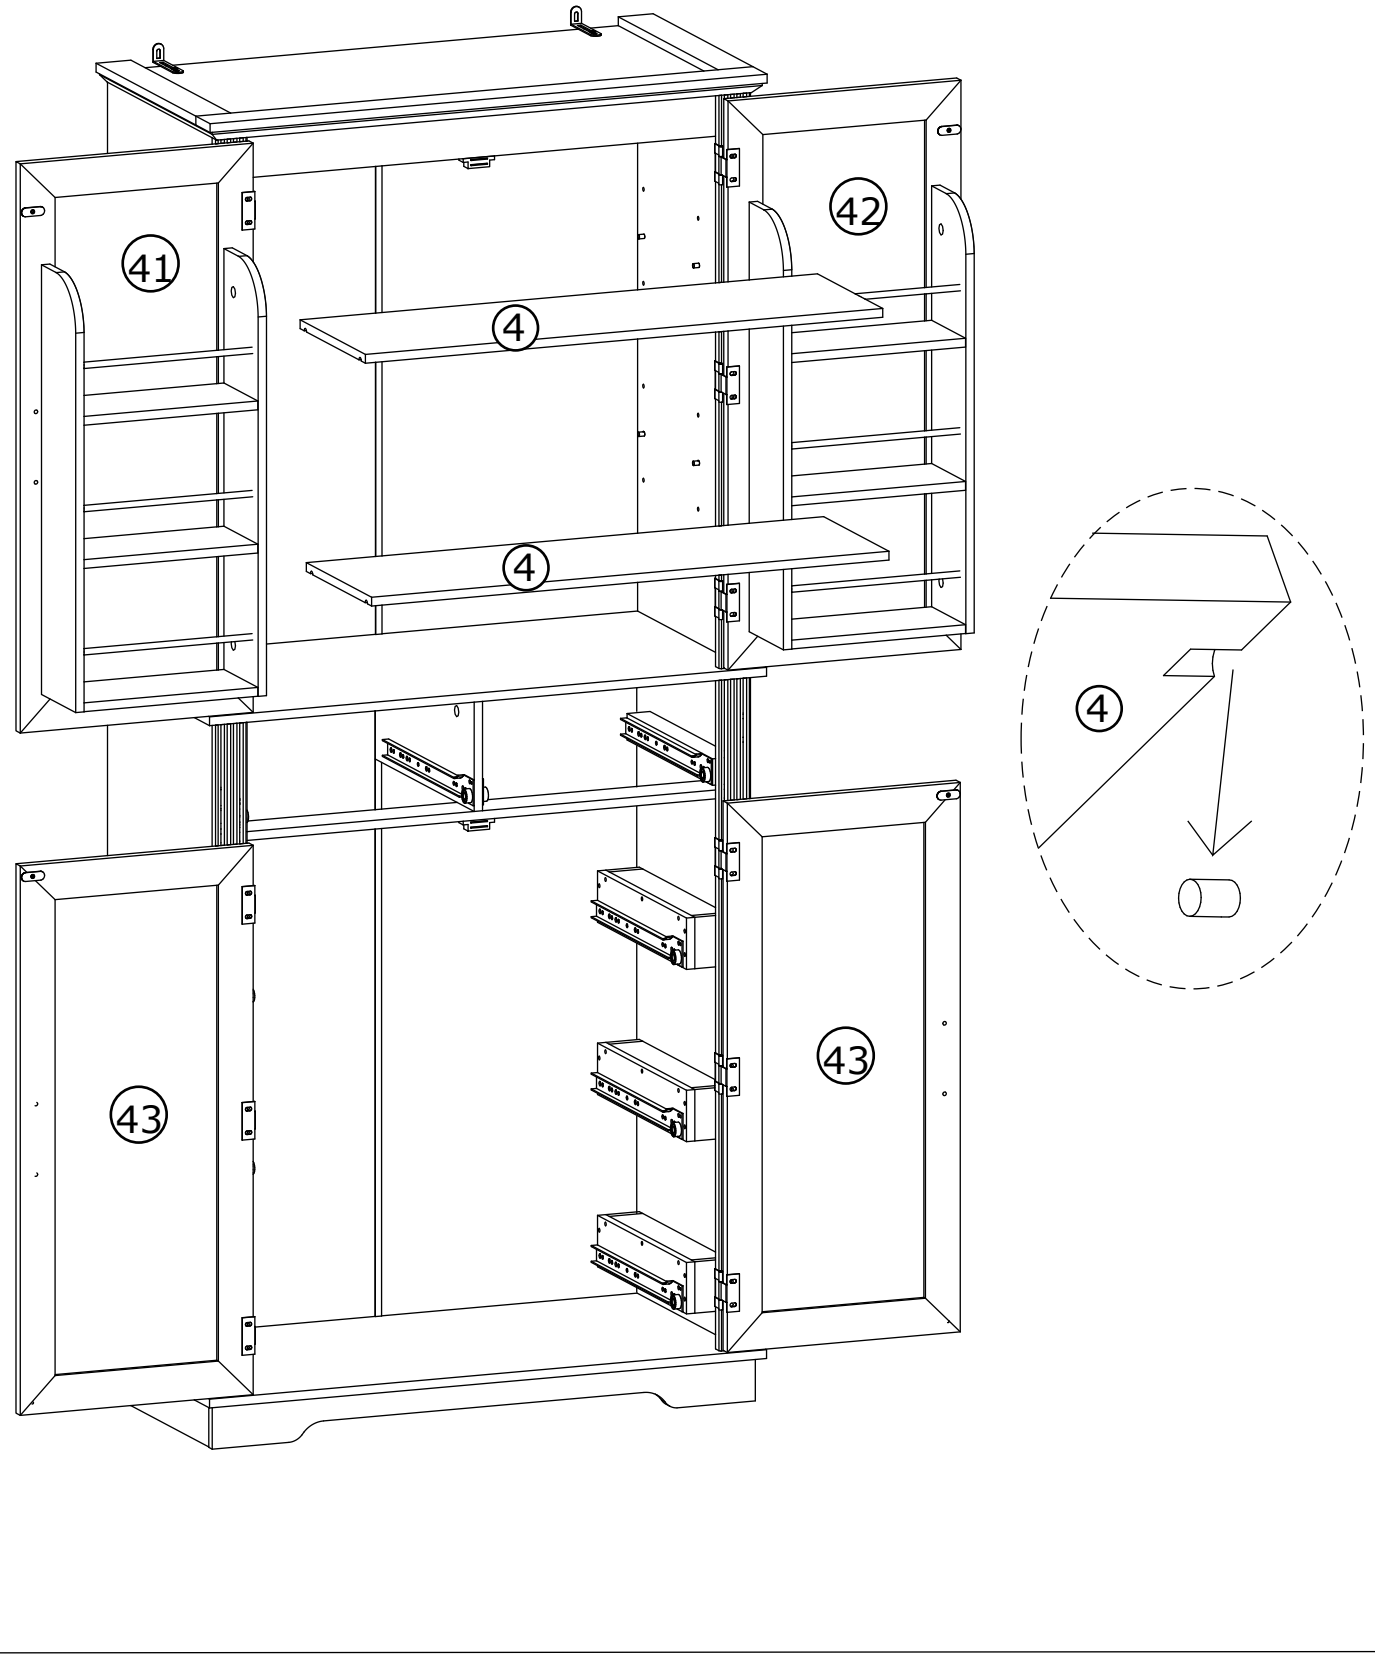


53.x3

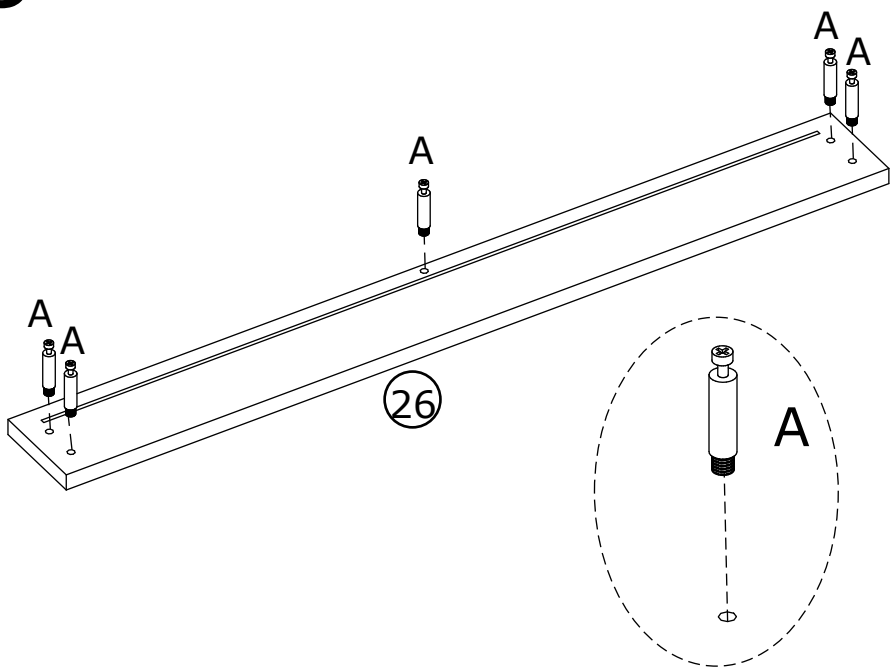

A

15pcs


54.x3

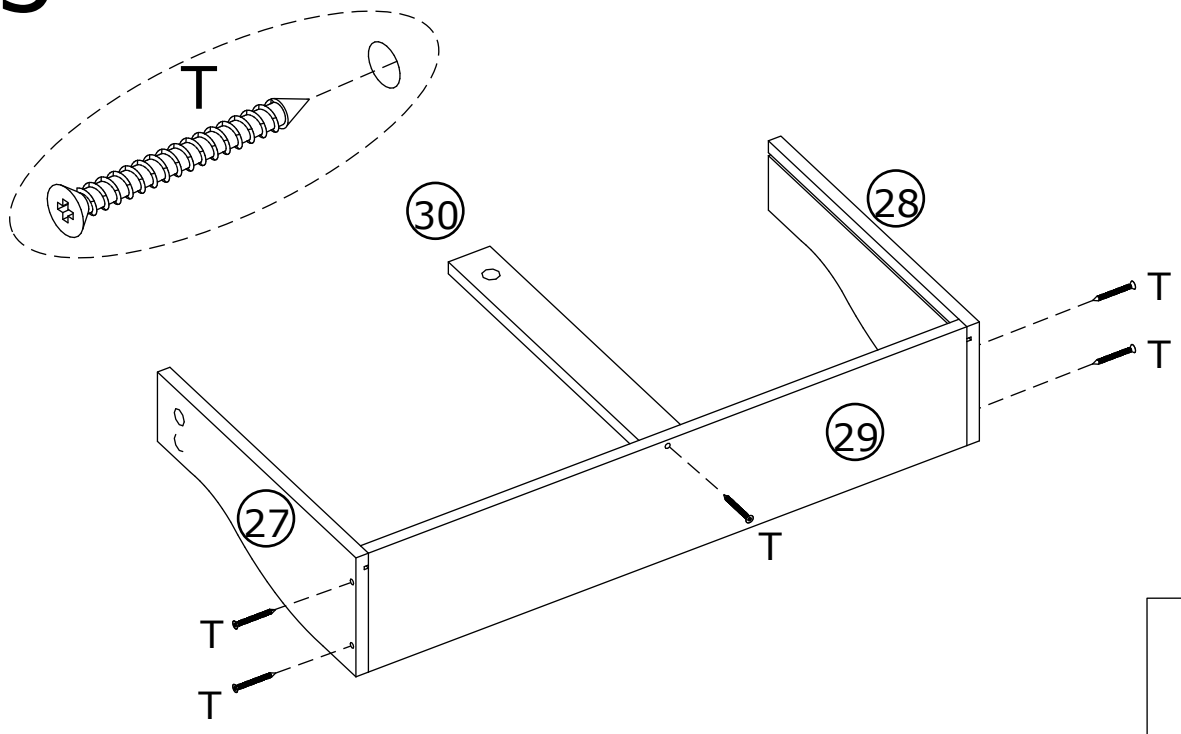


T


15pcs

55.x3

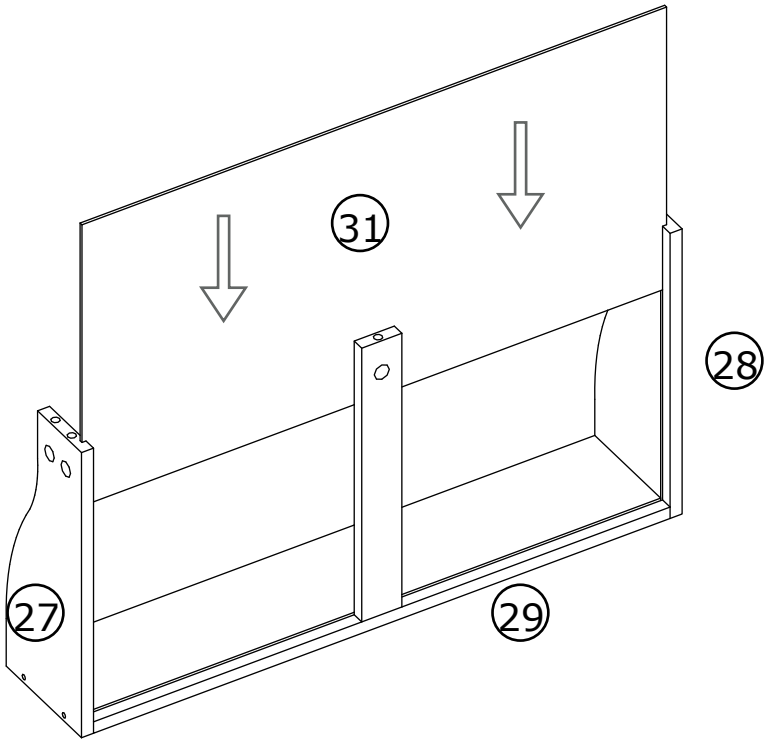

56.x3

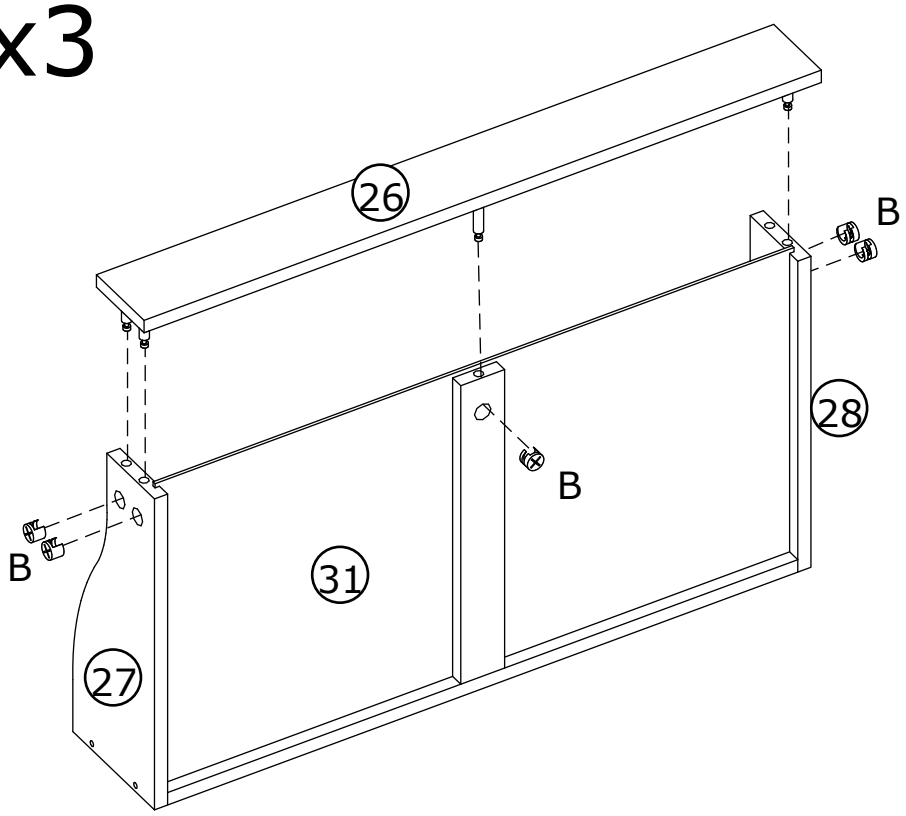


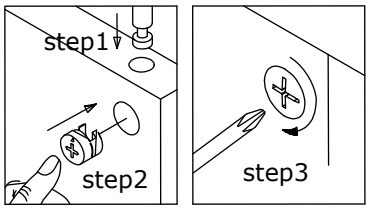



B

15pcs

57.x3

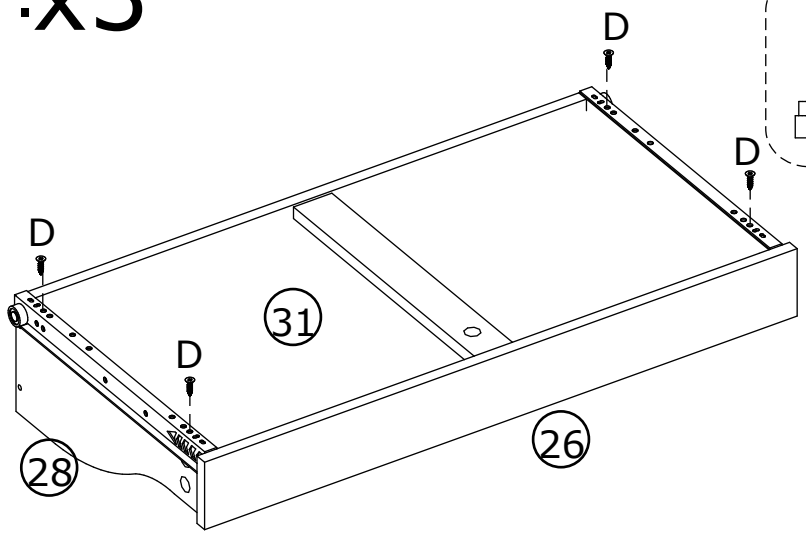


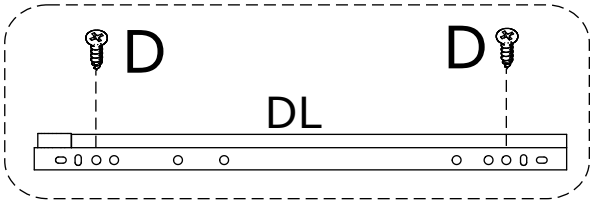


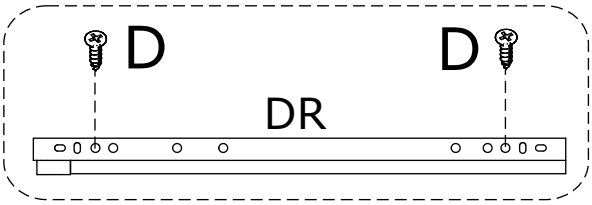



D	DL	DR
 12pcs	 3pcs	 3pcs

58.

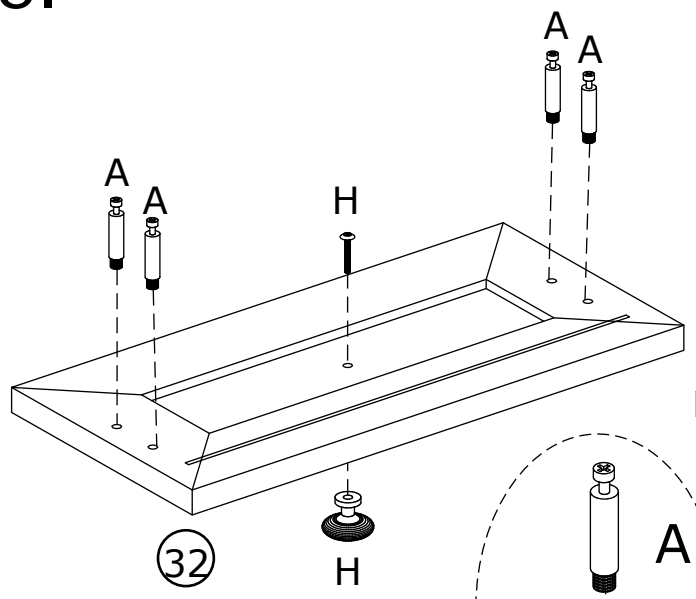


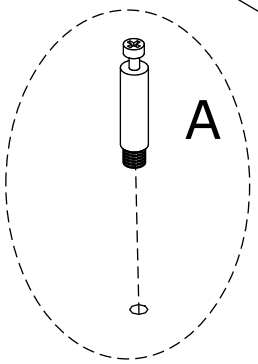

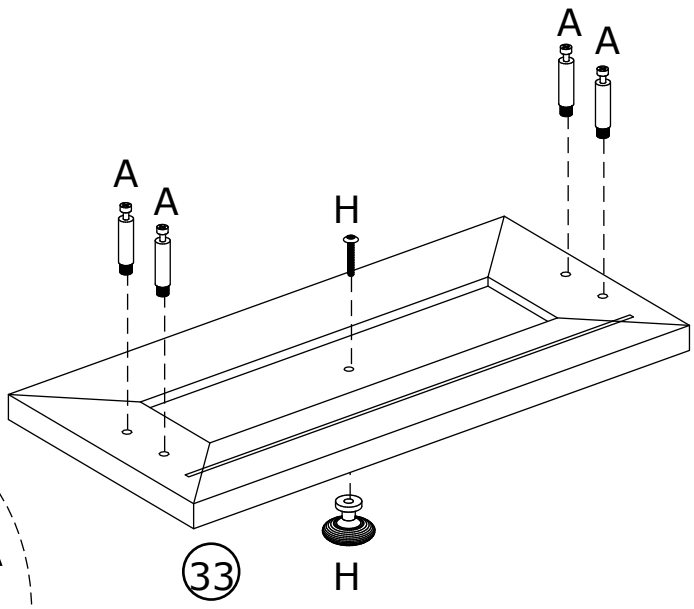


H	A
 2pcs	 8pcs

59.x2

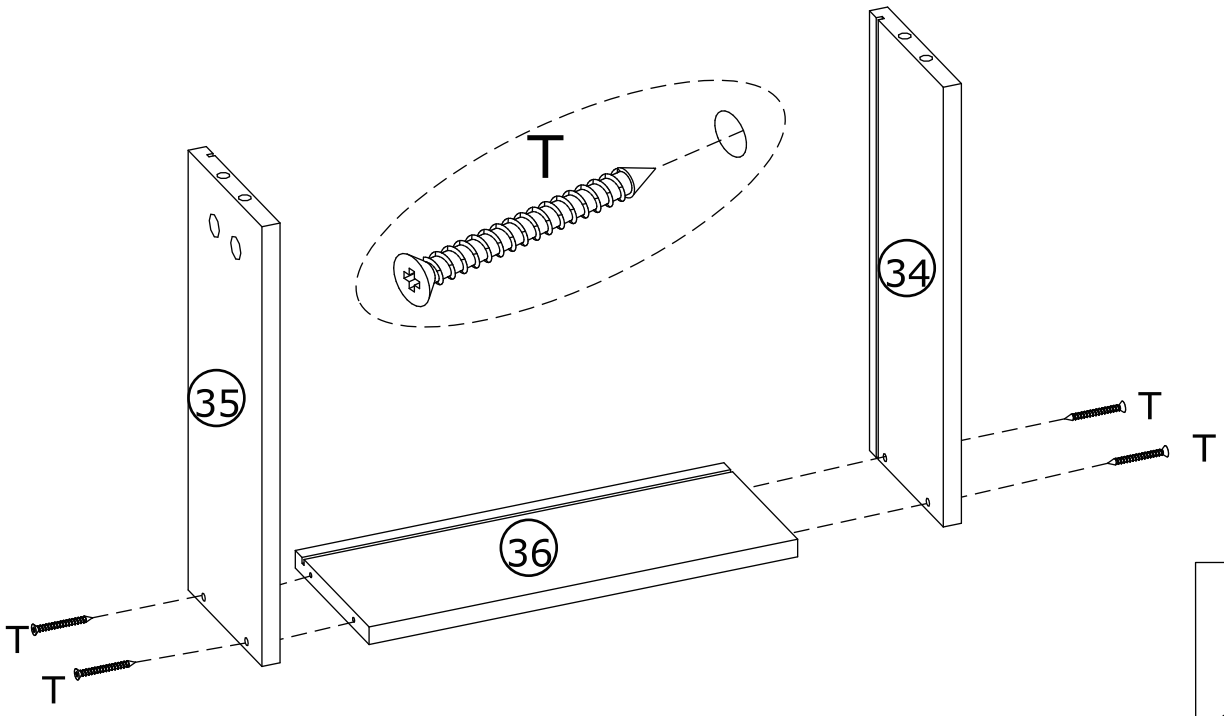



8pcs

60.x2

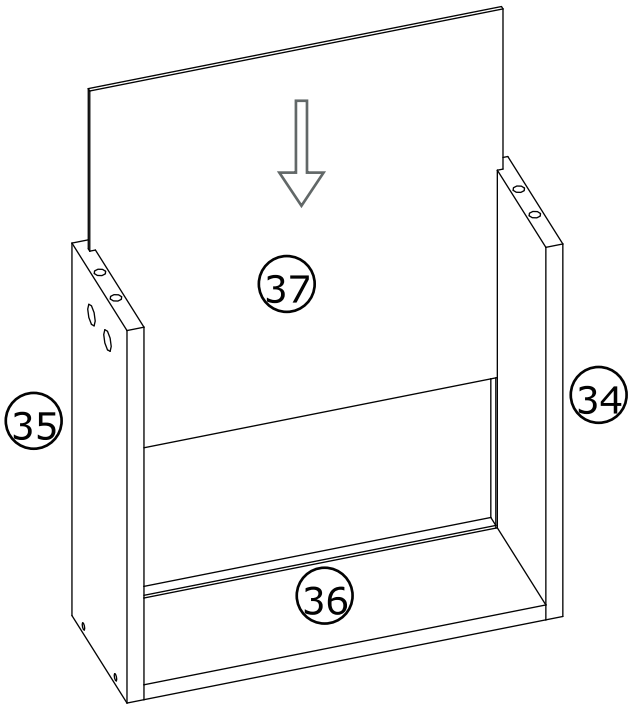

61.

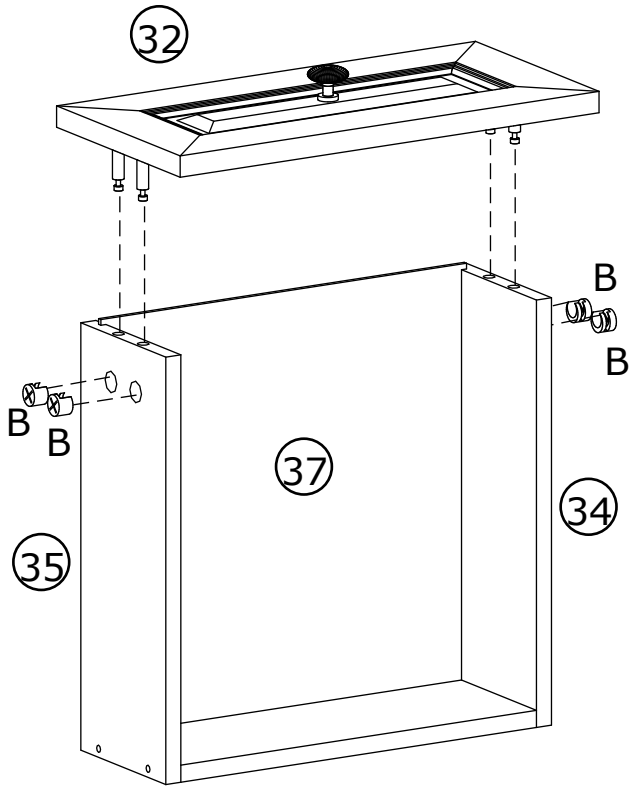


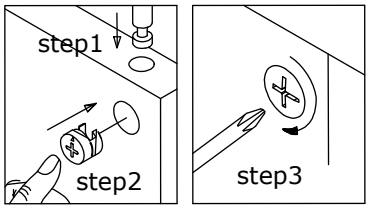



B

4pcs

62.

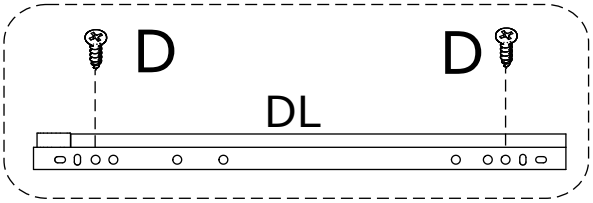


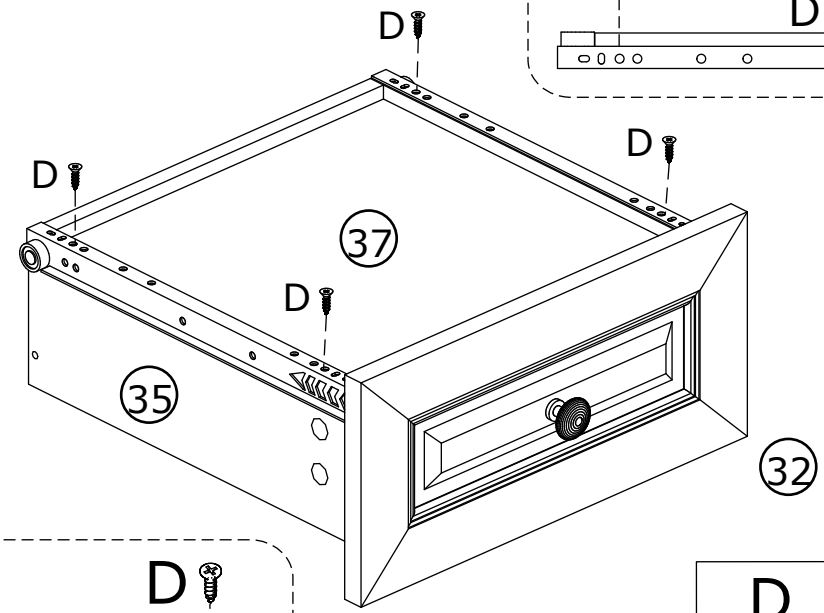


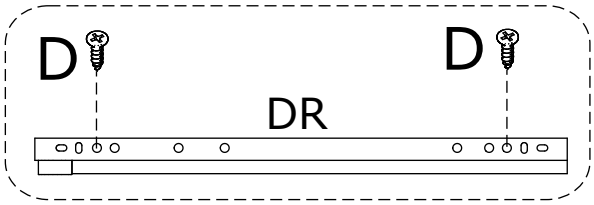

D	DL	DR
4pcs	1pcs	1pcs

63.

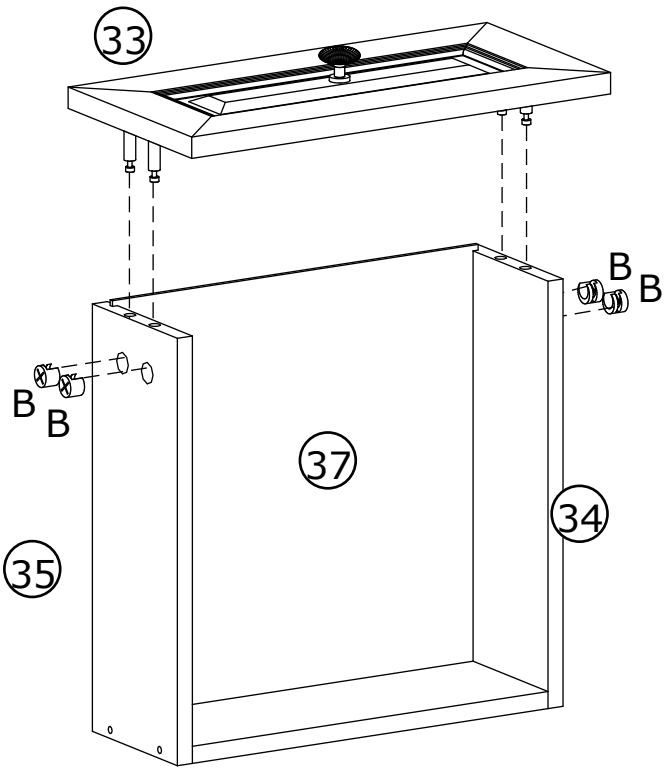


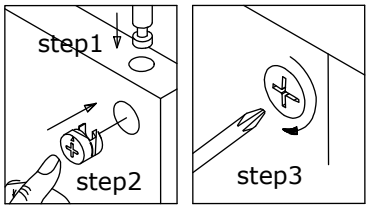



B

4pcs

64.

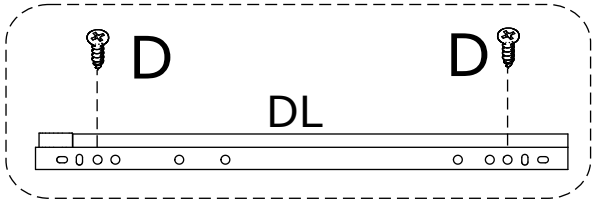


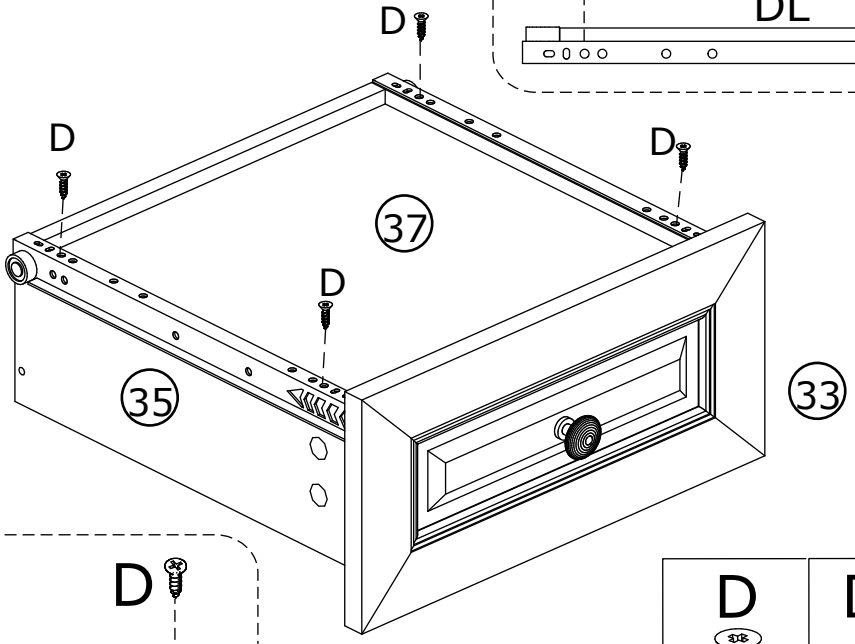

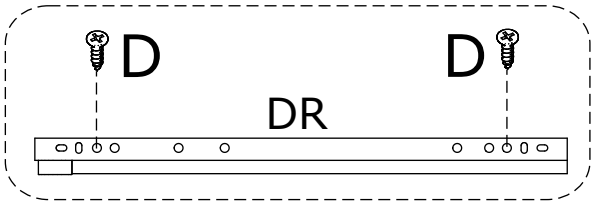



D	DL	DR
4pcs	1pcs	1pcs

65.

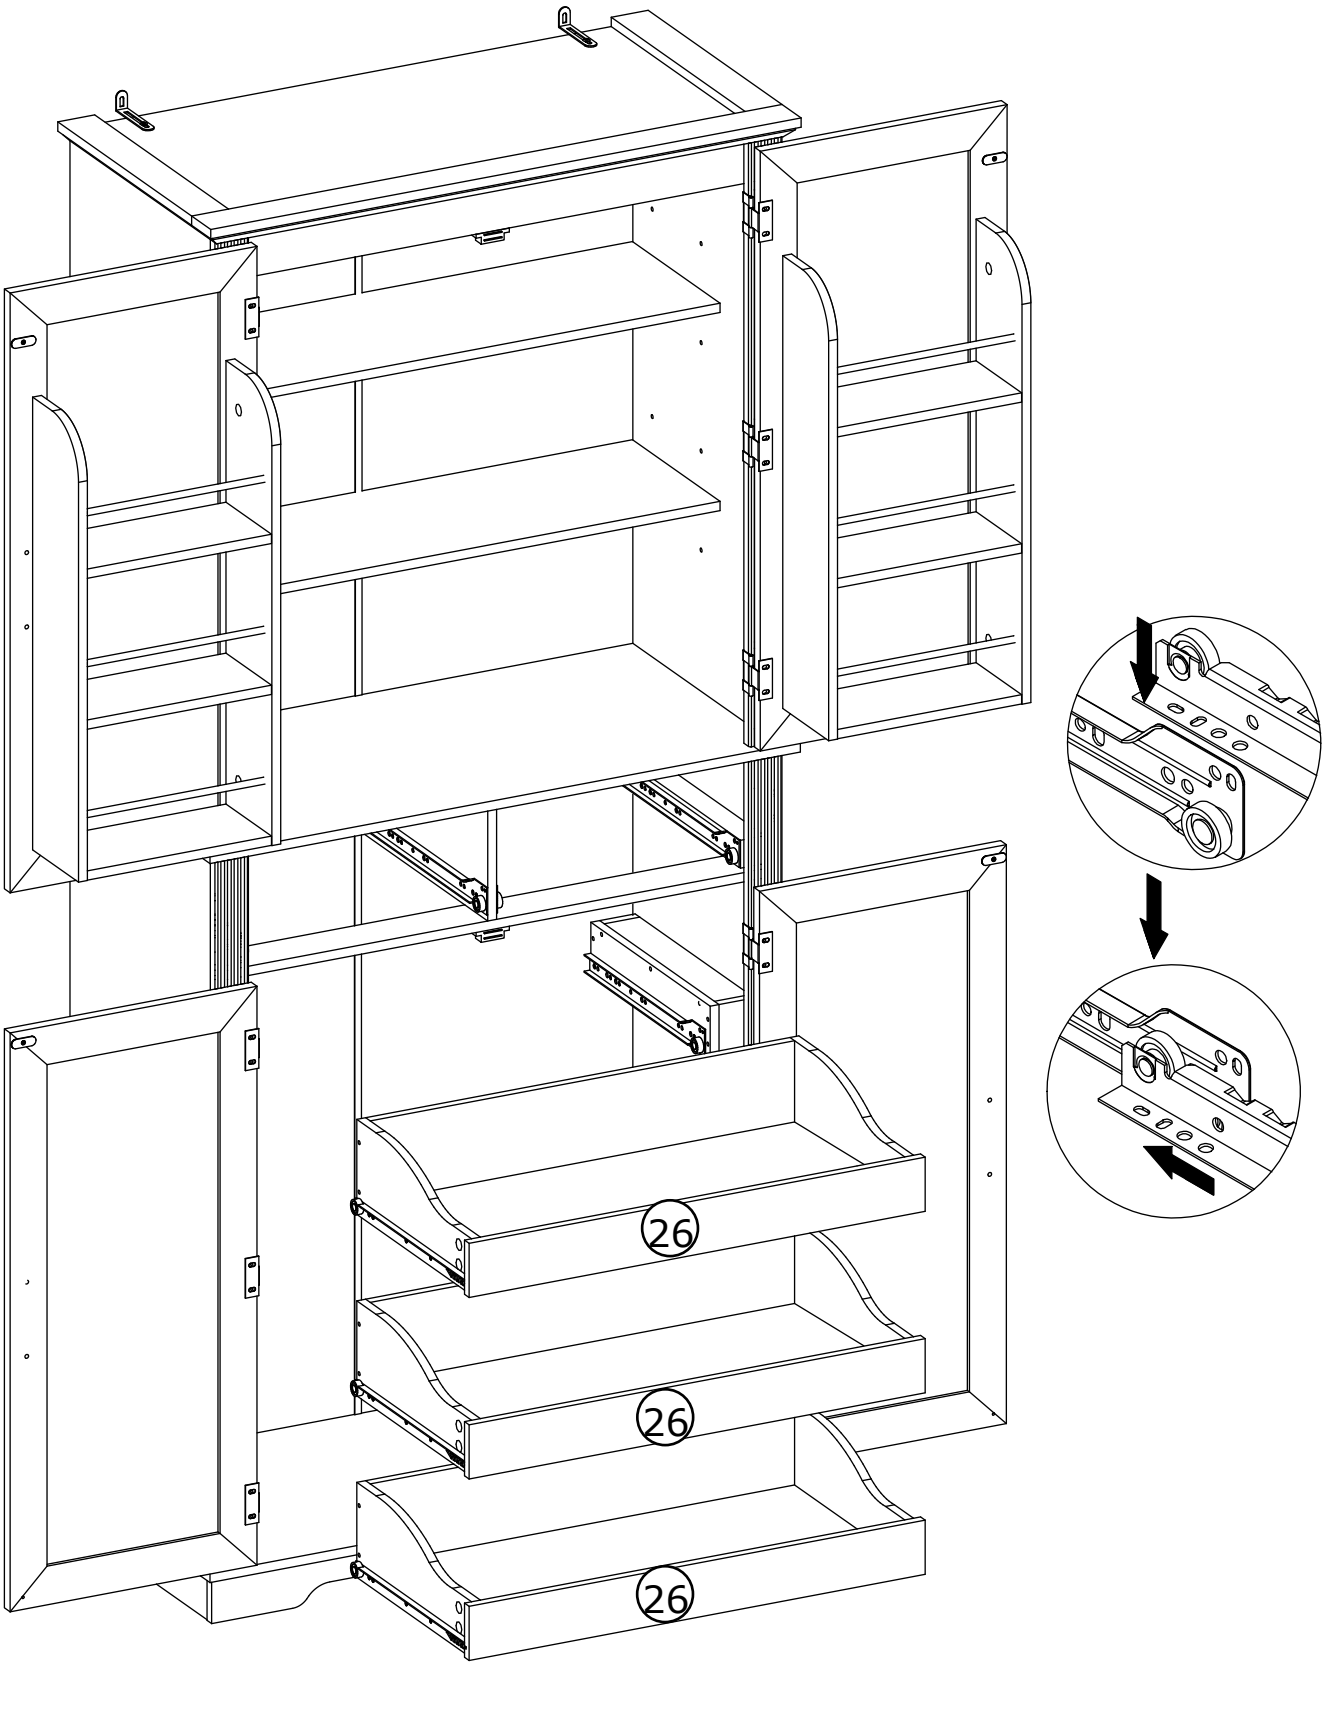


66.

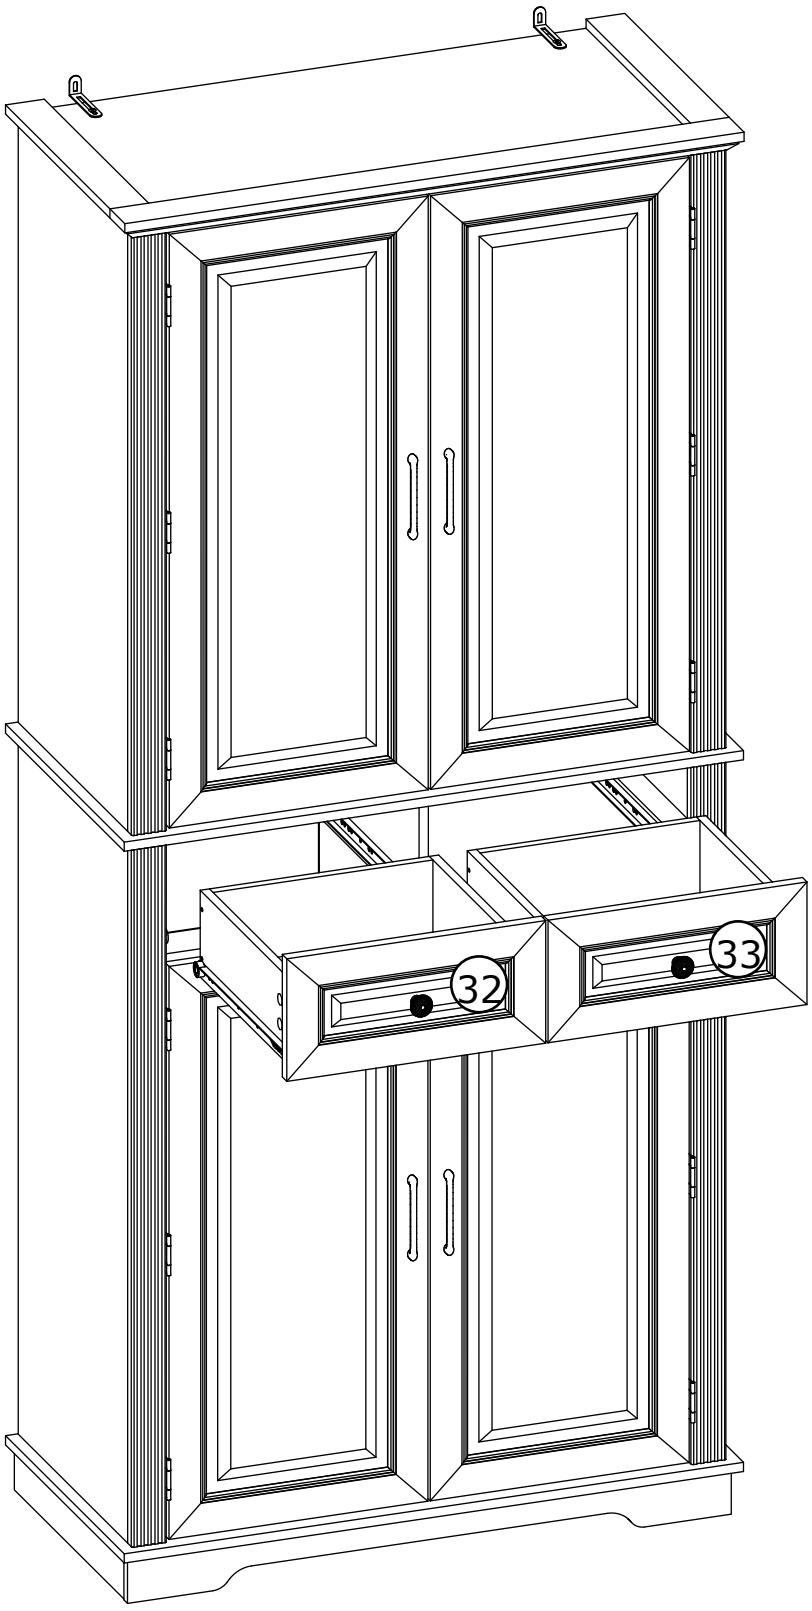


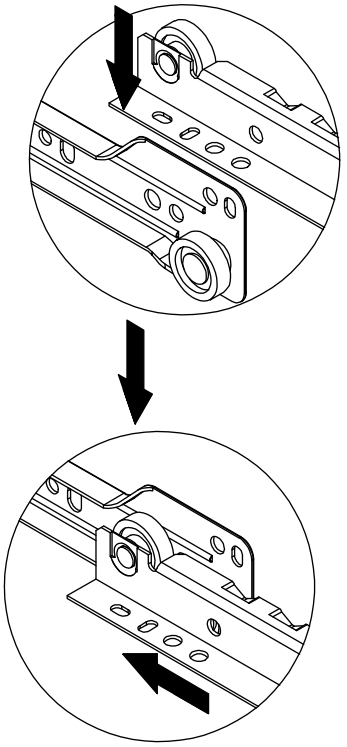

67.

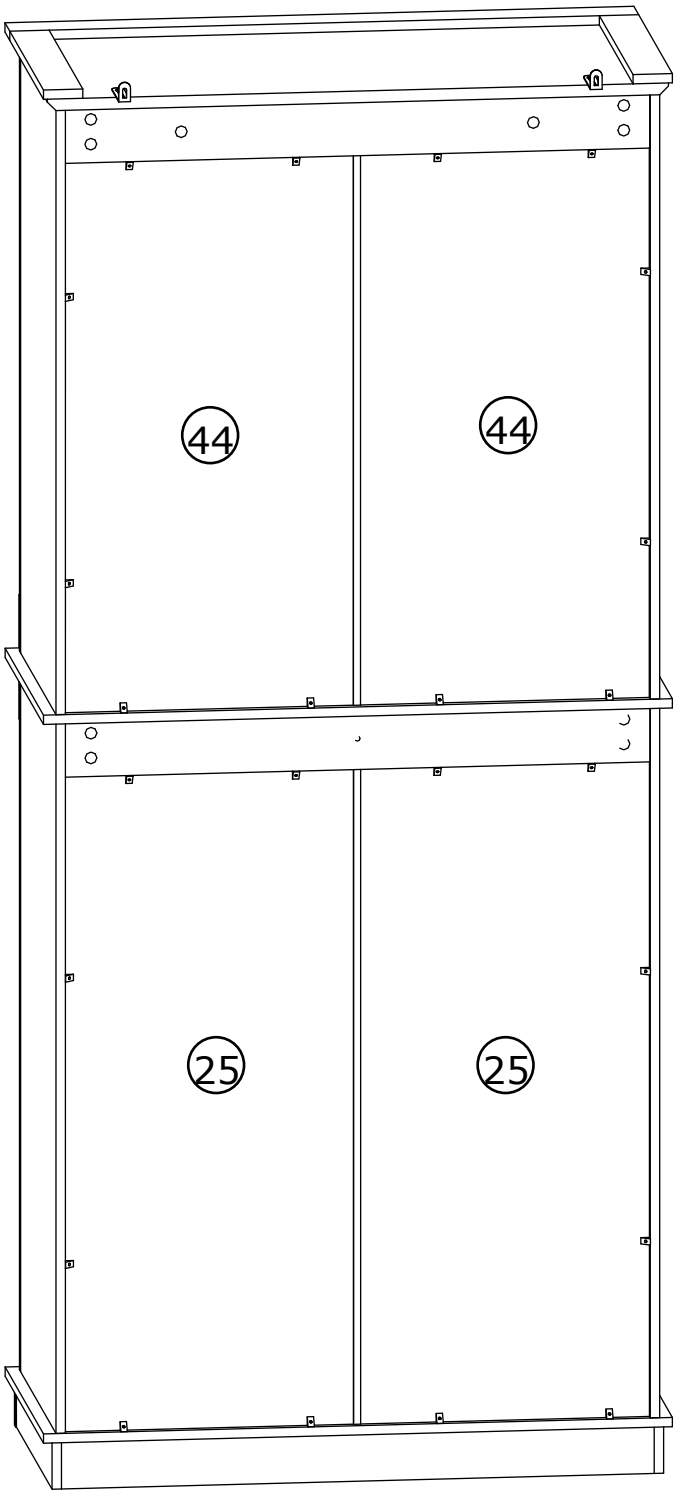


The Backboard Buckle M serves to assist in stabilizing the backboard structure.
You can choose to install or not to install at will. This product can be used normally.
When you choose to install it, you can directly screw in the screw E at the gap of the backboard

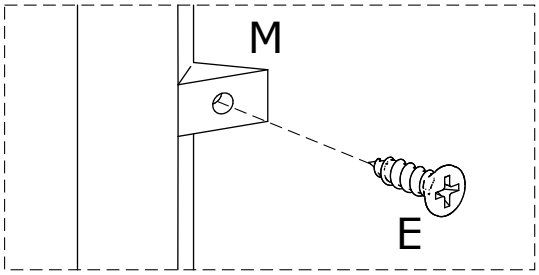

M	E
	
24pcs	24pcs

68.

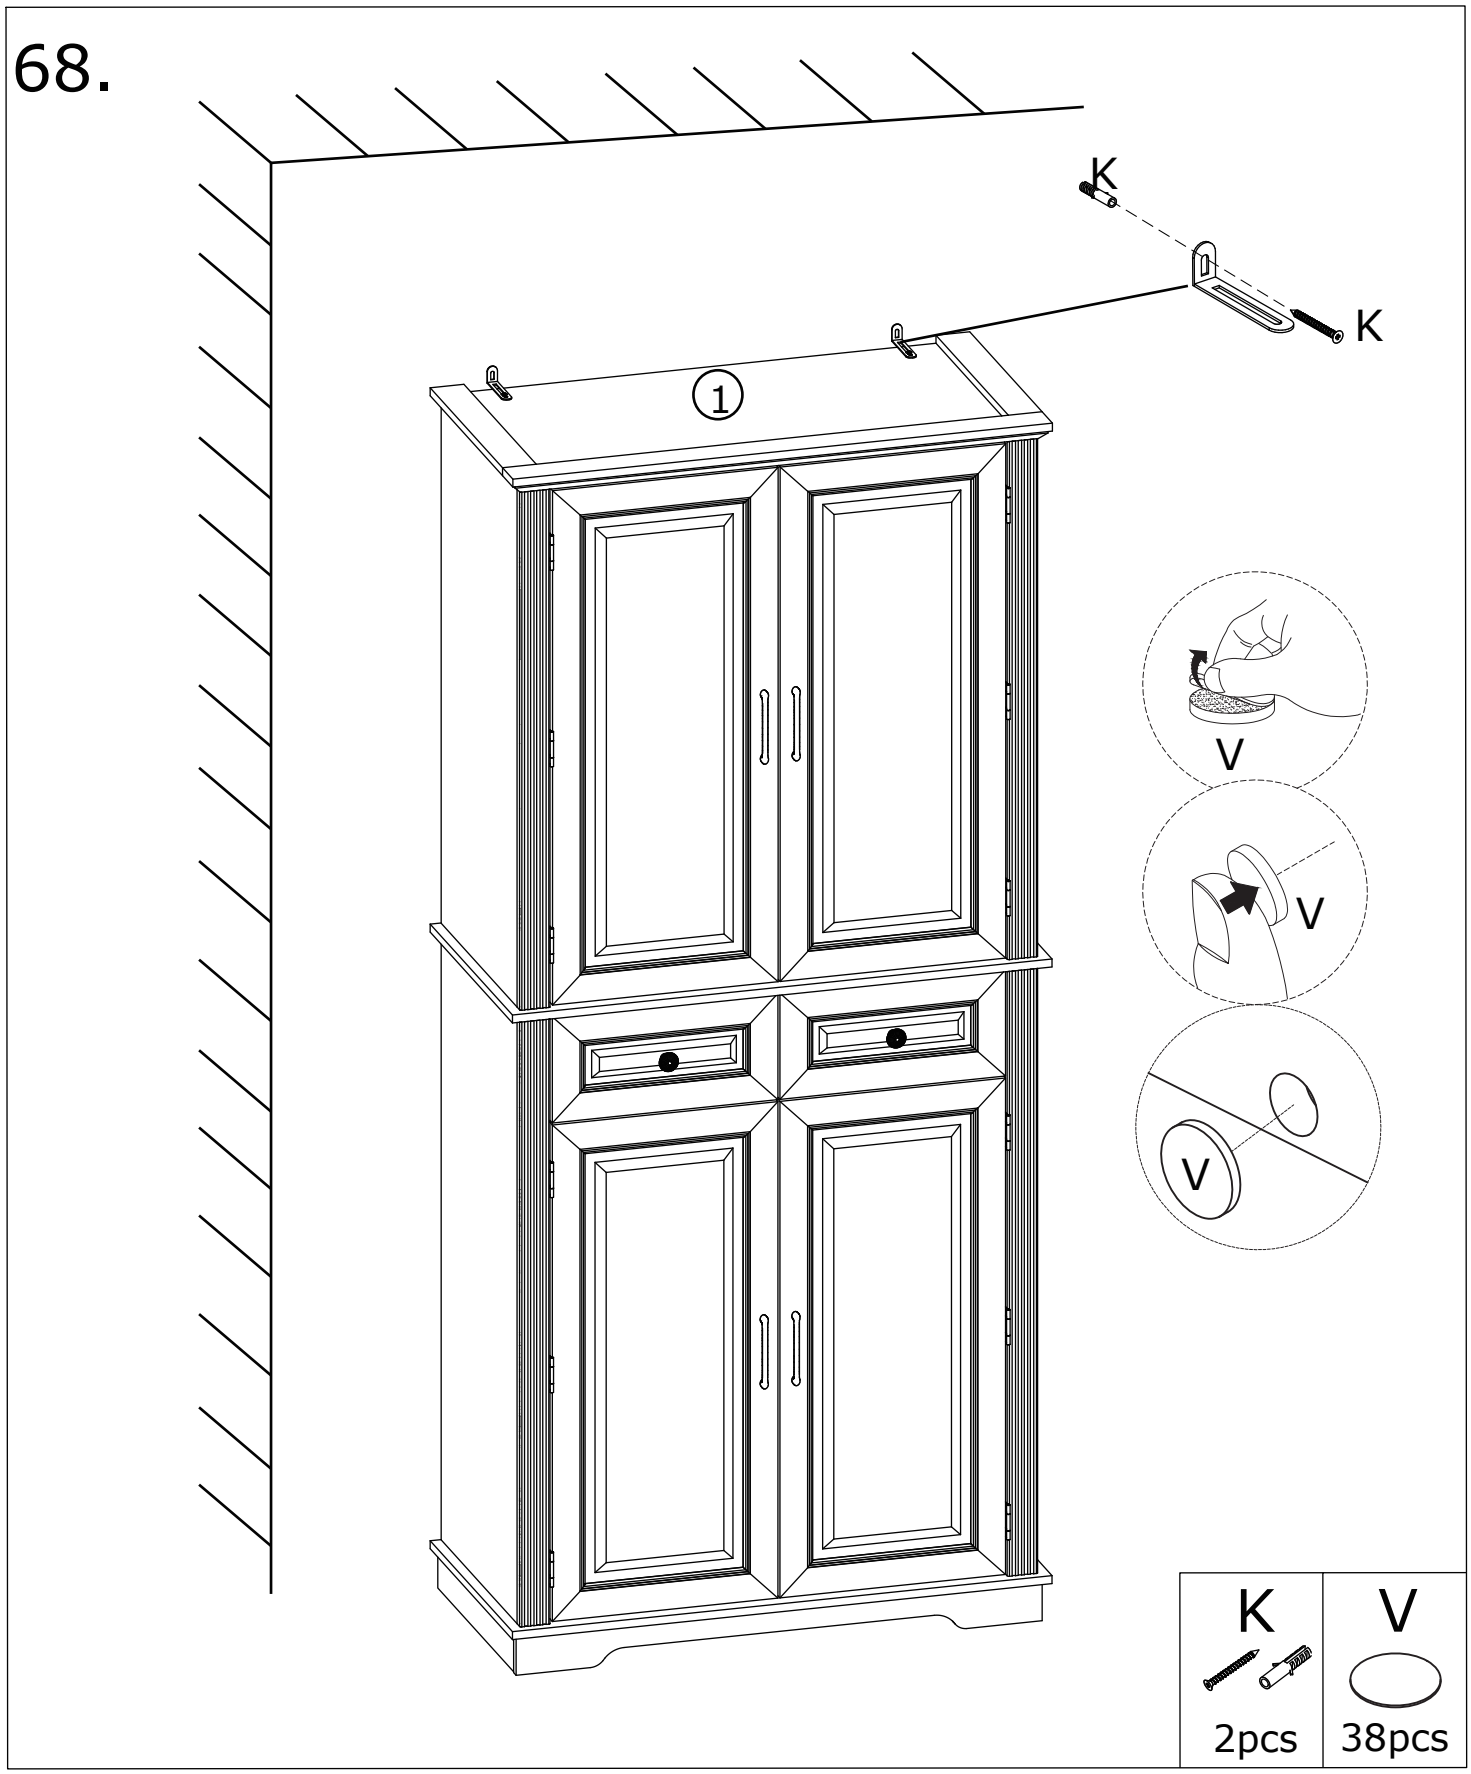

K	V
2pcs	38pcs